


SERVICE MANUAL

US Model Canadian Model

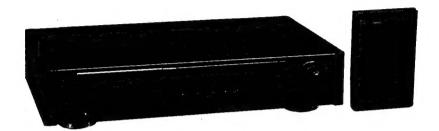

Video 8 PRO

SPECIFICATIONS

System

Video recording system

Rotary two-head helical scanning

Helical scaning FM system

Audio recording system

Normal recording

Standard: Rotary head FM system

(monaural)

PCM: PCM system (2 channels)

Digital multi audio recording

PCM system (2 channels, 6 tracks)

Video signal

NTSC color, EIA standards Usable cassettes 8 mm video system cassette

Tape speed

SP: Approx. 1.43 cm/sec.

LP: Approx. 0.72 cm/sec.

Maximum recording time

SP: 2 hours

LP: 4 hours

(with Sony E6/P6-120 cassette)

Fast-forward and rewind time

Approx. 2 min. 30 sec.

(with Sony E6/P6-120 cassette)

Tuner section

Channel coverage

VHF channels 2 to 13

UHF channels 14 to 69

Cable TV channels 1 to 125 VHF/UHF output signal

Channel 3 or 4 (selectable)

75 ohms, unbalanced

VHF/UHF input signal

75-ohm antenna terminal for VHF/UHF

PCM digital multi audio system

Sampling frequency 31.5 kHz

Audio frequency

Dynamic range Wow and flutter 20 Hz to 15 kHz

More than 90 dB Less than 0.005% RMS

Inputs and outputs

Video input

LINE IN 1/2 VIDEO (phonojack)

(1 each)

Input signal: 1 Vp-p, 75 chms,

unbalanced, sync negative

S VIDEO input

LINE IN 1 S VIDEO (4-pin, mini-DIN)

Luminance signal: 1 Vp-1, 75 ohms, unbalanced, synchegative Chrominance signal: 0.28 Vp-p,

75 ohms, unbalanced

Audio input

Video output

LINE IN 1/2 AUDIO (phonojack)

(2 each)

Input level: -7.5 dBs (0 iBs=

0.775 Vrms)

Input impedance: more tian 47

kilohms

LINE OUT 1/2 VIDEO (phon jack)

(1 each)

Output signal: 1 Vp-p, 750hms, unbalanced, sync negative

- Continued of mext page -

Hi8 stereo video cassette recorder SONY



S VIDEO output

LINE OUT 1 S VIDEO (4-pin, mini-

DIN) (1)

Luminance signal: 1 Vp-p, 75 ohms, unbalanced, sync negative Chrominance signal: 0.286 Vp-p,

75 ohms, unbalanced

Audio output

LINE OUT 1/2 AUDIO (phono jack)

(2 each)

Standard impedance: -7.5 dBs (327 mV) at load impedance 47

kilohms

Output impedance: less than 10

kilohms

CONTROL L

5-pin DIN CONTROL S IN Minijack Minijack

CONTROL S OUT MIC input

Minijack (2)

-60 dBs. for low impedance

microphone

HEADPHONES jack

Stereo minijack, -20 dBs, 8 ohms

Timer

Clock Time indication

Timer setting

Crystal lock 12-hour cycle

Only for recording

6 events (3 weeks max. adjustable for any day or for all 7 days of the

week)

General

Power requirement

120 V AC, 60 Hz

Power consumption 33 W

AC outlet Max. 400 W (unswitched)

Operating temperature

5°C to 40°C (41°F to 104°F)

Storage temperature

-20°C to +60°C (-4°C to +140°F)

Dimensions

Approx. 470 × 97 × 334 mm $(18^{5}/8 \times 3^{7}/8 \times 13^{1}/4 \text{ inches})$ including projecting parts and

controls

Weight

Approx. 8.6 kg (18 lb 15 oz)

Accessories supplied

Antenna connector (1) 75-ohm coaxial cable (1) Audio connecting cord (1) S VIDEO connecting cord (1) Video connecting cord (1)

Remote Commander RMT-424 with 3 size AA (R6)

batteries (1) Cleaning cassette (1)

Remote Commander

Remote control system

Infrared control

Power consumption

4.5 V DC, 3 size AA (R6) batteries

Dimensions

Approx. 105 × 40 × 160 mm (41/10 × 11/2 × 61/4 inches)

Weight

Approx 220 g (8 oz) without


batteries

Design and specifications are subject to change without notice.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- Check the line cord for cracks and abrasion.
 Recommend the replacement of any such line cord to the customer.
- 6. Check the B+ voltage to see it is at the values specified.
- Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

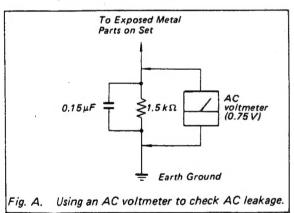

SAFETY-RELATED COMPONENT WARNING!

COMPONENTS IDENTIFIED BY SHADING AND MARK
A ON THE SCHEMATIC DIAGRAMS, EXPLODED
VIEWS AND IN THE PARTS LIST ARE CRITICAL TO
SAFE OPERATION, REPLACE THESE COMPONENTS
WITH SONY PARTS WHOSE PART NUMBERS APPEAR
AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS
PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS
THAT ARE CRITICAL TO SAFE OPERATION ARE
IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE
REPLACED OR IMPROPER OPERATION IS SUSPECTED.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

- A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
- A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
- 3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

ATTENTION AU COMPOSANT AYANT RAPPORT

LES COMPOSANTS IDENTIFIÉS PAR UN TRAME ET UNE MARQUE A SUR LES DIAGRAMMES SCHÉMATIQUES, LES VUES EXPLOSÉES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS MANUEL OU DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DU CIRCUIT QUI SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT SONT IDENTIFIÉS DANS CE MANUEL. SUIVRE LES PROCÉDURES QUAND LES COMPOSANTS CRITIQUES SONT REMPLACÉS OU LE FONCTIONNEMENT IMPROPRE EST SUSPECTÉ.

TABLE OF CONTENTS

Sect	ion <u>Title</u>	Page	Sect	ion	<u>Title</u>	<u>Page</u>
SER	VICE NOTE	7	3.	DIAGRAMS		
			3-1.	Circui Boards Locatio	n	40
1.	GENERAL		3-2.	Overall Block Diagram	n ······	41
			3-3.	Video Block Diagram	***************************************	46
Hi8 (H	High Eight) Video System ·····	8	3-4.	Servo Block Diagram		51
Locat	tion and Function of Parts and Controls	9	3-5.		am	
Hand	ling the Cassette ······	11	3-6.	System Control - Vic	deo Block Interface ····	59
	ng Back a Tape ······		3-7.	System Control		
	us Playback Modes·····			Servo (Capsta	n Motor) Block Interfa	ce 59
	the Tape Counter ·····		3-8.	System Control		
	rding TV Programs······			— Servo (Drum N	Motor) Block Interface	59
Time	r-Activated Recording ······	16	3-9.	System Control		
	Recording and Playback			— Servo (Reel M	lotor) Block Interface…	61
	Digital Multi Audio System	18	3-10.	System Control		
	ave the Unit Turned Off Automatically			— Servo (ATF Se	ervo) Block Interface ·	61
-	- Sleep Timer·····	20	3-11.	System Control - Se	rvo (STILL) Block Inte	rface ······ 63
Index	Function ·····	21	3-12.	System Control		
Trans	ferring the Entire Control of a Tape to Another	23		— Servo (Head S	Selecting) Block Interfa	ace 63
Vai	rious Tape Editing Methods	24	3-13.	System Control		
Syncl	hronized Editing from/onto a SONY VCR			— Servo (And Ot	hers) Block Interface ·	36
	n the Control Terminal·····	24	3-14.	System Control — MD) Block Interface ······	65
Manu	al Editing from/onto a VCR Not Equipped		3-15.	System Control		
	Control Terminal ······			— AFM Audio Blo	ock Interface (AU-54 E	3oard) 67
	natic Assemble Editing		3-16.	Pcm Index Controller		
	Dubbing			— PCM Audio Bk	ock Interface·····	67
	na/Cable and TV/Monitor Connection ·····		3-17.	System Control PC	M Audio Block Interfa	ice 69
	ting the TV·····		3-18,	Servo — Video Block	Interface ······	69
Settin	g the Clock ·····	31		PCM Audio — Video E		
				PCM Audio — Servo I		
				Tuner Block Diagram		
2.	DISASSEMBLY			Audio Block Diagram		
				PCM Audio Block Diag		
2-1.	Removal of Upper and Lower Cabinets			Timer/Mode Control B		
2-2.	Removal of Front Panel		3-25.	Power Block Diagram	•••••	86
2-3.	Opening of The FT-37 Board					
2-4.	Opening of The PW-62 Board ·····					
2-5.	Removal of The PR-12 Board ·····		4.	PRINTED WIRING		
2-6.	Opening of The SP-7 Board ·····			SCHEMATIC DIAG	RAMS	
2-7.	Removal of TS-49 and YU-82 Boards ·····					
2-8.	Opening of The VI-57 Board ·····		4-1.	Frame Schematic Dia		
2-9.	Opening of The AU-54 Board ·····		4-2.	Printed Wiring Boards		
2-10.	Removal of The DT-63 Board				•••••	
2-11.	Removal of The RP-68 Board					
2-12.	Removal of The DR-35 Board				11, NC-8 Boards·····	110
2-13.				SP-7 (System Conf		
2-14.	Removal of Rear Panel					
2-15.	Removal of Mechanism Block			• SP-7 (Servo), DM-	18 Boarsd	130
2-16.	Removal of LS Cassette Compartment Assembly				, LD-1 Boards·······	
2-17.	Ejecting Without Applying The Power				Board ·····	
	Replacement of Cassette Holder Assembly					
2-18				 AD-12, NR-6, MK-2 	2, MJ-12 Boards ······	165
2-18						
Z-19.	Internal Views ·····	39			40.0	
	•			• IS-49, TU-82, PR-	12 Boards ·····	
				• F1-37, CB-8, FR-30	9 Boards ······	
					is1	
			4.0		3, DS-15, DR-35 Boa	
			4-3	Semiconductors		

<u>Secti</u>	<u>on</u> <u>Title</u>	Page	Section	<u>Title</u>	Page
5.	EXPLODED VIEWS		7-4. Ta	pe Path Adjustment ·····	299
			7-4-1.	Connection of Track Shift & Monitor Jig	
5-1.	Front Panel and Case Assemblies	209	7-4-2.	Preparation for Adjustment ······	
5-2.	Power Block and Rear Panel Assemblies	210	7-4-3.	Entrance Side Adjustment ·····	
5-3.	Board Assembly		7-4-4.	Exit Side Adjustment ·····	
5-4.	LS Cassette Compartment Assembly	212	7-4-5.	Checking After Adjustment	
5-5.	Chassis Assembly 1 ·····				
5-6.	Chassis Assembly 2 ·····	214		3	
5-7.	Chassis Assembly 3 ·····	215	8. EL	ECTRICAL ADJUSTMENT	
5-8.	Chassis Assembly 4 ·····	216			
			8-1. Pre	parations	311
			8-1-1.	Connection of Equipment ·····	
6.	ELECTRICAL PARTS LIST	217	8-1-2.	Confirmation of Input Signal	
			8-1-3.	Recording Mode Selection	
HARD	WARE LIST	262		(Hi8 mode/Normal mode) ·····	314
			8-2. Po	wer Supply Block Adjustment	
			8-2-1.	Oscillation Frequency Adjustment	
7.	MECANICAL ADJUSTMENT			(DR-35 Board)	314
			8-2-2.	REG 5V Adjustment (DR-35 Board) ······	
7-1.	Preparation Items for Mechanism Section Checkin	ng,	8-2-3.	REG 9V Adjustment (DR-35 Board) ······	
	Adjustment and Replacement	263	8-2-4.	Voltage Check (DR-35 and DT-63 Boards) ·······	
7-1-1	. LS Cassette Compartment Assembly and			stem Control System Adjustment	
	Operation without Tape Inserted	263	8-3-1.	Timer Clock Adjustment (FT-37 Board) ······	
7-1-2	. Handling of Mode Selector	264	8-4. Ser	vo System Adjustment······	
7-2.	Periodic Check and Maintenance		8-4-1.	Reel Bias Adjustment (SP-7 Board) ······	
7-2-1			8-4-2.	REC ATF Level Check (SP-7 Board) ······	
7-2-2			8-4-3.	Drum Free Speed Adjustment	
7-2-3	-			(SP-7 Board)	31.6
7-2-4			8-4-4.	Capstan Free Speed Adjustment	0,0
7-2-5			0 1 1.	(SP-7 Board) ·······	31.6
	Mechanical Check, Adjustment and Replacement		8-4-5.	Switching Position Adjustment	310
7-3-1				(SP-7 Board)	31 7
7-3-2	•		8-4-6.	ATF BPF Balance Adjustment	0, ,
7-3-3			0 . 0.	(SP-7 Board) ······	31 7
7-3-4	·		8-4-7.	SLOW Tracking Adjustment (SP-7 Board) ·······	
7-3-5	The state of the s		8-4-8.	Tracking Adjustment (SP-7 Board)	
7-3-6			8-4-9.	STILL Adjustment (SP-7 Board) ······	
7-3-7			8-4-10.	FORWARD SLOW Adjustment	0,0
7-3-8				(SP-7 Board)	31.8
7-3-9			8-4-11.	SLOW fH Adjustment (SP-7 Board)······	
7-3-1	•			eo Adjustment ·······	
7-3-1	_		8-5-1.	Playback Frequency Characteristics Adjustment	0,0
	(No. 2 Guide Assembly) ······	280		(RP-68 Board)······	320
7-3-1	• • • • • • • • • • • • • • • • • • • •		8-5-2.	Flying Erase Check (RP-68 Board) ······	
7-3-1	•		8-5-3.	X'tal Oscillator fo Adjustment	CLO
7-3-1	-			(CH-44/VI-57 Board)	320
7-3-1	5. M-SW Assembly	285	8-5-4.	Y/C Separation Comb-type Filter Adjustment	42.0
7-3-1	6. M Slider	287		(VI-57 Board) ······	32 1
7-3-1	7. Capstan Motor ······	289	8-5-5.	Y Comb-type Filter Adjustment	U
7-3-1	8. Replacement of Rotary Upper Drum	290		(VI-57 Board) ······	3) 1
7-3-1	, , , , , , , , , , , , , , , , , , , ,		8-5-6.	SYNC AGC Adjustment (VI-57 Board) ······	
7-3-2		201	8-5-7.	31 AMP Gain Adjustment (VI-57 Board)······	
	No. 3 Guide and No. 4 Guide·····	293	8-5-8.	VIDEO OUT Level Adjustment	0.2
7-3-2			J J J,	(VI-57 Board) ·······	207
7-3-2			8-5-9.	PB Emphasis Adjustment (VI-57 Board)·····	
7-3-2			8-5-10.	STD Mode PB Y Level Adjustment	012
7-3-2			U-J-1U,	(VI-57 Board) ······	21-0
7-3-2			8-5-11.	Hi8 Mode PB Y Level Adjustment	362
7-3-2			U-J-11.	(VI-57 Board) ······	200
7-3-2		200	8-5-12.	STD Mode Y FM Carrier Frequency,	23
	Winding Torque Cassette ······	20A	U-J-12.	Y FM Deviation Adjustment	20
	dilly rorque oudsette	290		T IN Deviation Aujustinent	25

Section	<u>Title</u>	<u>Page</u>
8-5-13.	Hi8 Mode Y FM Carrier Frequency,	
	Y FM Deviation Adjustment	324
8-5-14.	378fH VCO Adjustment	
	(CH-44/VI-57 Board)	325
8-5-15.	Chroma Emphasis fo Adjustment	
	(CH-44/VI-57 Board)	325
8-5-16.	Carrier Balance Adjustment	
	(CH-44/VI-57 Board)	325
8-5-17.	1H Comb-type Filter Adjustment	
	(YC-56 Board)	325
8-5-18.	2H Comb-type Filter Adjustment	
	(YC-56 Board)	
8-5-19.	DC Offset Adjustment (YC-56 Board) ······	326
8-5-20.	C Comb-type Filter Cancel Adjustment	
	(YC-56 Board)	
8-5-21.	Ys Level Adjustment (YC-56 Board) ······	326
8-5-22.	REC Y Level Adjustment (VI-57 Board) ······	327
8-5-23.	REC C Level Adjustment (VI-57 Board) ······	327
8-5-24.	REC RF Level Adjustment (VI-57 Board)	327
8-5-25.	D.O.C. Level Adjustment (VI-57 Board)	. 328
8-5-26.	Direct Y Signal Level Adjustment	
	(JG-11 Board)	328
8-5-27.	Direct C Signal Level Adjustment	
	(JG-11 Board)	
8-6. Aud	dio System Adjustments ······	. 329
8-6-1.	PCM Audio System Adjustment ······	329
8-6-2.	AFM Audio System Adjustment	332
8-7. Tur	ner System Adjustment·····	
.8-7-1.	RF AGC Adjustment (TU-82 Board) ······	334
8-8. Adj	ustment Related Parts Arrangement Diagrams ·····	
REMOTE	E COMMANDER (RMT-424)······	343


SERVICE NOTE

Removal of cassette when there is a malfunction with cassette loaded

[Removal not possible with tape wound on drum] (See Fig. 1.)

- 1) Remove the upper and bottom cases.
- Rotate the white gear next to the drum on the back of the mechanism section in the counterclockwise direction and release the tape wound on the drum.
- After releasing the wound tape, remove the cassette by the procedure below.


Note: If the tape is ejected without the tape inside the cassette half even if the tape winding has been released, the tape will be creased by closing of the cassette half lid when ejected.

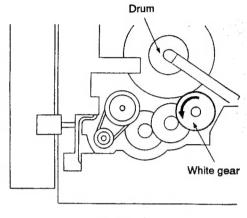

(Fig. 1.)

[Removal not possible with tape inside cassette half] (See Fig. 2.)

- 1) Remove the upper case.
- 2) Push the white lever in the direction of arrow.
- Rotate the pulley in the counterclockwise direction, and eject manually.

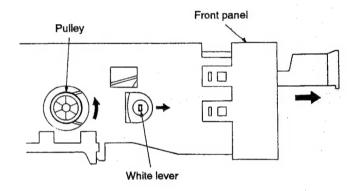

(Fig. 2.)

H 3 Head cleaning

Since the new recording system is used for this unit, so the video head structure is more precisional than conventional one.

When cleaning, use the supplied or separately available (V8-25CLH) cleaning tape.

The conventional cleaning tape (V8-25CL) is not suitable for cleaning the head of this unit.

Moreover, the supplied and separately available (V8-25CLH) cleaning tape are to be used for the conventional units.


Super High Quality Picture

The information capacity is a key element for picture improvement. It can be increased by shifting up to the FM carrier frequency range. In the Hi8 video system, the FM carrier frequency range of the luminance signal is shifted up to 5.7–7.7 MHz. This is higher than the 4.2–5.4 MHz range of the standard 8 mm video system. Thanks to this, the horizontal resolution is improved to more than 400 lines.


Use of High-Grade Tape Corresponding to the Hi8 Video System

Metal evaporated tape is ideal for video systems because it has large magnetic energy that allows for high-density recording. The HI8 video cassette recorder uses such high-grade tape for the Hi8 video system, covering a wide frequency range, to achieve a high-quality video signal for recording/playback.

Frequency allocation of the standard video system

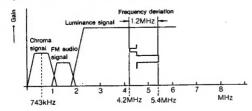

Frequency allocation of the Hi8 video system

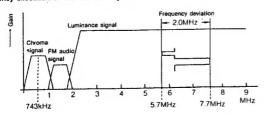

S VIDEO (Separated Luminance/ Chrominance Signal) Input/Output Connectors

Conventionally, video equipments exchange the composite video signal containing the luminance (Y) signal and the chrominance (C) signal mixed. The composite video signal is liable to produce interference resulting in picture quality loss. On the contrary, an S VIDEO connector transmits or receives the video signal separated into the luminance signal and the chrominance signal. Flickers and color blur in the picture are minimized with the separated video signal, and sharpness is enhanced to such an extent that hair and fine stripes are clearly visible. The S VIDEO connector also assures an excellent editing quality with minimum picture quality loss.

Compatibility with Conventional Video Cassette Recorder

A high-quality picture can be recorded and played back on a tape for the Hi8 video system.

Recording with this VCR

Tape used	Setting of the Hi 3 switch	Video system of the recorded tape
	AUTO HI E	Hi8 video system
Hi 8 tape	Hi 🔞	Standard 8 mm video system
Standard 8 mm tape	Either position will do.	Standard 8 mm video tape system


- A tape recorded in the Hi8 video system cannot be played back with an conventional 8 mm VCR.
- A standard 8 mm tape cannot be recorded and played back in the Hi8 video system.
- A tape for the Hi8 video system cannot be recorded and played back in the Hi8 video system with a conventional VCR.
- The recording tape speeds in the Hi8 are compatible with the conventional 8 mm video system.
 Recording/playback time is 4 hours using a E6/P6-120 tape or the equivalent.

Playback with this VCR

Tape used	Playback video system	
Tape recorded in the Hi8 video system	The recording video	
Tape recorded in the standard 8 mm video system	system is automatically selected.	

A-1

9

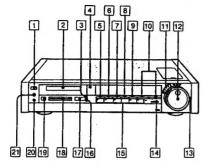

Front Panel A-1

1 POWER switch and Indicator

2 Cassette holder

3 SYNCHRO EDIT indicator

4 OPEN/CLOSE button

5 COUNTER/REMAIN button

6 COUNTER RESET button

7 TAPE RETURN button

8 INDEX button

9 TV/VTR button

This button functions only when the VHF/UHF IN connector at the rear is connected. To view the program selected on the recorder, press this button so that the VTR indicator appears in the display window (VTR mode). To view the TV program while recording another, press this button so that the VTR indicator disappears (TV mode).

10 CHANNEL/TRACK/INDEX buttons

11 JOG dial mode indicators

Light when the JOG dial is being used for the associated operations. JOG/SHUTTLE: For selecting the playback speeds in various playback modes.

CHANNEL: For selecting the channels or to designate the

TIMER: For setting the clock or timer-activated recordings. INDEX: For designating the index numbers.

12 JOG dial

13 SHUTTLE ring

14 REC (recording) switch and indicator

15 Tape transport buttons and indicators

■ REW (rewind). ➤ PLAY (playback), ▶► FF (fastforward), # STOP, 11/> PAUSE/STILL, x2 (double speed playback)

16 LINE 2 indicator

17 Hi 3 (Hi-Eight playback/recording) indicator

18 Peak program meter

19 Remote control detector


20 HEADPHONES jack (stereo minijack)


Connect stereo headphones.

21 PHONE LEVEL (headphone level) control

Adjust the volume of headphones connected.

A-2

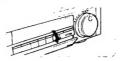

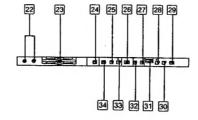

Inside the front panel A-2

[22] MIC (microphone) jacks (minijack) Connect a microphone with a mini plug.

23 REC (recording) LEVEL controls

24 Hi E (High Eight) mode switch

25 SYNCHRO EDIT button

26 PCM MODE selector

27 INDEX ERASE button

28 AUDIO DUB button and indicator

29 AUDIO MONITOR selector

30 STD (standard) AUDIO selector

31 SHARPNESS control


32 INDEX MARK button

33 EDIT button and indicator

34 LINE selector

A-3



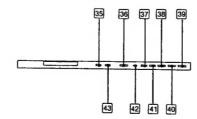

Rear of the front panel A-3

35 INPUT SELECT button

36 SLEEP button

37 CHECK button

38 TIMER SET button

39 TIMER REC ON/OFF button


40 NEXT button.


41 CLEAR button

42 CLOCK SET button

43 REC MODE button

Location and Function of Parts and Controls

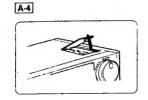

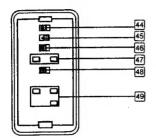

Upper compartment A-4

44 AUTO INDEX switch

45 COMMAND MODE selector


46 ANTENNA SW (switch)

47 SLOW/STILL ADJ (adjust) buttons

48 AUTO STEREO switch

49 Buttons used for channel presetting ERASE button ADD button NORMAL/CATV button

A-5

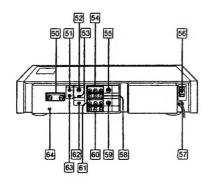

Rear panel A-5

50 VHF/UHF IN/OUT terminals

51 CONTROL S IN jack (minijack)

52 CONTROL L connector (5-pin DIN)

53 SLAVE/MASTER selector

54 LINE IN 1 AUDIO/VIDEO jacks (phono jack)

55 LINE IN 1 S VIDEO connector (4-pin mini-DIN)

56 AC OUTLET (unswitched, 400 W max.)

57 AC power cord

[58] LINE IN 2 AUDIO/VIDEO jacks (phono jack)

59 LINE OUT 1 S VIDEO connector (4-pin mini-DIN)

60 LINE OUT 2 AUDIO/VIDEO jacks (phono jack)


61 LINE OUT 1 AUDIO/VIDEO jacks (phono jack)

62 DIGITAL MULTI PLAY selector

63 CONTROL S OUT jack (minijack)

64 RF UNIT channel selector



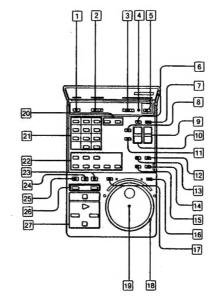

Remote Commander RMT-424 [A-6]

The buttons without the * mark have the same function as the buttons on the VCR with the similar name or

The buttons with an orange dot can be used to operate Sony TVs having a mark.

1 OPEN/CLOSE button

2 Command mode selector*

3 Remote control TV/VTR selector*

4 Transmitting indicator*

Lights when any button on the Commander is pressed.

5 POWER switch

6 MUTING button*

Press to mute the sound. Press again to restore it.

7 TV/VTR button

8 DISPLAY button*

Press to retain the on-screen display. Press again to extinguish it.

9 TRACK/CH (channel) +/- button

10 VOL (volume) +/- buttons*

11 SLEEP button

12 COUNTER RESET button

13 COUNTER/REMAIN button

14 SYNCHRO EDIT button

15 AUDIO DUB button

16 TRACK/CH/INDEX button and indicator*

Press when using the JOG dial for digital multi audio track, channel or index number selection.

17 JOGSHUTTLE mode button and lamp*

Press when using the JOG dial and SHUTTLE ring for various speed playback.

18 SHUTTLE ring

19 JOG dial

20 INDEX MARK/ERASE button

21 Number buttons*

[22] Various speed playback buttons*

►4 (still picture), ≪III/II► FRAME (trame-by-frame picture), x1/10/x1/5 (slow motion picture), x1 (normal speed picture), x2 (double speed picture), SCAN (for picture search)

23 AUTO PB (automatic playback) button

Press to play back a tape automatically from the beginning of the tape after rewinding.

24 TAPE RETURN button

25 INDEX button


26 REC (recording) buttons

To start recording, press these buttons simultaneously.


27 Tape transport buttons

Handling the Cassette

C-1

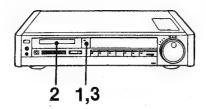

C-2

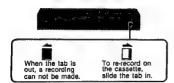

Inserting: a: Cassette: Call

- 1 Press OPEN/CLOSE. The power will be turned on automatically. (Auto
- power on) The cassette holder will be ejected.
- 2 Insert the cassette with the window side up.
- 3 Press OPEN/CLOSE to close the cassette holder.

Ejecting a Cassette

- 1 Press OPEN/CLOSE
- 2 Eject the cassette. Press OPEN/CLOSE to close the holder.

To Prevent Accidental Erasure ()

When a new recording is made on a previously recorded cassette, the previous recording will be automatically erased. To avoid erasing a recording unintentionally, slide out the tab on the cassette to cover the opening. (A red mark will appear.)

Recording/Playback Time

The recording time of a cassette in the LP mode is twice as long as that in the SP mode. The quality of the recording picture in the LP mode, however, will not be as good as that in the SP mode. You can select the recording speed with the REC MODE button. The playback speed is automatically set.

Cassette used	SP	LP
P6-15	15 min.	30 min.
E6/P6-20	20 min.	40 min.
P6-30	30 min.	1 br.
P6-45	45 min.	1 hr. 30 min.
E6/P6-60	1 hr.	2 hr.
P6-90	1 hr. 30 min.	3 hr.
E6/P6-120	2 hr.	4 hr.

Notes on cassettes


- · Never store ME (metal-evaporated) cassettes in humid
- places because they rust easily.

 Never insert anything in the small holes at the rear of the cassette as the VCR distinguishes between ME and MP cassettes by the shape of a hole.
- Store cassettes in their cases and keep them in an upright position to prevent intrusion of dust and uneven winding.
- When the VCR is not in use, remove the cassette.

Use of ME cassettes will be recommended to obtain a high-quality picture in the LP mode with the Hi8 video system activated.


Playing back a Tape

D-1

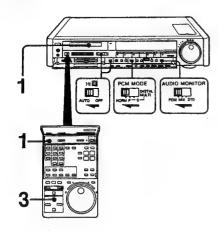

D-2

2

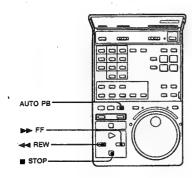

Operation Date

You can use the buttons on the VCR with the same name or mark as those on the Commander.

Before operating

- Hi 🔁 switch: AUTO
- PCM MODE selector: NORM
- AUDIO MONITOR selector: PCM
- 1 Press OPEN/CLOSE and insert a cassette. Press OPEN/CLOSE again to close the cassette holder.
- 2 Turn on the TV and select the input for the VCR.

For the TV without video/audio inputs, select the channel (3CH or 4CH) for the VCR.

3 Press ➤ PLAY. Playback will begin. The indicator on the ➤ PLAY button on the VCR will light during playback.

If playback does not start

Readjust the channel for the VCR on the TV. (See page 52.)

D-2

To stop playback	Press STOP.
To advance the tape rapidly	Press ►► FF.
To rewind the tape	Press REW.
To play back a tape from the beginning after rewinding — Auto play	On the Remote Commander: Press AUTO PB. On the VCR: Press ► PLAY keeping ◄◄ REW.

When the tape reaches the end during playback

It will be automatically rewound. The power will remain

Picture adjustment

Turn the SHARPNESS control toward SHARP to get a sharp picture or toward SOFT for a soft picture.

If the playback picture does not appear

Check the DIGITAL MULTI PLAY selector at the rear. Set the selector to AUTO.

If the playback picture does not appear when the recorder it connected to a TV without video/audio inputs

SEC ANTENNA SW inside the upper compartment of the VCR to AUTO. When the selector is set to MANUAL, press TV/VTR on the Commander or the recorder so that the VTR indicator in the display window lights. D-3



To Select the Monitor Sound

You can select the monitor sound of various kinds of the recorded tape with the AUDIO MONITOR selector.

Audio recording pattern on a video tape [D-3]


- shows the standard track.
- shows the PCM track.

Kind of recorded tape	Track to be played back	Setting of the AUDIO MONITOR selector
Stereo	PCM	PCM
FM simulcast	РСМ	РСМ
SAP (Second Audio Programs)	PCM and/or standard	To monitor MAIN: PCM To monitor SAP: STD To monitor both: MIX
Audio dubbed 💮	PCM and standard	MIX

To record the above kind of tapes, refer to the pages in

If the sound is not heard or heard only intermittently When a tape which has been recorded on a video camera recorder or a video cassette recorder without the PCM function is played back on this unit, set the AUDIO MONITOR selector to STD. The PCM Indicator may blink, but it does not affect the sound.

When the TV without the video/audio inputs is connected Connect your stereo system to this unit to monitor the stereo sound.

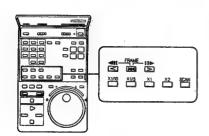

Using the Buttons on the Remote Commander or the VCR 151

Still picture (playback pause)

Press III/▶ ■ PAUSE/STILL during playback. The sound will be muted. To resume normal playback, press ▶ PLAY.

Double speed playback

Press x2 during playback. The sound will be heard. To resume normal playback, press PLAY.

Picture search — Viewing the picture at a fast speed to find a particular scene

Keep pressing ◀◀ REW or ▶► FF during playback or in still picture mode. Release the button to resume normal playback.

Using the Buttons on the Commander Only [5]

Slow speed playback

Press x1/10 or x1/5 during playback. Slow motion picture at 1/10 or 1/5 normal speed will be obtained. The sound will be muted. To resume normal playback, press ▶ PLAY.

Frame-by-frame playback

Press \$30 (forward) or ◀30 (reverse) in still picture mode. To resume normal playback, press ▶ PLAY.


Locked picture search — Viewing the picture during fast-forward or rewind

In normal playback or still picture mode, press > (forward) or < (reverse) to select the tape transport direction and then press SCAN. To resume normal playback, press >> PLAY.

If the still picture appears to shake
Press SLOW/STILL ADJ inside the upper compartment until
the picture stabilizes.

If noise band appears in slow speed playback Adjust SLOW/STILL ADJ. When the tape speed (SP/LP) is changed, readjust it.


When the unit ix in picture search mode Streaks will appear and sound will be muted. E-2

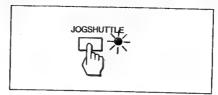

E-3



E-4

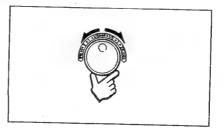

Using the JOG dial and SHUTTLE ring

- 1 Set the unit to the still picture mode.
- 2 Press the JOGSHUTTLE button on the Commander to turn on the indicator if the Commander is to be used. [E-2]
- 3 Turn the JOG dial.
 Playback occurs according to the speed at which you turn the dial. (x1/10, x1/5, normal speed) [E:3]

Turn the SHUTTLE ring and hold it at the desired speed position.

The approximate positions of the various speeds are indicated on the Commander (x1/5, normal, double, continuous picture search). [E.4]

Turn it clockwise for forward playback, or counterclockwise for reverse playback.

4. When you release JOG or SHUTTEL, the picture will freeze again.

Notes

- When JOG or SHUTTLE is in use, no tape transport buttons function:
- If the JOGSHUTTLE button on the Commander is pressed during playback, the CHANNEL of the JOG dial mode indicators on the VCR will light and the playback speed cannot be changed with the JOG dial on the VCR.

- 13 -

00 00

00000

00000

000 00

000

000

00 000 0

C .

00

The tape counter in the display window indicates the approximate running time of the tape and the relative positiion of programs on the tape.

To Index the Tape Contents

Press the COUNTER RESET at the beginning of the tape to set the counter to zero. By noting the counter reading at a particular point, you can easily find that point later by referring to the counter.

To Stop the Tape at a Particular Point -Tape Return [=1]

- 1 During recording or playback, press COUNTER RESET at the point you want to locate later.
- 2 When recording or playback is finished, press # STOP.
- 3 Press TAPE RETURN. The tape will be rewound or advanced close to the counter zero point.

To Start Playback Automatically from the Counter Zero Point - Tape Return Play

- 1 Follow steps 1 to 3 in "Tape Return" above.
- 2 Press PLAY while the tape is being rewound or advanced.

The tape will be rewound or advanced close to the counter zero point and start playback.

F-2



200 0:27

To Get to Know the Remaining Recording or Playback Time 124

During recording or playback, press COUNTER/REMAIN. After the counter shows "-:--" for 5 to 20 seconds. the remaining recording or playback time will be displayed.

The illustration shows that the remaining time is 27 minutes.

To return to the normal tape counter Press COUNTER/REMAIN again.

Notes on the remaining time counter

- . The remaining time counter may not be accurate for - commercially available recorded tapes.
- damaged tapes and non-standard tapes.
- the beginning of a tape, especially when the tape has just been rewound (by several minutes max.).
- The remaining time counter will be changed to "-:--" when an unrecorded portion of the tape is played back, when the recorded tape speed has been changed, or when the tape is run rapidly.

Notes on the remaining time counter in various speed playback modes


- When you want to display the remaining time during x2 forward, x1 reverse or x2 reverse playback, press COUNTER/REMAIN to display the remaining tape counter after playing back the tape in normal playback mode and then resume the desired playback mode.
- The remaining time counter will stop when the VCR is set to frame-by-frame or slow motion picture mode.

F-1

4


Recording TV Programs

G-1

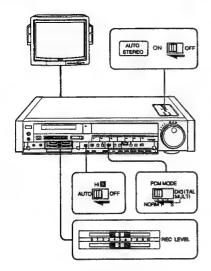

G-2

S

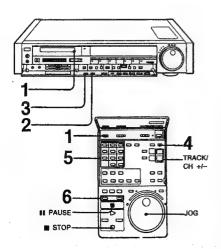

Make sure that you have finished all the connections and adjustments through pages 47 to 55.

Preparation G-1

- Turn on the TV and select the video input on the TV or select the channel for the recorder.
- REC LEVEL controls: position
 Hi switch: AUTO
 PCM MODE selector: NORM
 AUTO STEREO selector: ON

Operation 1652

You can also use the buttons on the VCR with the same name or mark as those on the Commander,

- 1 Press OPEN/CLOSE and insert a cassette. The power will be automatically turned on. Press OPEN/CLOSE again to close the cassette holder.
- 2 Select the recording speed (SP or LP).
- 3 Press INPUT SELECT so that the TUNER indicator appears in the display window.
- 4 Press TV/VTR so that the VTR indicator appears in the display window (only for a TV which is connected to the VHF/UHF INPUT on this unit).
- 5 Select the channel to be recorded with the number buttons.

e.g. To select channel 16



You can select the channel by scanning with TRACK/CH +/- or JOG.

6 Press two REC buttons simultaneously (or slide REC on the VCR to the right) to start recording.

To stop recording

Press STOP.

To stop recording momentarily

Press # PAUSE.

To resume recording, press

PAUSE again or

PLAY.

To protect the video heads and the tape, the pause mode will be automatically released after about 7 minutes and recording will stop.

When the recording is made to the end of the tape during recording

The tape will be automatically rewound to the beginning and the unit will enter the stop mode. The power remains on.

To make a frame-by-frame recording

To tape an animated program, proceed as follows: Press ● REC buttons on the Commander or slide ● REC to the right on the VCR while the unit is in recording pause mode. A very short recording of approximately 7 or 8 frames will be made and then the VCR will automatically enter recording pause mode again. Repeat this operation as many times as you like.

To watch one TV program while recording another Press TV/VTR so that the VTR indicator goes off. Select the channel you want to watch on the TV. If your TV is equipped with a TV/VTR input selector, simply set the selector to TV and select the desired channel on the TV.

If the cassette is ejected when the REC buttons are pressed

The tab on the cassette is slid out. Slide the tab in or use a new cassette.

If a stereo program is noisy
Set AUTO STEREO to OFF. The noise will be reduced though the sound is heard in monaural.

If you started recording of an unnecessary scene
You can return the tape to the desired point and set the

- VCR to recording standby mode.

 1 Press STOP to stop recording.
- 2 Press ► PLAY and then press II/► to set the VCR to playback pause mode.
- 3 Locate the desired point where you wish to start recording by turning the JOG diat counterclockwise.
- 4 Press the

 ◆ REC buttons. The VCR will enter recording pause mode.
- 5 At the desired point, press II/I PAUSE/STILL to release pause mode. Recording will begin.

19

To Record Multichannel TV Sound (MTS) Broadcasts

To record a stereo broadcast

When a stereo program is received, the STEREO indicator will appear in the display window. With the usual recording procedure, the program will be recorded in stereo on the PCM track and in monaural on the standard track.

 Make sure AUTO STEREO inside the upper compartment is set to ON.


To Record a SAP (Second Audio Program) broadcast

Press the STD AUDIO selector so that the SAP indicator appears in the display window. The SAP sound will be recorded on the standard track while the MAIN sound is recorded on the PCM track. To record a MAIN broadcast only, press STD AUDIO to display the MAIN indicator. The MAIN sound will be recorded on both the PCM and standard tracks.

When a SAP sound is not to be recorded

Be sure to set the STD AUDIO selector to MAIN. If It is set to SAP and there is no SAP broadcast, no sound is recorded on the standard track.

20

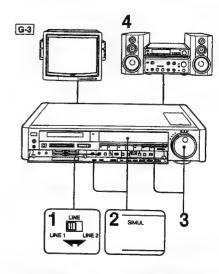


FM simulacast recording resign

Sometimes a TV station and an FM radio station will broadcast a program simultaneously. By connecting an FM tuner you can record a TV program in high-fiderity stereo. The picture and sound of the TV program are recorded on the standard track and the sound from the FM tuner is recorded on the PCM track.


Operation

- 1 Set LINE to either LINE 1 or 2 according to the line inputs connected to the FM tuner.
- 2 Press INPUT SELECT so that the SIMUL indicator appears in the display window.
- 3 Select the channel you want to record on the VCR.
- 4 Select the station you want to record on the FM

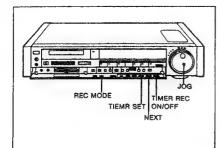

You can preset up to six recordings to be made between today and Saturday of the week after next.

Example:

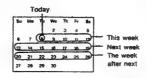

Operation (15)


Preparation

- The clock must be set correctly. For setting, see page 55.
- Be sure the safety tab of the cassette has not been slid out.
- Make sure the cassette tape is long enough to record all programs.
- INPUT SELECT switch: TUNER
 PCM MODE selector: NORMAL
 REC LEVEL controls: 5 position
 Hi switch: AUTO

Buttons used for timer setting

NEXT button: Every time you press this button, the item to be set will blink.

JOG dial: To set the week and day, the turn-on and turnoff times and the channel, turn clockwise to advance and counterclockwise to reverse. H-2

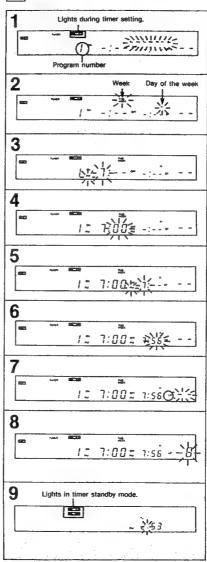

Operation [H-2]

Suppose you want to make a recording oil channel 8 from 7 P.M. to 7:56 P.M. on Friday this week.

- 1 Press TIMER SET.
- 2 Set the week and day with JOG. Then press NEXT.
- 3 Set the turn-on hour with JOG. Then press NEXT.
- 4 Set the minute with JOG. Then press NEXT.
- 5 Set the turn-off hour with JOG. Then press NEXT.
- 6 Set the minute with JOG. Then press NEXT.
- 7 Press REC MODE to select the recording speed (SP or LP).
- 8 Set the channel to be recorded with JOG. Then press NEXT.

Approximately three seconds later the display window will change to the counter display. To preset another program, repeat steps 1 to 8. Up to 6 programs can be preset.

9 Press TIMER REC ON/OFF.

The power will be turned off and the VCR will enter the standby mode.

Recording will start at the preset turn on time and will stop when the recording is completed. The power will be turned off automatically. $\overline{}$

At the same time on the same day every week (e.g. every Sunday)

EVER

Sω

At the same time every day

Su Mo Tu We Th Fr Sa

At the same time every day from Monday to Saturday

Mo Tu We Th Fr Sa

At the same time every day from Monday to

() Mo Tu We Th R()

Every week recording and every day recording

You can preset a timer recording for the same time every day or for the same day every week. Select the desired setting with JOG so that the appropriate indicator is displayed in step 2 of the procedure in the previous page. [H-3]

If you want to cancel the every week or every day recording one time only

Press TIMER REC ON/OFF so that the TIMER REC indicator goes off. When you want to begin regular timer recording again, press TIMER REC ON/OFF again so that the indicator is displayed.

If you want to correct the Item during setting
Press CLEAR. Only the program which is currently being
set will be cancelled. Reset the program.

Why is the cassette holder ejected when TIMER REC ON/OFF is pressed?

- · No cassette is inserted.
- . The safety tab of the cassette inserted is slid out.
- . The tape is at its end.

To make timer recordings of the signals input from audio equipment See page 28.

Buttons which can be operated while the TIMER REC ON/OFF Indicator III displayed Only CHECK and TIMER REC ON/OFF are operable.

To stop recording during a timer-activated recording Press TIMER REC ON/OFF. The recording will stop and the power will be turned off. The ■ STOP and #176-44 PAUSE/STILL do not function.

When a timer recording is completed

- The memory for the recording will be erased if it is for only one day, and the timer program number will advance by one.
- When the tape reaches its end before the turn-off time, recording will stop and the power will be turned off. The tape will not be automatically rewound.

When the presettings of your timer-activated recordings overlap

The recording of program 2 will begin before program 1 is finished. The overlapped portion on program 1 will be cut off.



If the turn-on time of two programs is the same


A recording of the program having the lower program number will be made. The memory of the program having the higher number will be cleared.




If a power interruption occurs

- If it occurs before a timer recording starts, memory for the timer recordings will be cleared. Reset the clock and preset the timer recordings. A short power interruption of less than approximately 20 seconds does not affect the memory.
- If it occurs during a timer recording, recording will stop and the power will be turned off. If the power Interruption was less than approximately 20 seconds, the recording will resume.


H-4

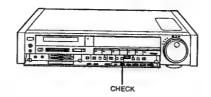

H-5

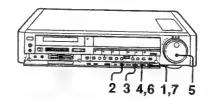

H-6

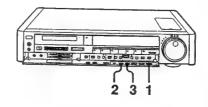

Checking the Timer Settings : IIEI

Press CHECK. Every time you press CHECK, each program will be displayed in the display window.

Changing the Timer Settings | [15]

- 1 Press TIMER REC ON/OFF so that the TIMER/ REC indicator goes off.
- 2 Press CHECK repeatedly until the program you want to change is displayed:
- 3 Press TIMER SET.
- 4 Press NEXT until the item to be changed blinks.
- 5 Change the setting with JOG.
- 6 Press NEXT until the counter display appears.
- 7 Press TIMER REC ON/OFF so that the TIMER/ REC Indicator appears again.

Cancelling the Timer Setting TIME

- 1 Press TIMER REC ON/OFF so that the TIMER REC indicator goes off.
- 2 Press CHECK until the program you want to cancel is displayed.
- 3 Press CLEAR. The memory for the program will be erased.
 If other programs have been preset for recording, press TIMER REC ON/OFF again to reactivate the timer.

Using the VCR Before Timer-Activated Recording Starts

Press TIMER REC ON/OFF so that the TIMER REC indicator goes off.

After using the VCR, press TIMER REC ON/OFF again so that the TIMER REC indicator appears.

Note on the PCM MODE selector

A timer-activated recording for a TV program will not start unless PCM MODE is set to NORM. Blinking of a program number while checking timer settings indicates that PCM MODE is not set to the correct position for that setting.

25

PCM Recording and Playback - Digital Multi Audio System


PCM Recording and Playback - Digital Multi Audio System

1-1



Normally both the video and audio signals are recorded on your video tape. However, in digital multi audio recording the full width of the tape will be divided into six tracks (Track number 1 to 6) and you can record only audio signals on each track in stereo. [-1] Up to 4-hour recording can be made on each track, which allows up to 24-hour continuous PCM recording with one cassette tape (with P6-120 cassette on LP


1-3

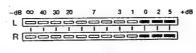



1-2


00

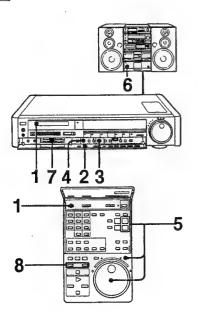


Recording (192)

- 1 Insert a cassette.
- 2 Select the tape speed (SP or LP).
- 3 Set PCM MODE to either DIGITAL MULTI S or P position.

(Either will do.)

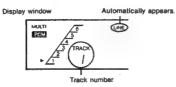

- 4 Set LINE to LINE 1 or LINE 2 according to the line inputs connected to an audio system.
- 5 Select the track on which audio recording should be made.
 - Press TRACK/CH +/-.
- Press TRACK/CH/INDEX and then turn JOG.

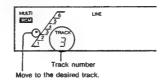

- 6 Turn on the power of an audio system and set it to playback mode.
- 7 Adjust REC LEVEL. See "Recording level adjustment" on page 28.
- 8 Press the REC buttons.

Recording level adjustment [1-3]

While watching the peak program meter, manually adjust REC LEVEL

Appropriate recording level

Recording sources with medium or lower frequency signals (e.g. vocals): Adjust so that the first red element lights at the highest signal level (0 dB). Recording sources with medium or higher frequency signals (e.g. trumpets, treble sound of violin); Adjust so that the element immediately before the first red element lights (-1 to -3 dB).

Notes on the REC LEVEL controls and the peak program

- . During playback, the peak program meter shows the peak of the recorded level.
- After recording, it is recommended that the REC LEVEL controls are set to the miminum levels for playback. These controls do not affect the volume during playback but noise may appear when stopping playback and this may damage the speakers.

If you make a digital audio recording through a PCM digital audio processor which is not based on the 8 mm PCM standard

PCM recording can be made on 16 bits using the full width of the tape. In this case, set SHARPNESS to the position between the center and SHARP. Select SP tape speed.

Timer Activated FM Recording

By connecting an FM tuner with timer setting function (Sony ST-S333ES, ST-S555ES, etc.), you can preset up to six FM programs for recording in PCM digital sound. You can select parallel or series recording by switching the PCM MODE selector.

Parallel recording 1-4

Set PCM MODE to DIGITAL MULTI P. Up to six programs can be recorded from the beginning of any of six separate tracks (e.g. when you want to record different kinds of program separately). The illustration of an enlarged tape shows that the program 1 to II are to be recorded on track number 1 to


Series recording [1-5]

Set PCM MODE to DIGITAL MULTI S.


Up to six programs can be recorded continuously on one track (e.g. when you want to record a serial program every day)

The illustration of an enlarged tape shows that the program 1 to 6 are to be recorded on track number 3 successively.

1-4

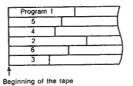


1-5

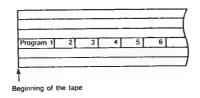


27

1.6

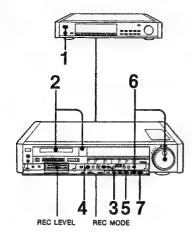

1.7

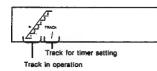

Operation [1-6]

Before setting the timer

- · Make sure the clock is set correctly.
- Set REC LEVEL to the [5] position.
- · Select the tape speed (SP or LP).
- Connect an FM tuner to AC OUTLET and to LINE IN 1 or LINE IN 2 AUDIO.
- 1 Turn on the power of an FM tuner and preset programs.
- 2 Insert a cassette.
- 3 Set PCM MODE to DIGITAL MULTI P or S.
- 4 Set LINE to LINE 1 or LINE 2 according to the line inputs connected to the FM tuner.
- 5 Press TIMER SET.
- 6 Set the following items with JOG and NEXT.
- Track number
- . Day of the week
- Turn-on time
- Turn-off time

For details, refer to "Timer-activated recording" on pages 22 and 23.

7 Press TIMER REC ON/OFF. The power will be turned off.


To select the track for timer-activated PCM recording 1.7.


Both the track in operation and that for timer setting will be shown in the display window. Select the track for timer setting with JOG. To select the playback track, use the CHANNELTRACK/INDEX +/- button.

Notes

- In series recording, always select the same track number.
 If a different track number is selected; all the programs will be recorded on the track which was selected last.
 Timer setting of a TV program recording and a digital
- audio recording can be made on one tape. However, such setting is not recommended because you have to switch the position of PCM MODE before each recording starts.

1-8

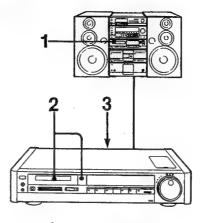


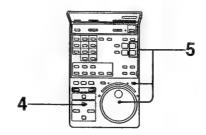

Playback IEE

- 1 Turn on an audio system and select the video input on an amplifier.
- 2 Insert a cassette.
- 3 Set DIGITAL MULTI PLAY at the rear to AUTO, If no sound is heard with the tape recorded on other VCR, set the selector to MULTI.
- 4 Press ➤ PLAY.
- 5 Select the track to be monitored.

 Press TRACK/CH +/-.
 - r
 - -- Press TRACK/CH/INDEX and then turn JOG.

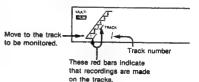

To stop playback Press STOP.


To stop playback momentarily
Press 11/>
Press again to resume playback.


Note

When DIGITAL MULTI PLAY is set to MULTI, all red bars
will light regardless of the recorded or unrecorded tracks.
 During playback, it is recommended that the REC LEVEL
controls are set to "0" position, otherwise noise may
appear and this may damage the speakers when
stopping playback.

To Have the Unit Turned Off Automatically — Sleep Timer

J

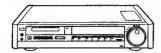

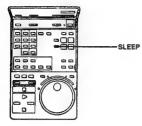

You can set the unit to turn off automatically during recording or playback after a certain time, up to 5 hours, in steps of 30 minutes.

Every time you press SLEEP, the recording/playback duration will change as follows:

0:30 (To turn off 30 min. later) → 1:00 (1 hr.). → 5:00 (5 hrs.)

Current time display ←

Operation FI

- · Make sure the clock is set correctly.
- 1 Press SLEEP during recording or playback. The current time display will change to the SLEEP timer duration display.
- 2 Press SLEEP repeatedly until the desired recording/playback duration appears in the display window.

The power will be turned off automatically when recording/playback has been made in preset duration.

To cancel the SLEEP timer function
Press SLEEP repeatedly until the current time display appears.

When the tape reaches the end before the preset duration it will be automatically rewound but the power will remain on during the preset duration.

If you press SLEEP when the unit lie in stop mode. The SLEEP button is operable in stop mode. You can set the sleep timer before starting recording or playback.

- 20 -

Marking Index Signals 1987

To mark index signals automatically

signal marked on the tape.

Set AUTO INDEX inside the upper compartment to ON.

An index signal is automatically marked on a tape when

REC are pressed or timer-activated recording starts.

You cannot mark an index signal automatically

- on a tape when a recording started by releasing the recording pause or playback pause mode
- on a tape where the tape speed (SP/LP) has been changed.

To mark index signals manually K-1

1 Set AUTO INDEX to OFF.

2 During recording or playback, press INDEX MARK at the point where an index signal is to be marked. The INDEX indicator in the display window blinks while the Index signal is being marked.

You cannot mark an index signal by pressing INDEX MARK

during editing (i.e. EDIT indicator lights).

 while playing back a tape which has no audio/video signals recorded on the PCM track (i.e. the PCM indicator is not displayed).

To mark index signals automatically during digital multi audio recording — Auto index function

Set AUTO INDEX to ON.

INDEX MARK

During recording, the unit searches for the blank portion between programs (music, etc.) and marks an index signal automatically.

Auto index function will not operate correctly

- when the blank portion between the programs is not detected due to low level signal-to-noise ratio of a program source.
- when the blank portion is less than 3 seconds.
- when an index signal is marked on other portions than blank in some program sources.

The index function can be activated


- when the unit is in PCM recording/playback mode as well as in normal recording/playback mode.
- even when playing back a tape whose safety tab is slid out.


A required interval at which index signals are marked There should be more than a 2-minute interval between each index signal. If an index signal is marked at a shorter interval, the index signal may not be detected correctly.

When an index signal is being marked during playback A black noise band will appear at the bottom of the playback plcture and the sound will be lowered. However, the recorded signals on the tape are not affected.

If the EDIT button is pressed, a black noise band may disappear but the picture may be distorted.

K-2

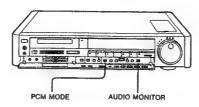


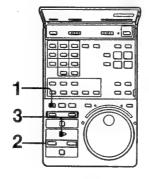

पुरिवर्णा पुरिवर्धि (the beginning of each) Program in sequence — Index Scant (रही)

Before operating

- Set PCM MODE to the appropriate position. See page 29.
- Set AUDIO MONITOR to the appropriate position. See page 13.
- Press INDEX once when the unit is in stop or playback mode.

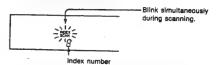

The tape will be played back for approximately 10 seconds, and then rewound or advanced to the next index signal. Each time an index signal is detected, the displayed index number will increase.

3 At the desired program, press ➤ PLAY. Normal playback of that program will begin.


Note

- If the tape is rewound to the beginning during index scan or index search, playback will begin automatically.
- If the tape reaches the end during index scan or index search, the tape will stop automatically.
- Index function may not operate correctly with a tape on which both normal and digital multi audio recordings have been recorded.
- When index scan is done using a digital multi audio recorded tape, set PCM MODE to P or S. Setting to NORM will cause sound distortion.

K-1

K-3




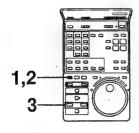




You can locate the desired program and play it back automatically by designating the number of the index signals to be detected.

Up to the 99th index signal from the present position on the tape can be located.

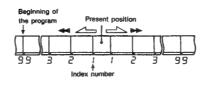

 Press INDEX once when the unit is in stop or playback mode.

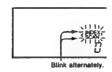

2 Press INDEX repeatedly until the index number of the desired program is displayed.




To locate a program ahead, press ►► FF.

The tape will be rewound or rapidly advanced. Every time an index signal is detected, the displayed number will decrease. When the number reaches 0, playback of your desired program will begin.

To designate larger Index numbers

After pressing INDEX (step 1), select an index number by pressing TRACK/CH +/- or turning JOG.

K-4

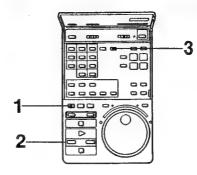

Erasing Index Signals item

Erasing while index scanning — To erase the index signals in sequence

- 1 Press INDEX once.
- 2 Press ◄◄ REW to rewind the tape or ►► FF to rapidly advance it.
 Each time an index signal is detected, the tape will be played back for approximately 10 seconds and then rewound or rapidly advanced.
- 3 Approximately two seconds after playback has started by the index signal to be erased, press INDEX ERASE. After the erasure, index scan will resume. At each index signal to be erased, press INDEX ERASE.

To stop index scanning, press STOP.

Erasing while index search — To erase a particular index signal

- Press INDEX repeatedly until the number of the Index signal to be erased is displayed.
- 3 Approximately two seconds after, press INDEX ERASE.


After the erasure, normal playback will begin.

Notes

- INDEX ERASE should be pressed within approximately 10 seconds after playback starts.
- The index signal cannot be erased if it is recorded on a portion where the recording tape speed has been changed.
- During erasing index signals, a black noise band will appear at the bottom of the picture and the sound will be lowered. However, this does not affect audio/video recording signals on the tape.

Transferring the Entire Contents of a Tape to Another

L-1

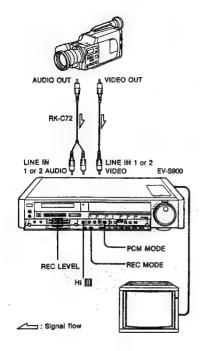

Editing a Home Movie Tape from Another VCR to This VCR INTE

Example: Playing back with the 8 mm video camera recorder and recording with this VCR

Connection

Use the supplied video connecting cord (equipped with yellow plugs) for video connection and the optional RK-C72 connecting cord for audio connection.

Preparation

- . REC MODE button: SP or LP
- Hi 🕄 switch: AUTO
- PCM MODE selector: NORM
- REC LEVEL controls: 5

Operation


- 1 Press INPUT SELECT so that the LINE indicator appears and set the LINE selector to LINE 1 or 2 according to the line inputs connected to the other VCR.
- 2 Insert cassettes; a recorded cassette into the other VCR and a cassette for recording into this VCR.
- 3 Start playback with the other VCR and start recording with this VCR.

If another VCR is equipped with an S VIDEO output connector

Connect it to LINE IN 1 S VIDEO of this unit instead of the connection between the phono-type video jacks. Use the supplied S VIDEO connecting cord.

When the audio outputs of another VCR are stereo Connect the audio L/R jacks on another VCR to the LINE IN AUDIO L/R jacks on this VCR with the supplied audio connecting cord.

L-2

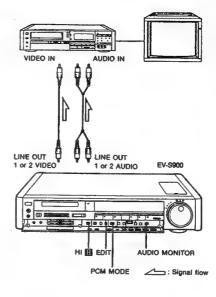

Editing a Home Movie Tape from this VCR to Another VCR (16)

Example: Playing back with this VCR and recording with a Beta or VHS format VCR

Connection

Use the supplied video connecting cord (equipped with yellow plugs) for video connection and the supplied audio connecting cord (equipped with red and white plugs) for audio connection. If the audio input of another VCR is monaural, use the optional RK-G72 connecting cord.

Preparation

- · Hi 3 switch: AUTO
- PCM MODE selector: NORM
- . EDIT button: ON (The EDIT indicator lights.)
- AUDIO MONITOR selector:

Select the sound to be recorded. (See page 13.)

Operation

- 1 Set the input selector on the other VCR to LINE.
- 2 Insert cassettes; a recorded cassette into this VCR and a cassette for recording into the other VCR.
- 3 Start playback with this VCR and start recording with the other VCR.

Use of the EDIT button

- When editing a tape onto another VCR, press EDIT on this VCR so that the EDIT Indicator lights. Loss of picture quality will be minimized. Be sure to turn off the indicator by pressing EDIT after editing.
- The picture and tone quality of a newly edited tapes will be noticeably impaired even if the EDIT button is activated. Avoid repetition of editing tapes.

Picture adjustment during editing

The SHARPNESS control does not function while the EDIT indicator is lit.


Note

Do not connect the same VCR to both the LINE IN and LINE OUT jacks of this VCR. This may cause hum noise.


Various Tape Editing Methods

Synchronized Editing from/onto a Sony VCR with the Control Terminal


M-1

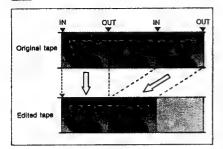

M-2

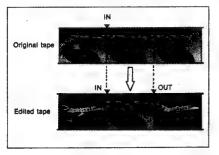

M-3

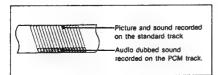

Various methods for easy and accurate tape editing are available with this VCR.

Select the best method according to your purpose and to the video/audio equipment you are using,

Assemble editing M-1

Only the desired portions of an original tape can be edited onto another tape one portion by one. Decide the start point (IN) and end point (OUT) of editing on the playback VCR. Decide the start point of editing on the recording VCR.

Automatic assemble editing

With this method, editing of the assigned scenes can be carried out automatically in the assigned order. Use a VCR with the automatic assemble editing function as playback VCR or a wideo editing controller.

Insert editing M:2

A prerecorded portion of a tape can be replaced with a new scene. Decide the start point (IN) and end point (OUT) of editing on the recording VCR. On the playback VCR, decide the start point.


Audio dubbing M-3

The sound recorded on the PCM audio track of a tape can be replaced with a new sound without changing the picture and sound recorded on the standard track.


Notes

- The picture may be distorted at the end of an insert editing.
- The various playback pictures may be distorted when edited from/onto another VCR.

N-1

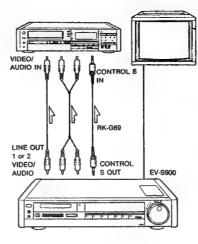

N-2

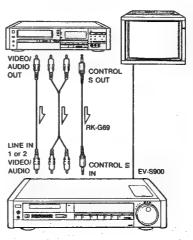

Signal flow

If another VCR is equipped with a control terminal (CONTROL S, CONTROL L or REMOTE jack), the two VCRs can be operated simultaneously using the SYNCHRO EDIT button.

Connecting a VCR with the CONTROL S IN jack INSI

With this connection, use this unit for playback, and the other VCR for recording.

Use the optional RK-G69 connecting cord for CONTROL S connection.

Connecting a VCR with the CONTROL S'

With this connection, use this unit for recording, and the other VCR for playback.

Use the optional RK-G69 connecting cord for CONTROL S connection.

To operate another VCR connected to the CONTROL S OUT jack of this VCR with the supplied Remote Commander

Set the command mode selector on the Commander according to the type of another VCR,

To operate a VCR without a command mode selector VTR1: for a Sony Beta format VCR VTR2: for a Sony 8 mm format VCR

To operate a VCR equipped with a command mode selector

Set the selector on the Commander to the same command mode as that selected on the VCR.


To operate this VCR with the Commander Switch the command mode selector on this VCR to a different position from that selected for the other VCR, and set the command mode selector on the Commander to the same position as that selected on this VCR.

Notes on connection

- If another VCR is equipped with both CONTROL L and CONTROL S jacks, CONTROL S connection is recommended.
- If another VCR is equipped with an S VIDEO IN connector, connect it to the LINE OUT 1 S VIDEO connector of this unit instead of the connection between the phono-type video jacks. Use the supplied S VIDEO connecting cord.

N-4

25

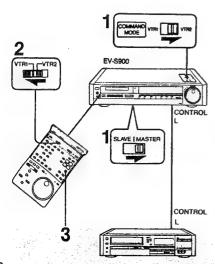

Connecting a VCR or Video Camera Recorder with the REMOTE (or CONTROL L) jack [TS]

With this connection, this unit is used for playback and the other VCR for recording.

- Use the optional VK-800 connecting cord for control L connection.
- Be sure to set the SLAVE/MASTER selector on the rear of this unit to MASTER,

When set to MASTER, the control signal is transmitted through the CONTROL L connector for synchronized editing operation.

Notes

- If the other VCR is monaural, use the optional RK-C72 audio connecting cord.
- If the REMOTE jack of the video camera recorder is stereo mini-mini type, use the optional VK-810 connecting cord.

To operate the VCR connected to the CONTROL L connector with the supplied Remote Commander N-4


- 1 Set SLAVE/MASTER to MASTER and COMMAND MODE to VTR2 on this unit.
- 2 Set the command mode selector on the Remote Commander to VTR1.
- 3 Point the Commander toward this unit and press the appropriate tape transport button on the Commander. The connected VCR will operate.


To operate this VCR with the Remote Commander Set the command mode selector on the Commander to VTR2.

Note

The command mode (VTR1, VTR2 or VTR3) of the other VCR is ineffective for the remote control operation through the CONTROL L connector.

N-5

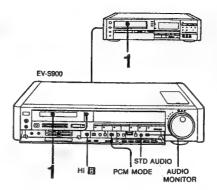

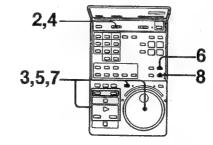

Assemble Editing (INST ::

Use this unit for playback and the other VCR for recording.

For connection, see pages 39 and 40.

Preparation

- . Hi S switch: AUTO
- PCM MODE selector: NORM
- AUDIO MONITOR selector: Select the sound to be recorded. (See page 13.)

Operation

- 1 Insert cassettes; a recorded cassette into this unit, and a cassette for editing into the recording VCR.
- 2 Set the command mode selector on the Commander to the appropriate position for the recording VCR. For the setting, see pages 39 and 40.
- 3 Locate the point of the tape where you want to start editing on the recording VCR and set it to recording pause mode.
- 4 Set the command mode selector on the Commander to the appropriate position for this VCR.

For the setting, see pages 39 and 40.

- 5 Play back the tape on this unit to locate the end point to be edited and set the unit to playback pause mode.
- 6 Press COUNTER RESET.
- 7 Rewind the tape on this unit to the start point to be edited and set the unit to playback pause mode.
- 8 Press SYNCHRO EDIT. The playback starts on this unit and the recording starts on the other VCR.
- 9 To edit the next scene, repeat steps 2 to 8.

When you use JOG/SHUTTLE to locate the editing points Be sure to press SYNCHRO EDIT after the transmitting indicator goes out, otherwise the unit starts playback but may pause again.

When the editing is completed Set both VCRs to stop mode.

During editing

The COUNTER RESET button does not function.

To cancel the assemble editing mode

Press SYNCHRO EDIT or **m** STOP on the Commander or the VCR.

When assemble editing starts

The EDIT indicator will light automatically and go out when the editing is completed.

When the editing is completed Set both VCRs to stop mode.

To concel the Insert editing mode
Press SYNCHRO EDIT or ■ STOP on the Remote
Commander or the VCR.

When you use JOG/SHUTTLE to locate the editing points Be sure to press SYNCHRO EDIT after the transmitting indicator on the Commander goes out, otherwise the unit starts recording but may pause again.

During insertion

The COUNTER RESET button does not function.

Insert Editing INES

Use this unit for recording and the other VCR for playback.
For connection, see pages 39 and 40.

Preparation

Operation

- 1 Insert cassettes; a cassette for editing into this unit, and an insert source cassette into the playback VCR.
- 2 Set the command mode selector on the Commander to the appropriate position for the playback VCR.
 For the setting, see pages 39 and 40.
- 3 Locate the start point to be inserted on playback VCR and set it to playback pause mode.
- 4 Set the command mode selector on the Commander to the appropriate position for this VCR


For the setting, see pages 39 and 40.

- 5 Play back the tape on this unit to locate the point where the insertion should stop (end point) and set it to playback pause mode.
- 6 Press COUNTER RESET.
- 7 Rewind the tape on this unit to the point where the insertion should start (start point) and set it to recording pause mode.
- 8 Press SYNCHRO EDIT.

The recording starts on this unit and the playback starts on the other VCR.

When the counter display reaches zero point, indicating that the insertion is completed, this unit will enter recording pause mode and the other VCR will enter playback pause mode.

0-1

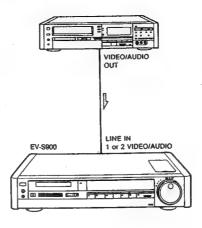

Connection


Using this VCR for recording O-1 For details on connection, see 1-1 on page 36.

Using this VCR for playback 0.2 (on the next page) For details on connection, see 1.2 on page 37.

Operation

Assemble editing


- 1 insert cassettes; a recorded cassette into the playback VCR, and a cassette for editing into the recording VCR.
- 2 Set the input selector on the recording VCR according to the inputs connected to the playback VCR.
- 3 Play back the tape on the recording VCR to locate the point where editing should start and set it to recording pause mode.
- 4 Play back the tape on the playback VCR to locate the start point to be edited and set it to playback pause mode.
- 5 Press II PAUSE to release the pause mode on both VCRs simultaneously.
- 6 Set both VCRs to pause mode at the point where the editing should stop while watching the playback picture.
- 7 To edit the next scene, repeat steps 3 to 6.
- 8 When editing is completed; set both VCRs to stop mode.

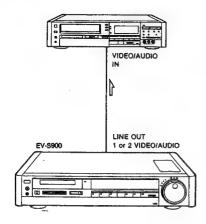

Insert editing

- 1 Insert cassettes; a cassette for editing into the recording VCR and a insert source cassette into the playback VCR.
- 2 Set the input selector on the recording VCR according to the inputs connected to the playback VCR.
- 3 Play back the tape on the playback VCR to locate the start point to be inserted and set it to playback pause mode.
- Play back the tape on the recording VCR to locate the point where the insertion should stop and press COUNTER RESET.
- 5 Rewind the tape on the recording VCR to locate the point where the insertion should start and set the VCR to recording pause mode.
- 6 Press III PAUSE to release the pause mode on both VCRs simultaneously.
- 7 At the counter zero point, set the recording VCR to recording pause mode. Set the playback VCR to playback pause mode.
- 8 When editing is completed, set both VCRs to stop mode.

P-1

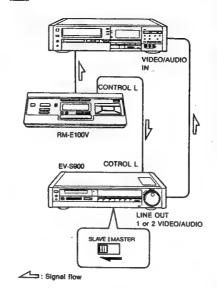

If you use a video editing controller (RM-E100V, etc.) or a VCR with automatic assemble editing function (EDV-9500, etc.), up to 8 scenes of the original tape can be automatically edited onto another tape successively.


Using the Video Editing Controller RM-E100V

Connect another VCR and the controller as illustrated. With this connection you can edit up to 8 scenes of the original tape programmed on the controller onto another tape. For details on operation, refer to the instruction manual furnished with the controller.

Note

Be sure to set SLAVE/MASTER on this VCR to SLAVE. When set to SLAVE, the control signal is transmitted through the CONTROL L connector of the video editing controller to remotely control this VCR.

P-2

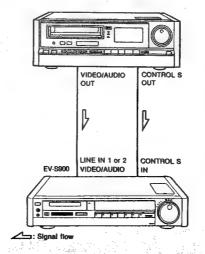

Using a VCR with Automatic Assemble Editing Function 122

Make the control S connection besides the audio and video connections.

Use this unit for recording and the other VCR for playback.

You can edit up to 8 scenes of the original tape programmed on the other VCR onto the tape inserted in this unit.

For details, refer to the instruction manual furnished with the other VCR.

Notes

- Pre-roll operation will not be carried out on the EDV-9500.
 With this connection, automatic assemble editing or insert editing using the SYNCHRO EDIT button papers.
- insert editing using the SYNCHRO EDIT button cannot be done.

IN


R-3

UHE

TV


VHF/UHF

Q-1

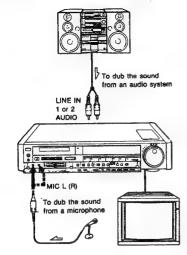

Q-2

28

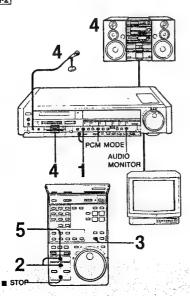

You can additionally record music or narration on the prerecorded tape while watching the playback picture of the tape. Audio dubbed sound will be recorded on the PCM track.

Connection Total

Notes on connection

- . If only one microphone is used, connect it to the MIC L lack. The sound from the L jack lii recorded on the right and left channels of the PCM track while the sound from the R jack is recorded on the right channel only.
- To dub the sound from the audio system, disconnect the microphone from the MIC L/R jacks.
- · A plug-in-power microphone cannot be used with this unit.

Operation [92]

Before operation

- PCM MODE switch: NORM
- . AUDIO MONITOR selector: PCM or MIX
- . Turn on the TV and select the input for the VCR or select the channel for the VCR.
- 1 Press INPUT SELECT so that the LINE indicator

When dubbing the sound from the audio system, select LINE 1 or 2.

- 2 Play back the tape to locate the point where audio dubbing should start and press II PAUSE.
- 3 Press AUDIO DUB. The AUDIO DUB indicator on the VCR will light.
- 4 Play back the audio source and adjust REC LEVEL
- 5 Press 11 PAUSE again to release playback pause mode. Audio dubbing will start.

To stop audio dubbing momentarity Press ## PAUSE.

To stop audio dubbing Press STOP.

To dub the sound of a TV program Press INPUT SELECT to display the TUNER indicator and select the desired channel. Proceed with steps 2 to 5.

- During dubbing, a black band or picture noise appears in the center and lower portions of the screen, but the recorded picture will not be affected.
- The audio signals prerecorded on the PCM track and index signals will be erased after completion of audio
- The audio dubbed sound cannot be played back on a VCR without the PCM recording/playback function or a video camera recorder.

R-1 R-2 VHF/ VHE UHF Of **1** VHF/ UHE

R-4

VHF/UHF IN

To watch the playback picture on a TV or watch the TV program selected on this VCR, the VCR and the TV receiver have to be connected properly. Disconnect the TV antenna cable from the TV receiver and connect it to this unit.

Notes on making connections

- · Turn off all equipments before making connections.
- . Do not connect the AC power cord to a wall outlet until all the connections of the VCR and the TV have been completed.
- Make connections firmly. Loose connections may cause a distorted picture.

Connecting a TV without Audio/Video

Connections between the antenna and this VCR

The connections vary according to the type of the antenna you have.

- [B-1] Combination VHF/UHF antenna (75-ohm coaxial
 - Most combination antennas are equipped with a U/V band separator (signal splitter). Take off the senarator
- R-2 VHF antenna (75-ohm coaxial cable or 300-ohm ribbon type lead-in)
- R-3 UHF antenna (300-ohm ribbon type lead-in)
- R-4 Separate VHF and UHF antennas
- . If your antenna end is a 75-ohm coaxial cable, the optional F-type connector should be attached, (See [R-7] on next page for attachment.)
- . If your antenna end is a 300-ohm ribbon-type lead-in. the supplied antenna connector should be attached. (See [R-8] on next page for attachment.)
- . If both the separate VHF and UHF antennas are connected, use the optional EAC-66 U/V band mixer. (See R.9) on next page for attachment.)

Connections between this VCR and a TV

The connections vary according to the type of the antenna terminal of your TV.

R-5 VHF/UHF antenna terminal

[R-6] Separate VHF and UHF antenna terminals

- . If your TV has a VHF/UHF terminal, use the supplied 75-ohm coaxial cable.
- . If your TV has separate VHF and UHF terminals, use the optional EAC-66 U/V band separator.

Once the connections explained above have been made, the antenna TV signals, as well as the signal from this VCR, will be fed to the TV and you can view TV programs in the usual way.


Keep the VCR away from the TV, if the display or sound is

EV-S900 VHE/LIHE IN 0 0000 2000 VHF/UHF OUT R-6 R-5 EAC-66 0

46

Antenna/Cable and TV/Monitor Connection

R-7

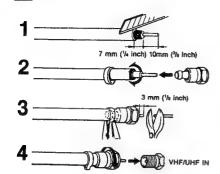

How to attach an F-type connector [R-7]

- Strip the cable covering to expose the center conductor.
- 2 Pass the ring over the cable and fold back the shield, insert the inner conductor into the F-type connector.
- 3 Crimp the ring to hold the conductor in place.
- 4 Connect to the VHF/UHF IN connector.

R-8




How to attach an antenna connector [R-8]

- 1 Wrap the wires of a 300-ohm twin lead-in around the posts and tighten the screws.
- 2 Connect to the VHF/UHF IN connector.

R-9

29

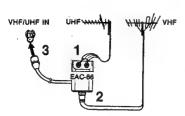


How to attach an EAC-66 U/V band separator (mixer) [R-9]

- 1 Wrap the wires of a 300-ohm twin lead-in around the posts and tighten the screws.
- 2 Plug the F-type connector of the VHF antenna cable into the separator.
- 3 Connect to the VHF/UHF IN connector.

Caution

Connections between the recorder VHF/UHF OUT connector and the antenna terminals of a TV receiver should be made only as shown in these instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of rf devices.

Never connect the output of the recorder to an antenna or make simultaneous (parallel) antenna and recorder connections at the antenna terminals of your TV. R-10

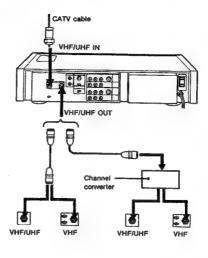

Connecting a CATV cable [R-10]

Connecting examples are as illustrated, however, we recommend you to consult your cable company to make sure that the cable is properly connected. If your TV is not a cable TV compatible type, the cable TV channel converter should be connected between the VCR and a TV so that you can watch another cable TV program while recording one cable TV program.

Note to CATV system installer in the U.S.A. This reminder is provided to call the cable TV system installer's attention to Article 820-22 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to grounding system of the building as close to the point of cable entry as practical.

Connecting a TV/Color Monitor Equipped with Audio/Video Inputs Fate

With the following connection the picture and sound quality will be better than that when the TV is connected only to the VHF/UHF OUT terminal on the VCR.

- 1 Connect the antenna cable to VHF/UHF IN on the VCR.
- 2 Connect the VHF/UHF OUT to your TV. This connection is not required for a color monitor.
- 3 Connect LINE OUT 1 S VIDEO to the S VIDEO input on the TV/color monitor with the supplied 8 VIDEO connecting cord.
- 4 Connect LINE OUT 1 AUDIO to the audio inputs on the TV/color monitor with the supplied audio connecting cord.

To watch the playback picture

Select the TV/VTR input selector on the TV to VTR.

Selecting the ANTENNA SW selector

Check ANTENNA SW inside the upper compartment after connecting the antenna.

If you connect a TV not equipped with audio/video inputs Set to AUTO.

To watch the playback picture, simply press PLAY.
 When set to MANUAL, you have to press TV/VTR so that the VTR indicator is displayed.

If you connect a TV equipped with audio/video inputs Set to MANUAL.


 To watch a TV program, simply select the channel on the TV. When set to AUTO, you have to press TV/VTR so that the VTR indicator disappears.

Notes

- With this connection, the TV/VTR button on this unit does not function.
- With a color monitor, you cannot watch one TV program while recording another.
 Your the sudjection contents away from the
- Keep the audio/video connecting cords away from the antenna cable, otherwise the picture may be affected.

When a TV/monitor is not equipped with the S VIDEO input connector

Connect LINE OUT 1 (or 2) VIDEO to the video input jack on the TV/monitor with the supplied video connecting cord. R-12

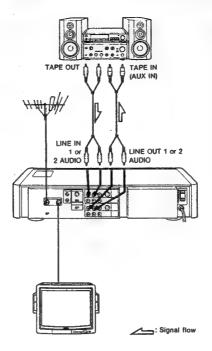

Connecting an Audio System 1131

You can enjoy playback of tapes recorded in stereo or recorded from an audio source such as an FM tuner or CD player in digital multi audio system, when the VCR is connected to your audio system.

For recording connect LINE IN 1 (or 2) AUDIO to the tape outputs on a stereo amplifier with the supplied audio connecting cord.

For playback connect LINE OUT 1 (or 2) AUDIO to the tape inputs or auxiliary inputs on a stereo amplifier with the supplied audio connecting cord (or optionL RK-C74 connecting cord).

Notes

- If the VCR is installed near a tuner or a radio, noise may be heard in AM reception.
- A PCM recorded tape has a wide dynamic range. Before playing back a tape, turn down the volume on the amplifier to avoid damaging the speakers.
- Before connecting or disconnecting the power cord of the VCR, be sure to turn off the connected amplifier.

သ

Your TV receiver must be adjusted to receive the signal from your recorder. If you connect a color monitor or a TV equipped with video/audio input jacks, it does not need adjusting.

- 1 Set RF UNIT at the rear to 3CH or 4CH whichever channel is not active in your area.
- 2 Press POWER. The indicator lights.
- 3 Insert the cassette.
- 4 Press PLAY.
- 5 Turn on the TV.
- 6 Set the TV to either VHF channel 3 or 4 to agree with the RF UNIT setting.


The playback picture will be displayed on the TV screen. If a picture does not appear on the TV screen or if the display is not clear, fine-tune the channel on the TV. For details on TV channel adjustment, see the instruction manual of the TV receiver.

Check!


Check that the display on the screen changes when you stop the tape by pressing \$\boldsymbol{\text{STOP}}\$ on the recorder. (To eject the cassette, press OPEN/CLOSE.) If the display does not change, repeat the preceding steps.

Now your TV receiver is tuned on the recorder. Whenever you use this VCR, you should set the TV to the channel which you have chosen above.

U-1

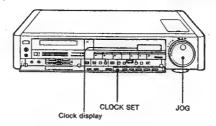

U-2

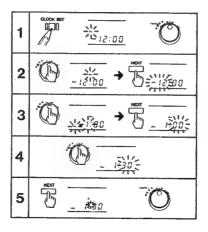

When you connect the AC power cord to a wall outlet, "Su AM12:00" will blink in the display window, indicating that the clock is ready to be set.

The illustration [U-1] shows the buttons used for setting

- e.g. To set the clock to 1:30 p.m. on Wednesday U-2
- 1 Keep CLOCK SET pressed for a few seconds with a pencil or similar. The TIMER of the JOG dial mode indicators lights.
- 2 Set the day of the week with JOG, and then press NEXT.
- 3 Set the hour with JOG, and then press NEXT.

 AM12:00 = midnight

 PM12:00 = noon
- 4 Set the minute with JOG.
- 5 Press NEXT at the same time as an announced time signal for accurate setting. The clock will start. The dots of the colon will alternately blink every 30 seconds. The CHANNEL of the JOG dial mode indicators lights.

To reset the clock

Press CLOCK SET for a few seconds. Reset the clock, following the preceding steps 2 to 5.


When "Su AM 12:00" blinks in the display window There has been a power interruption for more than 20 seconds or the power cord has been disconnected for more than 20 seconds. In this case, reset the clock



SECTION 2 DISASSEMBLY

2-1. REMOVAL OF UPPER AND LOWER CABINETS


2-3. OPENING OF THE FT-37 BOARD

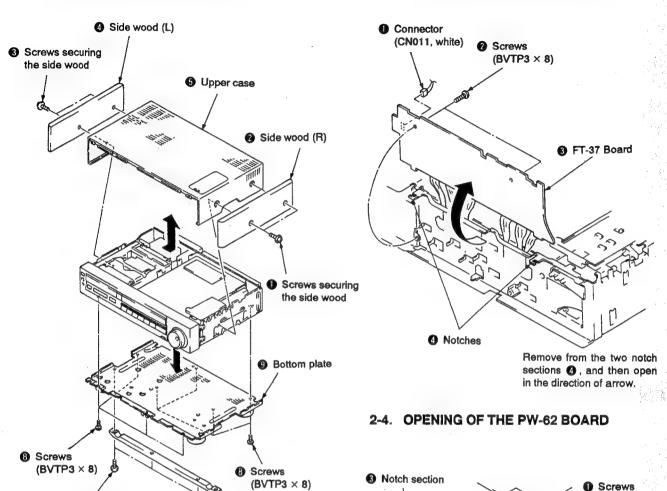

2-2. REMOVAL OF FRONT PANEL

6 Screws

(BVTP3 × 12)

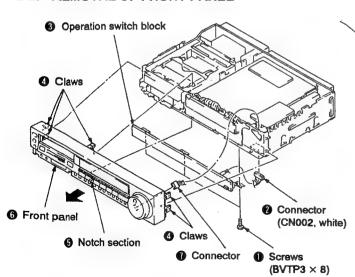


Bottom stay

PW-62 Board Remove from the notch section (3), and then open in the direction of arrow.


D Screws (BVTP3 × 8)

2-5. REMOVAL OF THE PR-12 BOARD

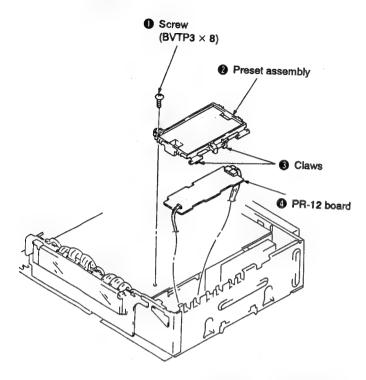


2-6. OPENING OF THE SP-7 BOARD

 After the preset assembly is removed according to "2-5. REMOVAL OF THE PR-12 BOARD", perform as shown below.

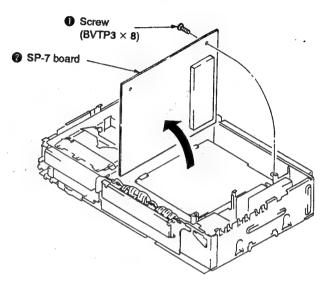


2-7. REMOVAL OF THE TS-49 AND TU-82 BOARDS

 After the SP-7 board is opened according to "2-6. OPENING OF THE SP-7 BOARD", perform as shown below.

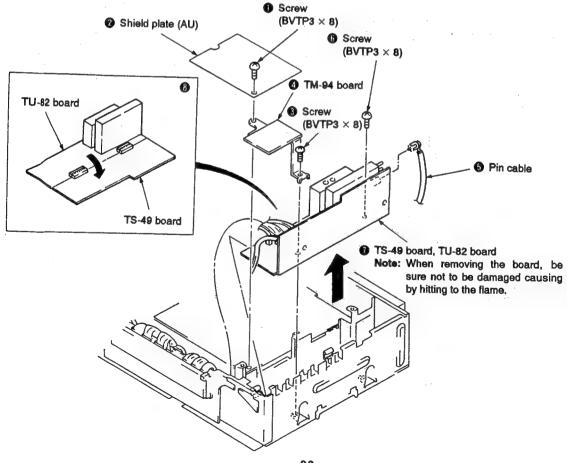


2-8. OPENING OF THE VI-57 BOARD

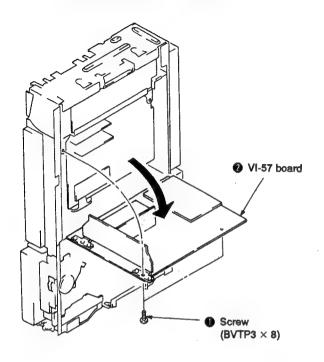


2-9. OPENING OF THE AU-54 BOARD


 After the SP-7 board is opened according to "2-6. OPENING OF THE SP-7 BOARD", perform as shown below.

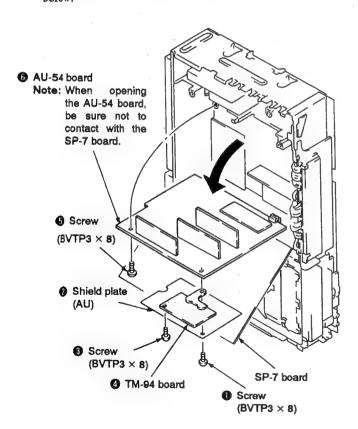

2-10. REMOVAL OF THE DT-63 BOARD

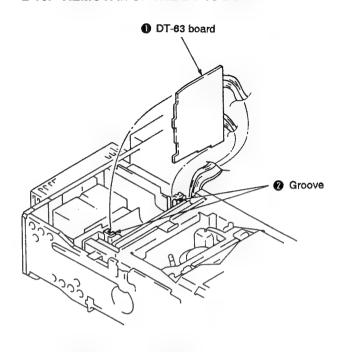


2-11. REMOVAL OF THE RP-68 BOARD

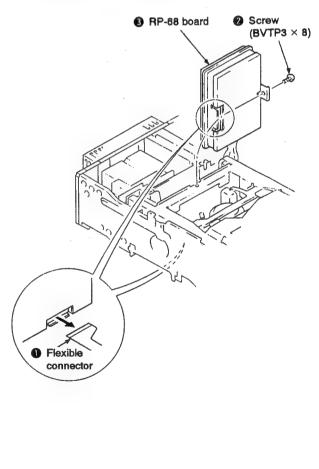


2-12. REMOVAL OF THE DR-35 BOARD CN203 (black) CN201 (white) Connectors CN202 (white) CN204 (black) 6 DR-35 board Remove from two grooves. Screw (BVTP3 × 8) Grooves Power supply block cover Screws $(BVTP3 \times 8)$ Screws (BVTP3 × 8)

2-13. REMOVAL OF POWER TRANSFORMER (DS-15 BOARD)

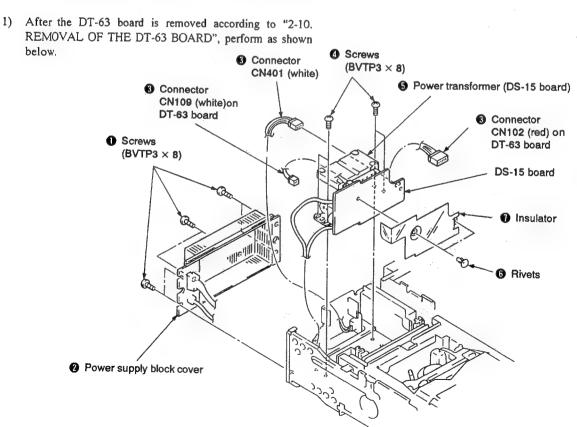


— **35** —

2-14. REMOVAL OF REAR PANEL

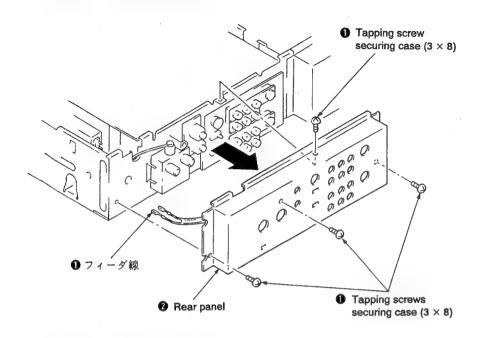


2-15. REMOVAL OF MECHANISM BLOCK

 After the RP-68 board is removed according to "2-11. REMOVAL OF THE RP-68 BOARD", perform as shown below.

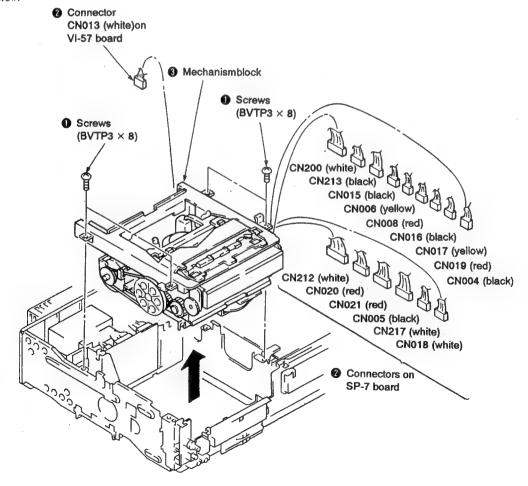


2-16. REMOVAL OF LS CASSETTE COMPARTMENT ASSEMBLY

 After the mechanism block is removed according to "2-15. REMOVAL OF MECHANISM BLOCK", perform as shown below.

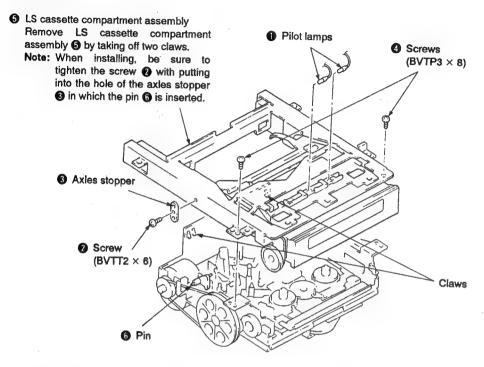

2-17. EJECTING WITHOUT APPLYING THE POWER

- Insert the precision screwdriver (2) into the motor pulley (1), turn it about 180° in the direction of arrow (3) as shown below.
 - **Note**: As the cassette compartment is locked at this time, the pulley may not turn. Never turn the screwdriver forcibly.
- 2) Insert the precision screwdriver 2 into the section A as shown below, push the cassette compartment lock 3 in the direction of arrow 3 to unlock the cassette compartment.
- 3) Insert the precision screwdriver 2 into the motor pulley 1 again, turn it in the direction of arrow 2 until EJECT operation is completed.

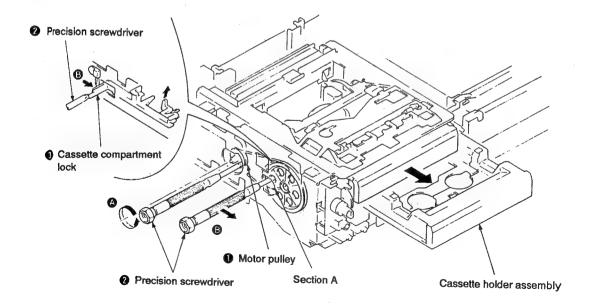

2-18. REPLACEMENT OF CASSETTE HOLDER ASSEMBLY


2-18-1. Removal

- Remove LS cassette compartment assembly according to "2-16. REMOVAL OF LS CASSETTE COMPARTMENT ASSEMBLY". (Hereafter, perform servicing with LS cassette compartment assembly upside down.)
- Tilt the mirror assembly 1 toward the rear side and fix with an adhesive tape.
 (Be sure not to break the claws of the mirror assembly.)
- 3) While rotating the drive gear ② in the reverse direction of arrow ③, remove the main gear assembly ③ from the section A.
- 4)Remove the cassette holder assembly 4 upward.

2-18-2. Installation


- Install the cassette holder assembly keeping parallel to the synchronizing gear assembly .
 (For details, described in (i) through (iii) below.)
 - (i) Mesh a half of all teeth numbers of cassette holder assembly racks A with either side of the synchronizing gear assembly •.
 - Note: At this time, front and rear racks A are meshed with the gear simultaneously. And the meshed teeth numbers should be always the same each other.
 - (ii) Mesh rack A with the other side of the synchronizing gear assembly 6 in the same manner as (i).

- (iii) After confirming that the number of teeth combined of four racks A and the synchronizing gear assembly § is the same, push the cassette holder assembly § in the direction of arrow §.
 - Note: At this time, confirm that LS chassis assembly of surface (viewed from the bottom side) is horizontal for the cassette holder assembly arack B. If not, perform (i) through (iii) again.
- 2) Pull out LS chassis assembly 6 toward the front side, insert the main gear assembly 6 into the section A.
- 3) Rotate the drive gear ② in the direction of arrow ③ and combine the both sides of cassette holder assembly ④ rack B with the main gear simultaneously.
- 4) Rotate the drive gear ② in the direction of arrow ③ and confirm that the cassette holder ③ rises (viewed from the bottom side) easily.
 - Note: The cassette holder assembly 4 should not be come off. Also when turning the drive gear 2 with LS cassette compartment assembly upside down, be sure to prevent the cradle plate assembly 1 from contacting with the chassis.
- 5) Peel off the adhesive tape from the mirror assembly ①, and install LS cassette compartment assembly according to the reverse procedure of "2-16. REMOVAL OF LS CASSETTE COMPARTMENT ASSEMBLY".

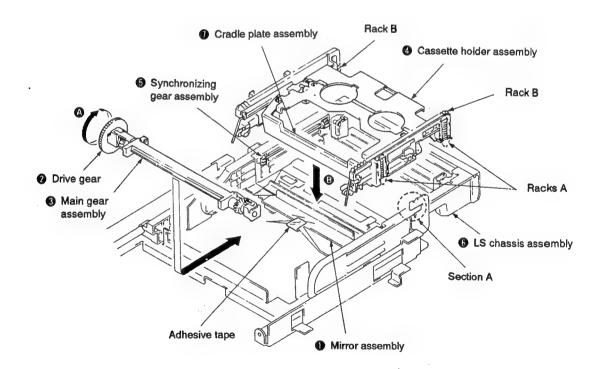


2-19. INTERNAL VIEWS

- Upper side -

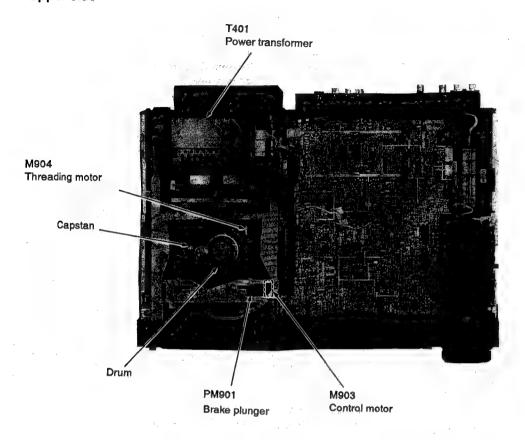


- Bottom side -

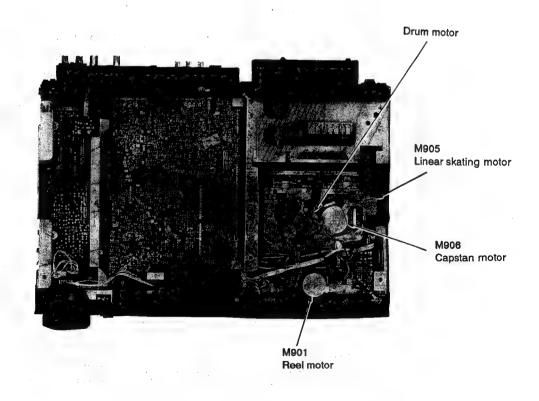






SECTION 3 **DIAGRAMS**

3-1. CIRCUI BOARDS LOCATION

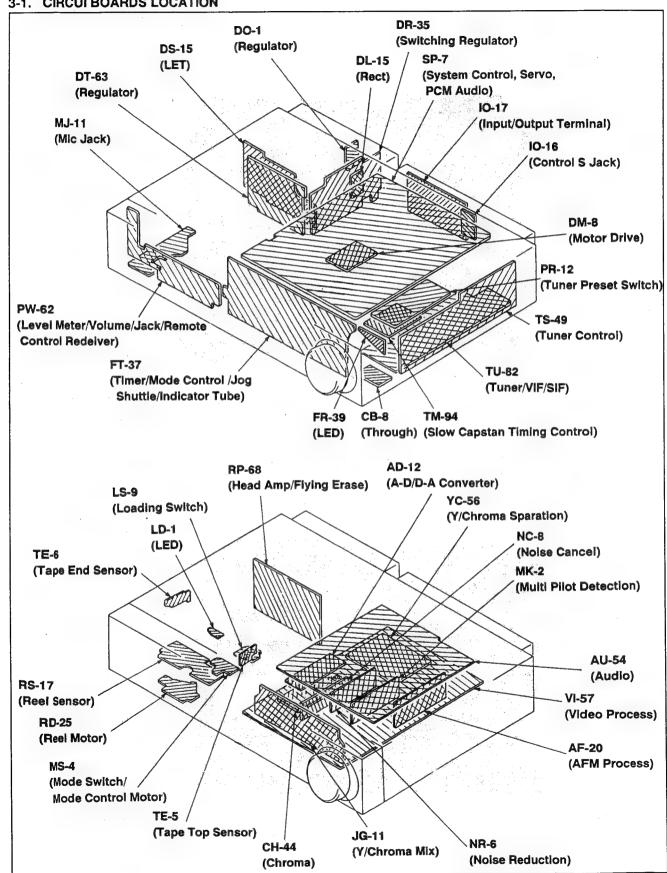

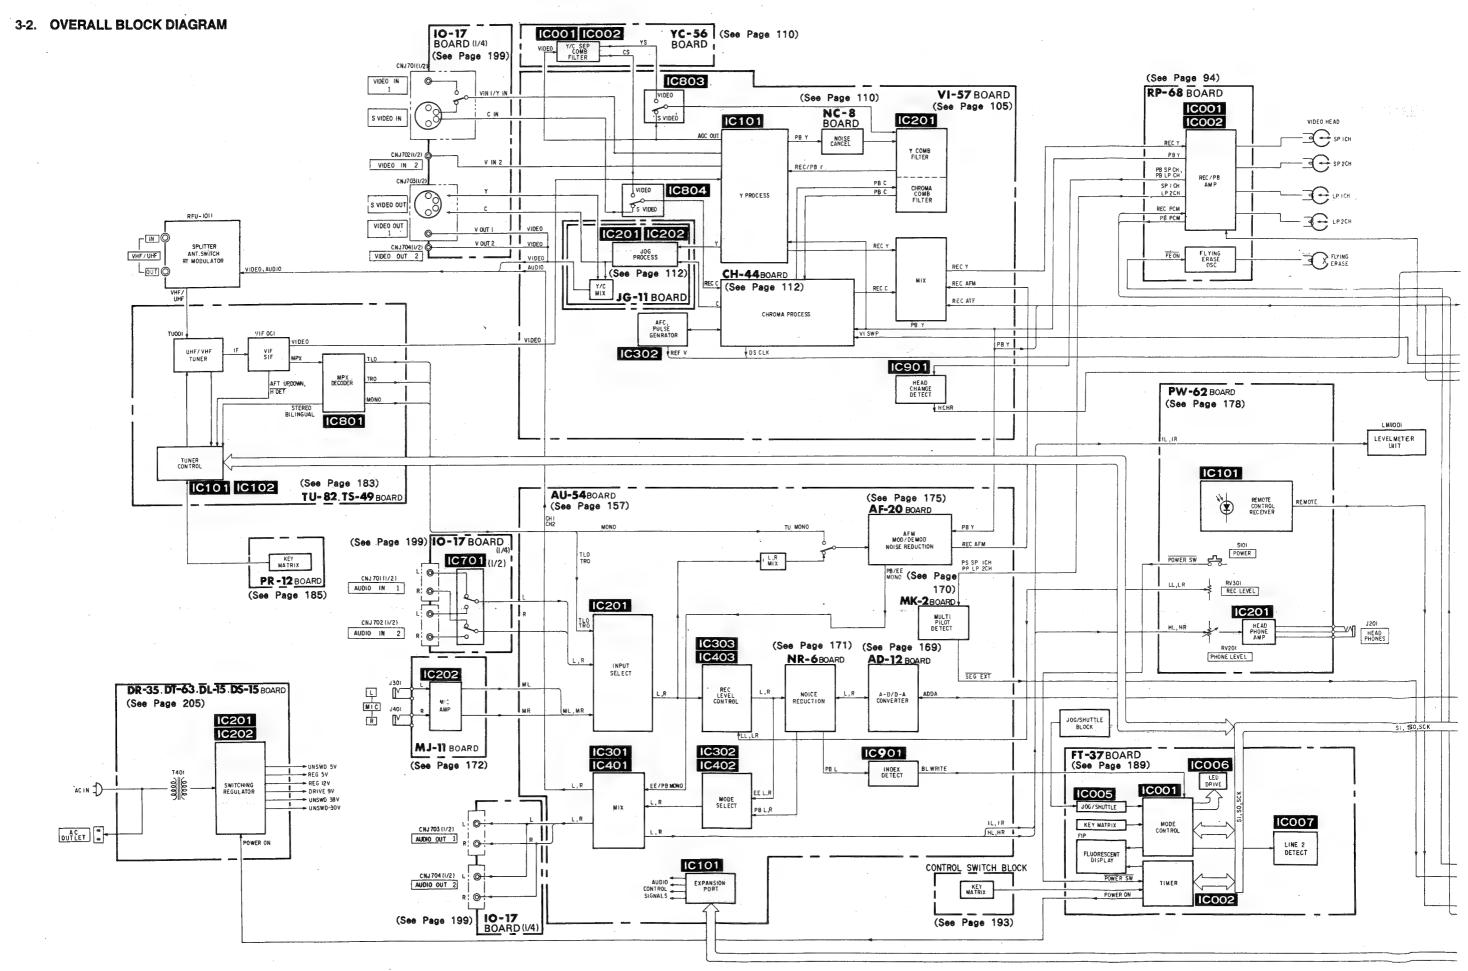


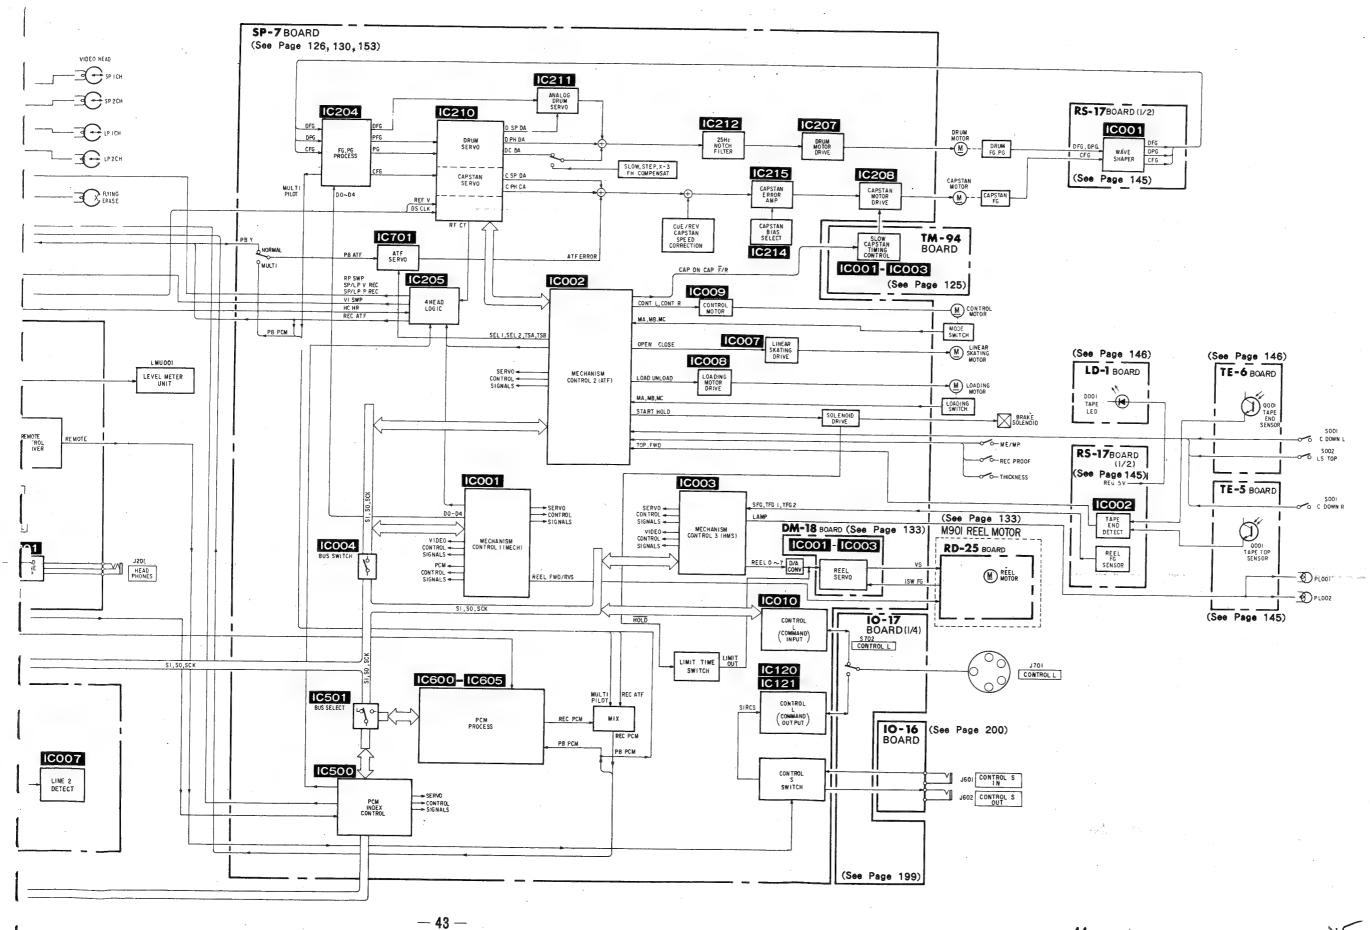


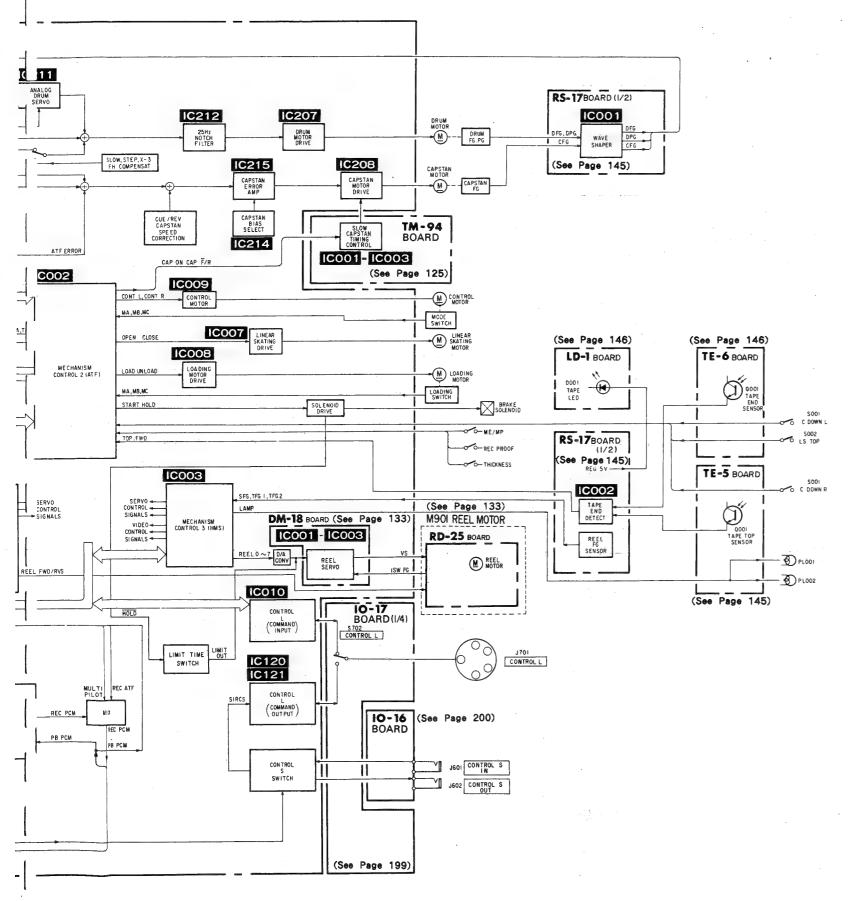


EV-S900


3-3. VIDEO BLOCK DIAGRAM

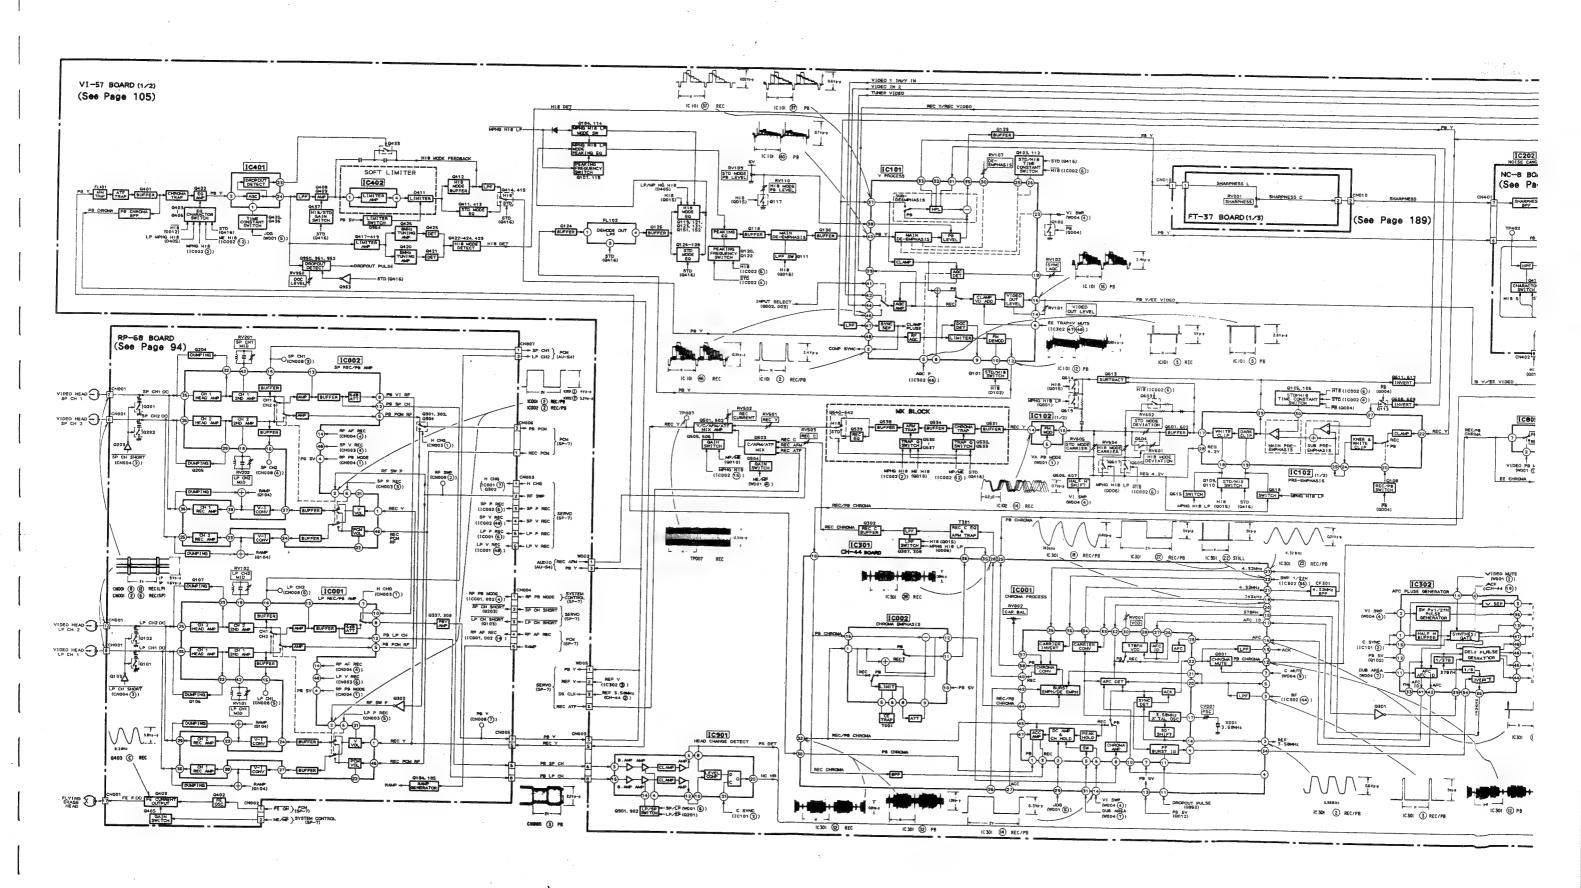


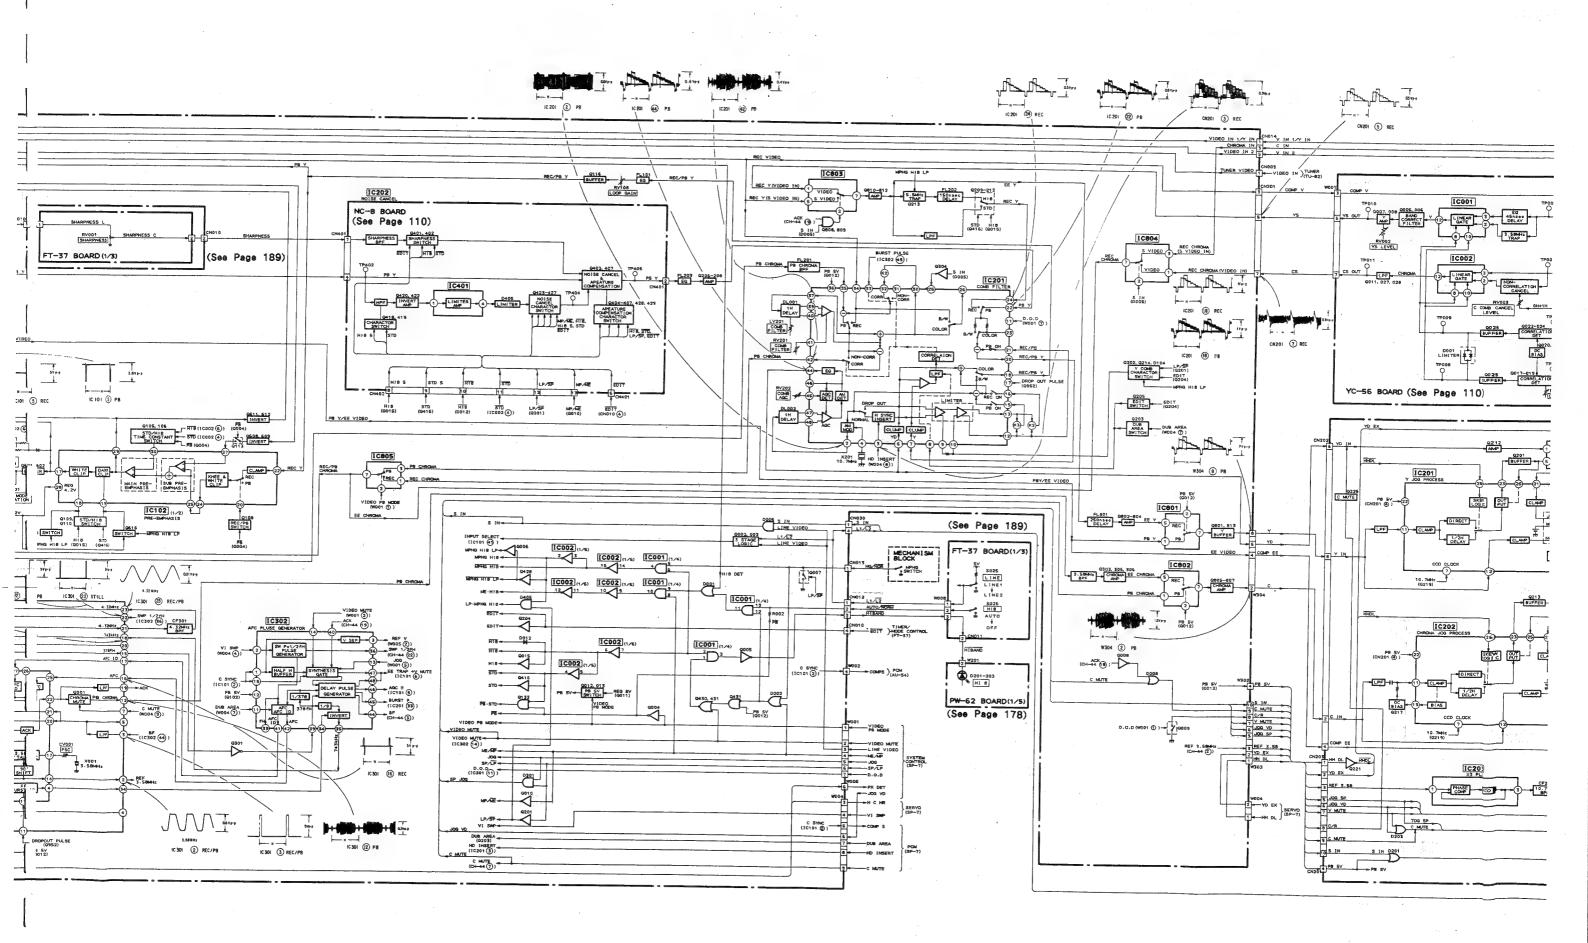

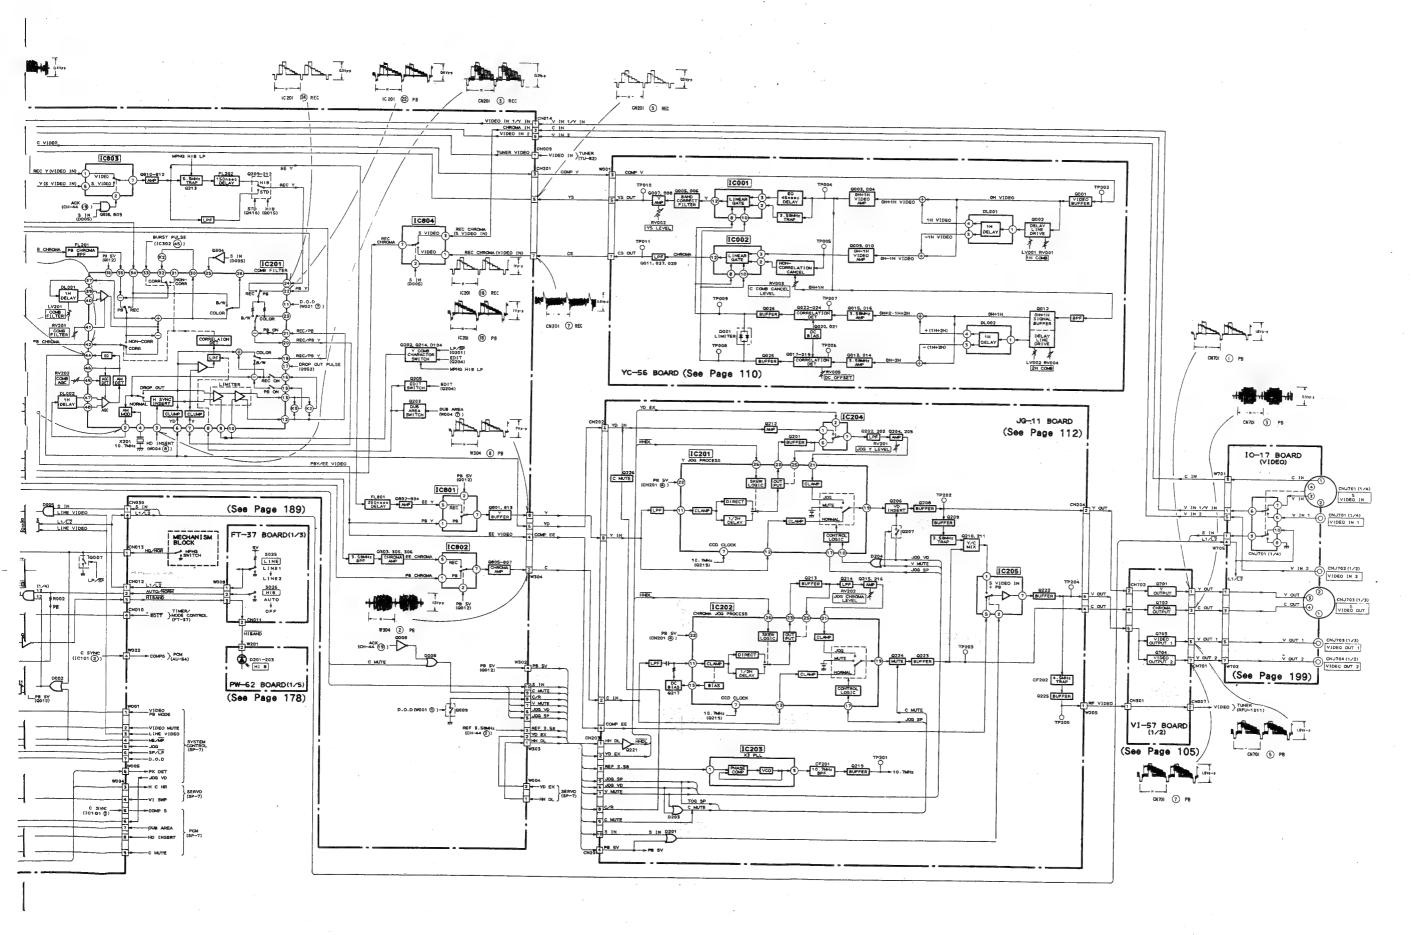



3-4. SERVO BLOCK DIAGRAM

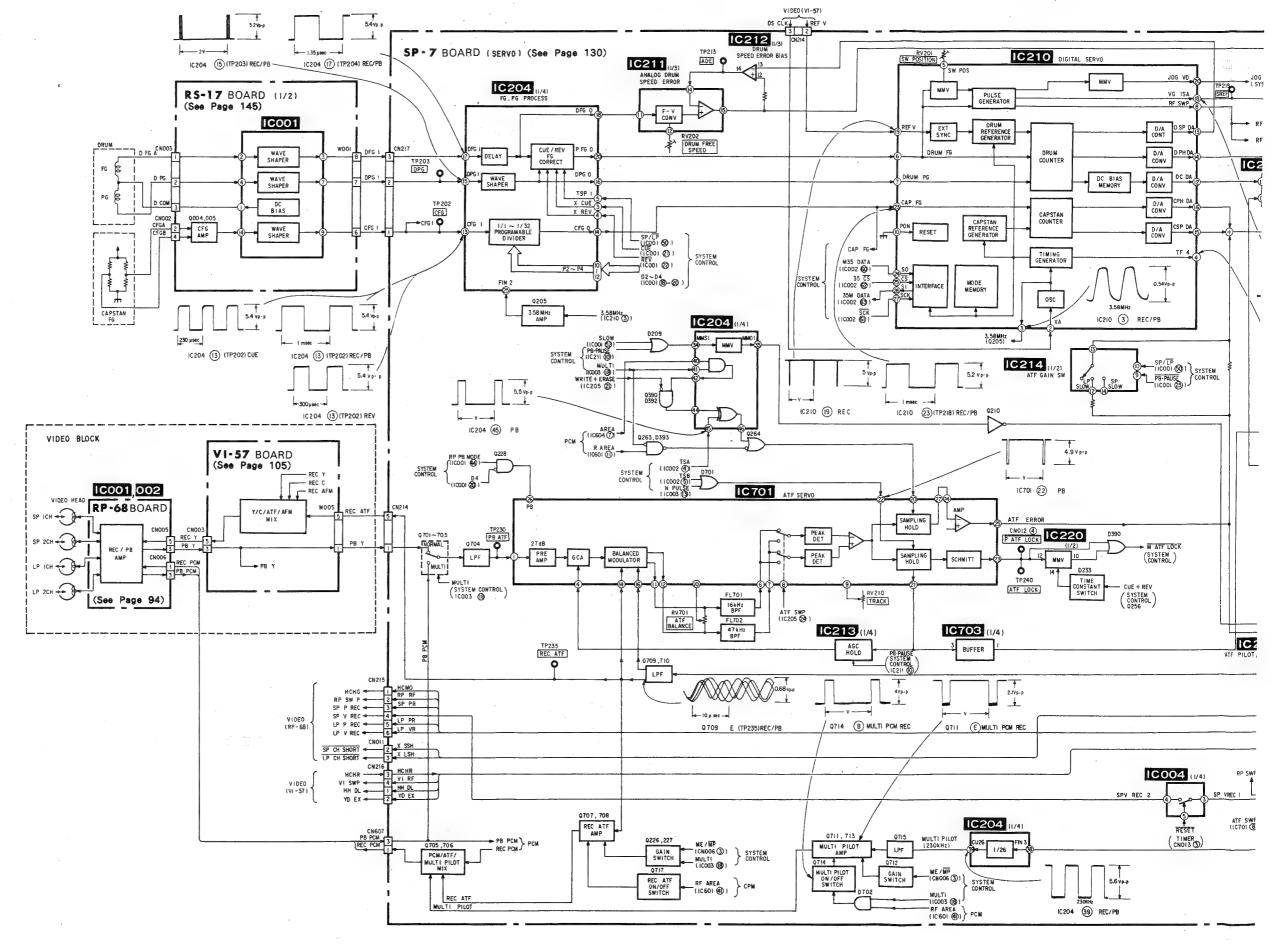

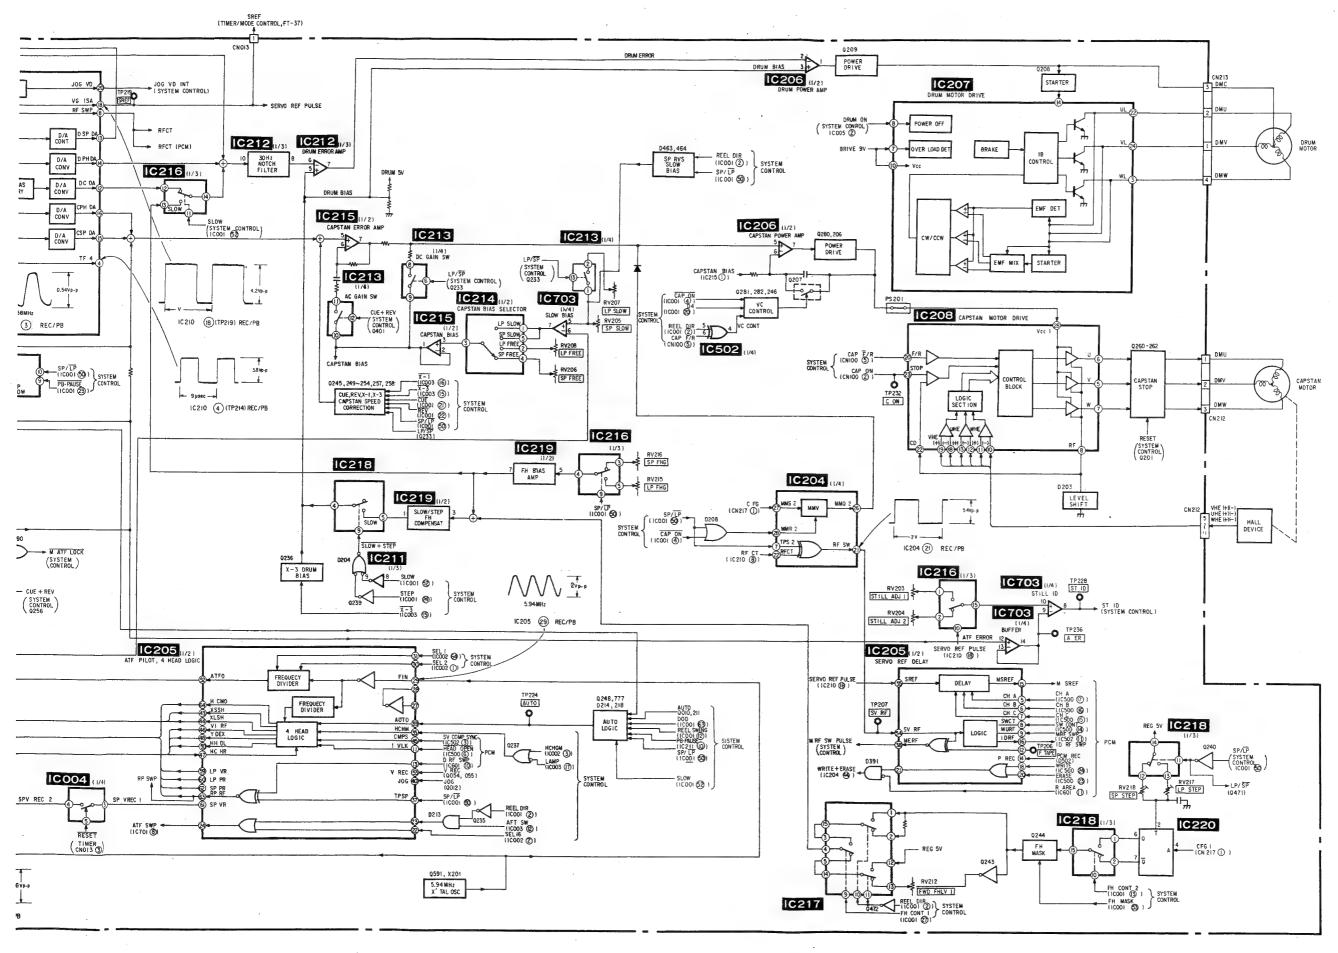

EV-S900

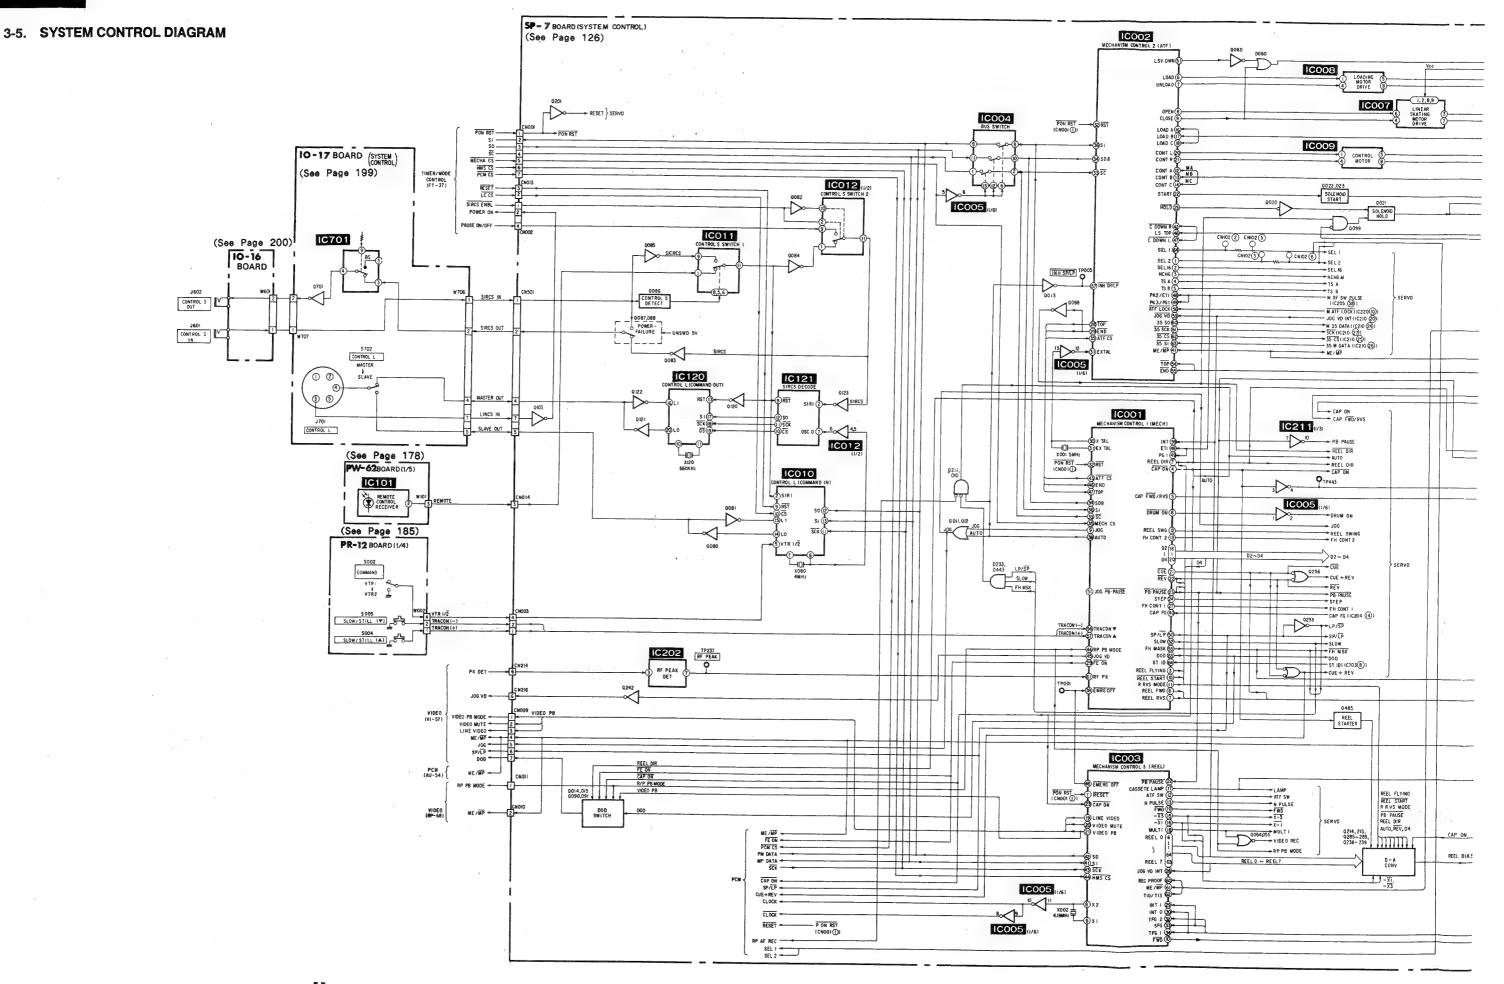

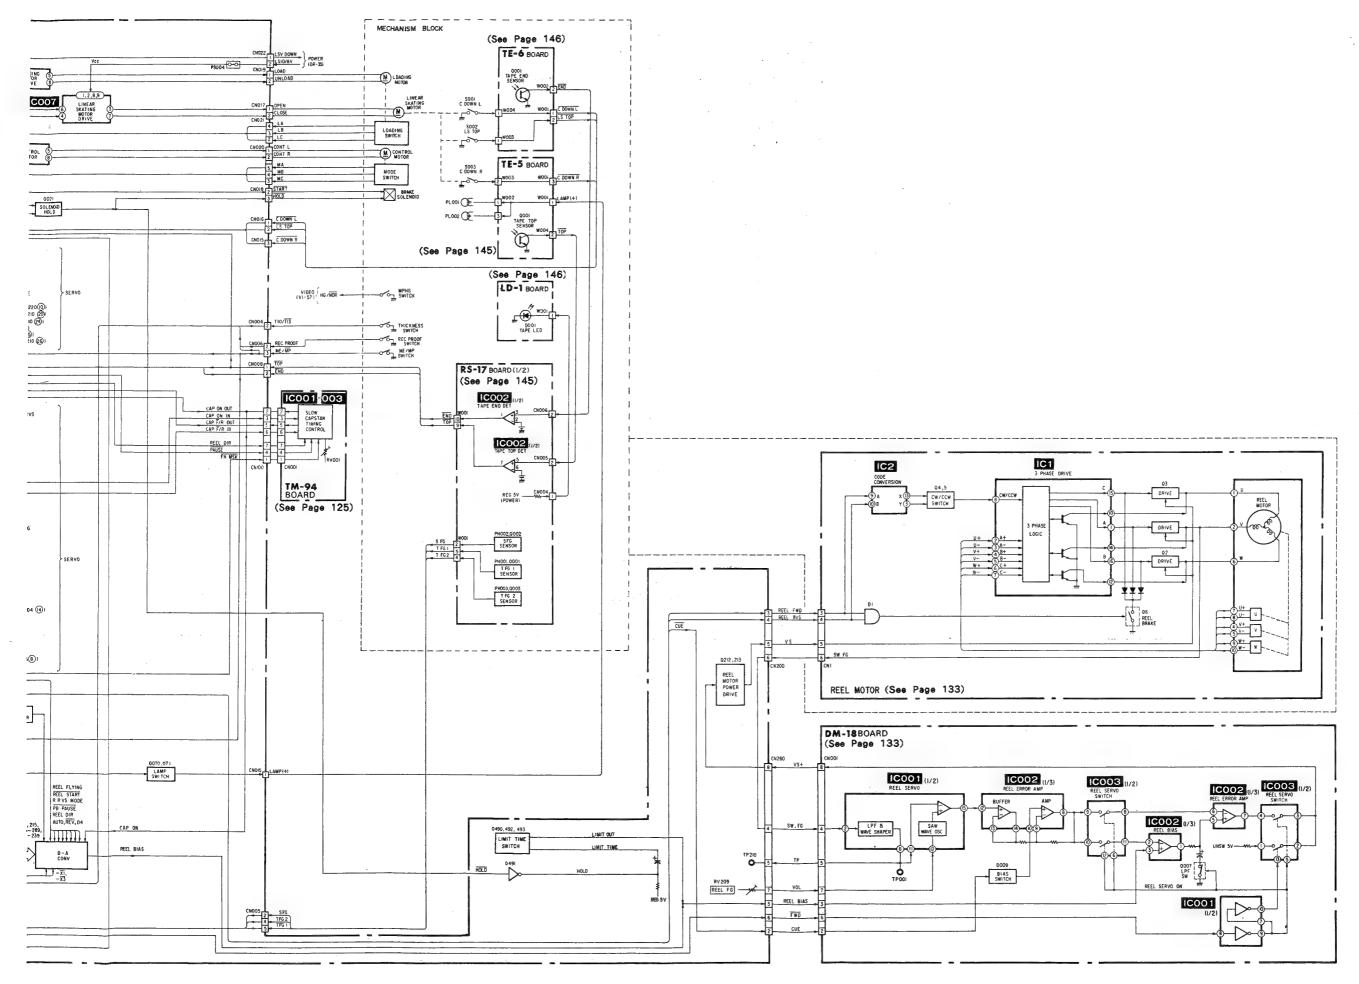

3-6. SYSTEM CONTROL — VIDEO BLOCK INTERFACE

		Mode	STOP		DEW	DEO	REC •	AUDIO	AUDIO		PB •					CUE	REV	SLOW	SLOW	FWD	RVS
Signal name	1/0	Pin No.	310	FF	REW	REC	PAUSE	DUB	PAUSE	PB	PAUSE	×1	-×1	× 2	-×2		(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
VIDEO PB	0	Pin ② of IC003	L	L	L	L	L	Н	Н	Н	Н	Н	Н	H	Н	Н	Н	Н	Н	Н	Н
VIDEO MUTE	0	Pin 20 of IC003	L	L	L	L	L	L	L	L	L	Ł	L	L	L	L	L	L	L	L	L
JOG	0	Pin 9 of IC003	L	L	L	L	L	Н	Н	L	, H	Н	Н	Н	Н	Н	Н	H.	Н	Н	Н
DOD	0	Pin 🕲 of IC003	L	L	L	L	L	Н	L	L	L	L	Н	Н	Н	Н	Н	L	Н	Н	Н
ME/MP	0	Pin ③ of IC006	"L" w	hen usin	g MP ta	pe or M	PHG tap	e.			1						I				
SP/LP	0	Pin 🕲 of IC001	"H" w	hen reco	rding in	SP mod	e, or play	ying back	k in SP	mode.											
JOG VD	0	Pin 6 of IC001			"H"			VD (pulse	"H"					7	VD puise)				<u> </u>
LINE VIDEO	0	Pin (9 of ICO01	Accordi	ng to in	put selec	ting. TU	NER··· "L	", LINE	or SIMU	L··· "H".											
HG∕NOR	0	Pin ① of CN013 on VI-57 board	"L" wh	hen usin	g MP tag	oe or Mi	E tape.														
RP PB MODE	0	Pin @ of IC001	Н	Н	Н	L	L	Н	Н	Н	Н	Н	Н	Н	н	Н	Н	н	Н	Н	н

3-7. SYSTEM CONTROL — SERVO (CAPSTAN MOTOR) BLOCK INTERFACE


		Mode	STOP		DEW	DEO	REC •	AUDIO	AUDIO		PB •					CUE	REV	SLOW	SLOW	FWD	RVS
Signal name	1/0	Pin No.	3105	FF	REW	REC	PAUSE	DUB	DUB PAUSE	PB	PAUSE	×1	-×1	× 2	-×2		(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
CAP ON	0	Pin @ of IC001	Н	Н	Н	L	Н	L	Н	L	Н	L	L	L	L	L	L	*1	*1	L	L
CAP FWD/RVS	0	Pin ⑤ of ICO01	L	L	L	L	L	L	L	L	L	L	Н	L	Н	L	Н	*1	*1	L	Н
D0~D4	0	Pins ® to Ø of CN001	*1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"2"	"2"	"9"	"7"	"1"	"1"	*2	*2
CUE	0	Pin ② of ICO01	Н	Н	Н	Н	Н	н	Н	Н	н	Н	Н	H	Н	L	Н	Н	Н	Н	Н
REV	0	Pin ② of ICO01	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	L	Н	Н	Н	Н
PB PAUSE	0	Pin ② of ICO01	Н	Н	Н	Н	Н	Н	L	Н	L	Н	Н	Н	Н	Н	Н	L	L	Н	Н
-×1	0	Pin ® of IC003	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	L	Н	Н	Н	Н	Н	Н	н	Н
-×3	0	Pin ® of IC003	- H	H-	H	H,	H,	H	H,	Н	Н	Н	Н	Н	L	Н	Н	Н	Н	Н	Н

D4 MSB Decimal

3-8. SYSTEM CONTROL — SERVO (DRUM MOTOR) BLOCK INTERFACE

		Mode	STOP	FF	REW	DEC	REC •	AUDIO	AUDIO	20	PB •					CUE	REV		1	FWD	RVS
Signal Name	1/0	Pin No.	310	FF	HEVV	REC	PAUSE	DUB	DUB PAUSE	PB	PAUSE	×1	-×1	× 2	-×2	(× 9)	(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
DRUM ON	0	Pin ® of IC001	Н	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	. L
STEP	0	Pin 29 of ICO01	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	*1	*1	L	L
FH CONT1	0	Pin @ of IC001	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	*1	·*1	L	
FH CONT2	0	Pin ® of ICO01	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	*1	*1	L	
SLOW	0	Pin Ø of IC001	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	Н	Н	L	
FH MASK	0	Pin 🕲 of IC001	Н	Н	Н	н	Н	Н	н	Н	Н	Н	н	Н	н	Н	Н	*1	*1	Н	Н

^{*1.} Pulse output *2. NTSC "25" to "24"

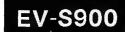

3-9. SYSTEM CONTROL — SERVO (REEL MOTOR) BLOCK INTERFACE

		Mode	STOP	FF	REW	REC	REC •	AUDIO	AUDIO DUB	PB	рв•	×1	-×1	× 2	-×2	CUE	REV	SLOW	SLOW	FWD	RVS
Signal Name	1/0	Pin No.	310	11	NEW	NEC	PAUSE	DUB	PAUSE	PB	PAUSE	^ 1		^2	- x Z	(× 9)	(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
REEL FWD	0	Pin 6 of ICO01	L	Н	L	Н	L	н	L	Н	L	н	L	Н	L	Н	L	*1	*1	Н	L
REEL RVS	0	Pin ⑦ of IC001	Ļ	L	н	L	L	L	L	Ĺ	L	L	Н	L	Н	L	Н	*1	*1	L	Н
CUE	0	Pin ② of ICO01	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	L	Н	Н	Н	Н	Н
REEL DIR	0	Pin ② of IC001	H/L	L	н	L	L	L	L	L	H/L	L	H	L	Н	L	Н	L	Н	L	Н
REEL FLYING	0	Pin ③ of IC001	Normali	y "L".	"H" pul	se when	shifting	STOP →	FF/RV	S mode.											
REEL START	0	Pin ® of IC001	Normall	y "H".	"L" puls	se when	shifting	STOP →	FF/RV	S mode.											
R RVS MODE	0	Pin 10 of IC001	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
REEL SWG	0	Pin 10 of ICO01	Normali	y "L". '	"H" pulse	e when	changing	FORWAR	RD ≠ RE	VERSE r	unning di	rection.									
REEL 0~7	0	Pins ① to ⑥, ⑥ and ⑥ of IC003	"70"	"96"	"96"	"54"	"54"	"54"	"54"	"54"	"70"	"54"	* 2	"70"	*2	* 3	*3	"70"	"63"	"A6"	"9C"
FWD	0	Pin @ of IC003	Н	Н	Н	L	Н	L	Н	L	Н	L	H	L	Н	L	Н	Н	Н	L	Н
PB • PAUSE	0	Pin ② of ICO01	Н	Н	Н	Н	н	L	Н	L	Н	Н	Н	Н	Н	Н	Н	L	L	Н	Н
CAP ON	0	Pin @ of IC001	Н	Н	Н	L	Н	L	Н	L	Н	L	L	L	L	L	L	*1	*1	L	L

REEL 7MSB REEL OLSB BCD code

3-10. SYSTEM CONTROL -- SERVO (ATF SERVO) BLOCK INTERFACE

		Mode	STOP	FF	REW	REC	REC •	AUDIO	AUDIO DUB	РВ	PB •	× 1	-×1	×2	-×2	CUE	REV	SLOW	SLOW	FWD INDEX	RVS
Signal name	1/0	Pin No.	310		11/244	TILO	PAUSE	DUB	PAUSE	P D	PAUSE	^ !	- ^	^2	- ^ 2	(× 9)	(-×7)	(1/5, 1/10)	(-1/5, -1/10)		INDEX SEARCH
ATF SW	0	Pin ® of IC003	L	L	er, L	L	L	L	*1	L	*1	L	L	L	L	L	L	*1	*1	L	L
SEL16	0	Pin ② of IC002	L	L	L	*2	L	*2	L	* 2	L	* 2	*2	*2	*2	*2	*2	* 2	*2	L	L
TSA	0	Pin @ of IC002	L	L	L	L	L	* 2	L	*2	L	* 2	*2	*2	*2	L	L	L	L	Н	Н
TSB	0	Pin ⑤ of IC002	L	L	L	L	L	*2	L	*2	L	* 2	*2	*2	*2	L	L	L	L	L	L
MULTI	0	Pin ® of IC003	Normali	iy "L".	"H" who	en multi	PCM mo	ode.								•					
N PULSE	0	Pin ® of IC003	L	L	L	L	L	Ĺ	*1	L	*1	L	L	L	L	L	L	*1	*1	L	L
RP PB MODE	0	Pin @ of IC001	Н	Н	Н	L	L	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н
SEL 1	0	Pin 6 of IC002	H.	Н	н	*2	*2	*2	*2	* 2	*2	*2	*2	*2	*2	*2	*2	* 2	* 2	Н	Н
SEL 2	0	Pin ① of IC002	Н	Н	н	*2	* 2	*2	*2	* 2	* 2	* 2	*2	*2	*2	* 2	*2	*2	* 2	Н	Н
M RFSW PULSE		Pins @ and @ of IC002	H/L	Field sy	nc pulse													,,			
JOG VD INT	I	Pin ® of IC001 and IC002	L	Pulse in	nput							-									
ME/MP	0	Pin ③ of CN006	"L" w	hen usin	MP ta	pe or M	PHG tap	е.													

^{*1.} Pulse output

^{*1.} Pulse output

^{*2.} Changes with the cycle of SFG

^{*3.} Changes with the tape speed (SP/LP)

^{*2.} Pulse output with ATF sequence

3-11. SYSTEM CONTROL — SERVO (STILL) BLOCK INTERFACE

		Mode	STOP	EE	REW	REC	REC •	AUDIO	AUDIO	PB	PB •					CUE	REV	SLOW	1	FWD	RVS
Signal name	1/0	Pin No.	310	''	IJEVV	NEC	PAUSE	DUB	DUB PAUSE	PD	PAUSE	×1	-×1	× 2	-×2	(×9)	(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
RF PK	l i	Pin 6 of ICO01	Pulse in	nput											•						
STID	1	Pin 🚱 of IC001	Pulse in	nput					_												

3-12. SYSTEM CONTROL -- SERVO (HEAD SELECTING) BLOCK INTERFACE

		Mode	STOP	FF	REW	REC	REC •	AUDIO	AUDIO DUB	PB	PB ·	v. 1	4	0		CUE	REV	SLOW	1	FWD	RVS
Signal name	1/0	Pin No.	3101		LEAA	NEC	PAUSE	DUB	PAUSE	РВ	PAUSE	×1	-×1	×2	-×2		(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
AUTO	0	Pin 3 of IC001	L	L	L	L	L.	L	L	L	L	L	L	L	L	Н	Н	*1	*1	Н	Н
LAMP	0	Pin ① of IC003	Normali	y "H".	Pulse ou	tput whe	n thread	ing/untl	nreading.		*										1
SP/LP	0	Pin 🕲 of ICO01	Output	when re	cording	in SP m	ode or p	laying b	ack in SI	mode.											
HCHG	0	Pin ③ of IC002	*1	*1	*1	*1	*1	*2	*1	* 2	*1	* 2	*2	* 2	*2	*2	* 2	*2	*2	* 2	* 2
V REC	0	Collector of Q054	L	L	L	Н	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L

^{*1.} Depending upon a tape speed (SP/\overline{LP}). SP..."H", LP..."L".


3-13. SYSTEM CONTROL -- SERVO (AND OTHERS) BLOCK INTERFACE

		Mode	STOP	FF	REW	REC	REC •	AUDIO	AUDIO	DD	PB •	v. 4				CUE	REV	SLOW	SLOW	FWD	RVS
Signal name	1/0	Pin No.	310	F F F	DE VV	NEC	PAUSE	DUB	DUB PAUSE	PB	PAUSE	× 1	-×1	×2	-×2	(× 9)		(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCH
M ATF LOCK	ı	Pin 🕸 of IC002		*1	*1			٠.		* 2		* 2	*2	*2	*2	* 1	*1			*1	*1
CAP FG	1	Pin @ of IC001		Indefinite		*1	Indefinite	* 1	Indefinite	*1	Indefinite	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
JOG	0	Pin 9 of IC001	L	L	L	L	L	Н	Н	L	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н

^{*1.} Pulse input

^{*2.} Pulse output

^{*2. &}quot;L" when ATF servo is phase locked.

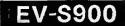

3-14. SYSTEM CONTROL — MD BLOCK INTERFACE

		Mode	STOP	FF	REW	REC	REC •	AUDIO	AUDIO	PB	PB •	w 1	V 1	V 2		CUE	REV	SLOW	SLOW	FWD	RVS
Signal name	1/0	Pin No.	3105	FF	DEAA	NEC	PAUSE	DUB	PAUSE	PB	PAUSE	×1	-×1	×2	-×2	(× 9)	(-×7)	(1/5, 1/10)	(-1/5, -1/10)	INDEX SEARCH	INDEX SEARCE
CC DOWN L	1	Pin ① of IC002	"H" wi	hen the	cassette d	compartr	ment is o	oen. "L"	when th	ne casse	tte comp	artment	s down.								
LS TOP	-	Pin 6 of IC002	"L" w	hen cas	sette com	partmen	nt is oper	n. "H"	in all the	other	conditions	3,									
OPEN	0	Pin ® of IC002	Normal	y "L".	"H" whe	en casse	ette comp	artment	is open.												
CLOSE	0	Pin 9 of IC002	Normall	y "L".	"H" whe	en casse	ette comp	artment	is closed	i.											
LOAD	0	Pin 6 of IC002	Normall	y "L".	"H" whe	en tape	threading														·
UNLOAD	0	Pin ⑦ of IC002	Normall	y "L".	"H" whe	en tape	unthreadi	ng.									-				
LA~LC	1	Pins ® to ® of IC002	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"	"3"
CONTL	0	Pin 20 of ICO02	Normali	y "L".	"H" whe	n shifti	ng to me	chanism	mode.								1				
CONTR	0	Pin ② of ICO02	Normall	y "L".	"H" whe	n shifti	ng to me	chanism	mode.										•		
MA~MC	I	Pins 10 to 14 of IC002	"3"	"6"	"6"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"	"1"
START	0	Pin ② of IC002	Н	Н	Н	Н	Н	Н	н	Н	Н	Н	Н	Н	Н	Н	Н	. н	Н	Н	Н
HOLD	0	Pin Ø of IC002	Н	L	L	Н	Н	Н	Н	H.	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н
REC PROOF	1	Pin 6 of IC002	"L" wh	nen reco	rding ena	ble cass	sette tape	is inse	rted.				<u> </u>		1	1					1
ME/MP	1	Pin 1 of IC002	"L" wł	nen usin	g MP tap	oe or M	IPHG tape).													
T10/T13	1	Pin Ø of IC002	"L" wh	nen usin	g the tap	e of 13	3 µm thic	kness													
TFG1	- compa	Pins 30 and 30 of ICO02	Indefinite	*1	*1	*1	Indefinite	*1	Indefinite	*1	Indefinite	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
TFG2	- 1	Pin ② of IC002	Indefinite	*1	*1	*1	Indefinite	*1	Indefinite	*1	Indefinite	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
TOP	1	Pin 😵 of IC002	Normally	y "H".	"L" at t	ape end	l.)			W 17											
END	ı	Pin So of IC002	Normally	, "H".	"L" at t	ape end	l. wner	1 Doth	signals ar	e "H",	cassette	loaded is	s detecte	d. When	"L", ca	ssette u	nloaded i	s detecte	ed.		
SFG	1	Pins (3) and (3) of ICOO2	Indefinite	* 1	*1	*1	Indefinite	*1	Indefinite	*1	Indefinite	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
CC DOWN R	ı	Pin @ of IC002	"H" wh	nen cass	ette com	partmen	t is open	. "L" \	when cas	sette co	mpartme	nt is do	vn.		1	4	I		i		
LAMP	0	Pin 10 of IC003	"H" wł	nen tape	threading	g is cor	npleted. P	ulse ou	tput whe	n tape	threading	or tape	unthread	ding.							

^{*1.} Pulse according to reel rotation.

3-15. SYSTEM CONTROL — AFM AUDIO BLOCK INTERFACE (AU-54 BOARD)

		Mode	0700				REC •		AF REC		PB ·			İ				SLOW	SLOW			FWD	RVS
Signal name	1/0	Pin No.	STOP	FF	REW	REC	PAUSE	AF REC	PAUSE		PAUSE	×1	-×1	× 2	-×2	× 9	-×9	(1/5,	(-1/5,	CUE	REV	INDEX	INDEX
IN SEL A	0	Pin ⑤ of IC001				-							,	-				1/10)	-1/10)			SEARCH	SEARCH
IN SEL B	0	Pin 6 of ICO01	Accord	ing to in	nput sele	ction. (A	ccording	to when	ther there	e are Tl	JNER/LI	NE/SIM	UL and	micropho	ne input.)							
AF SEL	0	Pin to of ICO01													mo mpat.	.,				-			
OUT SEL A	0	Pin ③ of ICO01			-											<u>_</u>							
OUT SEL B	0	Pin ② of ICO01	Accordi	ing to o	utput sel	ection. (Accordin	g to the	audio n	nultiplex	mode du	ring rece	iving, the	PCM I	D code	(STEREO	/MONO	/BILING	UAL) re	corded o	on a tap	e during	plaving
OUT SEL C	0	Pin ① of IC001					Dack and	the so	und mon	itoring s	witch.												
SP/LP	0	5: 6 (10004																					
		Pin @ of ICO01	Accordi	ing to sp	peed sele	cting or	a playing	back t	ape.					-1.									
AUDIO MUTE	0	Pin @ of ICO01	Accordi	ing to sp	beed sele	cting or	a playing	g back t	ape.	Н	L	Н		, m. 1. a. 1. m		н	ш Т		u		;		
AUDIO MUTE AF PB/REC	0						1			Н	L	Н	Н	Н	Н	Н	Н	Н	Н	Н	Н	L	L
		Pin @ of IC001					1			Н		Н	Н	H	Н	Н	Н	Н	Н	Н	H	Ł H	L
AF PB/REC	0	Pin @ of IC001 Pin @ of IC001	H L	H	H		H L		H L		H H		Н	Н	Н							L H H	L H H

^{*1.} According to broadcasting system (STEREO/MONO/BILINGUAL) and sound monitoring switch.
*2. According to PCM ID code recorded on a tape and sound monitoring switch.

3-16. PCM INDEX CONTROLLER — PCM AUDIO BLOCK INTERFACE

	Mode					BEC.		AE BEC		DD							SLOW	SLOW	EWD	DVC
1/0	Pin No.	STOP	FF	REW	REC	PAUSE	AF REC	PAUSE	PB	PAUSE	×1	-×1	× 2	-×2	× 9	-×9	(1/5,	(-1/5,	INDEX	RVS INDEX
ı	Pin 49 of IC500	L	L	L	Н	L	Н	L	4. 19 m.j			"h	f" when	playing	back P0	CM signa		1/10/	027111011	OLAHOI
0	Pin 69 of IC500	L	L	L	L	Н	L	L	L	L	L		1	1		1				· .
0	Pin Ø of IC500	Н	.H	Н	L	Н	Н	L	Н	H	Н	Н	Н	н	н		L .	L	<u> </u>	,
0	Pin ② of IC500	L	L	L	Н	L	Н	Н	Н	Н	Н									Н
0	Pin (3) of IC500	Н	Н	. Н	Η.	Н	٠Η	- Н	н			-			п				Н .	Н
0	Pin 🚱 of IC500	L	L	L	L	Liver		÷'	1	1 1	1	'''	, .11			. п	Н	Н	L	Н
	0 0 0	I Pin № of IC500 O Pin ฬ of IC500	I Pin № of IC500 L O Pin № of IC500 L O Pin № of IC500 H O Pin ② of IC500 L O Pin ② of IC500 H O Pin ③ of IC500 H	I / O Pin No. I Pin ♠ of IC500 L U Pin ♠ of IC500 L U Pin ♠ of IC500 L U Pin ♠ of IC500 H U Pin ♠ of IC500 L U Pin ♠ of IC500 L U Pin ♠ of IC500 H U Pin ♠ of IC500 H U Pin ♠ of IC500 H U Pin ♠ of IC500 H	I / O Pin № of IC500 L L L I Pin ♠ of IC500 L L L O Pin ♠ of IC500 L L L O Pin ♠ of IC500 H H H O Pin ♠ of IC500 L L L O Pin ♠ of IC500 H H H H H H H	I / O Pin № of IC500 L L L H O Pin № of IC500 L L L L O Pin № of IC500 L L L L O Pin № of IC500 H H H L O Pin № of IC500 L L L H O Pin № of IC500 H H H H O Pin № of IC500 H H H H	I/O Pin No. STOP FF REW REC REC PAUSE I Pin ® of IC500 L L L H L O Pin ® of IC500 L L L L H O Pin ® of IC500 H H H L H O Pin Ø of IC500 L L L H H O Pin Ø of IC500 H H H H H	I/O Pin No. STOP FF REW REC REC PAUSE AF REC PAUSE I Pin ® of IC500 L L L H L H O Pin ® of IC500 L L L L H H H O Pin ® of IC500 H H H H H H H O Pin ® of IC500 H H H H H H H H	I/O Pin No. STOP FF REW REC REC PAUSE AF REC PAUSE I Pin @ of IC500 L L L H L H L O Pin @ of IC500 L L L L H H L L O Pin @ of IC500 L L L H H H H H O Pin @ of IC500 H H H H H H H H H H	I/O Pin No. STOP FF REW REC REC PAUSE AF REC PAUSE PB PAUSE I Pin @ of IC500 L L L H L H L H H H L H	I/O Pin No. STOP FF REW REC REC PAUSE AF REC PAUSE PB PAUSE I Pin ® of IC500 L L L H L H L H	I/O Pin No. STOP FF REW REC REC PAUSE AF REC PAUSE PB PAUSE X 1 I Pin ® of IC500 L L L H L H L H	I	I	No. STOP FF REW REC REC AF REC PB PAUSE X1 -X1 X2 -X2	I	No. STOP FF REW REC REC AF REC PAUSE PB PAUSE X 1 -X 1 X 2 -X 2 X 9 -X 9	No. STOP FF REW REC REC AF REC PAUSE PB PAUSE X1 -X1 X2 -X2 X9 -X9 X1/10	No. STOP FF REW REC REC AF REC REC PAUSE AF REC PAUSE PB PAUSE X 1 -X 1 X 2 -X 2 X 9 -X 9 X 1 (1/5, 1/10) -1/10)	STOP FF REW REC AF REC AF REC PB PB PAUSE X1 -X1 X2 -X2 X9 -X9 X5LOW SLOW INDEX SEARCH

YI

LP

3-17. SYSTEM CONTROL — PCM AUDIO BLOCK INTERFACE

Signal name	1/0	Pin No.	Input/Output level
CAP ON	0	Pin 4 of IC001	"L" when capstan is rotating.
FE ON	0	Pin 29 of IC001	"L" when recording (including multi PCM REC) and AUDIO DUB.

3-18. SERVO — VIDEO BLOCK INTERFACE

Signal name	I/O	Pin No.	Input/Output level		
SP CH SHORT	0	Pin of IC205	"H" when recording or playing back in SP mode. "L" when recording or playing back in LP mode. Pulse or "H" when playing back at variable speeds. Pulse for LP mode and "H" for SP mode when multi PCM playing back. "L" for LP mode and "H" for SP mode when multi PCM playing back.		
LP CH SHORT	0	Pin 4 of IC205	"L" when recording or playing back in SP mode. "H" when recording or playing back in LP mode. Pulse or "H" when playing back at variable speeds. "H" for LP mode and pulse for SP mode when multi PCM playing back. "H" for LP mode and "L" for SP mode when multi PCM recording.		
COMP SYNC	I	Pin (5) of IC205	Positive polarity composite sync signal.		
VI SWP	0	Pin 46 of IC205	50% duty pulse of 2V cycle.		
HCHR	0	Pin ① of IC205	"L" when stop. "H" when normal playback. Pulse when playing back at variable speeds.		
YD EX	0	Pin 48 of IC205	Normally "L". "H" pulse when playing back at variable speeds in SP mode.		
HH DL	0	Pin 🕲 of IC205	Normally "H". Pulse when playing back at variable speeds in SP mode.		
LP VIDEO REC	0	Pin 59 of IC205	Normally "L". "H" when recording in LP mode.		
LP PCM REC	0	Pin 60 of IC205	Normally "L". "H" pulse of V cycle when recording in LP mode (including AUDIO DUB, INDEX writing and multi PCM REC).		
SP VIDEO REC	0	Pin 60 of IC205	Normally "L". "H" when recording in SP mode.		
SP PCM REC	I	Pin ② of IC205	Normally "L". "H" pulse of V cycle when recording in SP mode (including AUDIO DUB, INDEX writing and multi PCM REC).		
RP SWP	I	Pin 🚳 of IC205	50% duty pulse of 2V cycle.		
H CHG	0	Pin 🚳 of IC205	"H" when recording or playing back in SP mode. "L" when recording or playing back in LP mode. Pulse when playing back at variable speeds.		
REF V	I	Pin (9) of IC210	"L" pulse of V cycle.		


3-19. PCM AUDIO — VIDEO BLOCK INTERFACE


Signal name	1/0	Pin No.	Input/Output level Normally "H". "L" when recording. "L" pulse of 2V cycle when AUDIO DU "L" pulse of V cycle when multi PCM recording.	
M FE ON	0	Pin ① of IC500		
RP AFTER REC	0	Pin @ of IC500	Normally "L". "H" when AUDIO DUB or INDEX writing.	
RAMP	0	Pin ② of IC601	Normally "L". "H" when recording. "H" pulse of V cycle when AUDIO DUB or INDEX writing.	
C MUTE	0	Pin ① of IC606	Normally "L". "H" pulse of V cycle when AUDIO DUB or INDEX writing.	
HD INSERT	0	Pin (4) of IC606	Normally "L". "H" pulse of H cycle in the writing period when AUDIO DUB or INDEX writing.	
AF REC AREA	0	Pin (f) of IC606	Normally "L". "H" pulse of V cycle when AUDIO DUB or INDEX writing.	


3-20. PCM AUDIO — SERVO BLOCK INTERFACE


Signal name	I/O	Pin No.	Input/Output level			
M RF SWP	0	Pin ② of IC500	50% duty pulse of 2V cycle.			
RF CONT	I	Pins 29 and 30 of IC500	50% duty pulse of 2V cycle.			
R AREA	0	Pin ① of IC601	Normally "L". "H" pulse of V cycle when recording (including AUDIO DUB, INDEX writing and multi PCM REC).			
D RF SWP	0	Pin (10) of IC601	50% duty pulse of 2V cycle.			
AREA	0	Pin ⑦ of IC604	"H" pulse of V cycle.			
MS REF	I	Pin (4) of IC604	"H" pulse of V cycle.			
ID RF SWP	I	Pin (5) of IC604	50% duty pulse of 2V cycle.			
		Pin (4) of IC601				
CH A	0	Pin ⑦ of IC500	Signal indicating a track No. of multi PCM.			
СН В	0	Pin (6) of IC500	CH ALSB, CH CMSB			
CH C	0	Pin (f) of IC500	"H" for these three signals in mode except multi PCM mode.			
HEAD SHORT	0	Pin ⑥ of IC500	Normally "H". "H" pulse of V cycle when multi PCM playing back.			
WRITE	0	Pin ② of IC500	"H" when INDEX writing.			
ERASE	0	Pin ② of IC500	"H" when INDEX deleting.			


3-21. TUNER BLOCK DIAGRAM

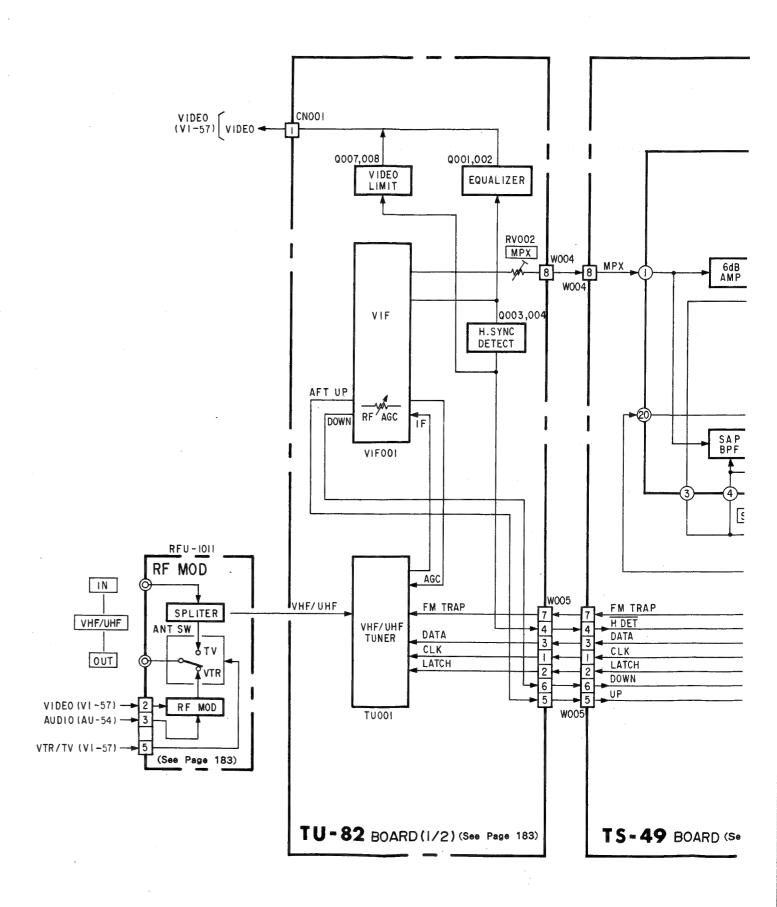


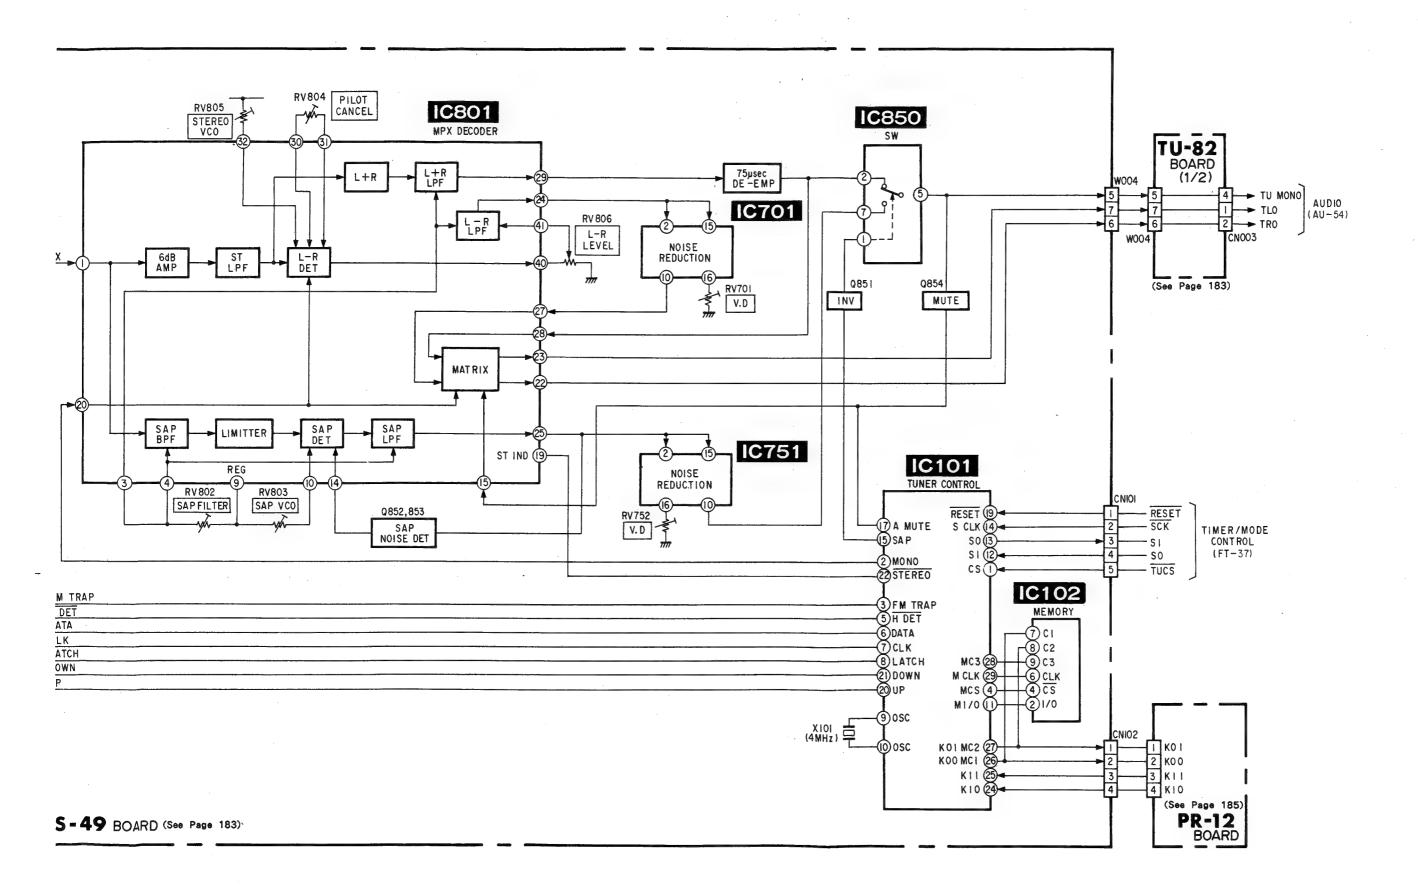


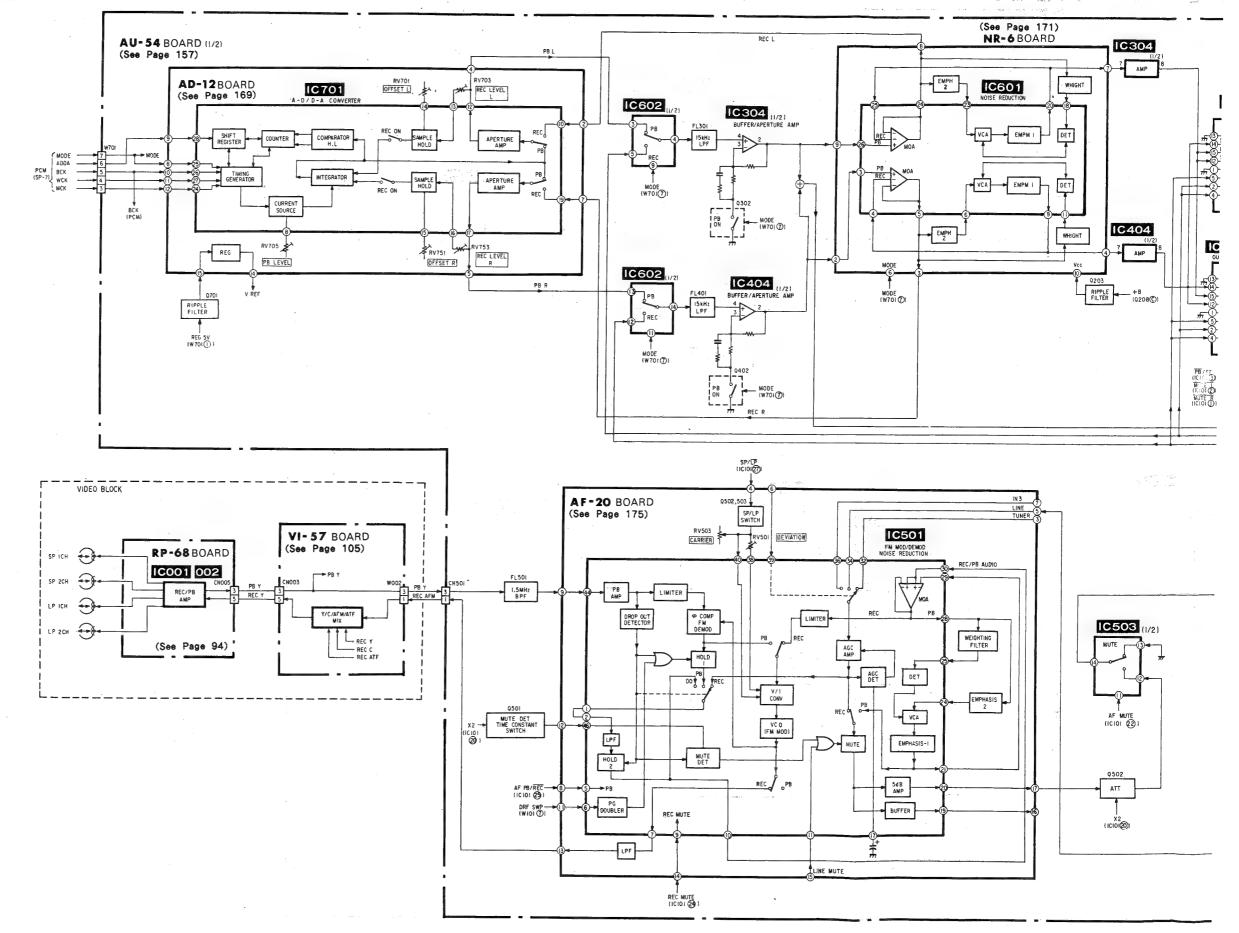


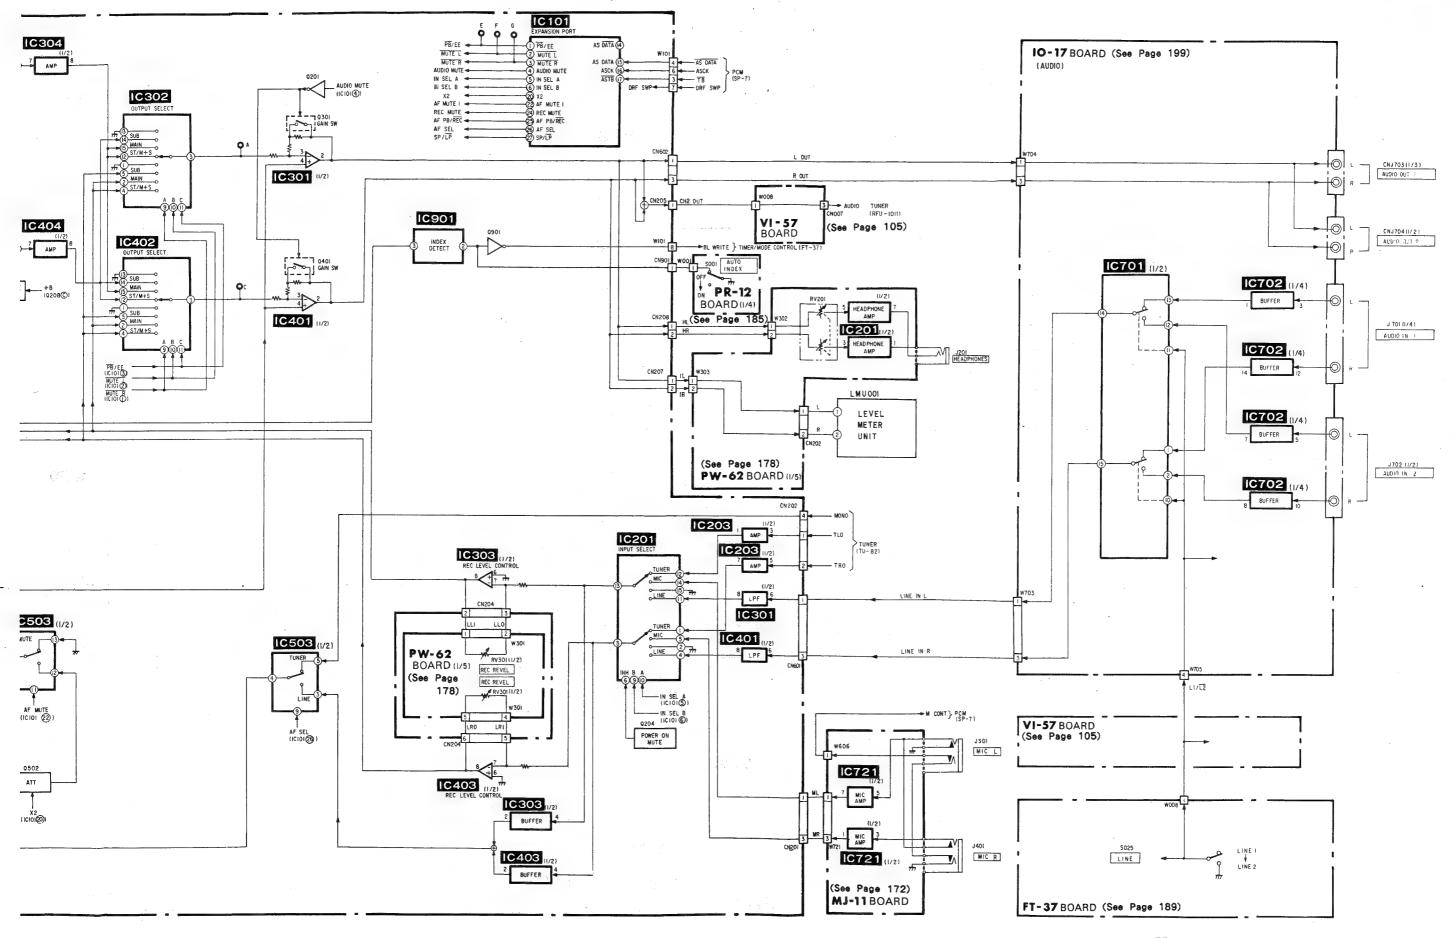


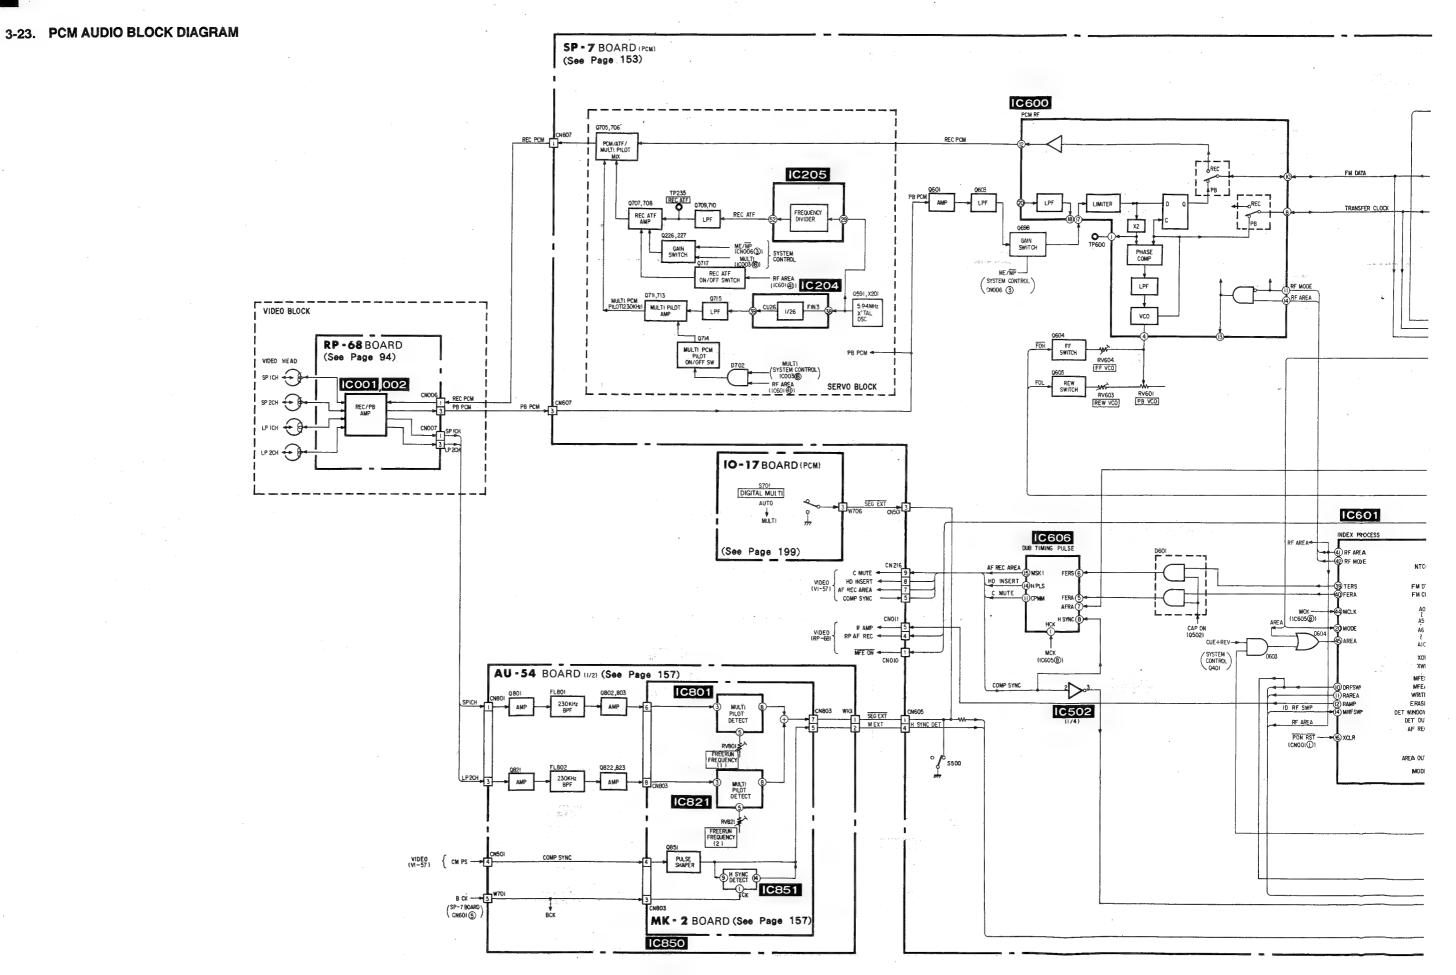


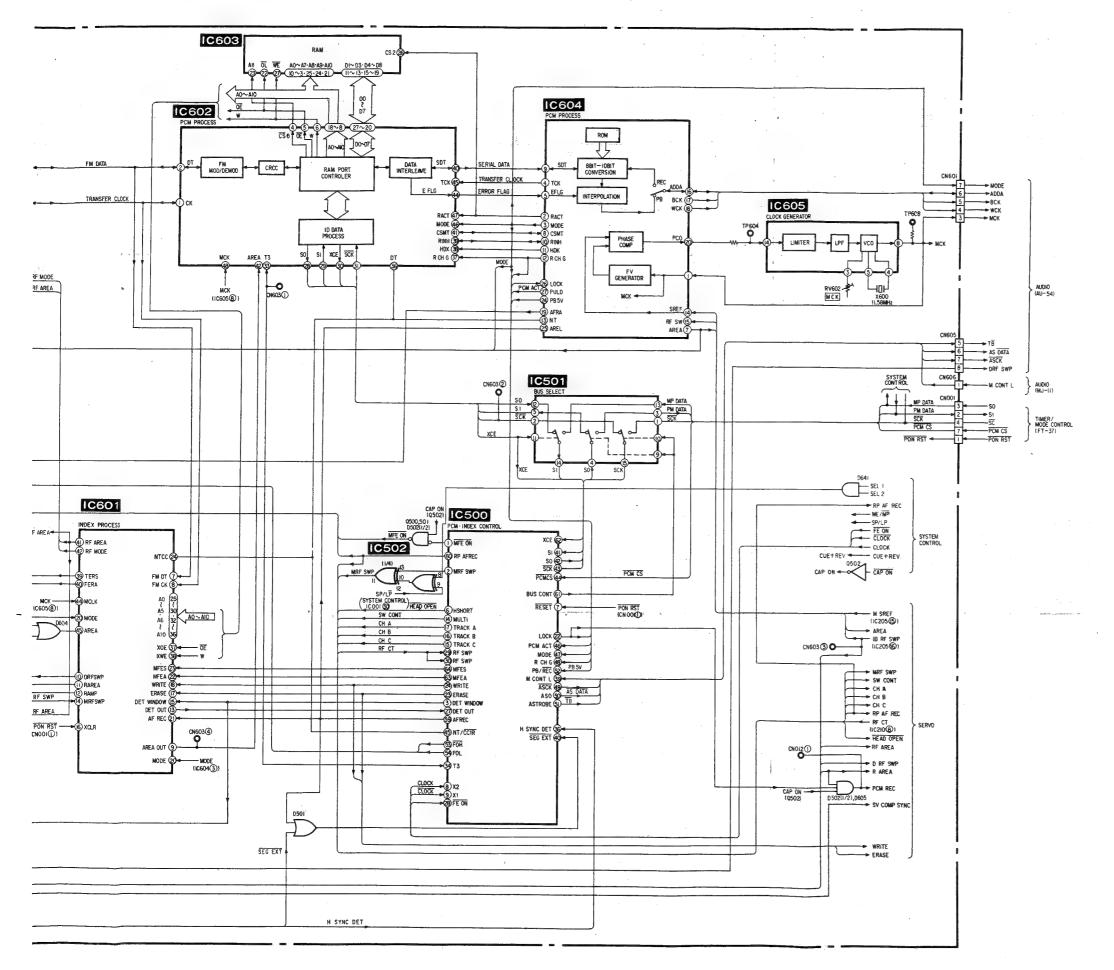

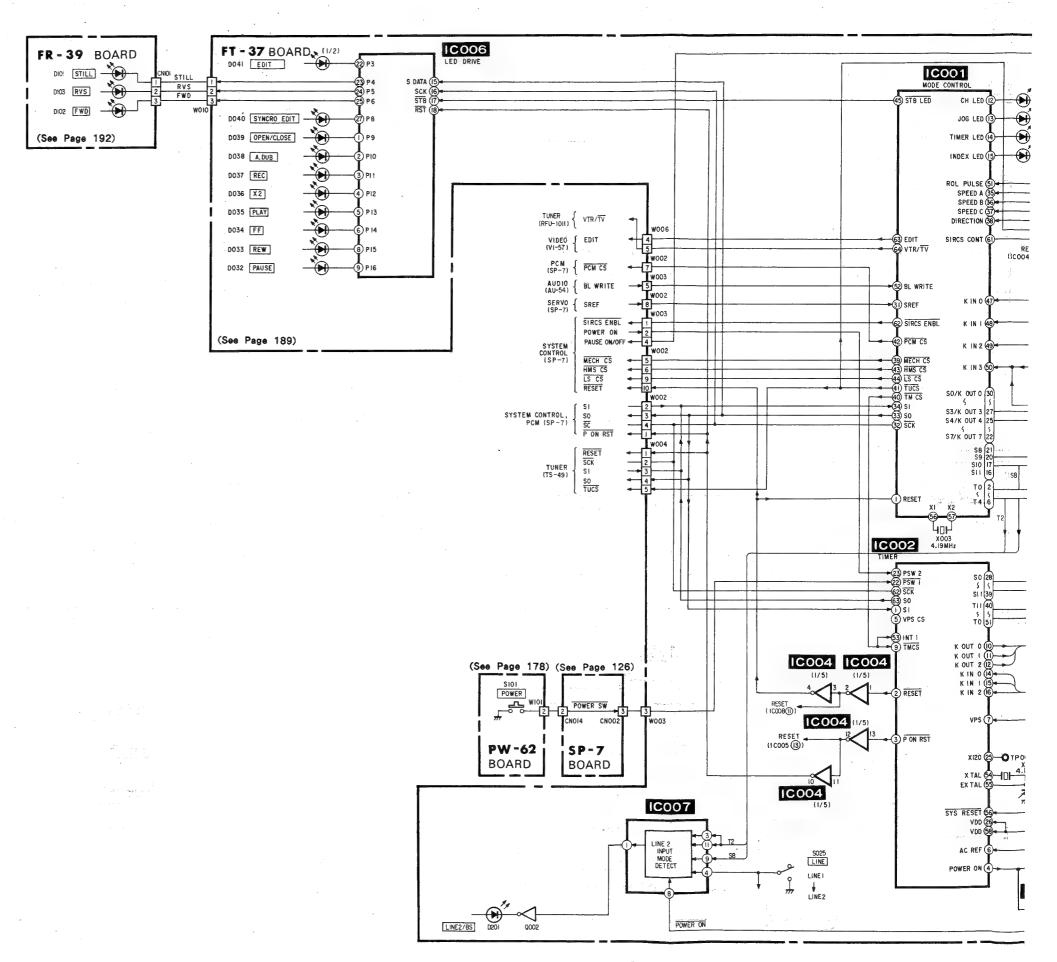

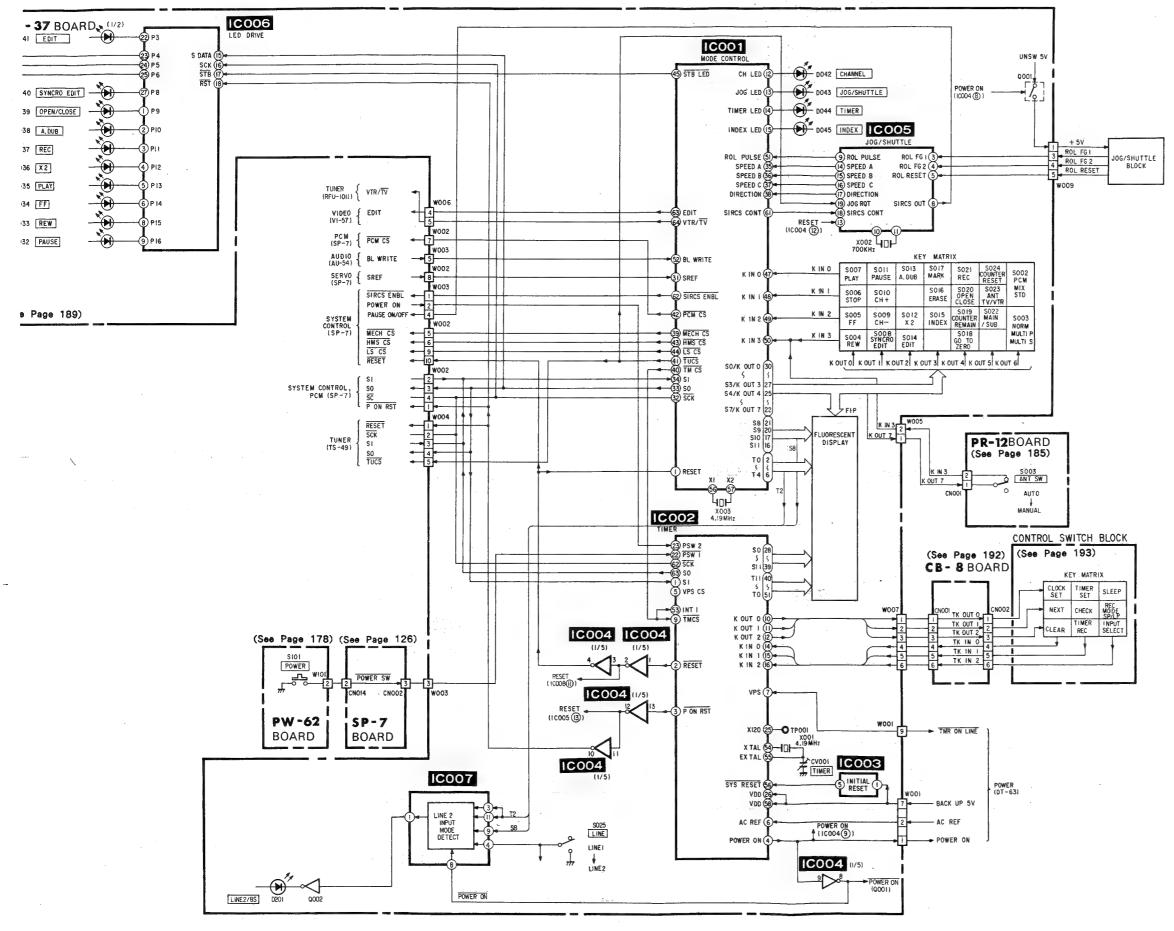

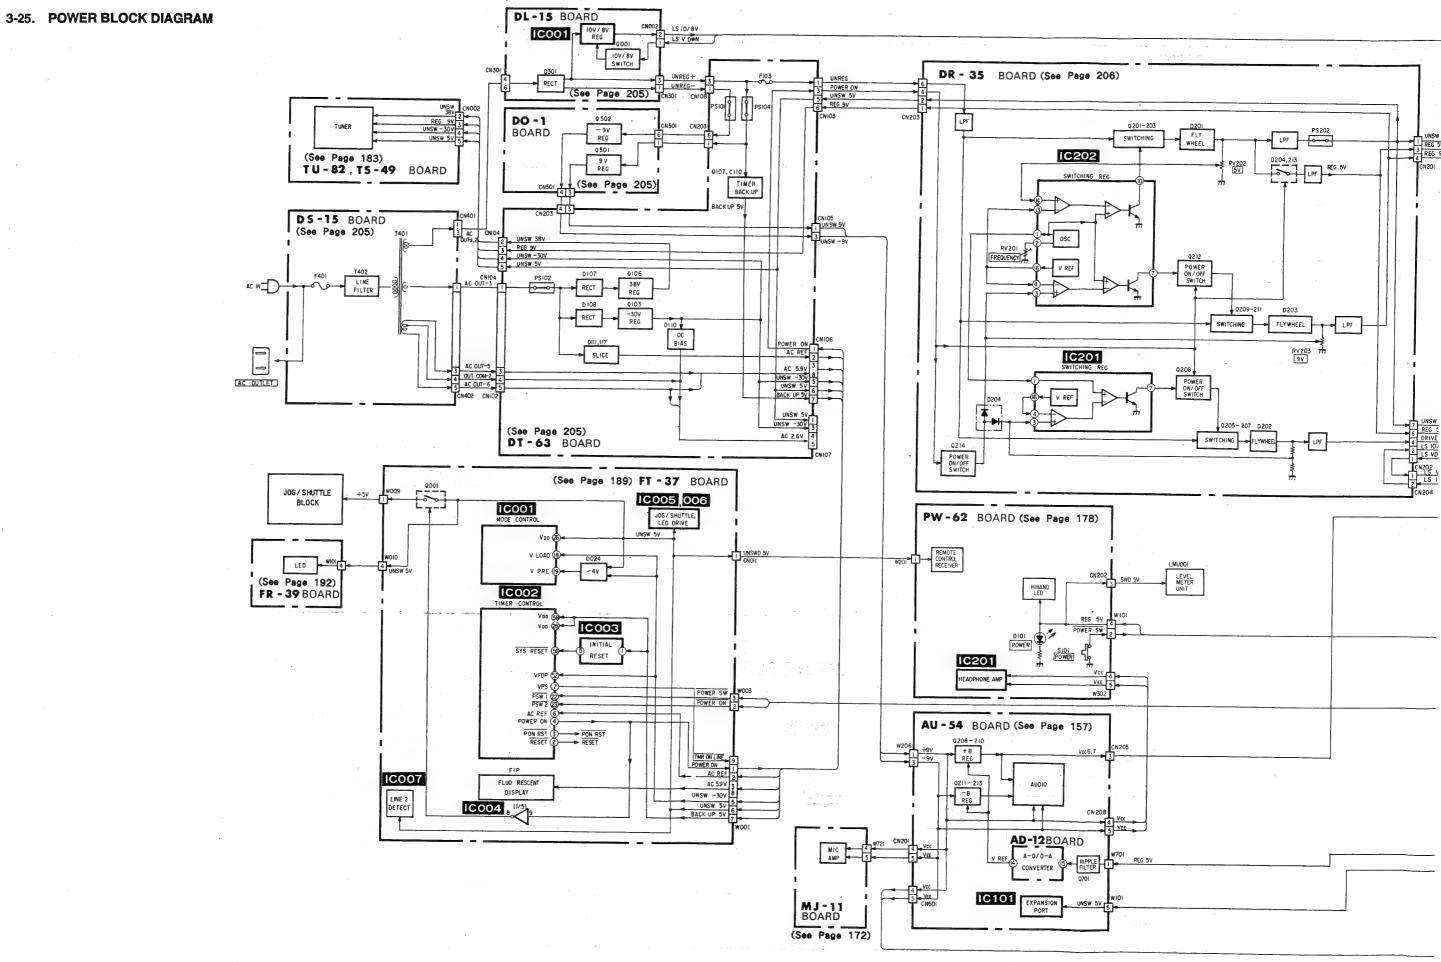

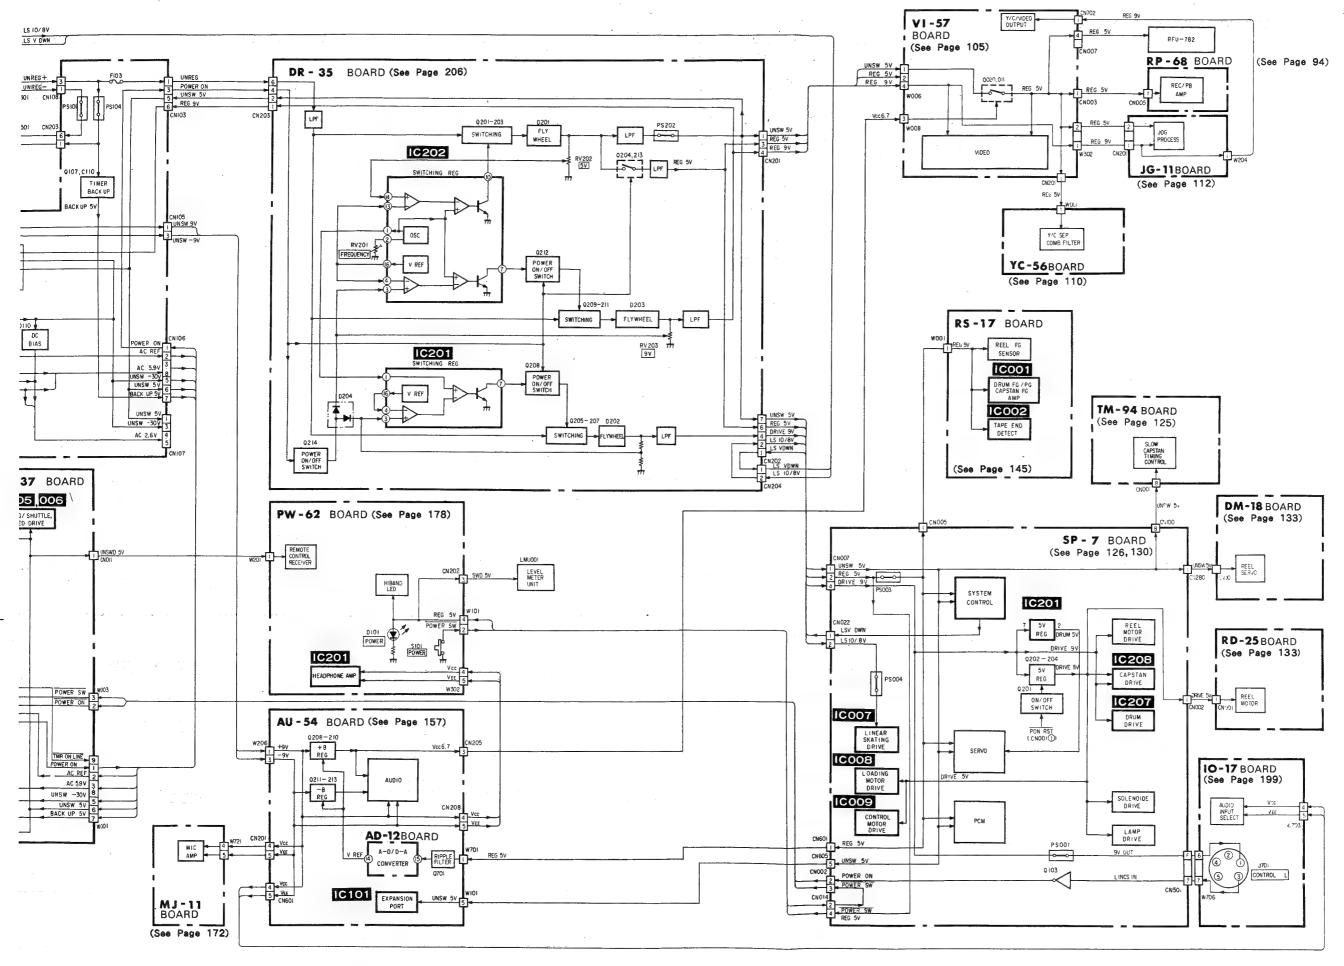


SECTION 4 PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS 9 7 8 10 11 5 4-1. FRAME SCHEMATIC DIAGRAM A DM-I8 CN017 2P I YEL SP 1CH (B) 1 UNSWD 5V **M** 1 OPEN SP 1'CH (X) CLOSE REG 5V SP 10H (Y) 3 REG GND CHI R MOTOR CN200 6P 1 WHT SP 2CH (8) DR: VE 9V DRIVE 5V DRIVE 5V DRIVE GND В SP 2CH (Y) GND -3G YIDEO HE AO SPYLP REEL FWD CN022 2P | WHT LP ICH (G) REEL FWD (M) LIP 1'CH (X) REEL RVS LSVDWN REEL AVS 2 LS10/8V LP 1CH (Y) SW FG LP 2CH (G) SW FG CHOIT SP 1 YEL CNOIS 2P | RED 2P L MOTOR 1 RP PB MODE LP 2CH (Y) LOAD LOAD 2 SP CH SHORT 3 LP CH SHORT (M) FER (G) UNLOAD UNLDAD FL R (X) MS-36 C 2P RECOR SW CN004 2P 1 BLK FER CY: DS 4 RP AF REC K ERASE HEAD 5 R AMP REG GND FE F (G) 16 T10/ T13 FE F (X) T10/ T13 CN215 6P | YEL FE F (Y) 3P RECOG 5W R CH006 3P 1 YEL 1 H CH G REG GND REG BND 001 REC PROOF REC + ROOF SP P REC ME/ MP SP V IIEC 3P PLUNGER CM018 3P 1 WHT RECOG GND LP P REC D DRIVE SV DRIVE SV LP V REC R5 - 48 CN607 3P | RED HOLD HOLD HEC PCM 4P DRUM DRIVE CM213 4P | BLK DMV DMV PB PCM M902 DRUM MOTOR DMC DMC CN010 2P | BLK DMW DMW 1 FE ON 2 ME/MP 6P L SW RED RS-50 CMO21 SP 1 RED GND VIDEO PE MODE LC LOADING SWITCH VIDEO MUTE LINE VIDEO LS-9 CHASSIS GND ME/ MP CHASSIS GND 6P M SW WHT CN020 6P | RED W606 2P S-BC SF/ LP CONT ML M CONT 7 DOD CONT MR CONT MR MB WB W721 SP S-BC PB Y MA MS-4 REF V GND BND **¥**S-37 DS CLK GND CN212 11P 1 WHT 11P CAP DRIVE GND CMU CMU REC ATE G MR VCC CMV CMV VEE CAPSTAN CFG A CMW LMW CN2:0.9P : BLK DRIVE GND DRIVE GND VHE (+) CFG B VHE (+) 1 HHDL M VHE (--) VHE (-) UHE (+) UHE (+) DFG UHE (-) UHE (-) V: SWP 9 WHE (+) WHE (+) FH GNE : DFP COM WHE (+) 5 JGG VD 7 AF REC AREA MECHANISM BLOCK REG GND HE VCC HE VCC VCC 8 HD INSERT 9 C MUTE CN606 2P | WHT 1 M CONT L 2 N.C. I REG 5V DF0 1 REG SV 1 Drg CN601 7P I WHT DFP COM REG GND REG GND TFG 2 REG 5V REG GND [FG 2 1 REG 5V TFG 1 CFG 1 3 MCLK MCLK CN217 3P | WHT MR VCC DPG 1 WC×. WCK CFG 1 CFG A DFG 1 BCK BCK DPG 1 MR GND TOP ADDA ADDA (DF0 I 10 END CFG B 7 MODE MODE AS-77 CNOOR 2P | RED CNOO4 2P L BLK CN605 8P + WHT END 1 TP LD 2 REG GA SEG EXT REG GND 1 SEG EXT REG GNL BL WRITE BL WRITE QNO12 7P CHECK-POINT WH 3 UNSWD 5V 4 M SYNC DET UNSWD 5V PCM REC ASTROBE CN006 2P | RED 5 ASTROBE 6 AS DATA 7 ASCK 8 D RF SWD SEL 1 REG GND END ATF LOCK RS-17 P SEL 1 DRF SWD E CN001 7P | BLK CM6G3 SP CHECK-POINT WHT 1 TP LD 2 REG GND X SCM IDRF SWP GND LD-1 PCM AREA MECH CS LR1 LRO 7 PEM CS CN2072P 1 BLK CNO16 2P + BLK I C DOWN L REG GND 1 LS TOP 2 1 SREF 2 LSCS TS-78 CN208 SP (RED SOOI MECHA DECK CASSETTE DOWN L SWITCH TE-6 3 MESET HLL CNOO2 SP | WHT GMD CW015 3P 1 BLK 1 SIRCS ENBL LAMP (+) 1 LAMP (-) 2 1 LAMP (+) POWER ON VEE ! POWER SW 2 LAMP (-) C DOWN R 3 M PAUSE ON/OFF PL001(L) 5 BL WRITE TE-5 PLOGE (R1) FH MSK T SIRCS IN 0N001 9P L WHT CAP ON OUT 2 SIRCS OUT 1 FH MGK CAP ON IN PAUSE MASTER OUT 2 CAP ON OUT CAP F/R OUT 3: CAP ON IN 4 PAUSE SLAVE OUT LL1 Ν 6 9V OUT CAP FAR IN LLO LINCS IN 5 CAPF/ROUT REEL DIR 6 CAPF/R IIN UNSWD 5V 8 GND LR1 LRIG 7 REEL DIR 8 UNSWD 5V CH003 4P | BLK 1 GND TRACON (+) TM-94 2 POWER SW POWER SW TRACON (-) BND 3 REMOTE REMOTE 0 4 REG SV VTR 1/2 4


FRAME

-90 -

FRAME


-89 -

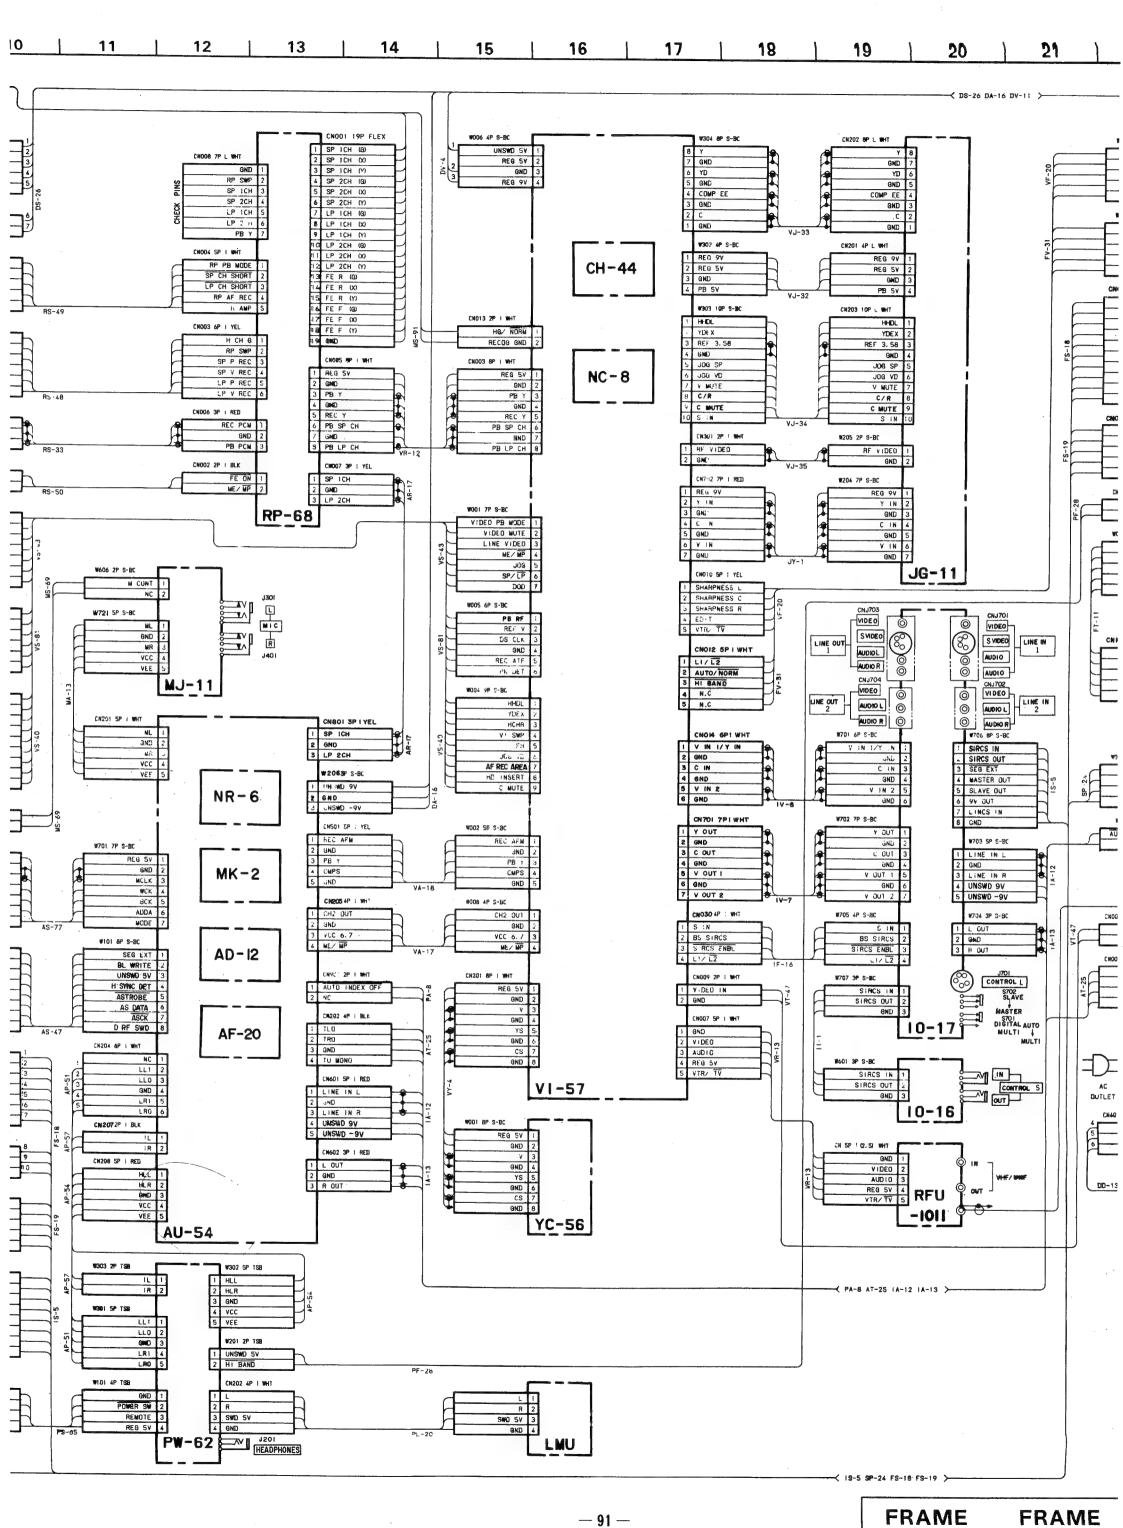


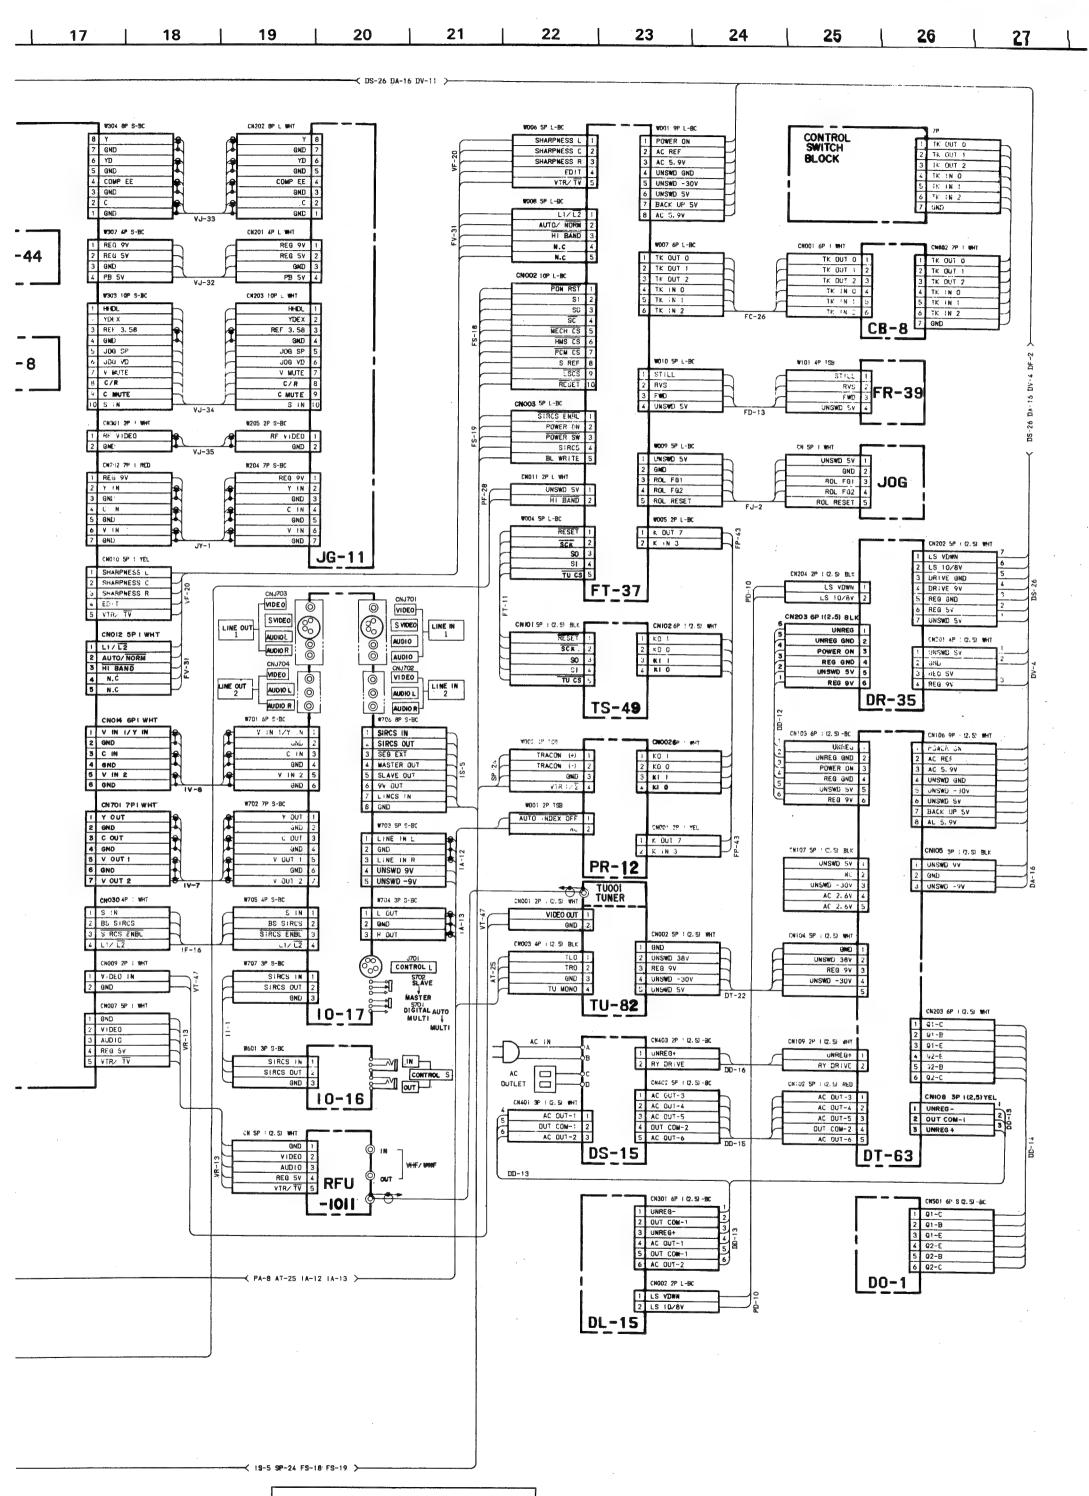


FRAME FRAME

1 —

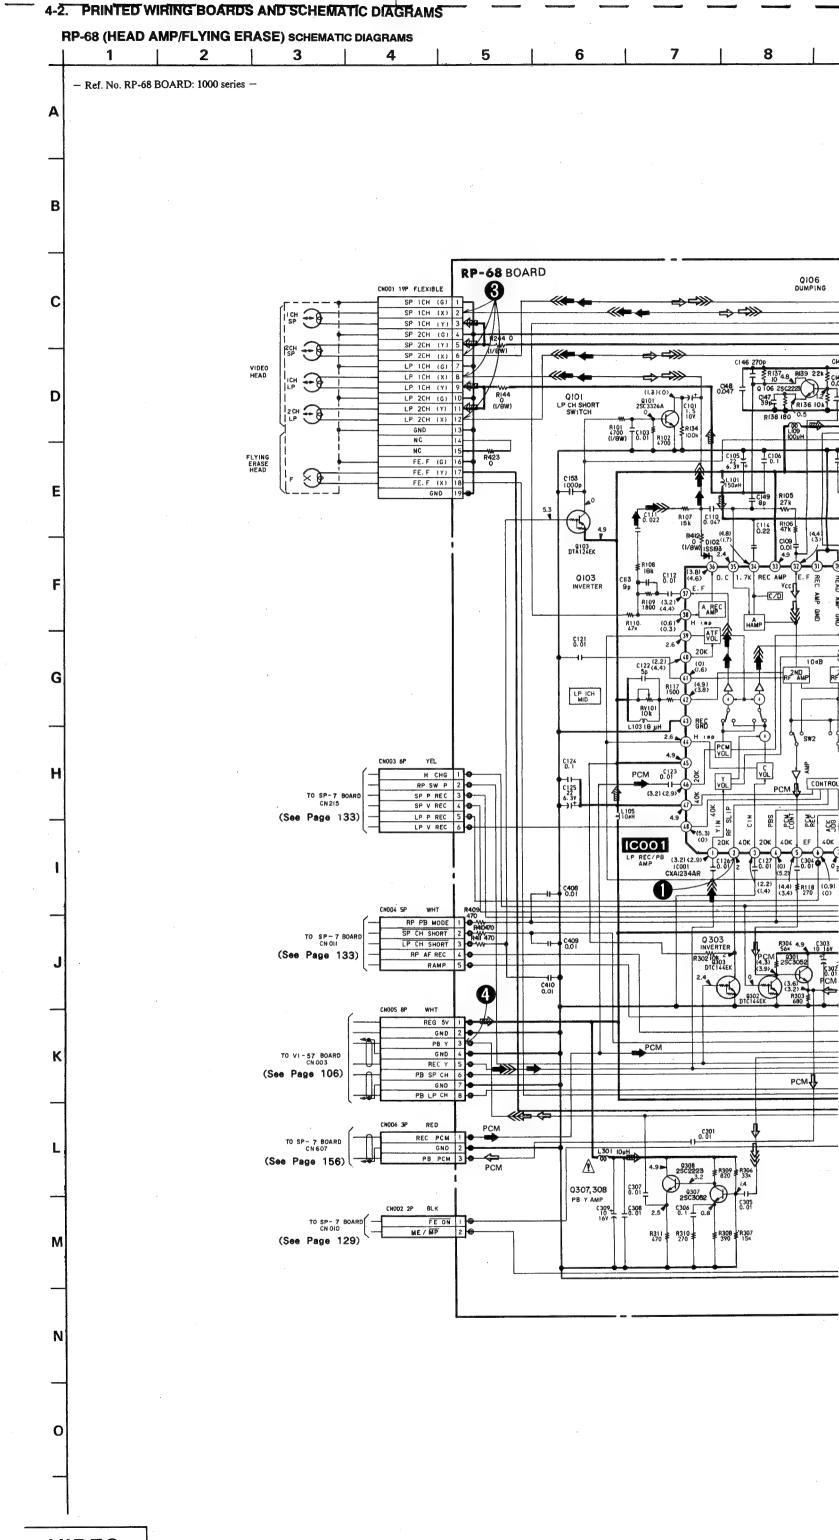


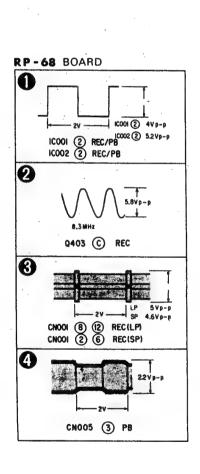

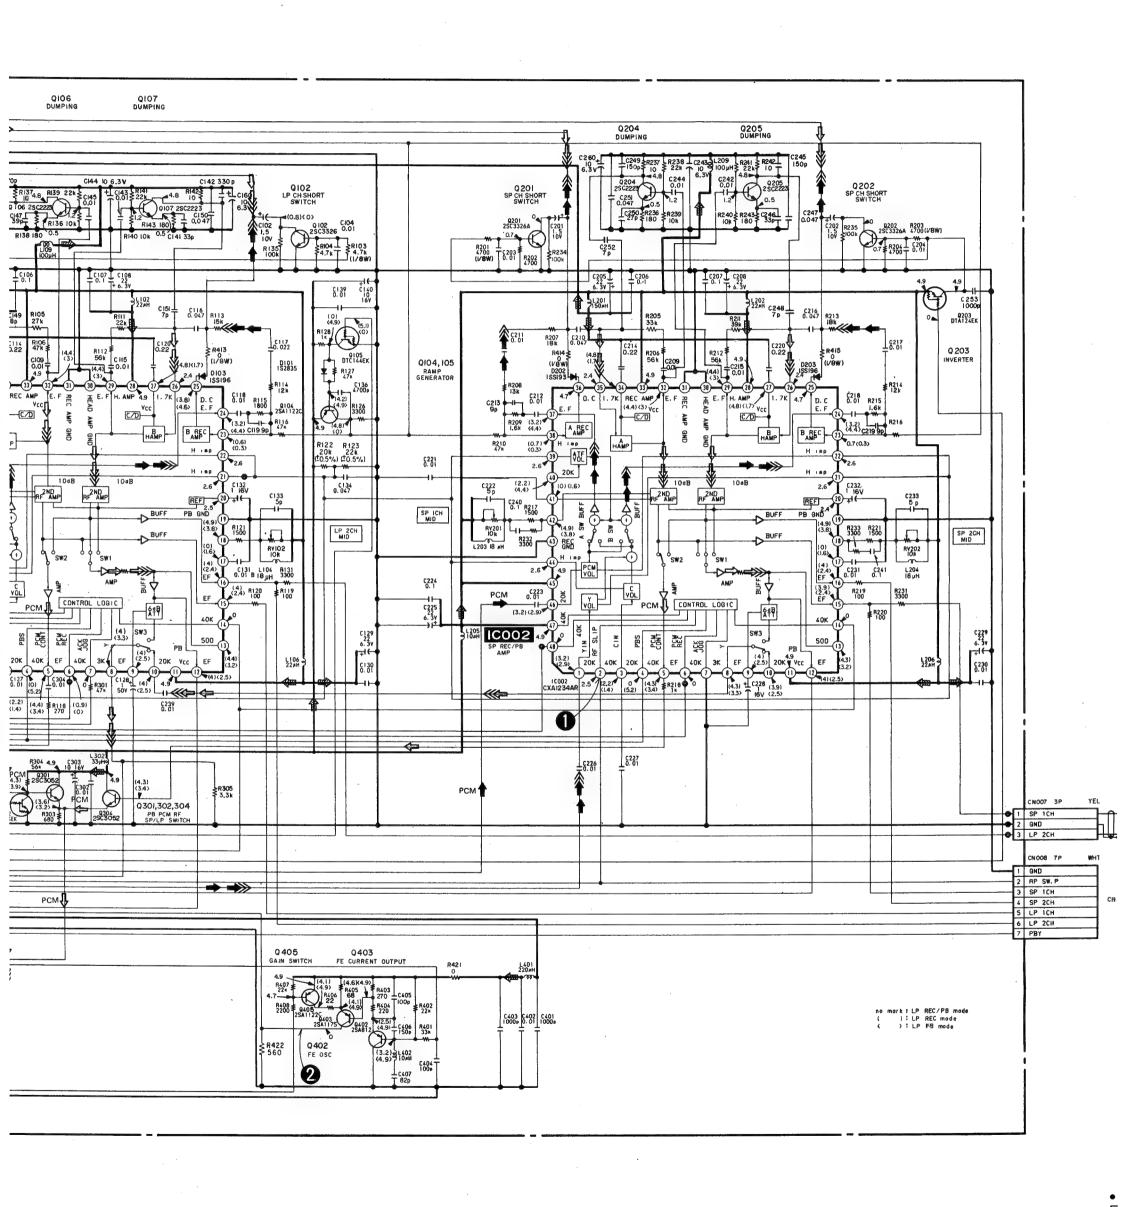

VIDEO VIDEO


— 95 —

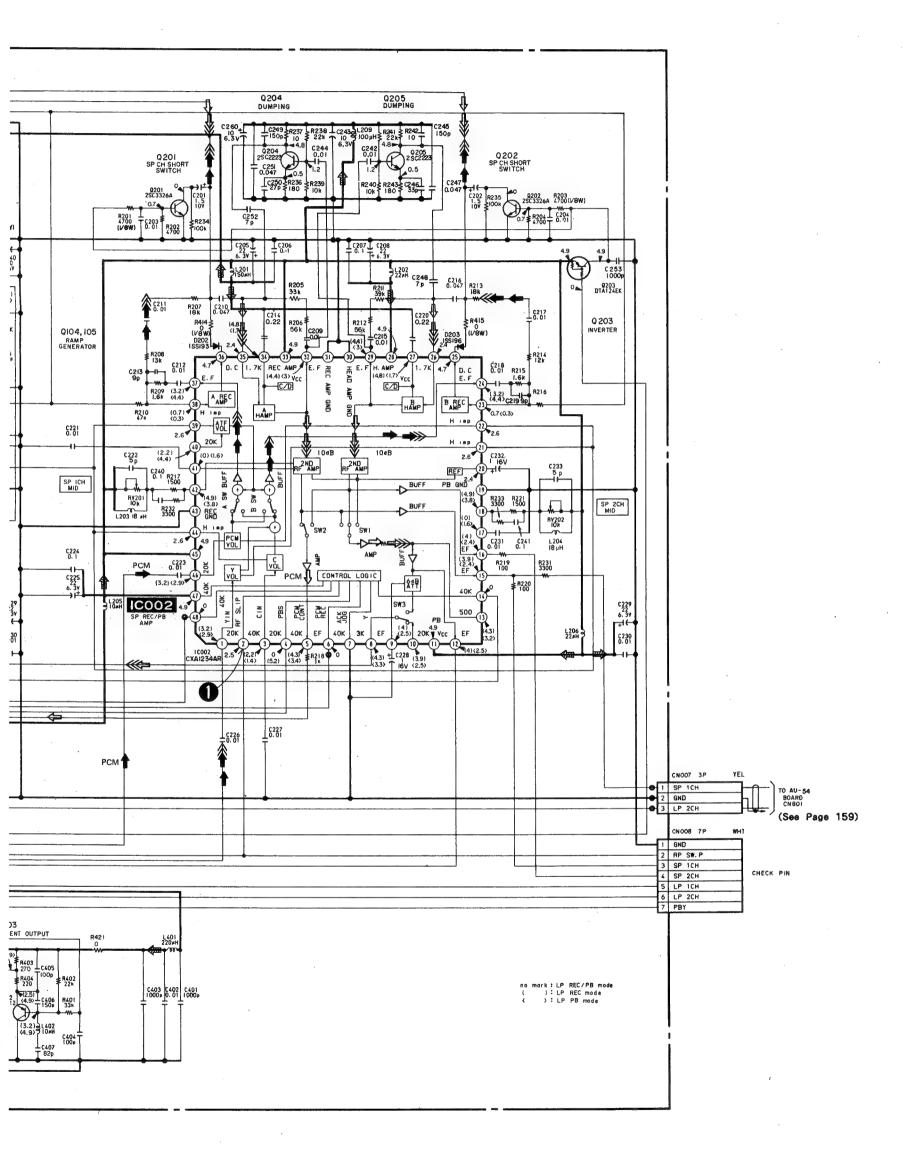


• Signal path

	V	AUDIO Signal			
	CHROMA	Υ	Y/CHROMA	AUDIO Signal	
REC			→>>>	→	
PB			➾	⇒	

VIDEO

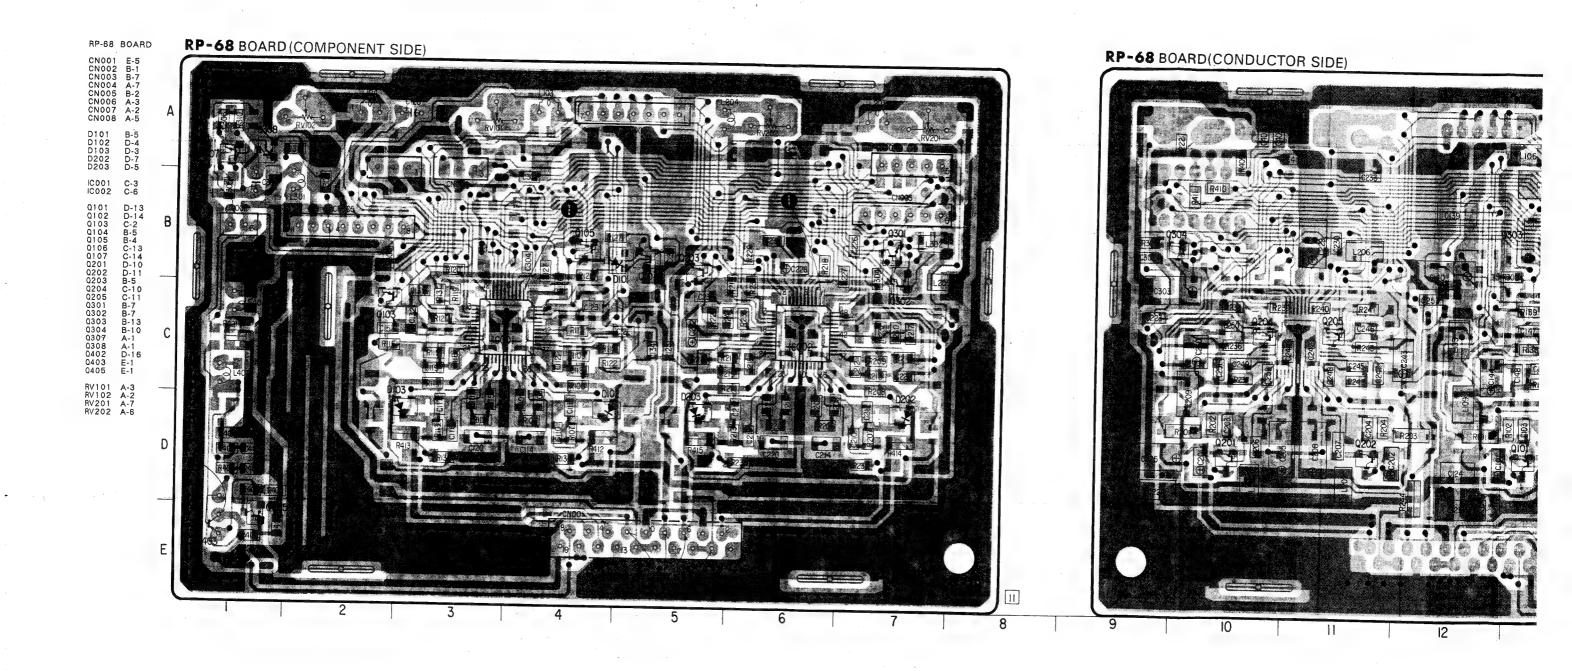

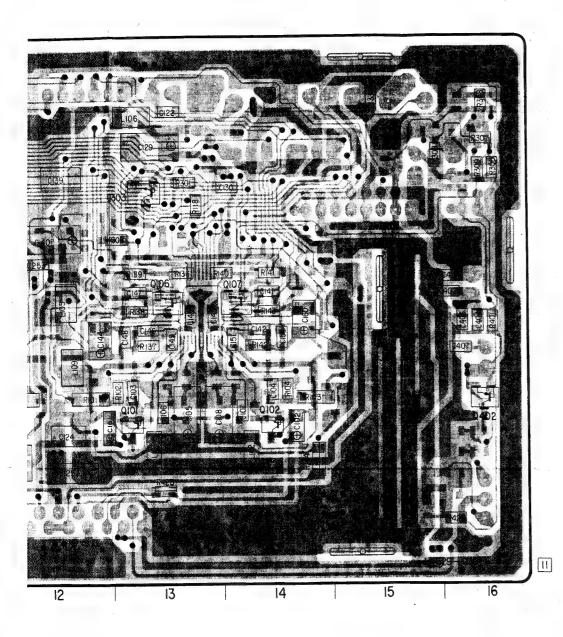

THIS NOTE IS COMMON FOR PRINTED WIRING **BOARDS AND SCHEMATIC DIAGRAMS.**

(in addition to this , the necessary note is printed in each block.)

For printed wiring boards.

• O- : indicated a lead wire mounted on the component side.

• • : indicated a lead wire mounted on the conductor side.

: Through hole.

• Pattern from the side which enables seeing.

• Pattern of the rear side.

· Circled numbers refer to waveforms.

Caution:

Pattern face side:

Parts on the pattern face side seen from

the pattern face are indicated. (Conductor Side)

Parts face side:

Parts on the parts face side seen from the

parts face are indicated. (Component side)

· For schematic diagrams.

· Caution when replacing chip parts. New parts must be attached after removal of chip.

Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.

All resistors are in ohms, 1/4W unless otherwise noted. Chip resistor are 1/10W unless otherwise noted.

 $k\Omega$: 1000 Ω , $M\Omega$: 1000 $k\Omega$.

 All capacitors are in μF unless otherwise noted. pF: μμF. 50V or less are not indicated except for electrolytics and

 All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

: nonflammable resistor.

fusible resistor.

: panel designation.

△ : internal component.

• adjustment for repeair.

• --- ; B+ Line.

• --- : B- Line.

• ZZZ : IN/OUT direction of (+, -) B LINE.

· Circled numbers refer to waveforms.

Voltages are dc between ground and measurement points.

• Readings are taken with a color-bar signal input.

• Readings are taken with a digital multimeter (DC10M Ω).

• Voltages are taken with a VOM (Input impedance $10M\Omega$).

· Voltage variations may be noted due to normal production tolerances.

Note:

The components identified by mark \triangle or dotted line with mark $ext{$\Lambda$}$ are critical for safty. Replace only with part number specified.


Les composants identifiés par une marque extstyle extpour la sécurité.


Ne les remplacer que par une piéce portant le numéro spéci-


When indicating parts by reference number, please include the board name.


EV-S900


VI-57 (VIDEO PROCESS) PRINTED WIRING BOARDS

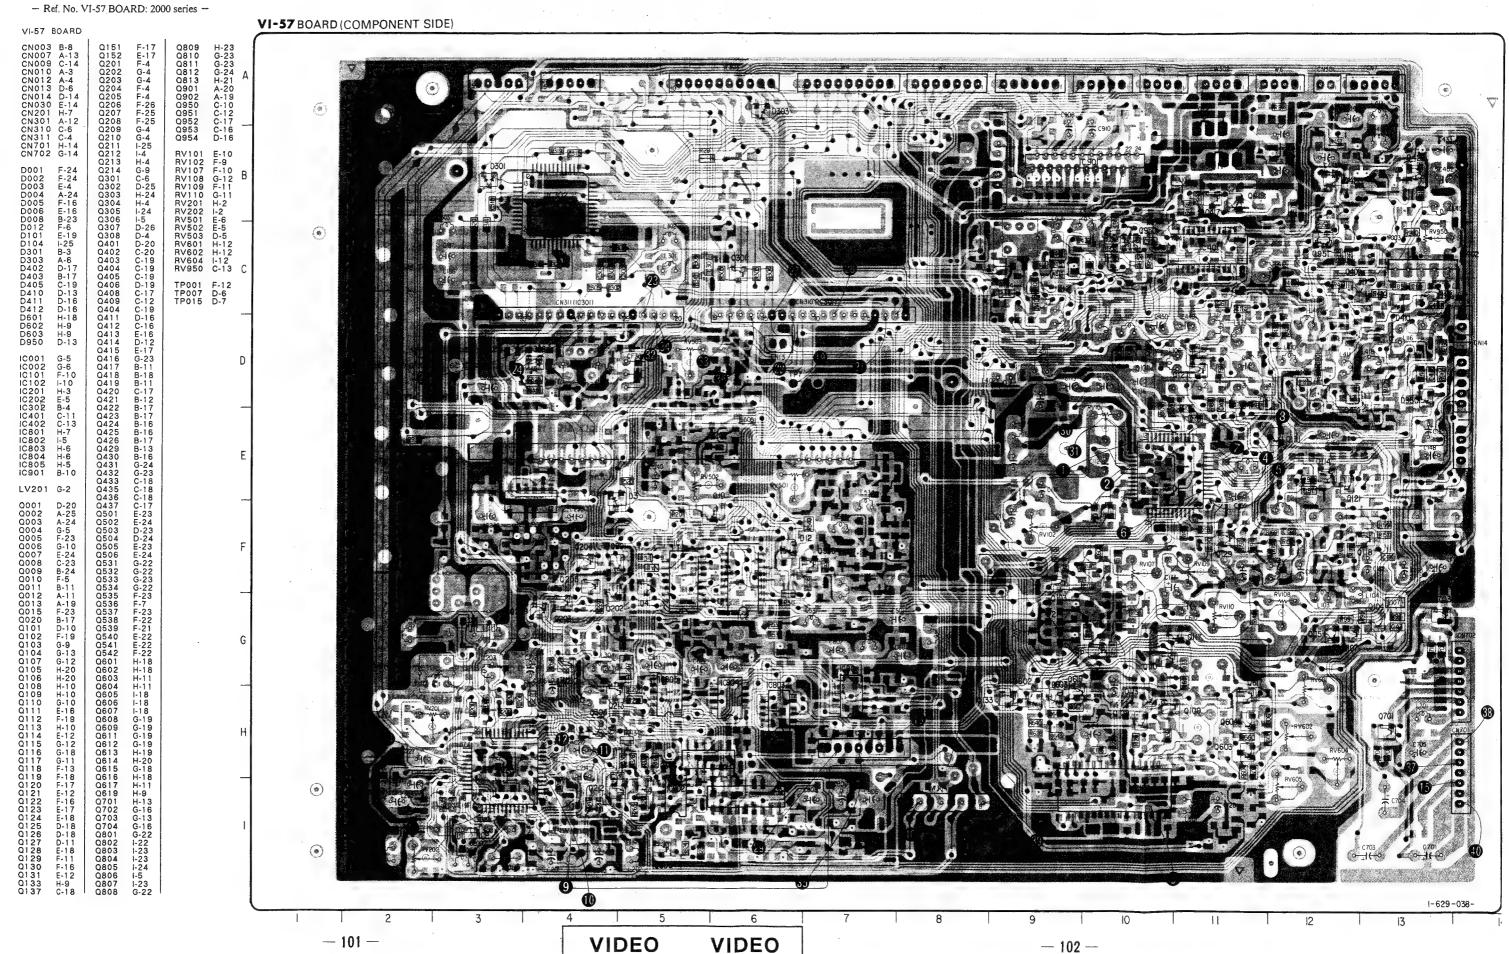


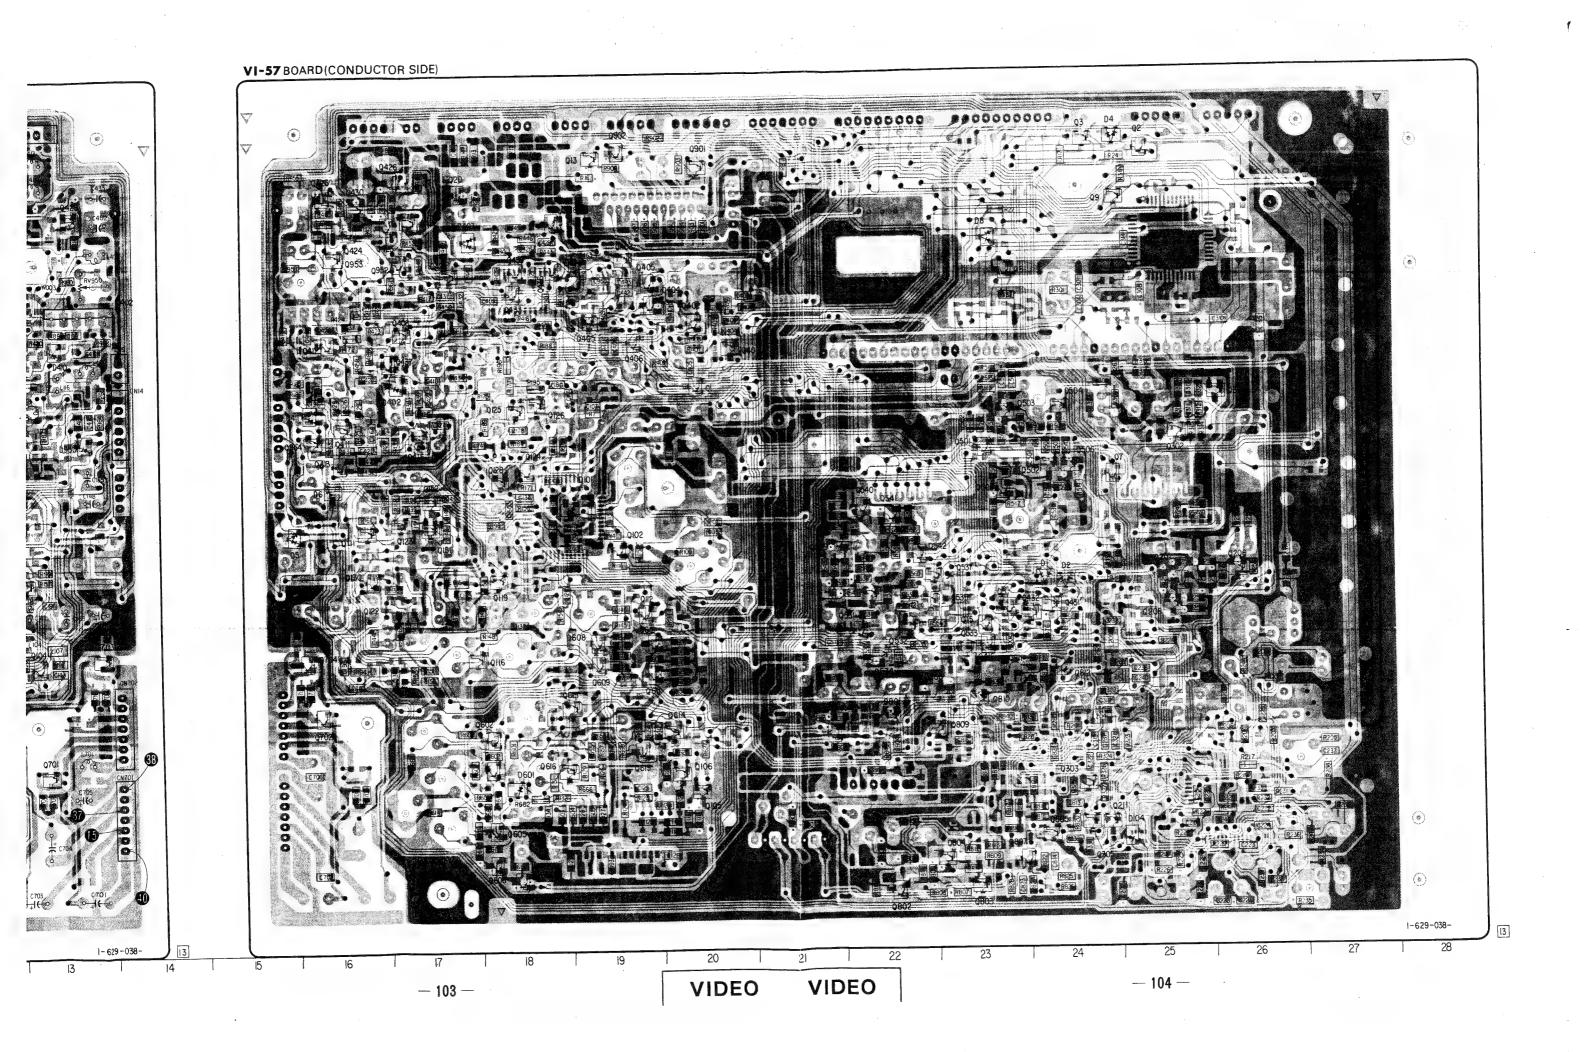


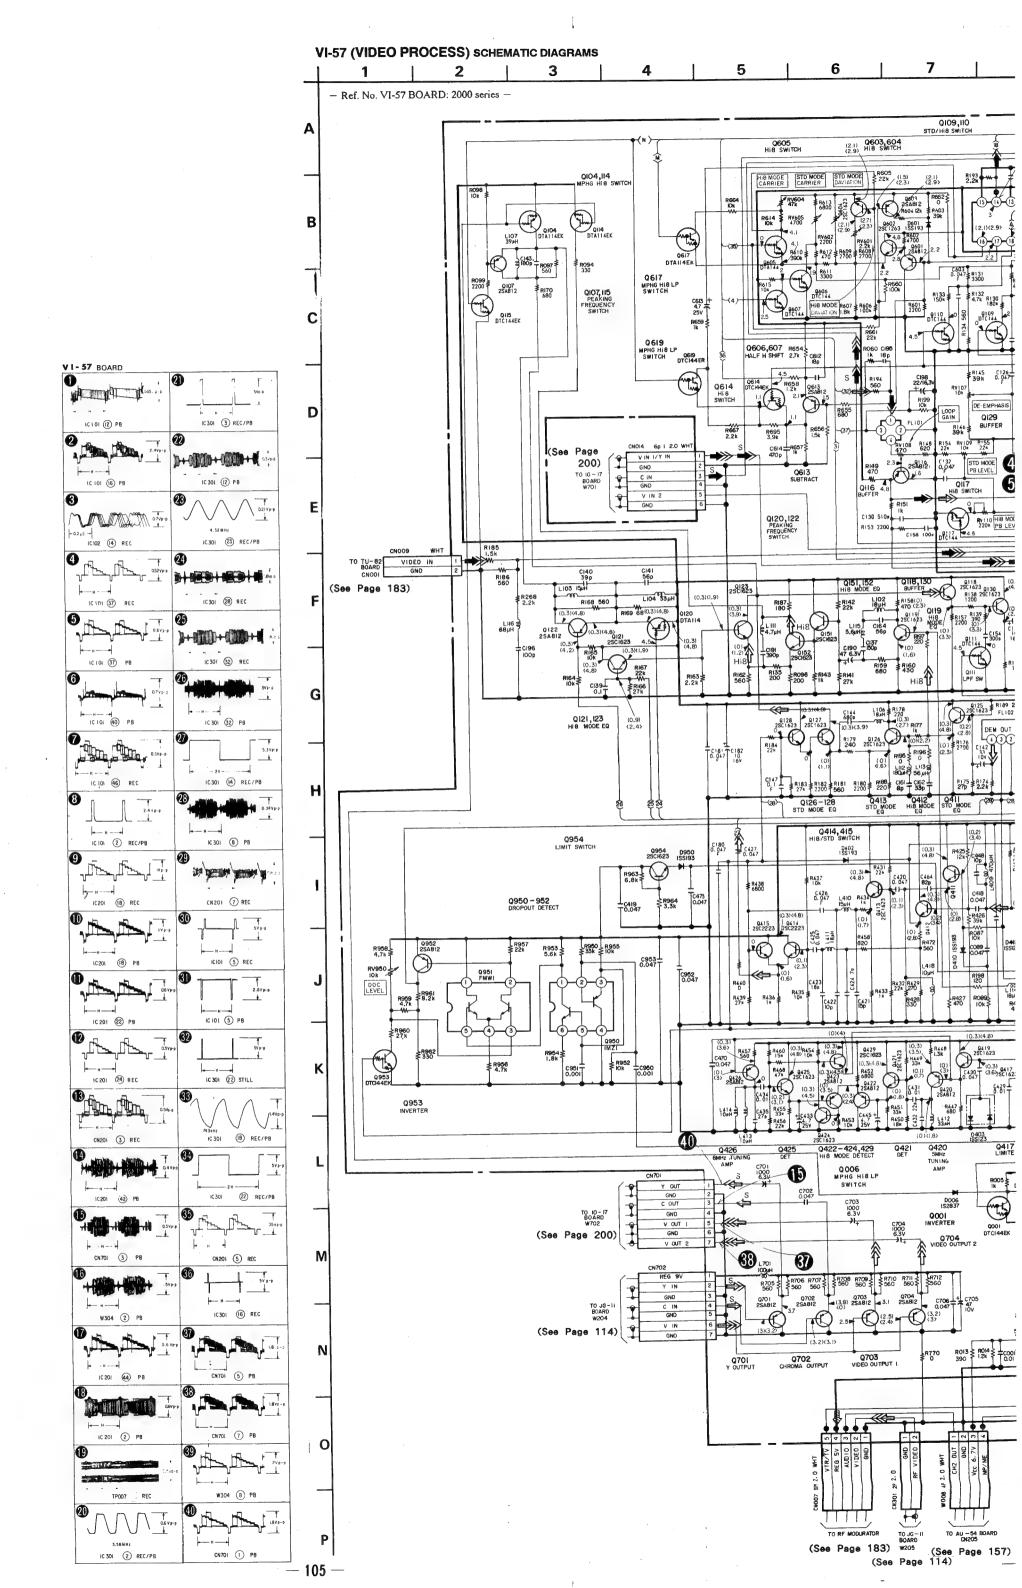


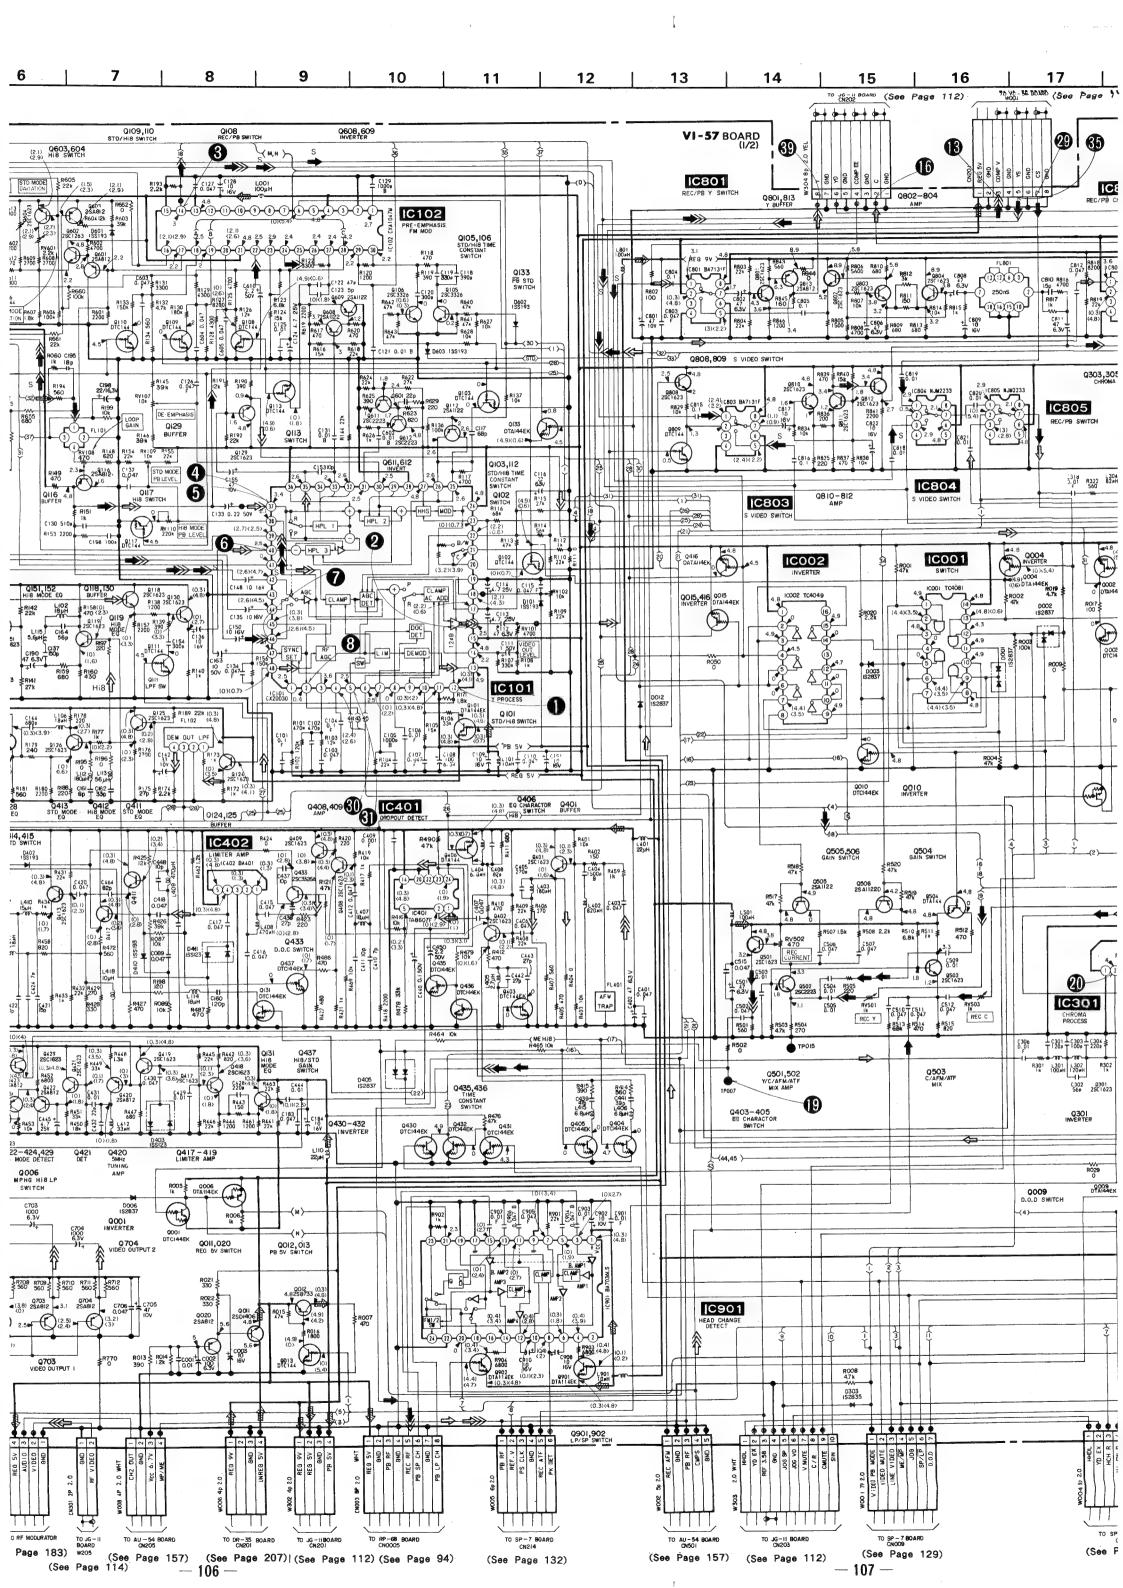


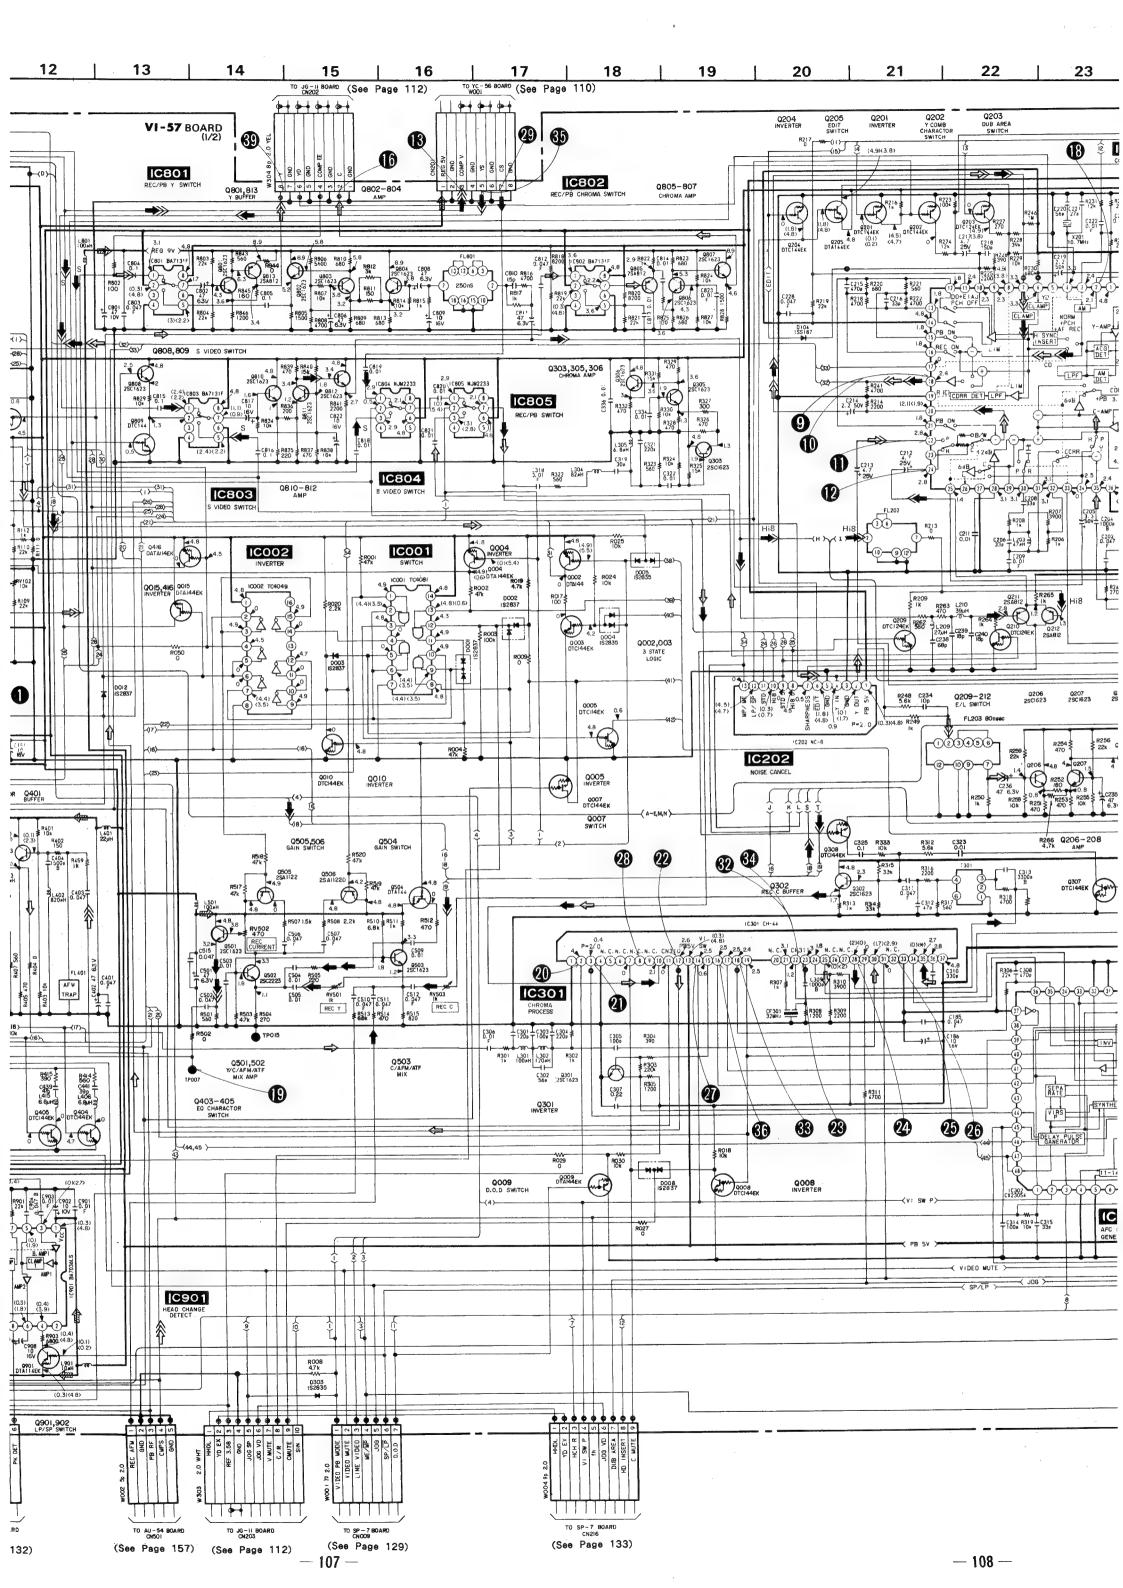

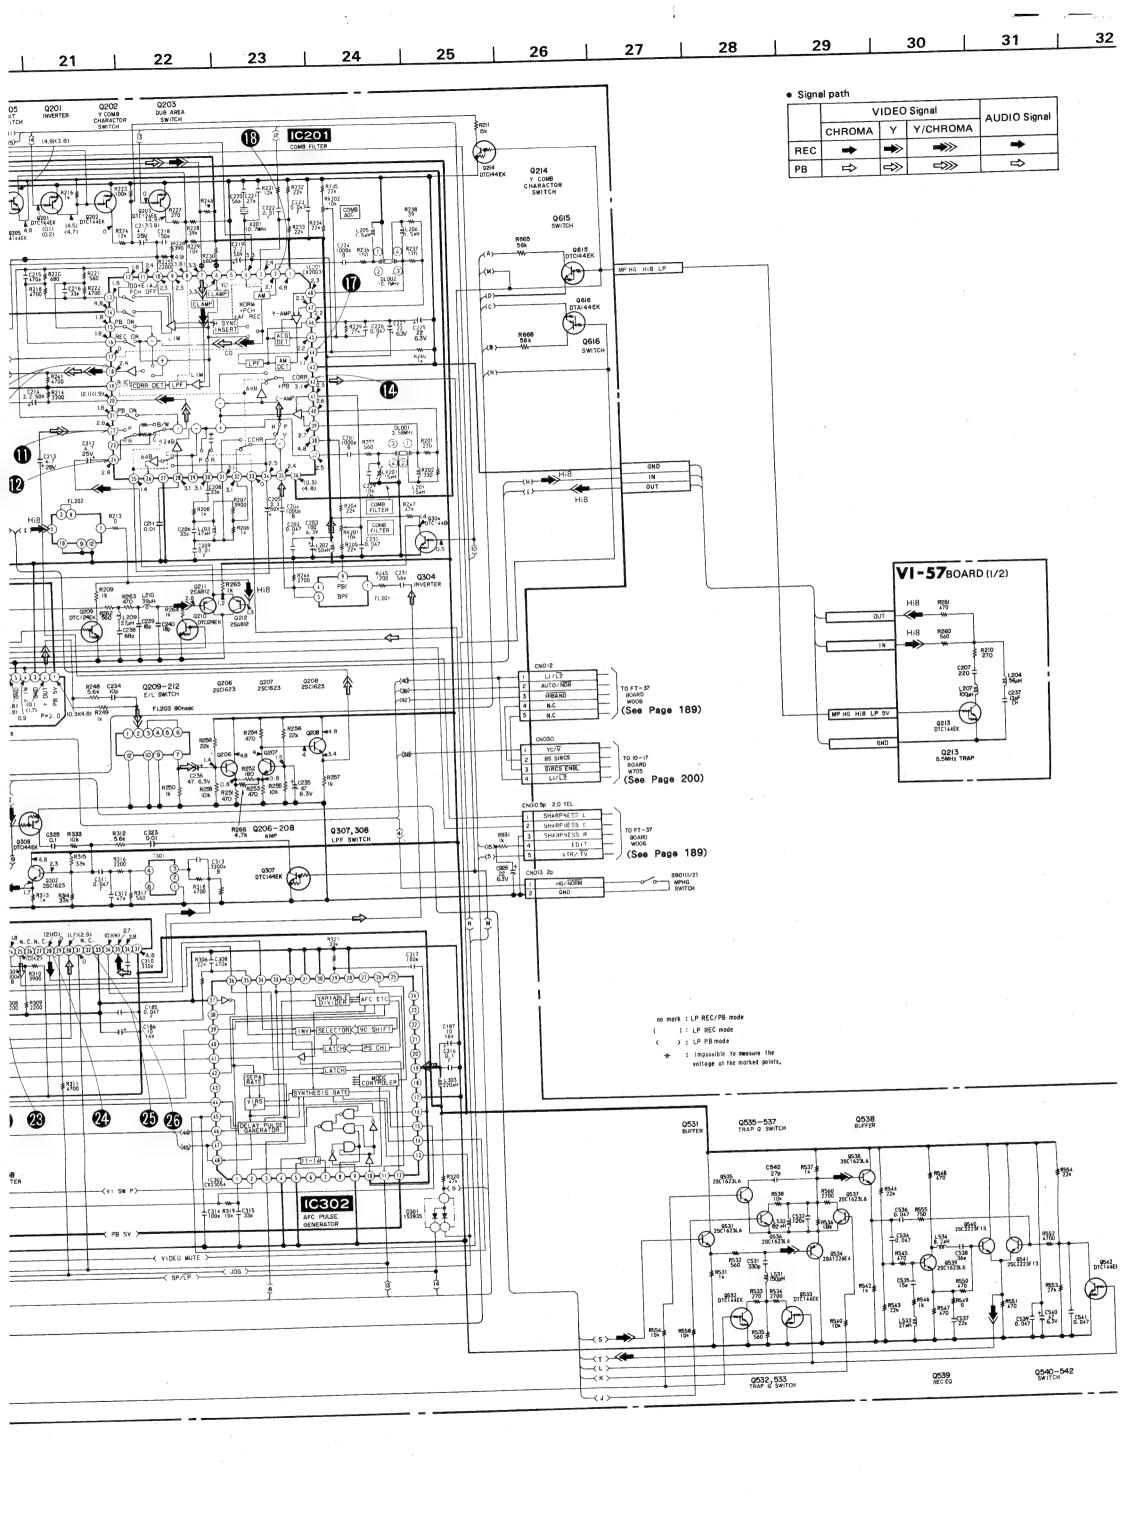


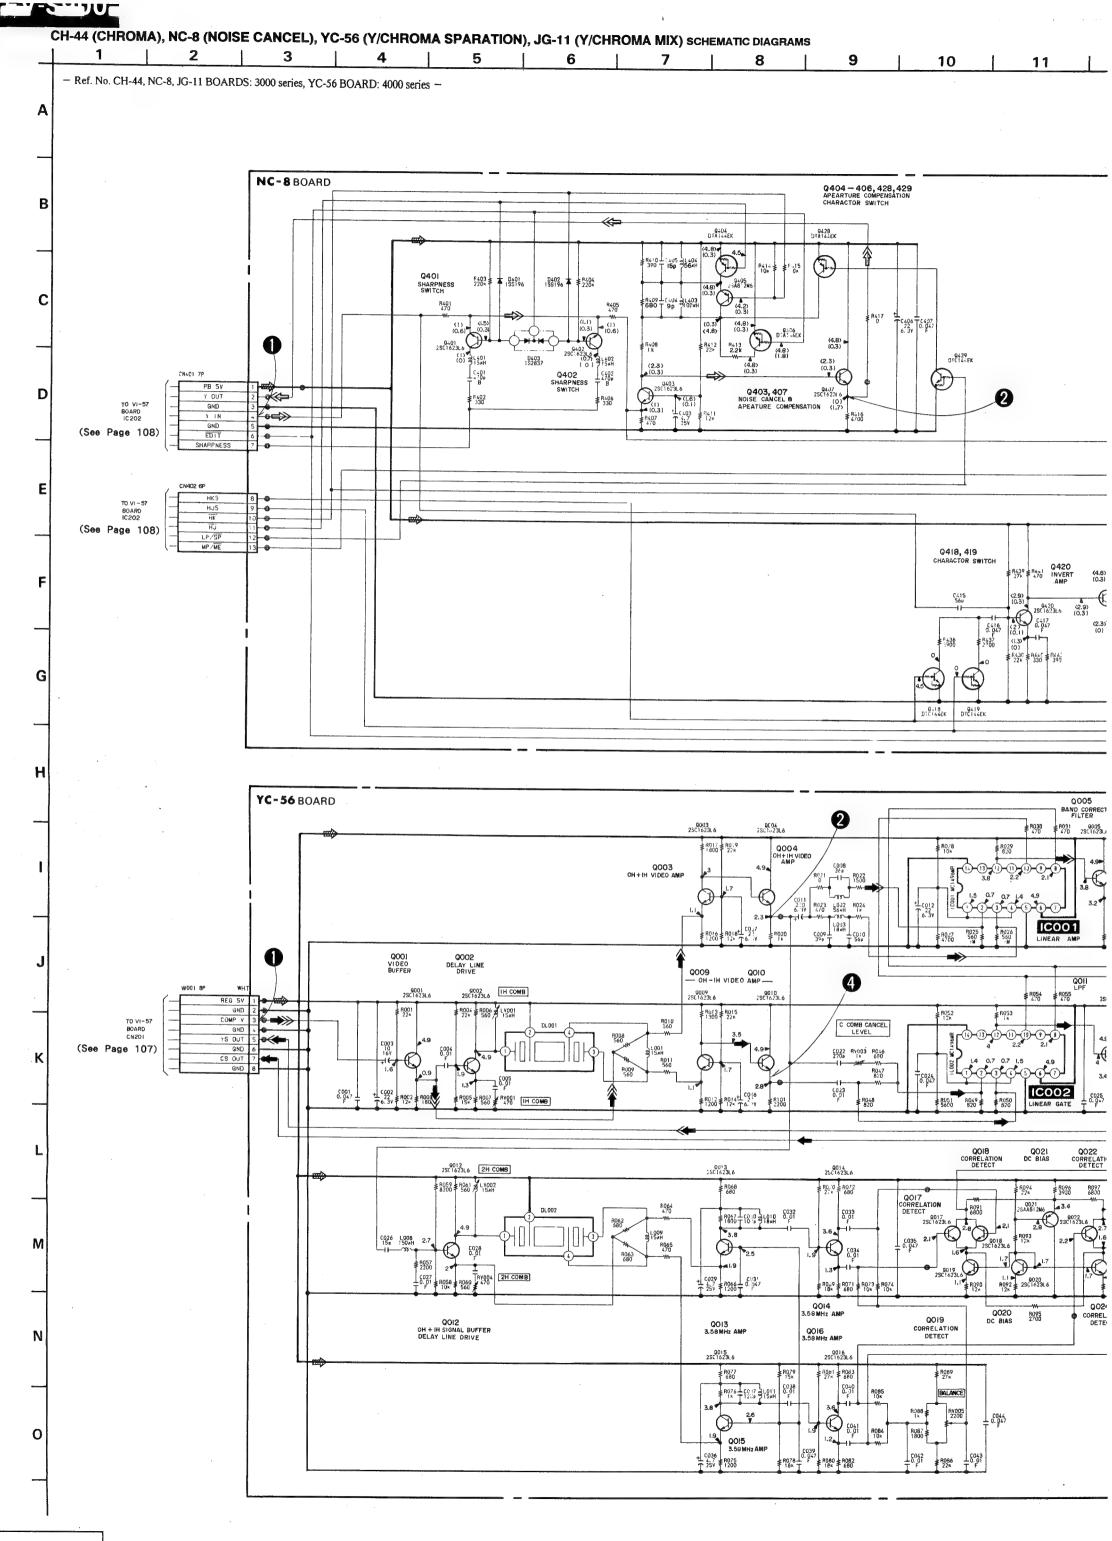

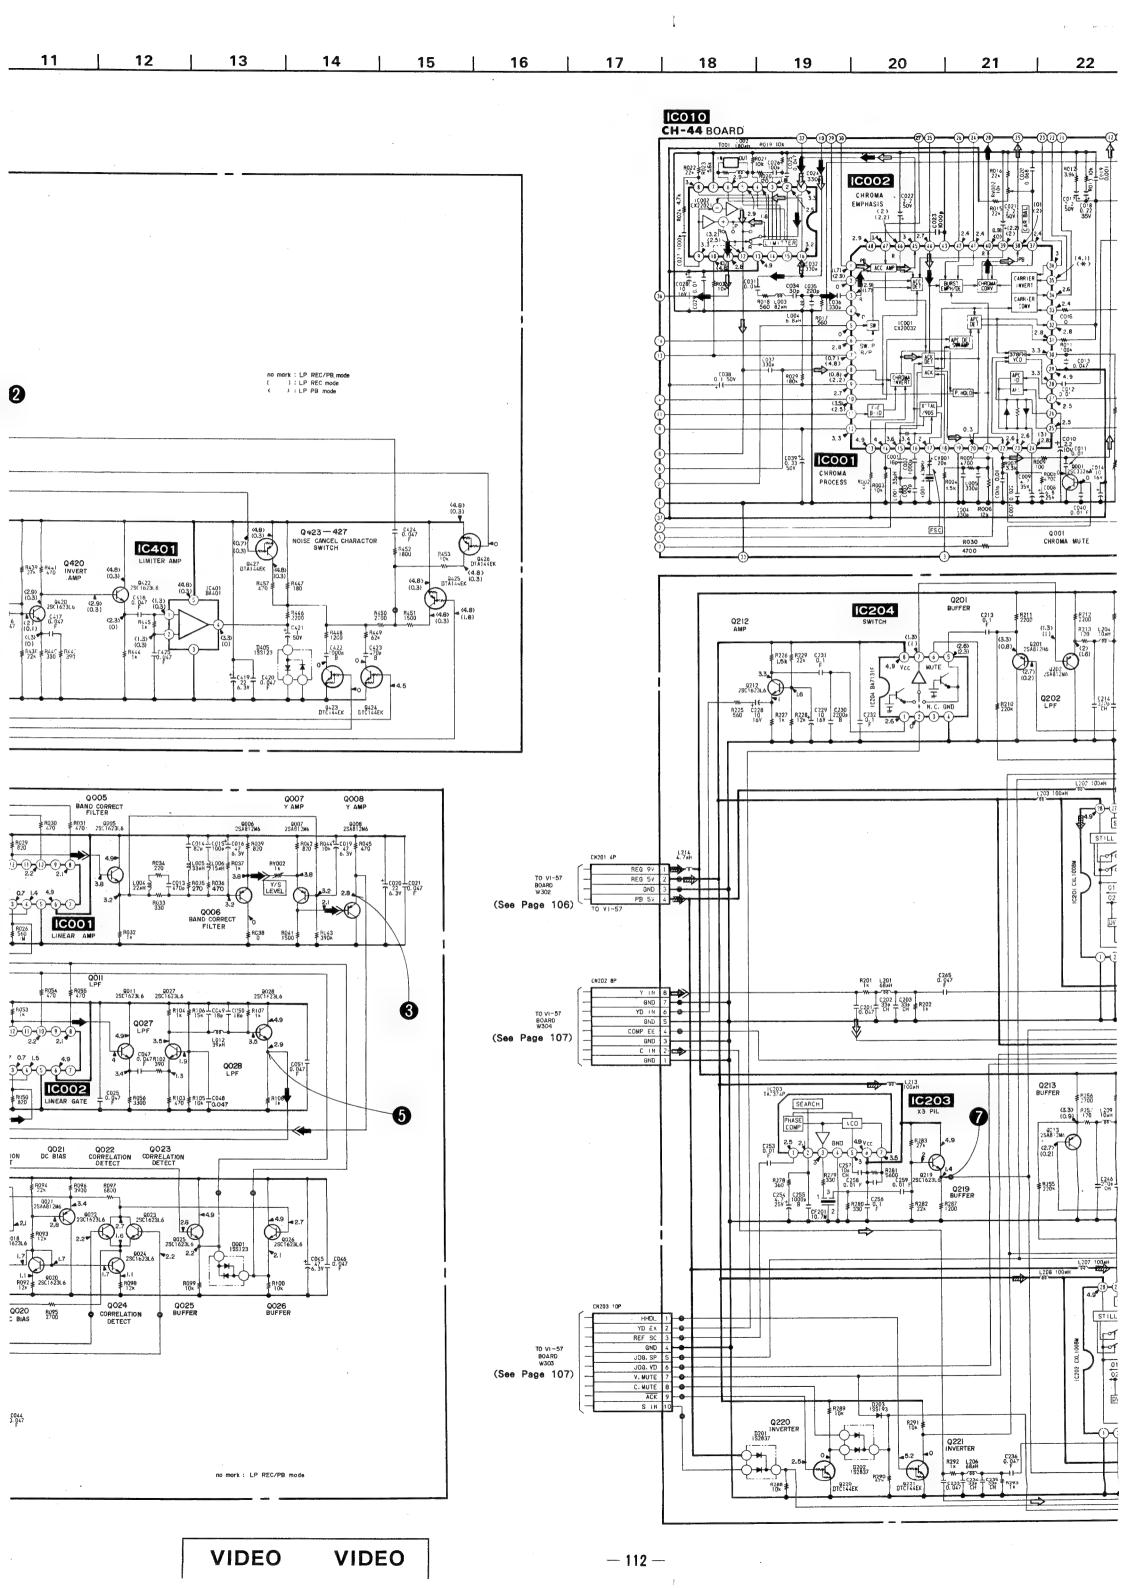

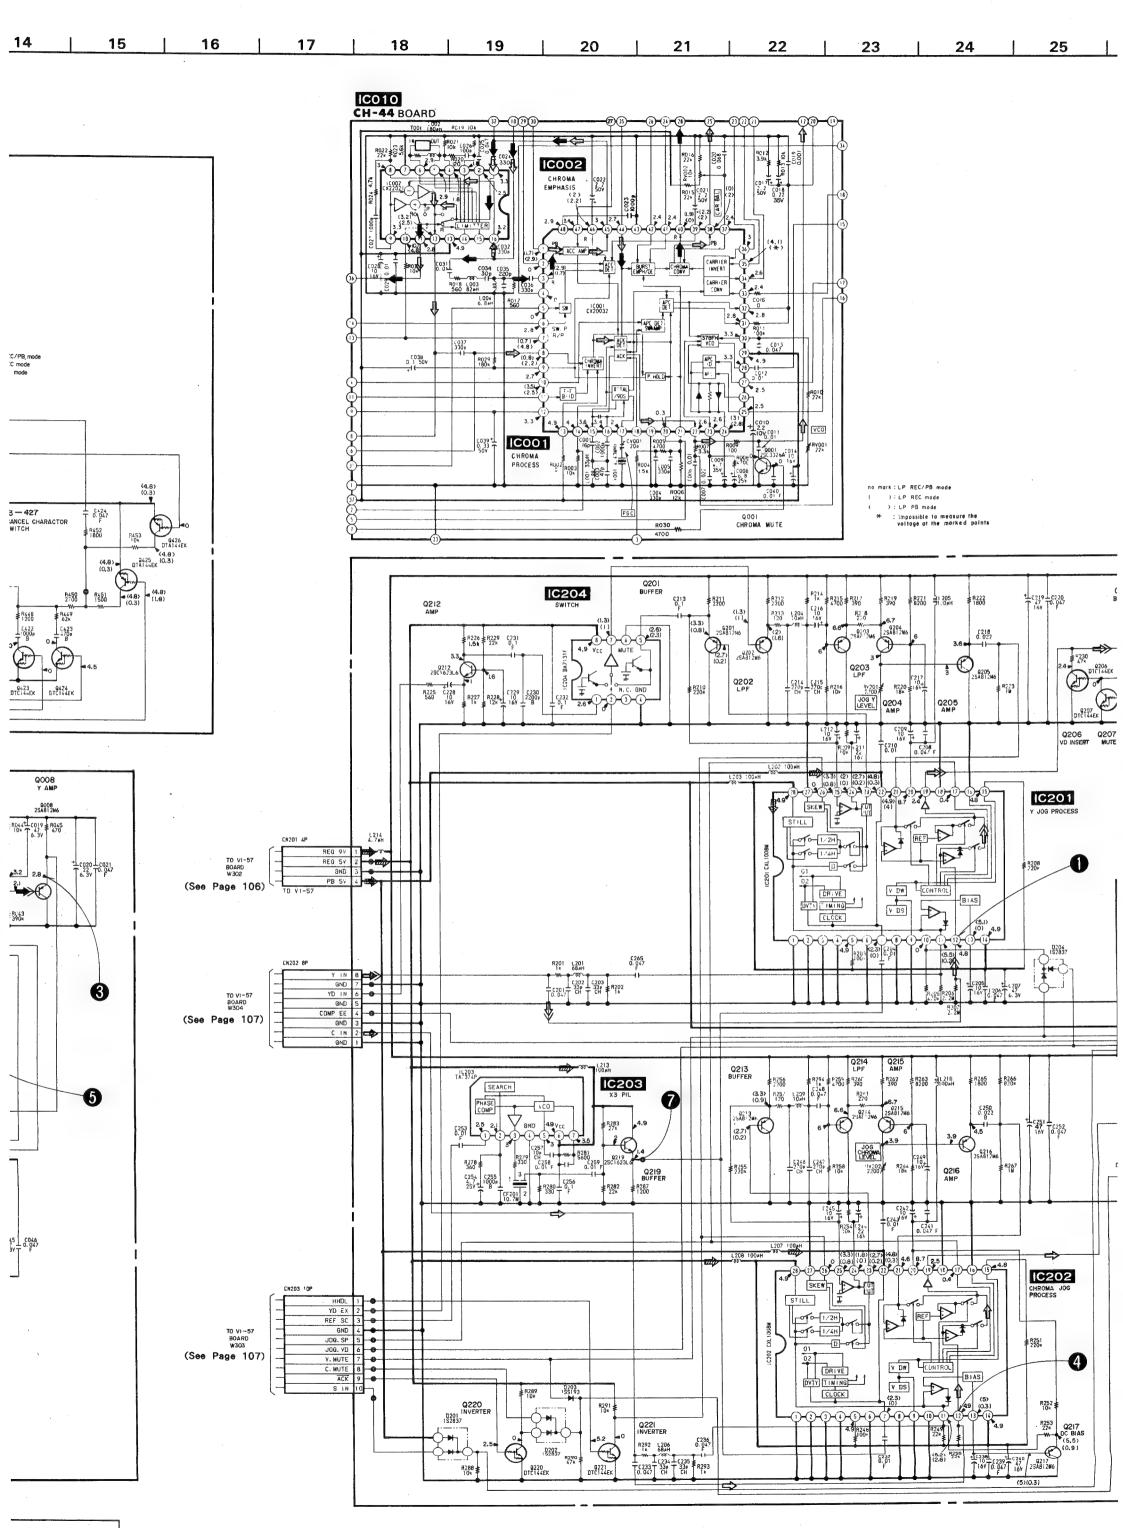



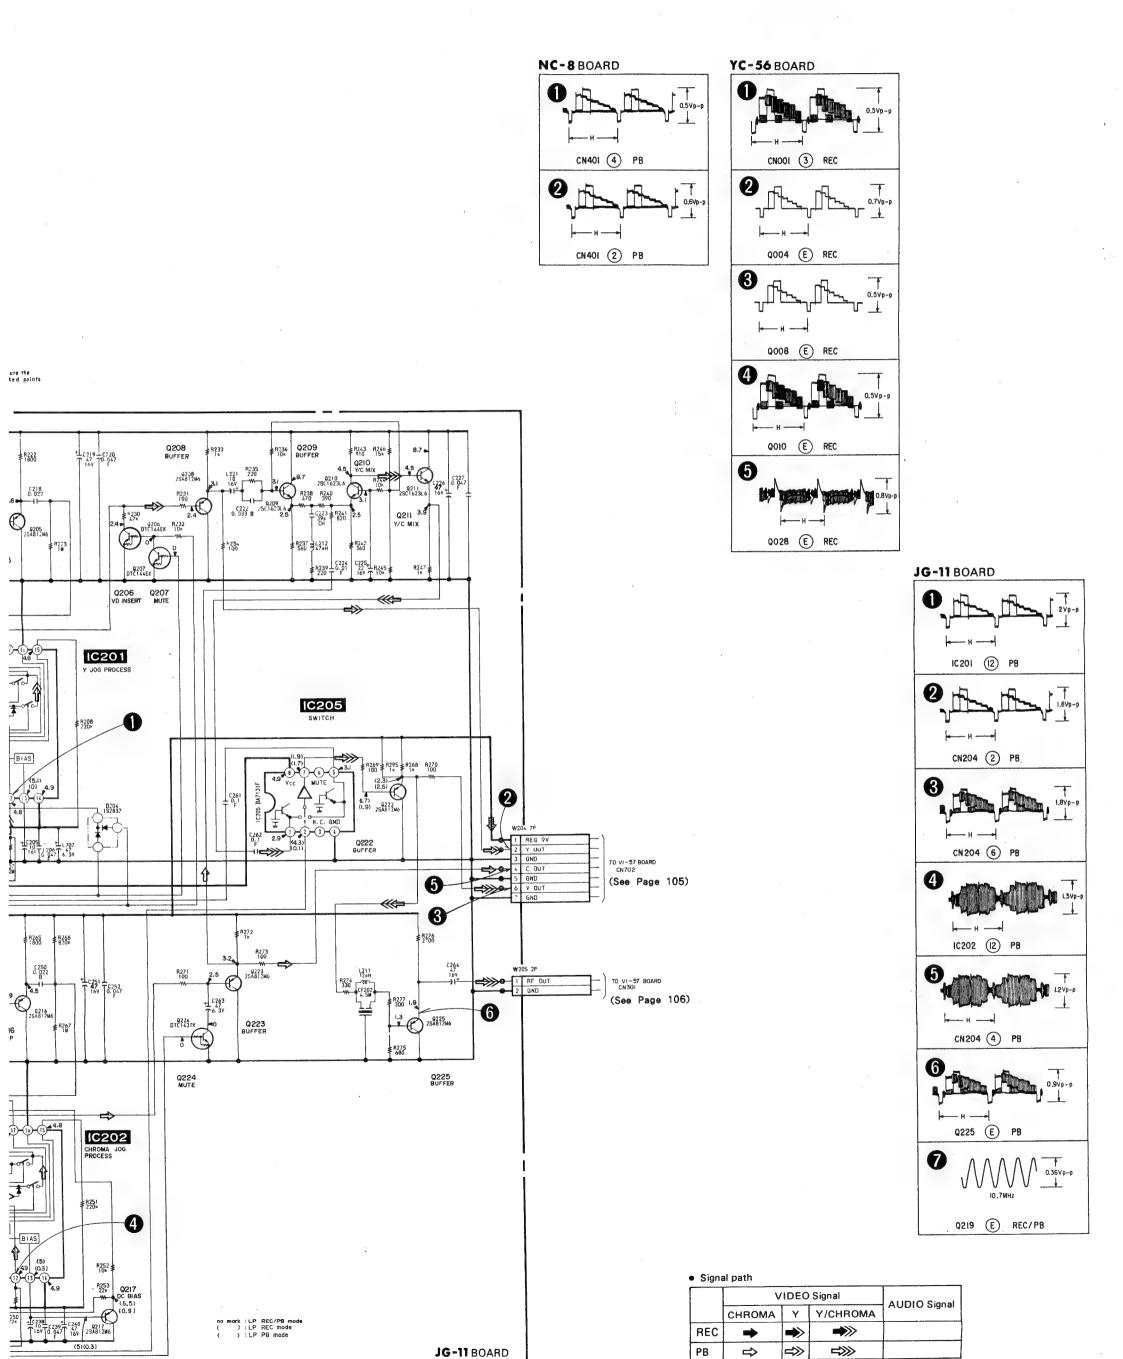

VIDEO

— 113 —

VIDEO


— 114 —

CH-44 (CHROMA), NC-8 (NOISE CANCEL), YC-56 (Y/CHROMA SPARATION), JG-11 (Y/CHROMA MIX) PRINTED WIRING BOARDS


— Ref. No. CH-44, NC-8, JG-11 BOARDS: 3000 series, YC-56 BOARD: 4000 series —



CH-44 BOARD (COMPONENT SIDE)

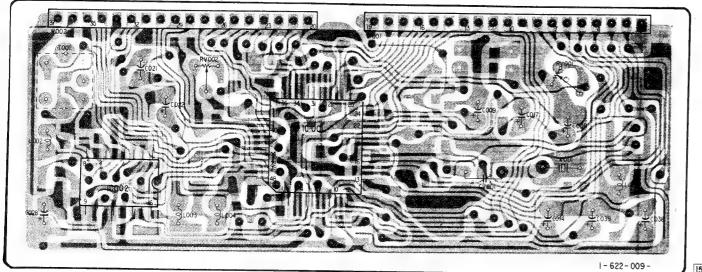

CH-44 BOARD(CONDUCTOR SIDE)

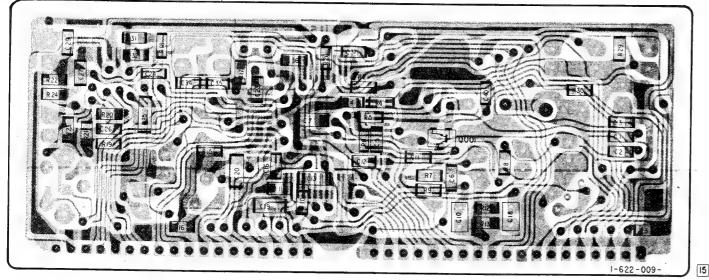

Caution:

Pattern face side: (Conductor Side)

Parts on the pattern face side seen from

Parts face side:


Parts on the parts face side seen from the


(Component side)


parts face are indicated.


D001 I-1 IC001 IC002 LV001 D-5 LV002 D-3 Q001 Q002 Q003 Q004 Q005 Q006 Q007 Q011 Q012 Q014 Q015 Q016 Q017 Q018 Q019 Q021 Q021 Q023 Q024 Q026 Q028 655545664443133111111111145 RV001 D-5 RV002 B-6 RV003 D-3 RV004 C-2 RV005 A-2


YC-56 BOARD

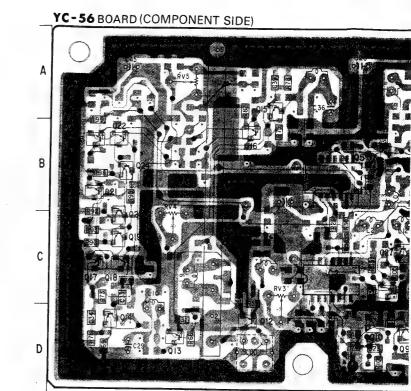


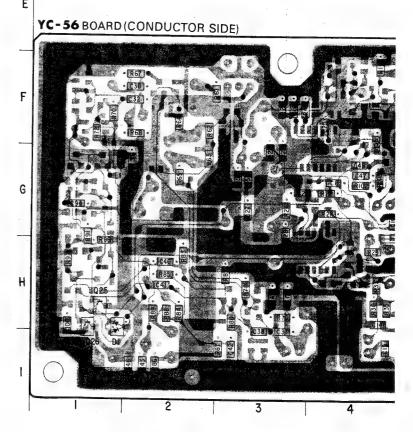


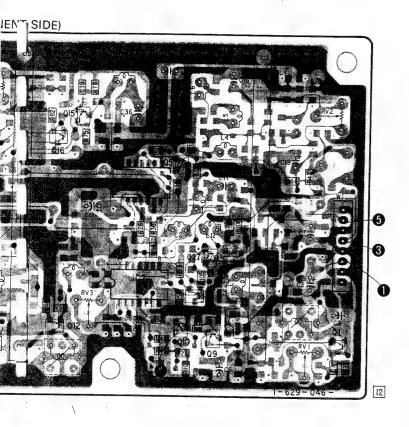


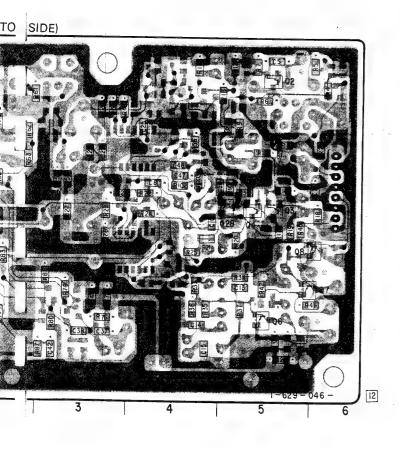


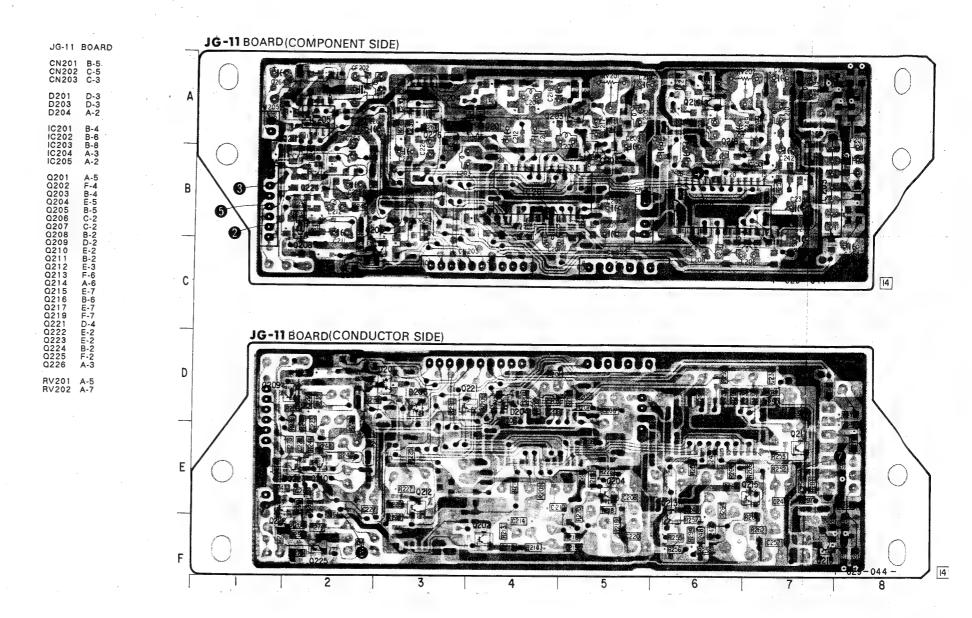


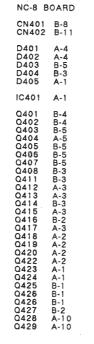


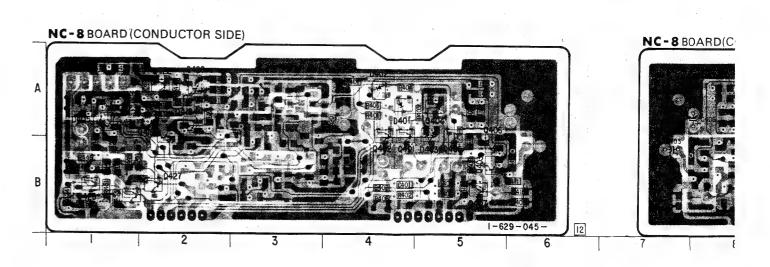


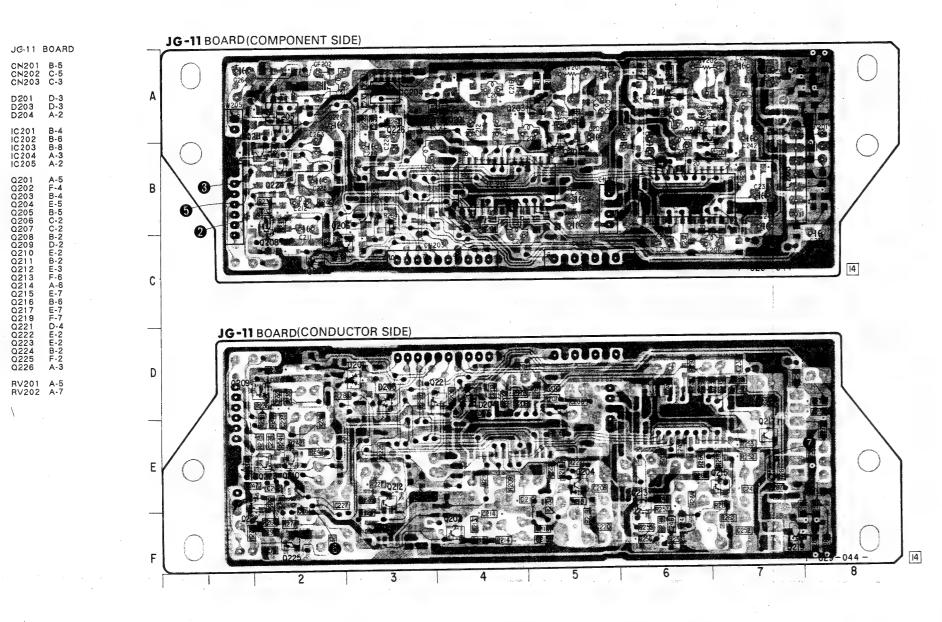


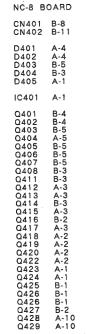


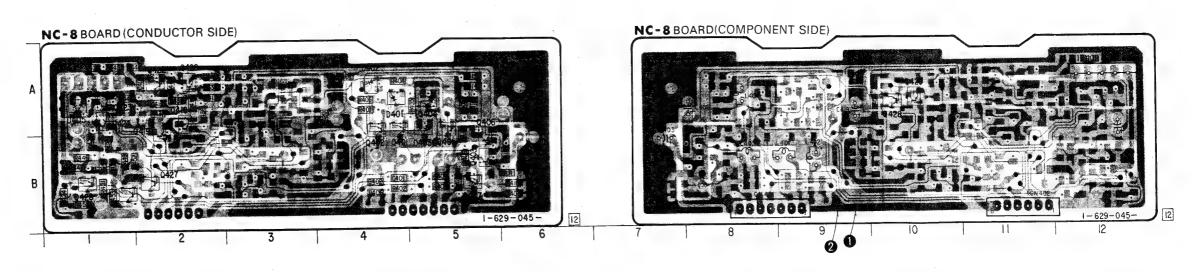

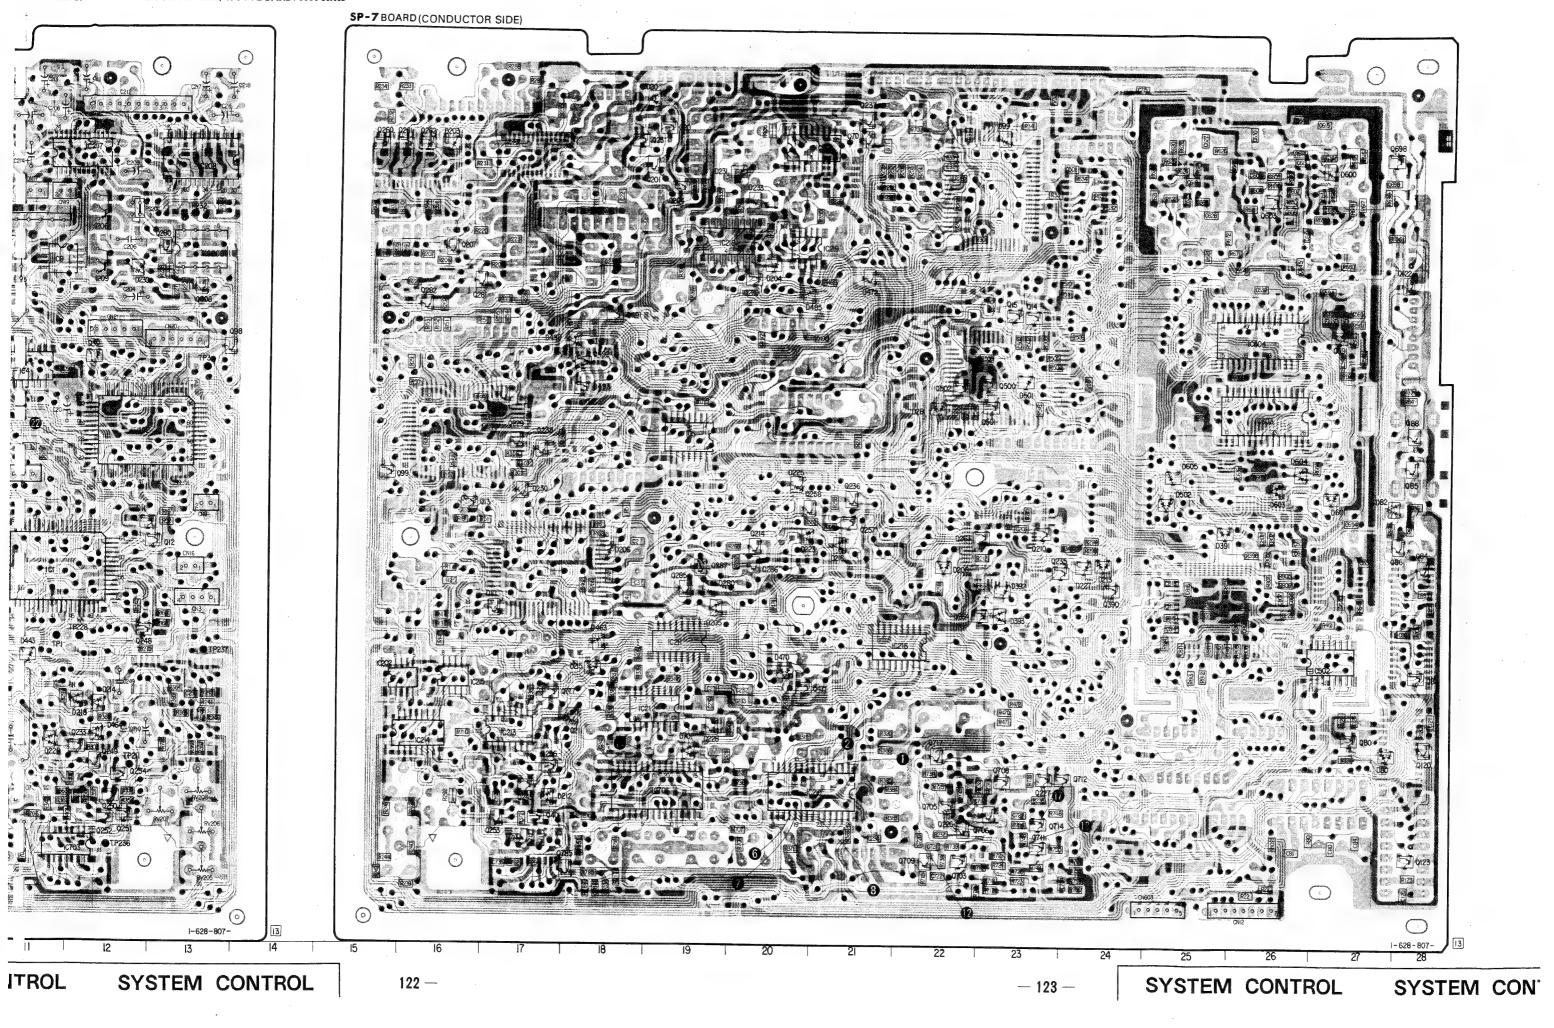

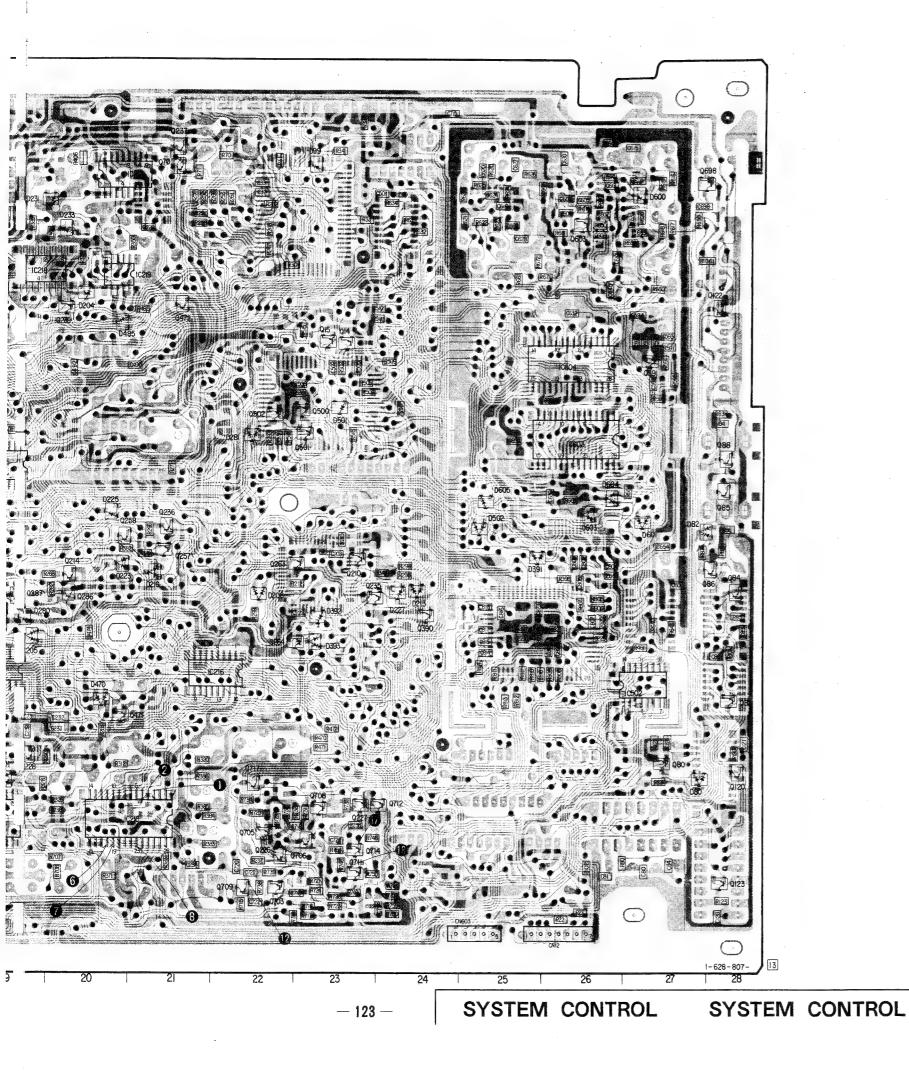

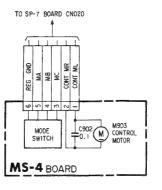

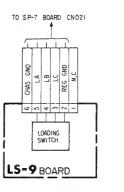

TM - 94 BOARD

(NB) = 2005 6004

3 1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 1000

1000 7 10

Caution:


Pattern face side: (Conductor Side) Parts on the pattern face side seen from


(Conductor Side) the pattern face are indicated.

Parts face side: Parts on the parts face side seen from the

(Component side)

de) narte face are indicate

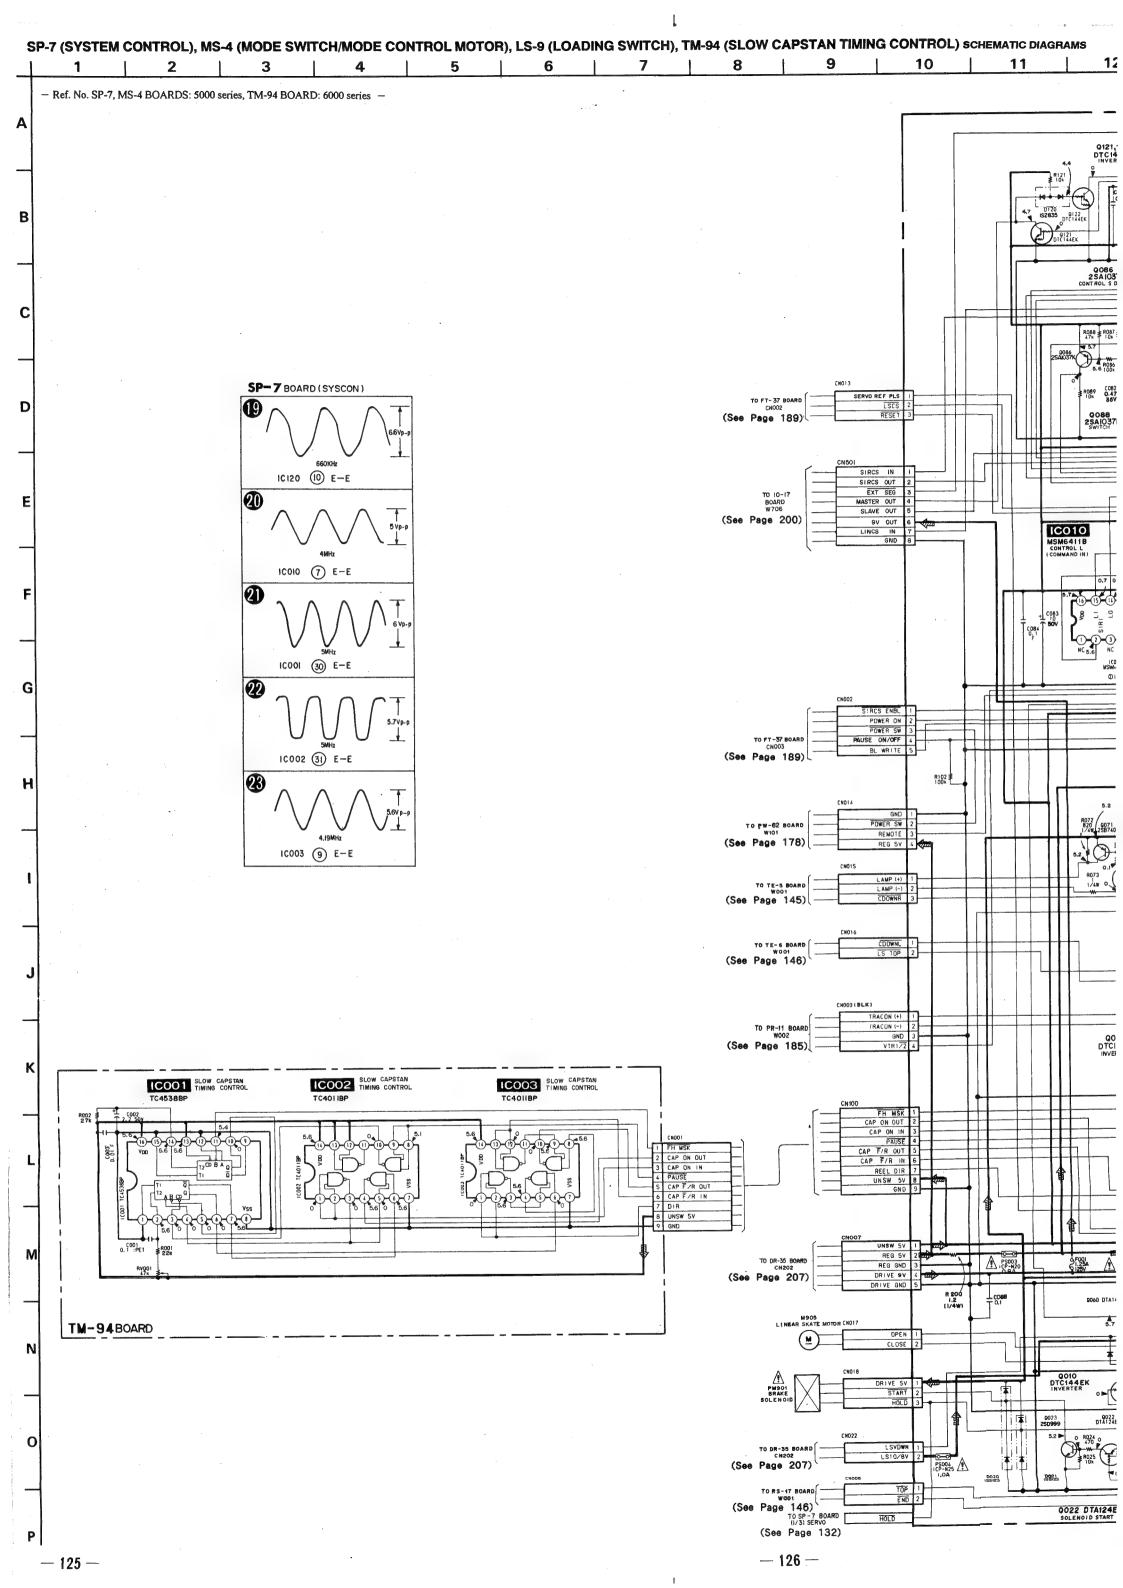

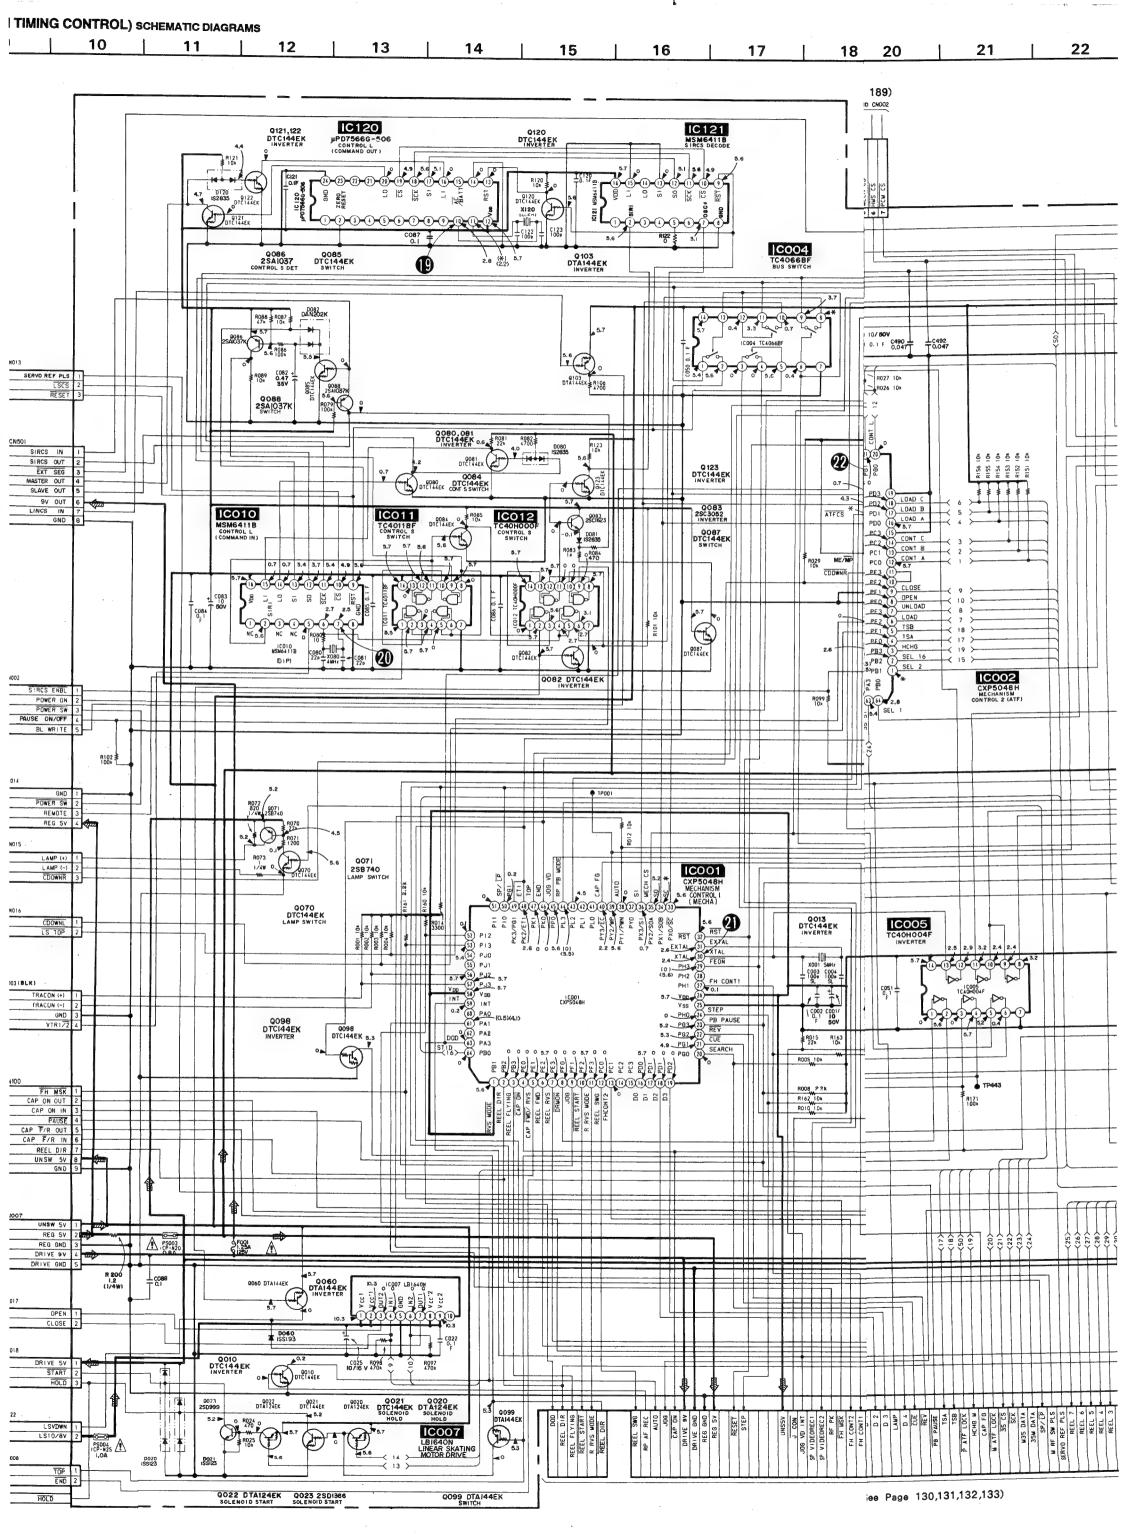

32

TO VI-57 BOARD WOO! (See Page 107) 1 VIDEO PB 1 VIDEO PB 2 VIDEO PB 3 LINE VIE PB 4 ME/MP 5 JUG 6 SP/LP 6 SP/LP 7 DOD 4 DTA144EK R022 10k R013 22* → 32 >> → 33 >> R023 D1014 D10144EK DO99 (5.5) Q014,015,090,091 DTC144EK DOD SWITCH 1 MFE ON 2 ME/MP D098 IS2835 (See Page 94) CAPON PCM REC C031 0 0 0 0 0 0 R156 R155 R154 R152 R152 MPDATA IC003 PMDATA (3) P130 (3) P143 (3) P142 (3) P141 (3) P141 (3) P140 (3) P130 (4) P30 N.C. (4) P31 SME PROPE (4) P31 SME PROPE (4) P30 T10/T13 (7) Y P1 TO SP- 7 BOARD (1/3) SCK P131 (
P132 |
P133 (
DFF P120 (
TEST P121 |
P122 |
P123 (
P122 |
P123 (
P122 |
P123 (
P122 |
P123 (
P123 (
P123 |
P123 (
PTH02 (12)
PTH03 (31)
P10/INT0 (10)
P11/INT1 (20)
P12/INT2 (18)
P13/INT3 (77)
Vss (See Page 154) CLOCK CLOCK REG 5V 10003 #PD75104 G-547 UNS 5V V ss 26 P90 25 P91 24 PROOF

| Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof | Proof IC002 R034 R032 8901(I/2) RECOG SWITCH R052 2 REC PROOF 3 ME/MP R018 DTC144EK DTC144EK RECOG SWITCH L CN 004 1 REG GND 2 T10/ T13 IC008 IC009 MB3763P LOADING MOTOR DR:VE MB3763PF CONTROL MOTOR DRIVE 4 TFG 2 TO RS-IT BOARD REG GND <41 > (See Page 146) ° 10-01-01-01 MS-4BOARD TP443 1 LOAD 2 UNLOAD C902 I CONT L CONT MR CONT R no mark: LP REC/PB mode

(): LP REC mode
(): LP BE mode

×: impossible to measure the
voltage at the marked points LOADING SWITCH LB CHAS GND LS-9BOARD SP-7 BOARD (1/3) SYSTEM CONTROL TO SP-7BOARD(1/3) PCM 133) (See Page 155)

21

22

23

24

25

26

27


28

29

30

31


SP-7 (SERVO), DM-18 (MOTOR DRIVE) SCHEMATIC DIAGRAMS 2 3 8 10 11 5 - Ref. No. SP-7, BOARD: 5000 series, DM-18 BOARD: 7000 series -TO SP-780ARD(1/3) SYSTEM CONTROL (See Page 127, 128) (See Page 127, 128) TO SP-7 BOARD (1/3) SYSTEM CONTROL Q214 DTC144EK CUE,REV, X-1, X-3 CAPSTAN SPEED CORRECTION Q245,249,254,257,258 DTA144EK CUE,REV, X-1,X-3 CAPSTAN SPEED CORRECTION R268 22K IC201 Q264 DTA114EK INVERTER IC204 MB64H428 0245 DTA144EK -5.3 TC114EK R357 68k (±0.5%) 070174EK Q201 DTA114EK 0 7788 1C204 MB64H428 025l 2SCI623 0250,251 2SCI623 0203 2501406Y R382 ≱ IC210 9254 R364 DTC144EK 56k R365 R366 100k 220k (9) (0) (1) (2) (3) (4) C236 2.2 1.8 1.7 R326 68009 2.2 330x **O** R381 C251 470k T 0. 047 R334 C241 470k 0. 022 α 0 0 2.3 7338 0.2 5 3 0 2.3 7338 0.2 10 5 4 3 7 10 0 9 5 8 2 8 8 8 8 C213
TC4066BF
3 4 5
AGC HOLD
C 6 9 9
DC GAIN SWITCH
(6 1) (2)
AC GAIN SWITCH IC211 IC214 IC215 UPC358G2 IC212 DRUM ERROR AM B 9 (0) 30HzNOTCH FILTER Q228 DTCI 44EK SWITCH Q229 DTC144EK RV206 RV2D8 R339 56k C243 4.7 35V :BP R337 LP R246 9206 2881133-R 9280 2503052 3 > 0281 DTC124EK IC207 208 3.3 R230 50V 150k R229 22k C210 C213 C211 10 1 10 25V 50V 25V ₹8219 470k IC216 IC217 D230 PD5. IM C204 0 LP SP FHG Q472 DTCI44EK SWITCH 9208 25A8I2 ₹223 100 2 D10144EK R202 0246 DTC144E 1.2 8.8 R267 10 (tu-1700(tu-1700(tu-14EK: 0 R227 ≢ R226 = 0209 D70144EK 2SA812 STARTER 0243 DTC144EK 5.3 * 9740 R309 R308 25D999 10k 560 D390 IS2837 2. 5.7 0.9 13.9 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 14.19 -**₽** 2SD999 10x 560 R348 47k 0262 R351 R344 250999 10k 560 M R288 LB1616M CAPSTAN MOTOR DRIVE 9260-262 280999 CAPSTAN STOP 俞 TP230 PB ATF ○.e **>>> >>>** DTC144EK R232 | R234 3.3 | R243 3.3 | R243 10V | R243 N Q239,240 DTC144EK INVERTER TC45388F IC219 067 µPC358G2 CMV CMW HEI-) VHEI-) UHEI+ UHEI+ UHEI+ UHEI+ HE Vec DWC DWC 0

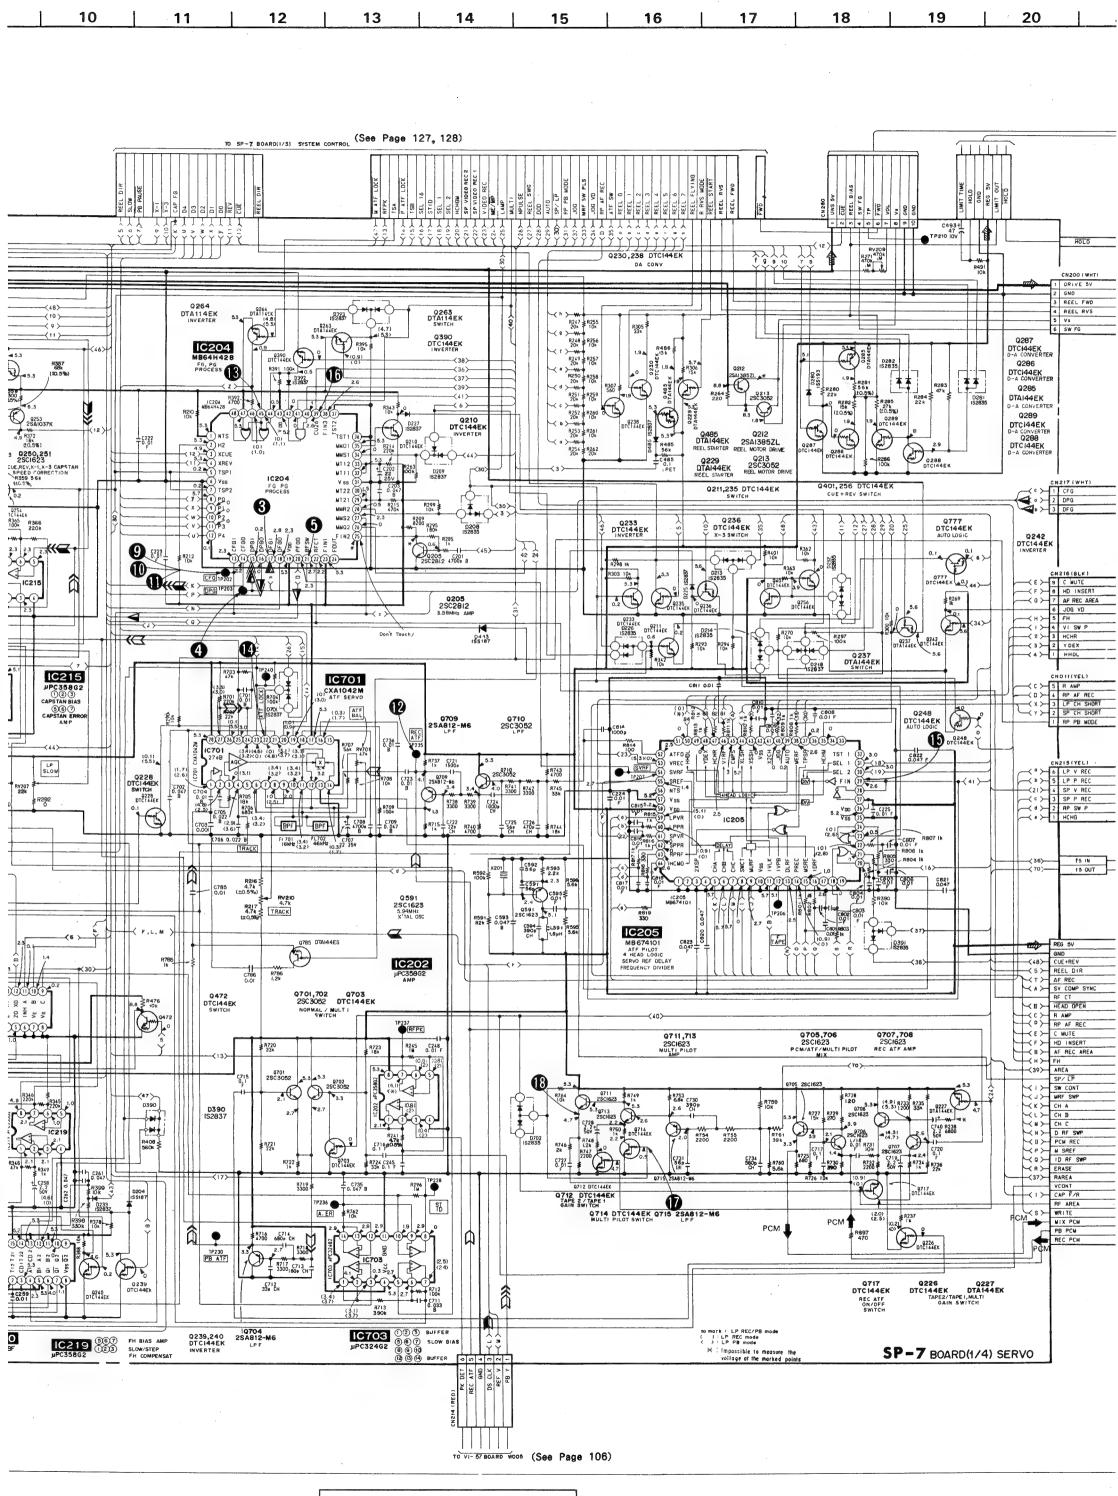



SERVO


SERVO


— 132 —

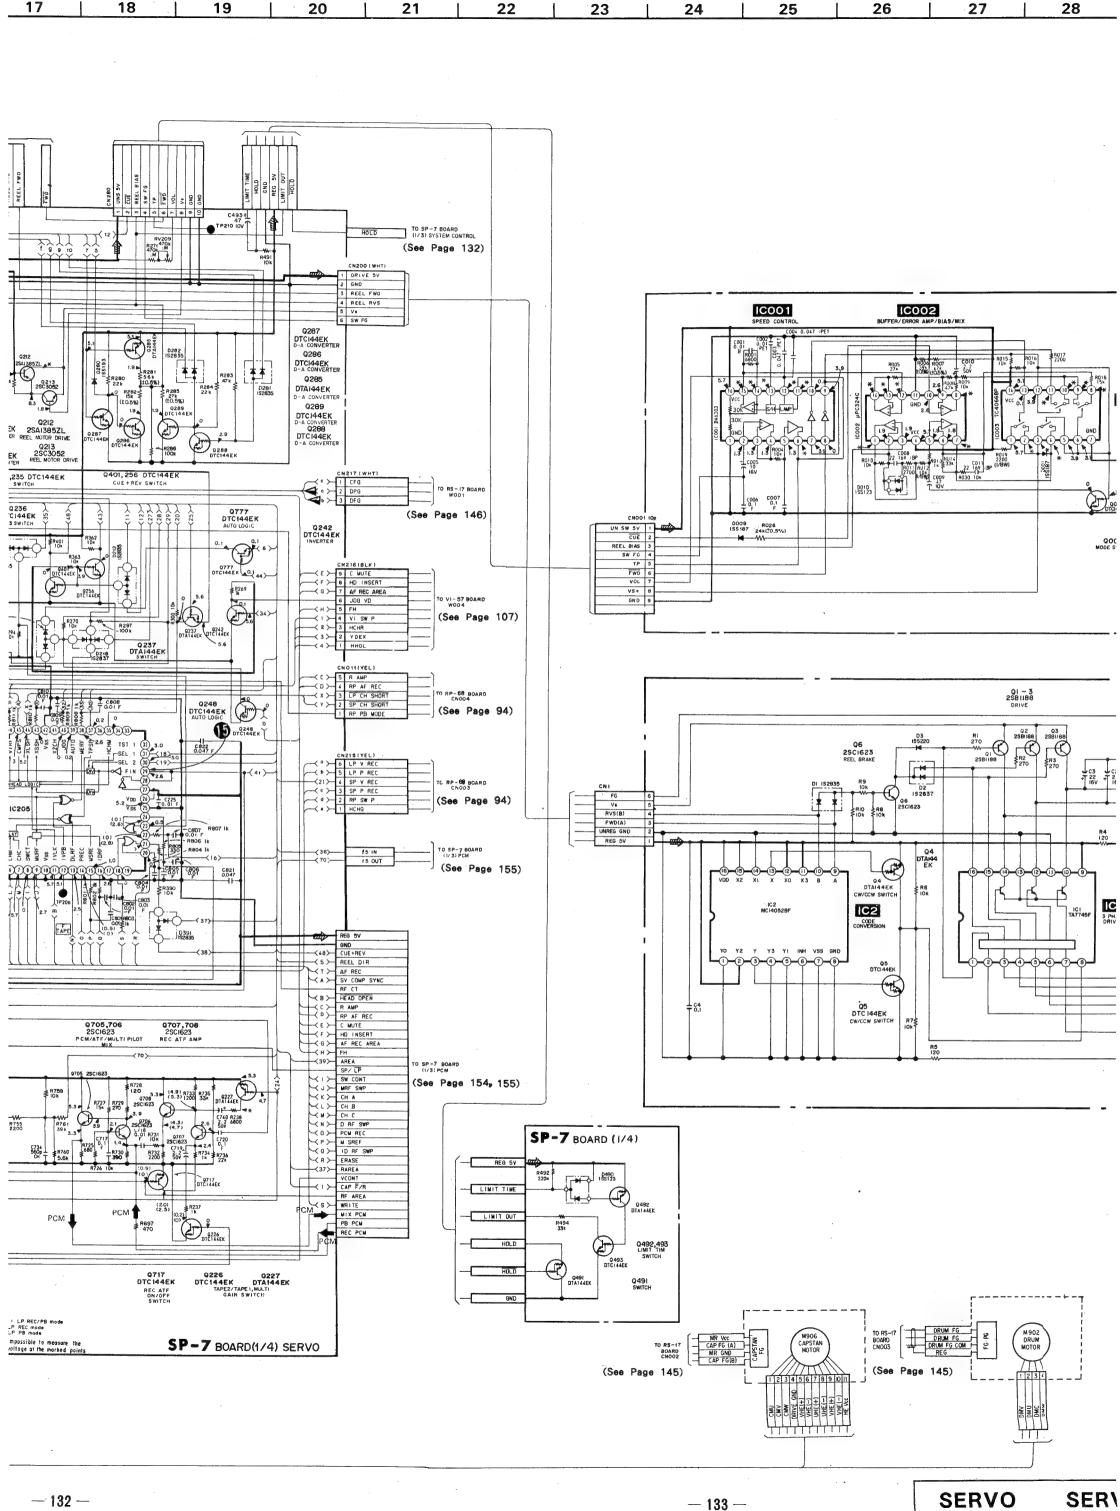

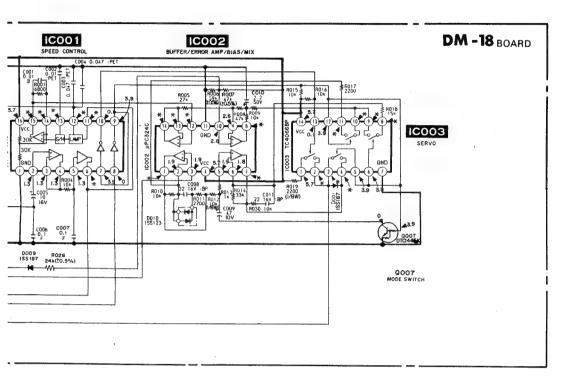

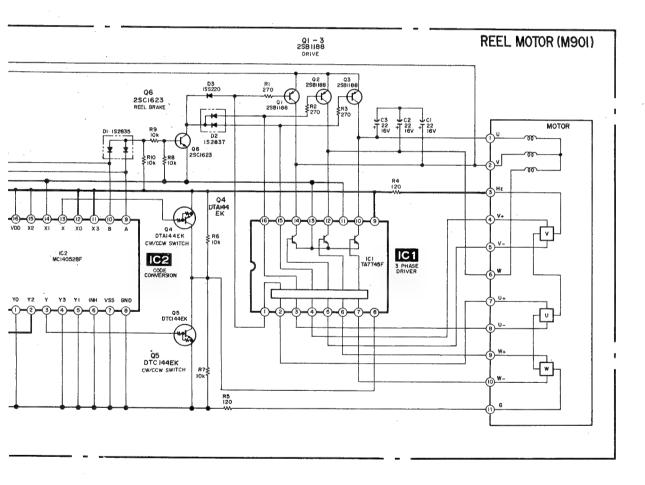

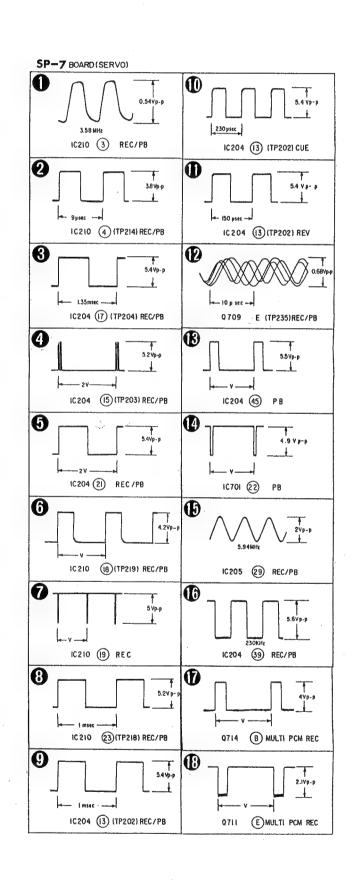

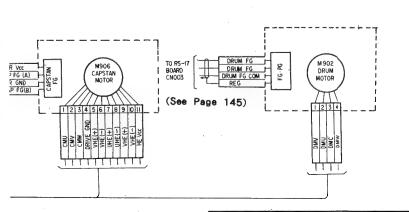



• Signal path

	REC	REC/PB	РВ
Drum speed servo		>	
Drum phase servo		▶	
Drum servo (speed and phase)		>>>	
Capstan speed servo		>	
Capstan phase servo	>	>>	Σ
Capstan servo (speed and phase)		>>>	
Ref signal	393	>>	Σ


 Signal path 	•	Signal	path
---------------------------------	---	--------	------


	VIDEO Signal			AUDIO Signal
	CHROMA	Υ	Y/CHROMA	AUDIO Signal
REC				
РВ	·			

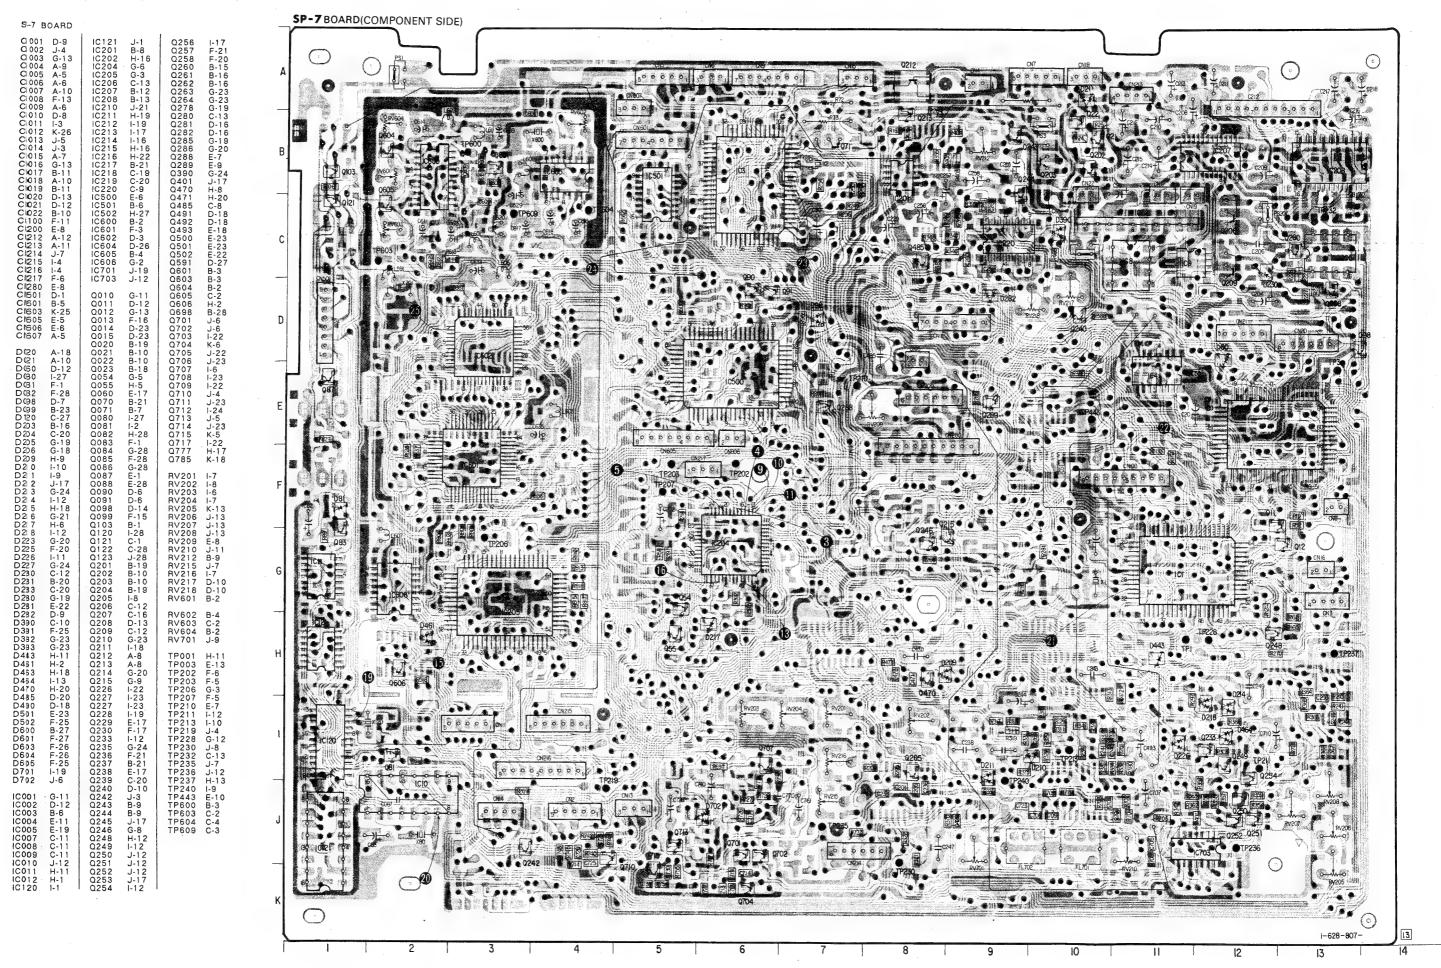

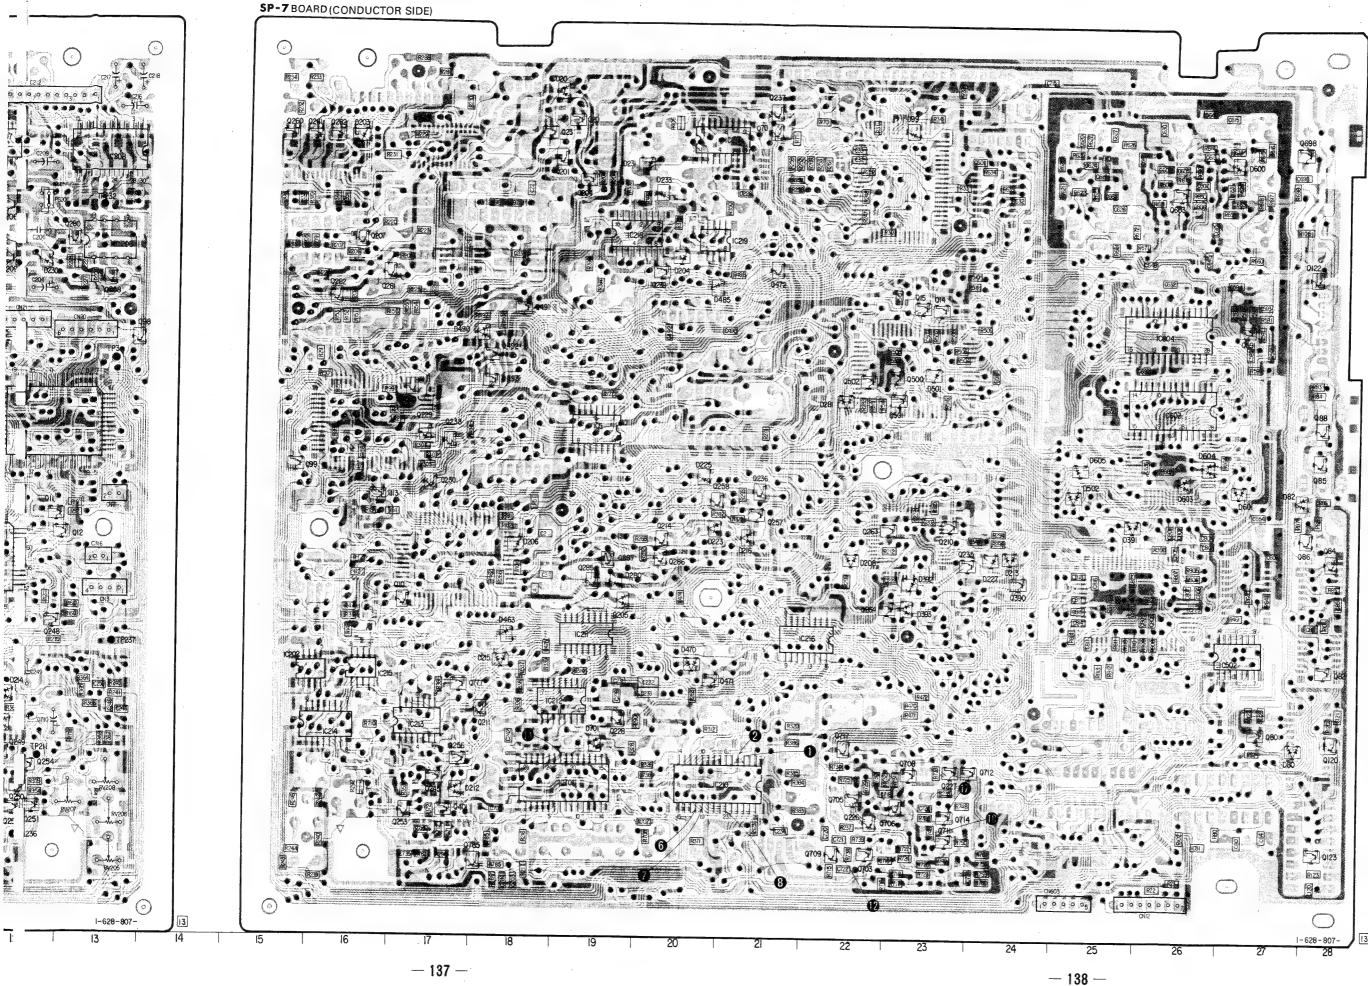



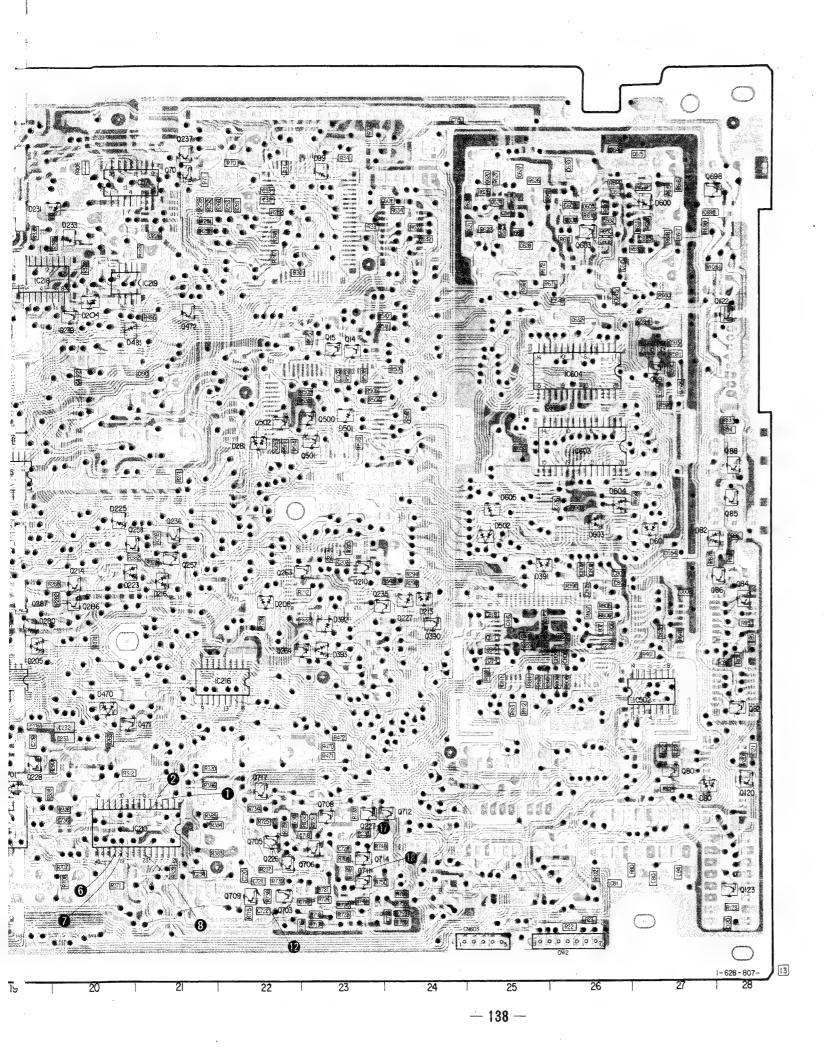

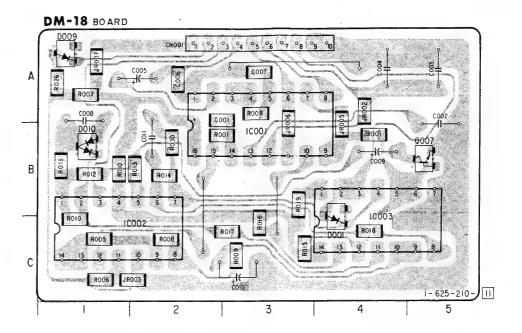

Caution:

Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.


Parts face side: Parts on the parts face side seen from the

(Component side) parts face are indicated.



RS-17 (REEL MOTOR), TE-5 (TAPE T

- Ref. No. LD-1 BOARD: 5000 series, RS-17 BOAR

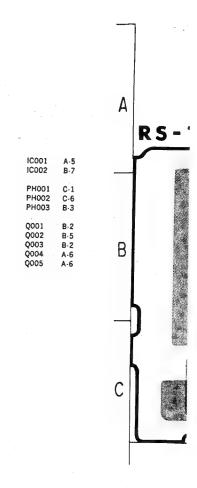


Caution:

Pattern face side: Parts on the ;
(Conductor Side) the pattern fac

Parts face side: Parts on the p
(Component side) parts face are

RS-17 (REEL MOTOR), TE-5 (TAPE TOP SENSOR), TE-6 (TAPE END SENSOR), LD-1 (LED) PRINTED WIRING BOARDS

- Ref. No. LD-1 BOARD: 5000 series, RS-17 BOARD: 8000 series, TE-5 BOARD: 9000 series, TE-6 BOARD: 10000 series -

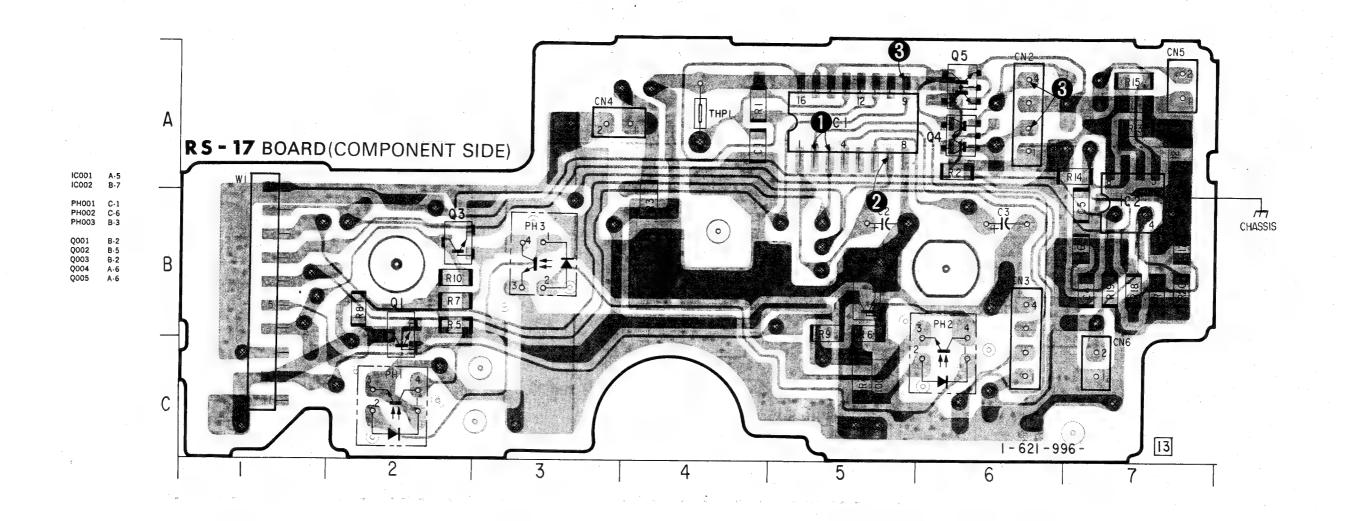

Caution:


(Conductor Side)


Parts on the pattern face side seen from the pattern face are indicated.


Parts face side: (Component side)


Parts on the parts face side seen from the


parts face are indicated.

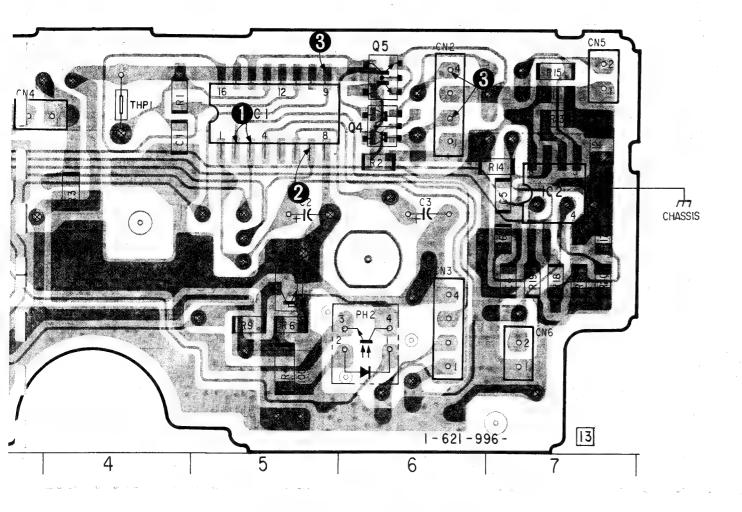

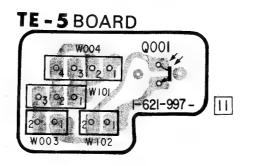


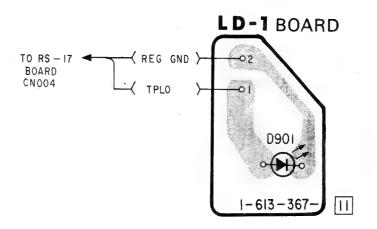


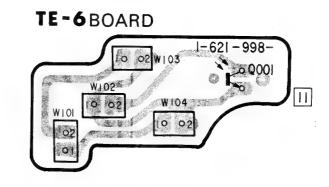

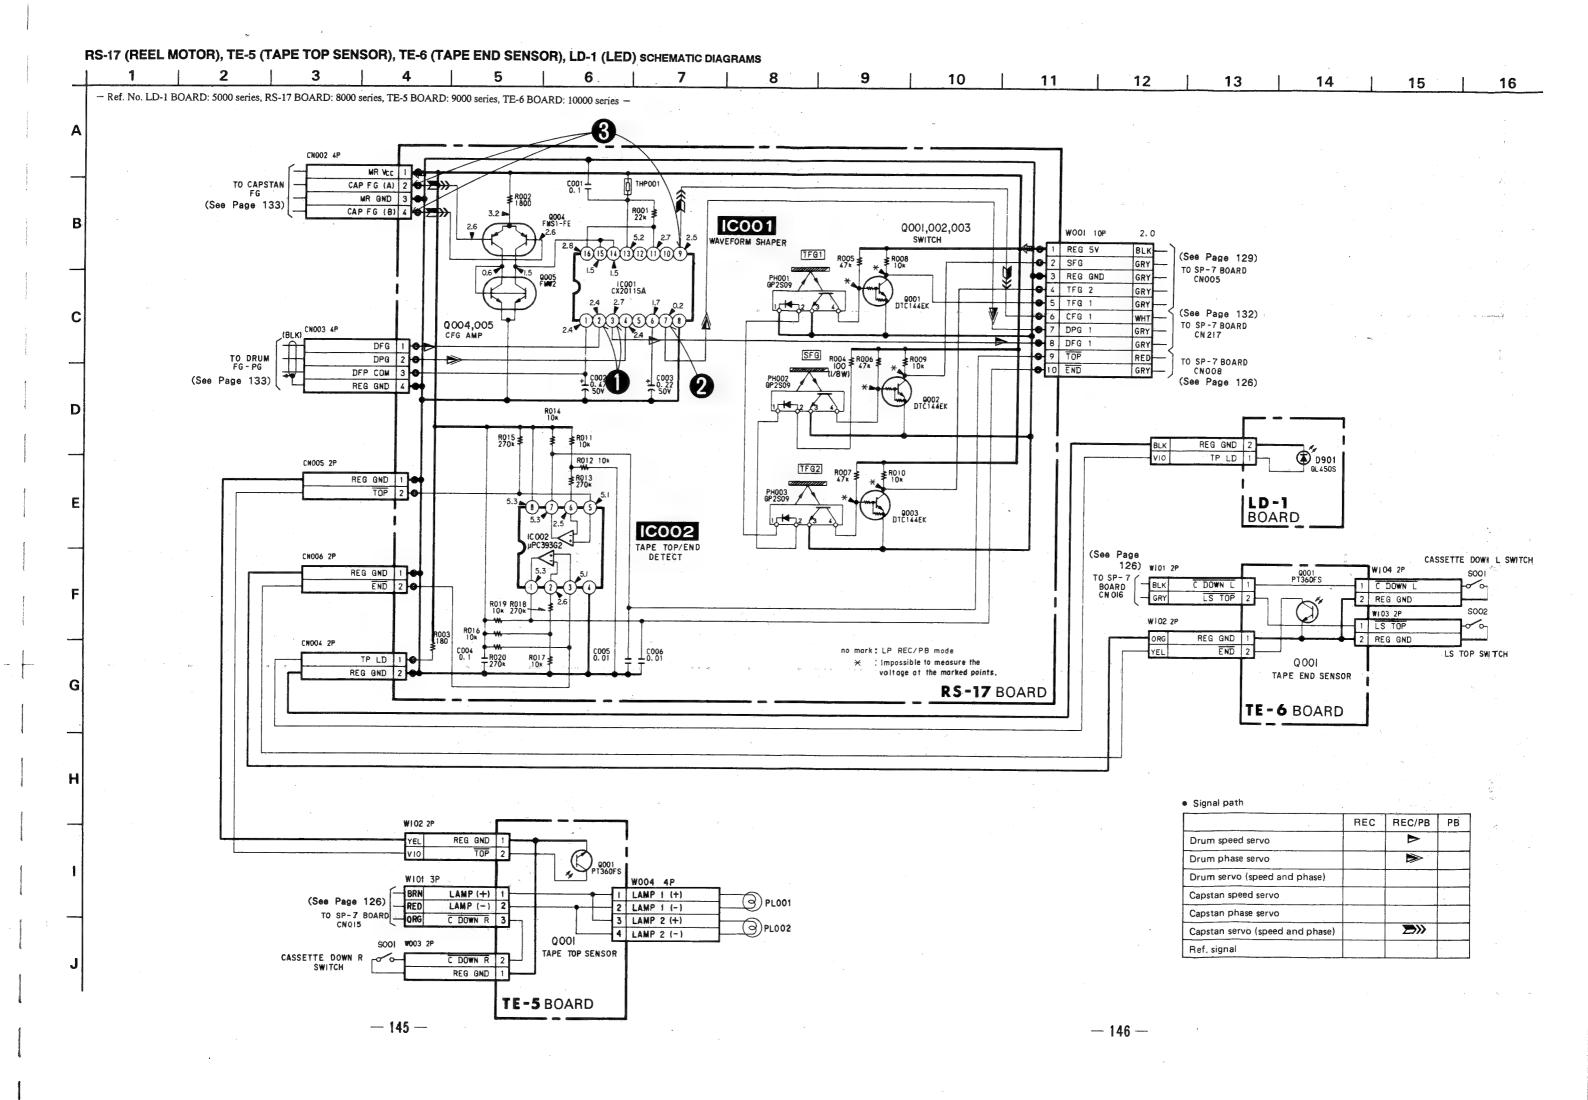


15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 |

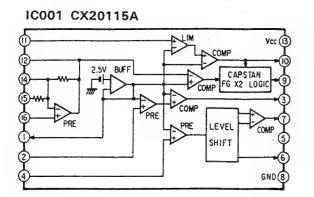


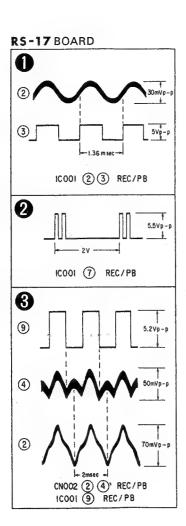



EC/PB	PB
>	
▶	
>>>	


SP-7 BOARD(COMPONENT SIDE) SP-7 BOARD IC121 IC202 IC204 IC205 IC206 IC207 IC208 IC210 IC211 IC212 IC213 IC213 IC214 IC215 IC216 IC217 IC218 IC219 IC200 IC500 G-11233991018 G-11233991018 G-11233991018 G-1228 G D0201 D0801 D0801 D0808 D0808 D0808 D0908 D1200 D2014 D2016 D2112 D2116 D2117 D2 RV201 RV202 RV203 RV203 RV206 RV206 RV209 RV210 RV215 RV216 RV216 RV217 RV602 RV603 RV604 RV701 TP001 H-11 TP003 F-5 TP203 F-5 TP203 F-5 TP206 G-3 TP207 F-5 TP210 E-7 TP211 I-12 TP213 I-10 TP219 J-4 TP228 G-12 TP235 J-7 TP235 J-7 TP236 J-12 TP237 H-13 TP240 E-10 TP440 E-10 TP600 B-3 TP603 C-2 TP604 C-4 TP609 C-3 IC001 IC002 IC003 IC004 IC005 IC007 IC008 IC010 IC011 IC012 IC120 Caution: Pattern face side: on the pattern face side seen from (Conductor Side) Parts face side: (Component side)

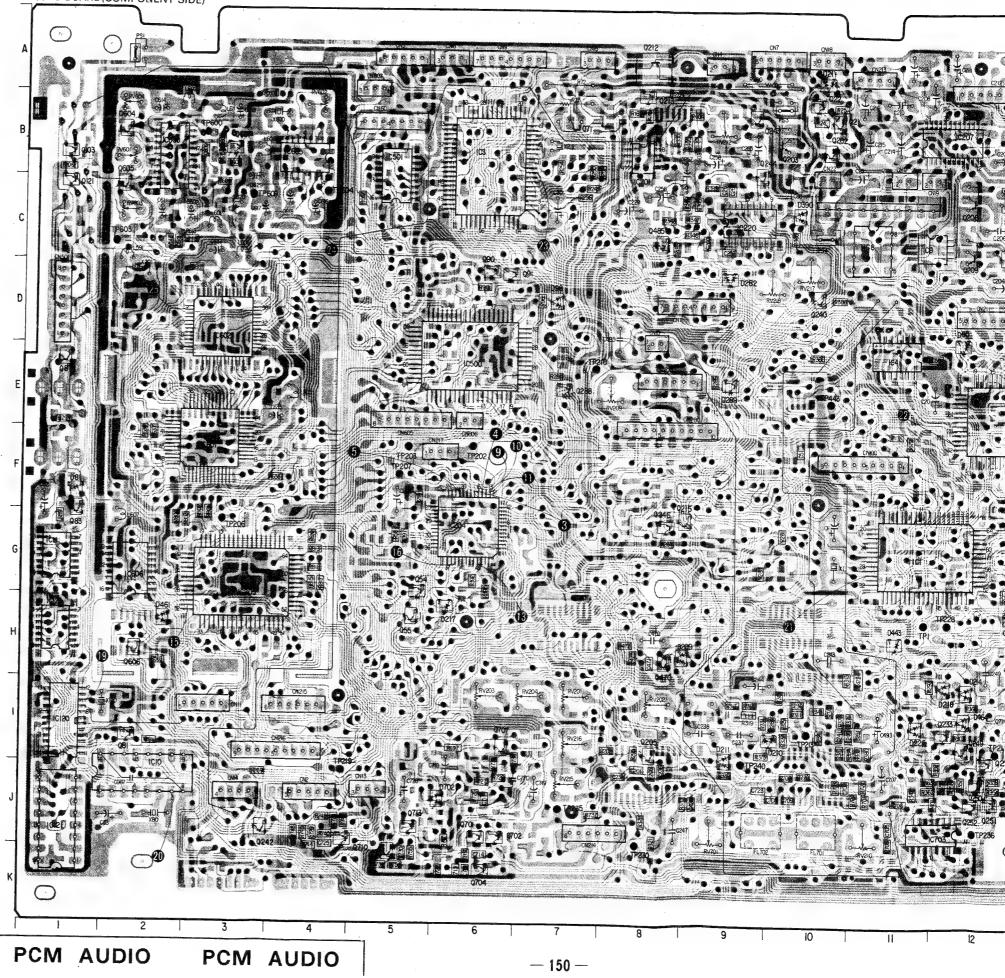

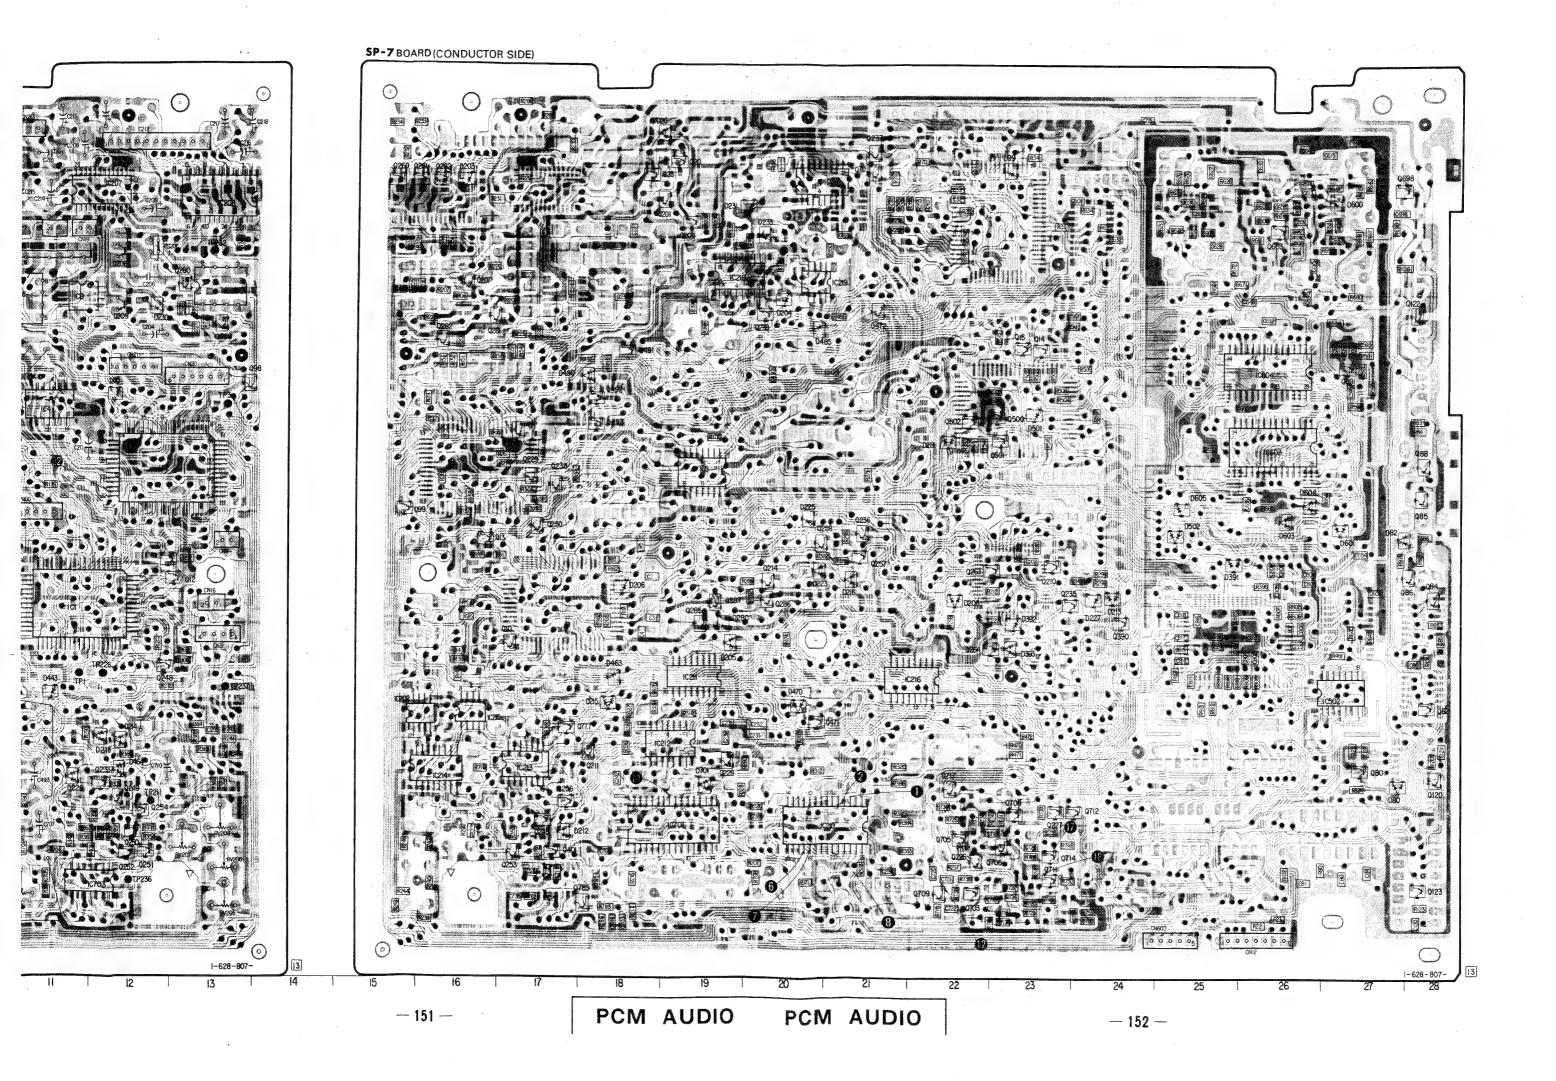


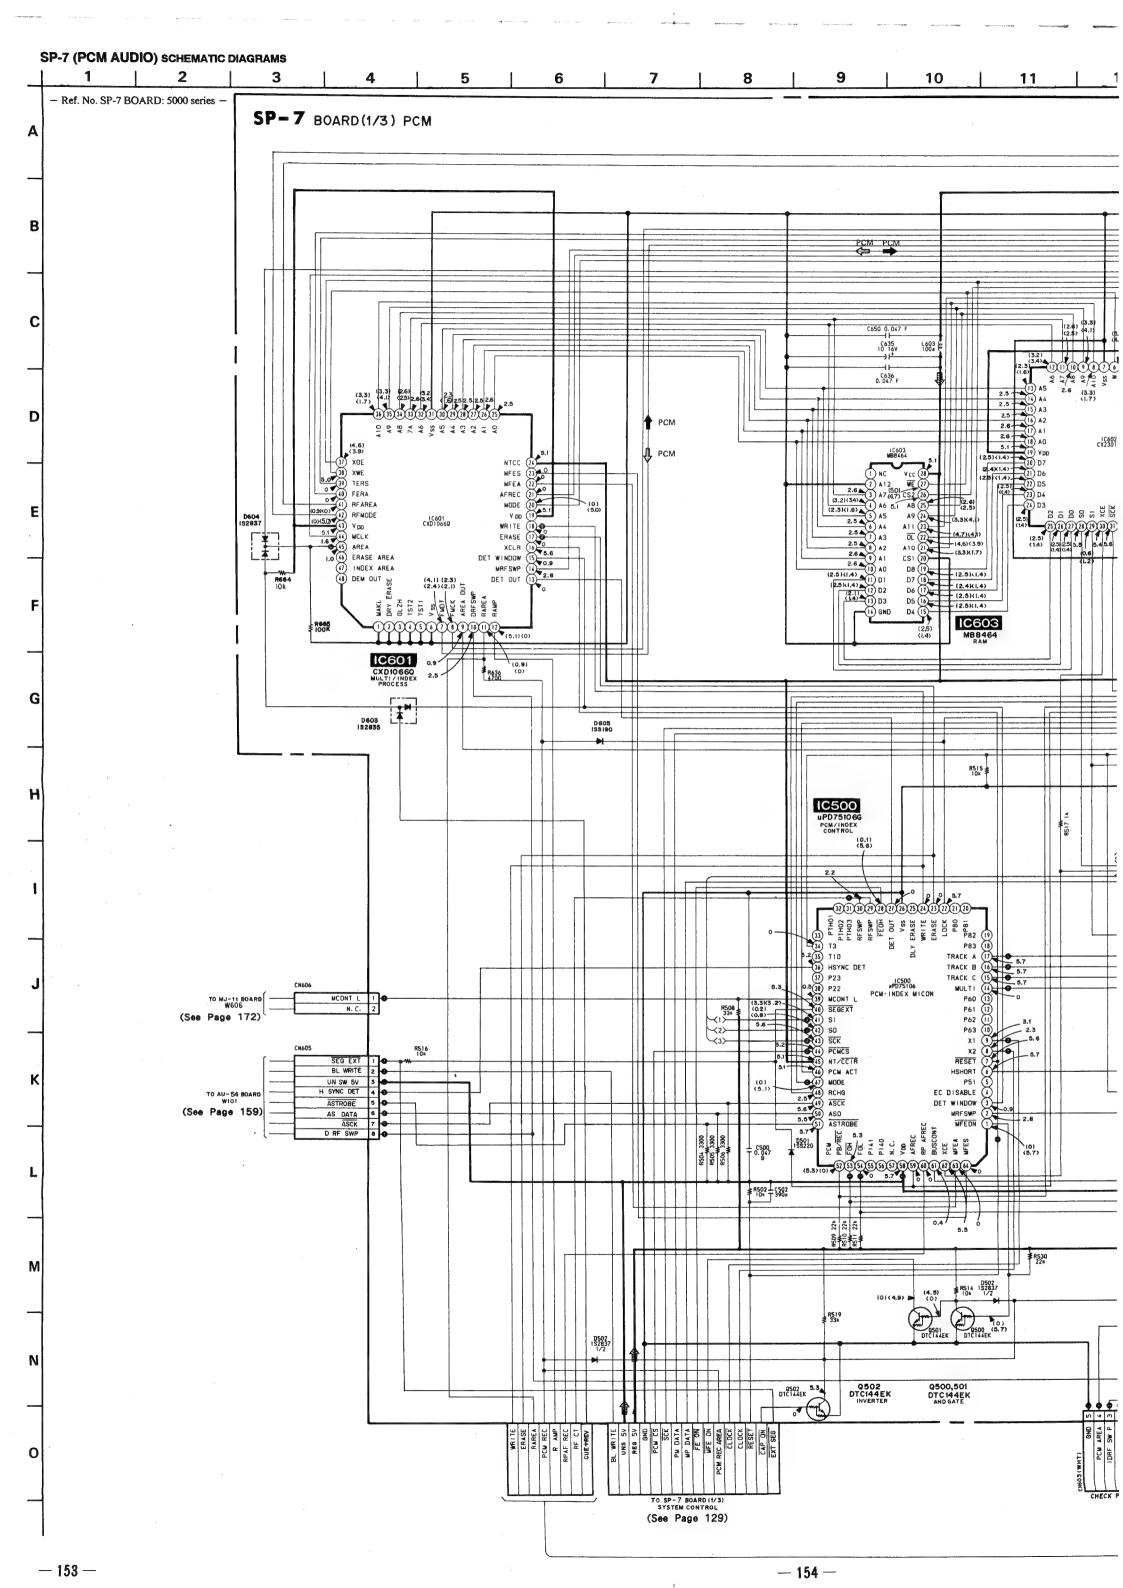

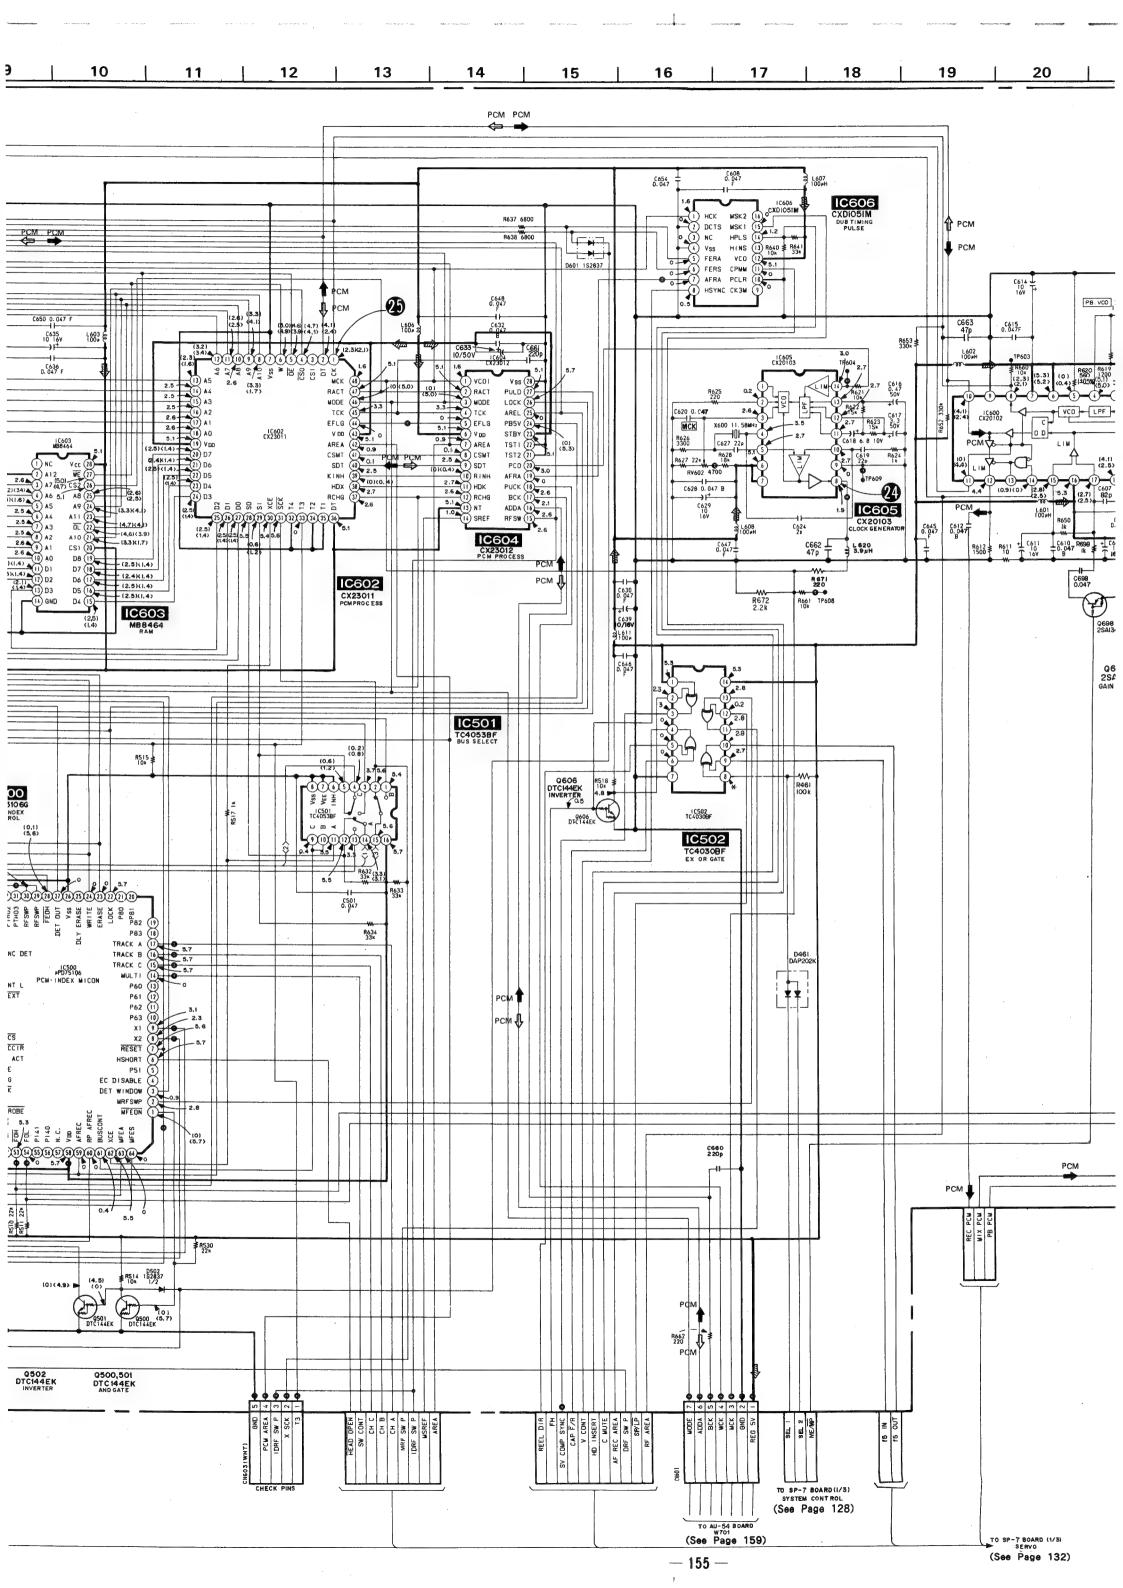


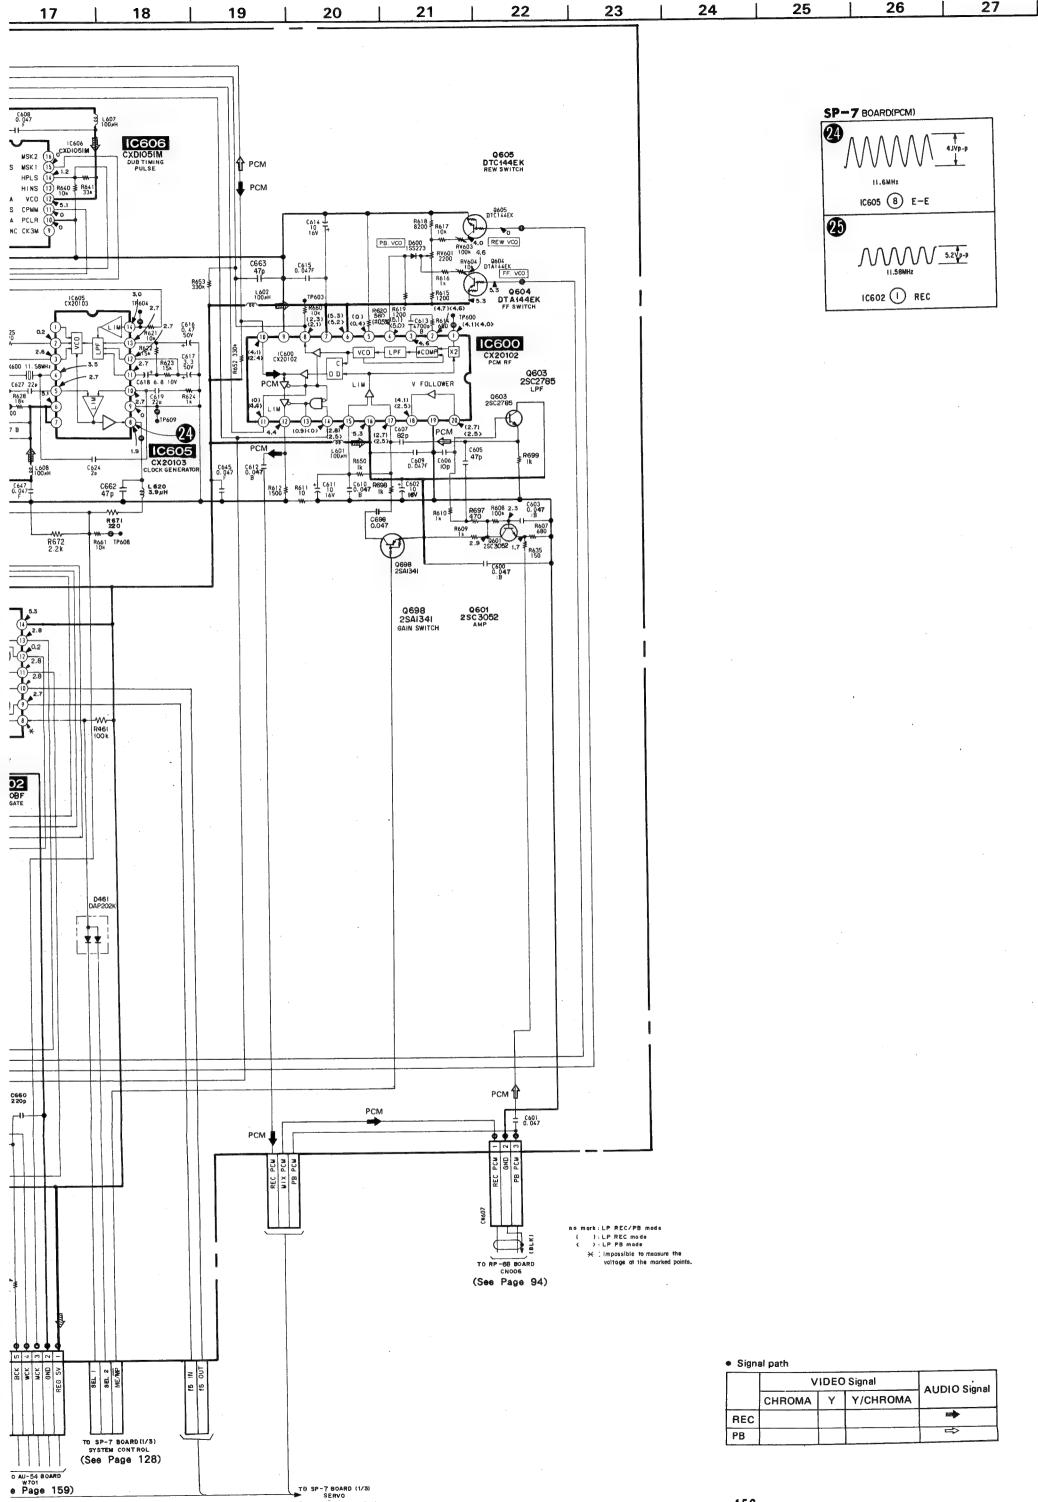


(See Page 132)

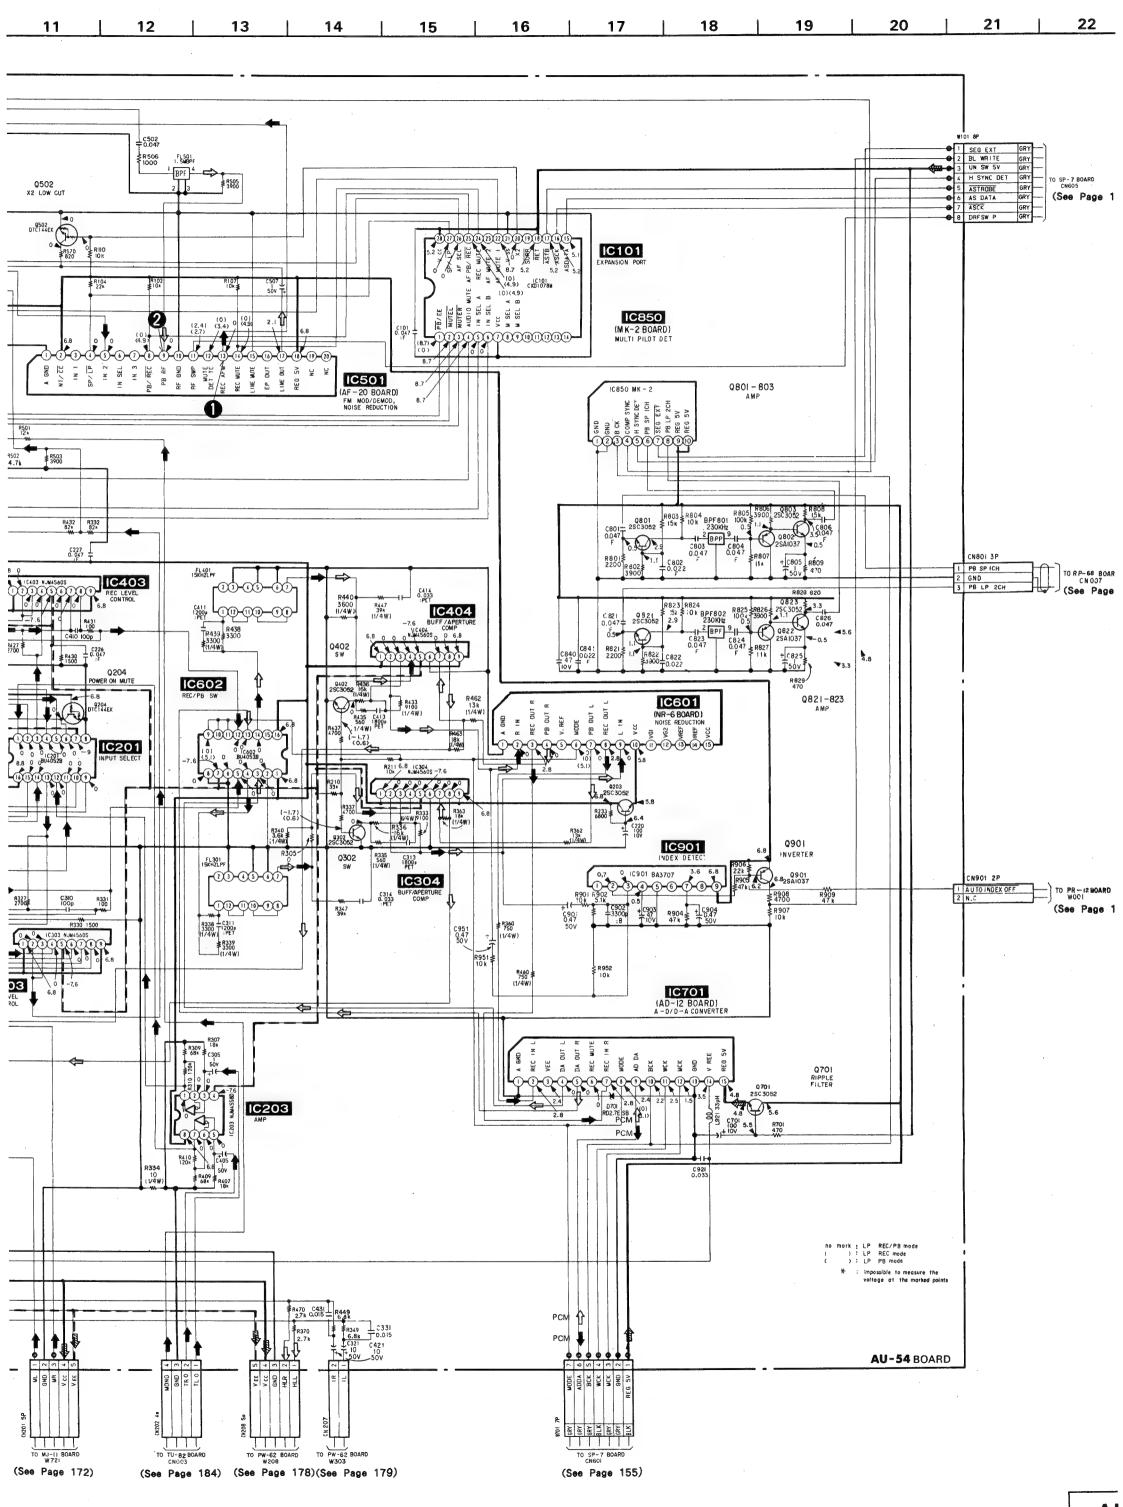




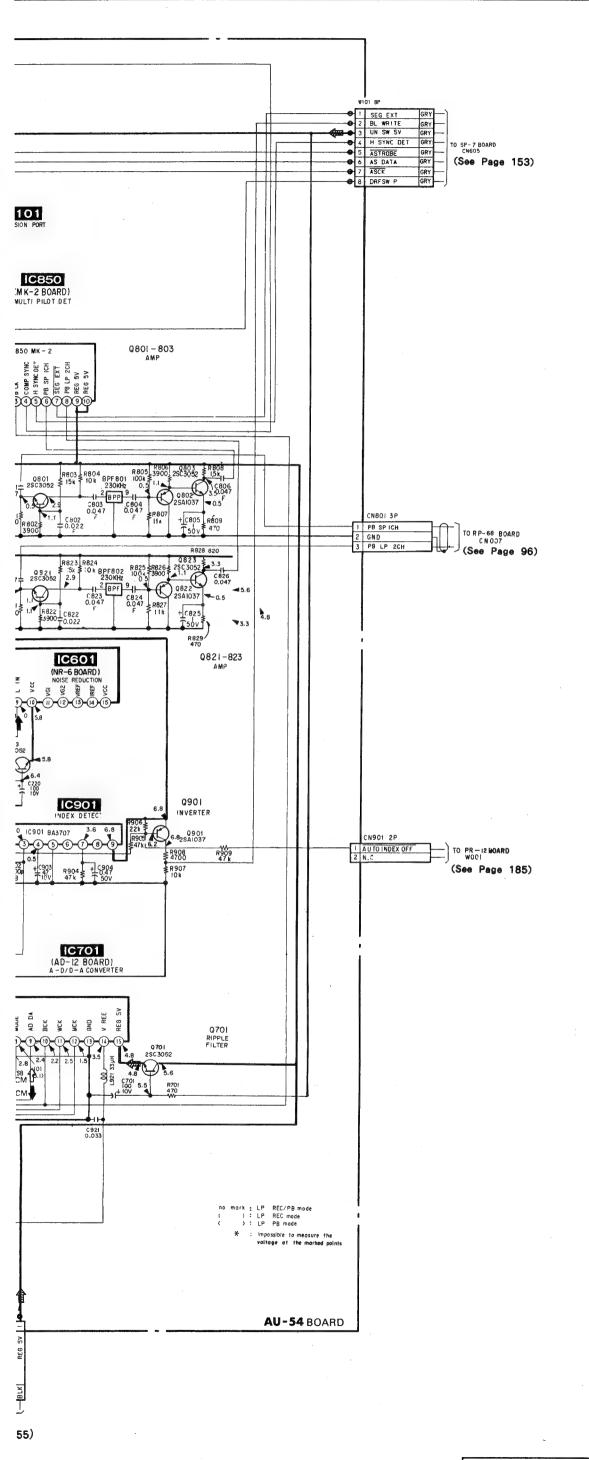


IC901 BA3707

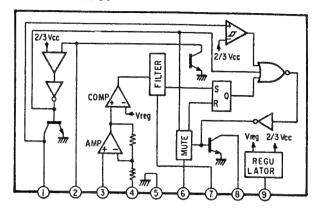


IC301, 303, 304, 401, 403, 404 NJM4560S

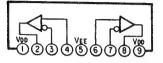


IC302, 402 BU4051B

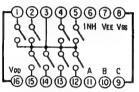


IC201 BU4052B

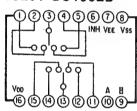

IC503 602 BU4053B

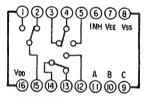

AU-54 BOARD

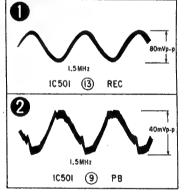



Signal path

	V	411010 01		
	CHROMA	Υ	Y/CHROMA	AUDIO Signal
REC				-
РВ				➾

AU-54 (AUDIO) PRINTED WIRING BOARDS

- Ref. No. AU-54 BOARD: 12000 series -

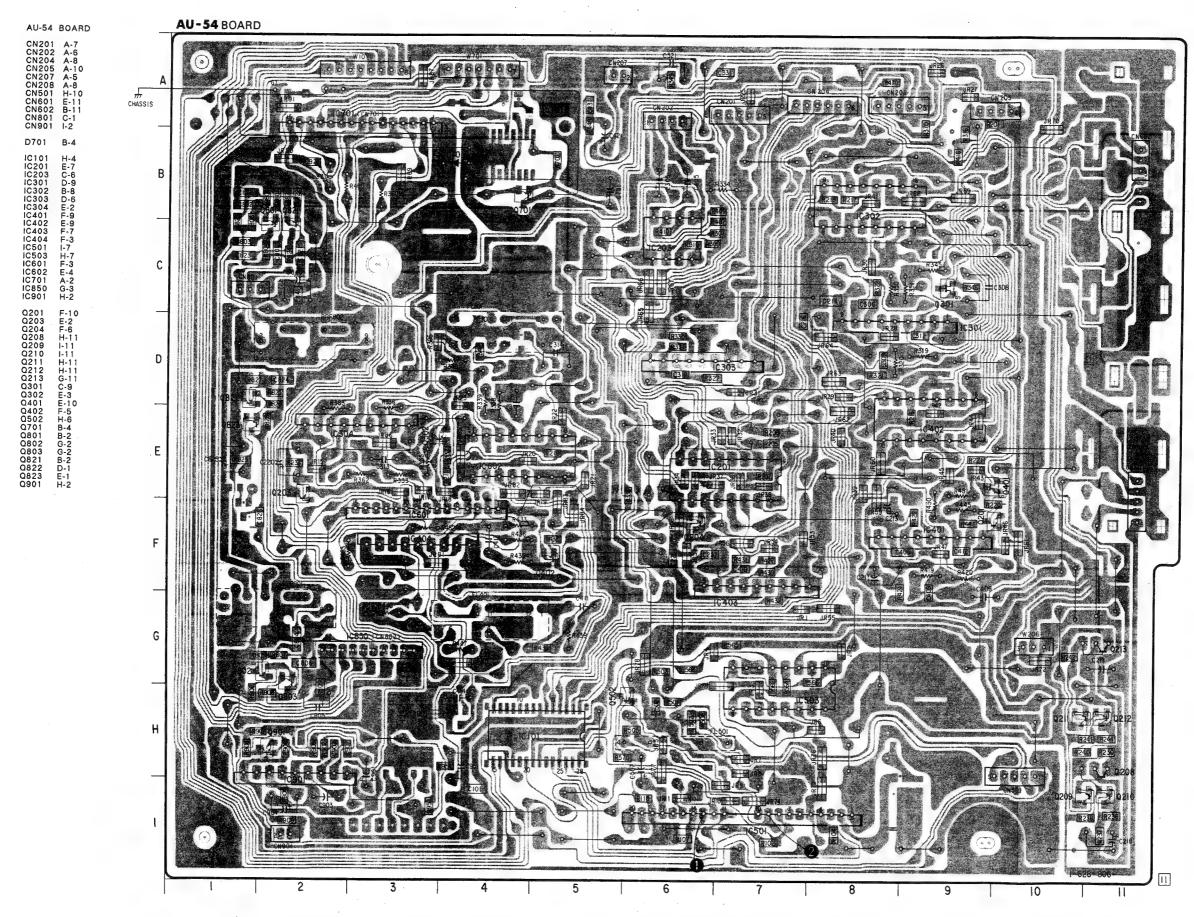


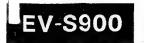

NR-6 (NOISE REDUCTION), MK-2 (MULTI PILOT DETECTION) ,AD-12 (A-D/D-A CONVERTER), MJ-11 (MIC JACK) PRINTED WIRING BOARDS


- Ref. No. NR-6, MK-2, AD-12, MJ-11 BOARDS: 6000 series -

IC701
AD -12 BOARD (COMPONENT SIDE)

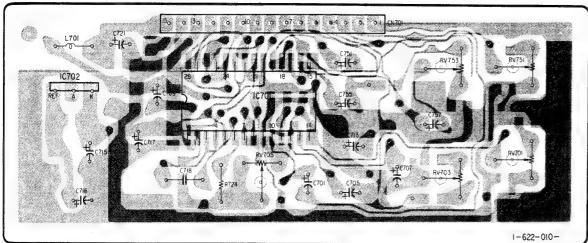

IC701

AD - 12 BOARD (CONDUCTOR SIDE)

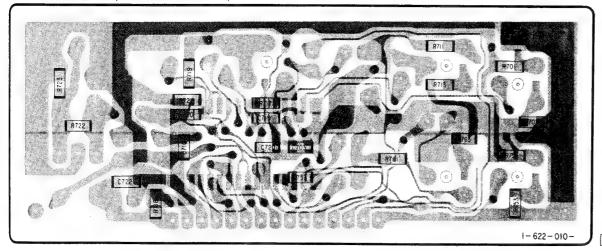

Caution:


Pattern face side: Parts on the pattern face side seen from

(Conductor Side)

Parts on the parts face side seen from the


(Component side) parts face are indicated. IC601

NR - 6 BOARD (COMPONENT SIDE)

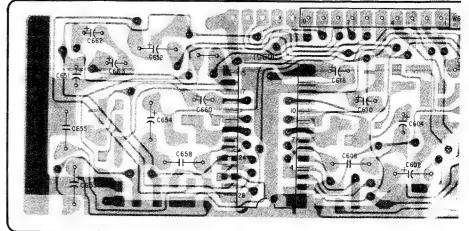

IC601


NR-6 BOARD (CONDUCTOR SIDE)

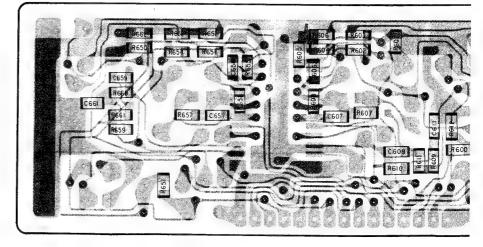


— 165 —


AUDIO


AUDIO

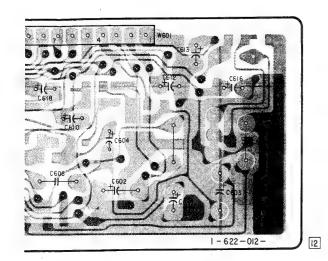


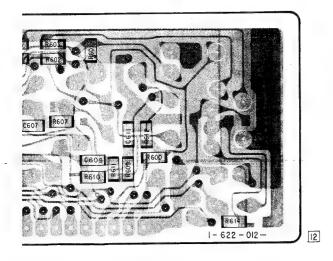



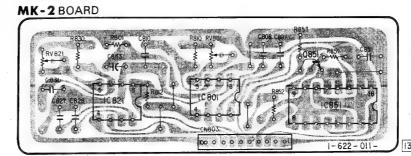


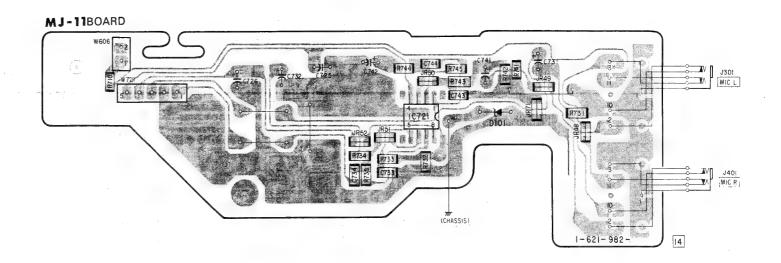


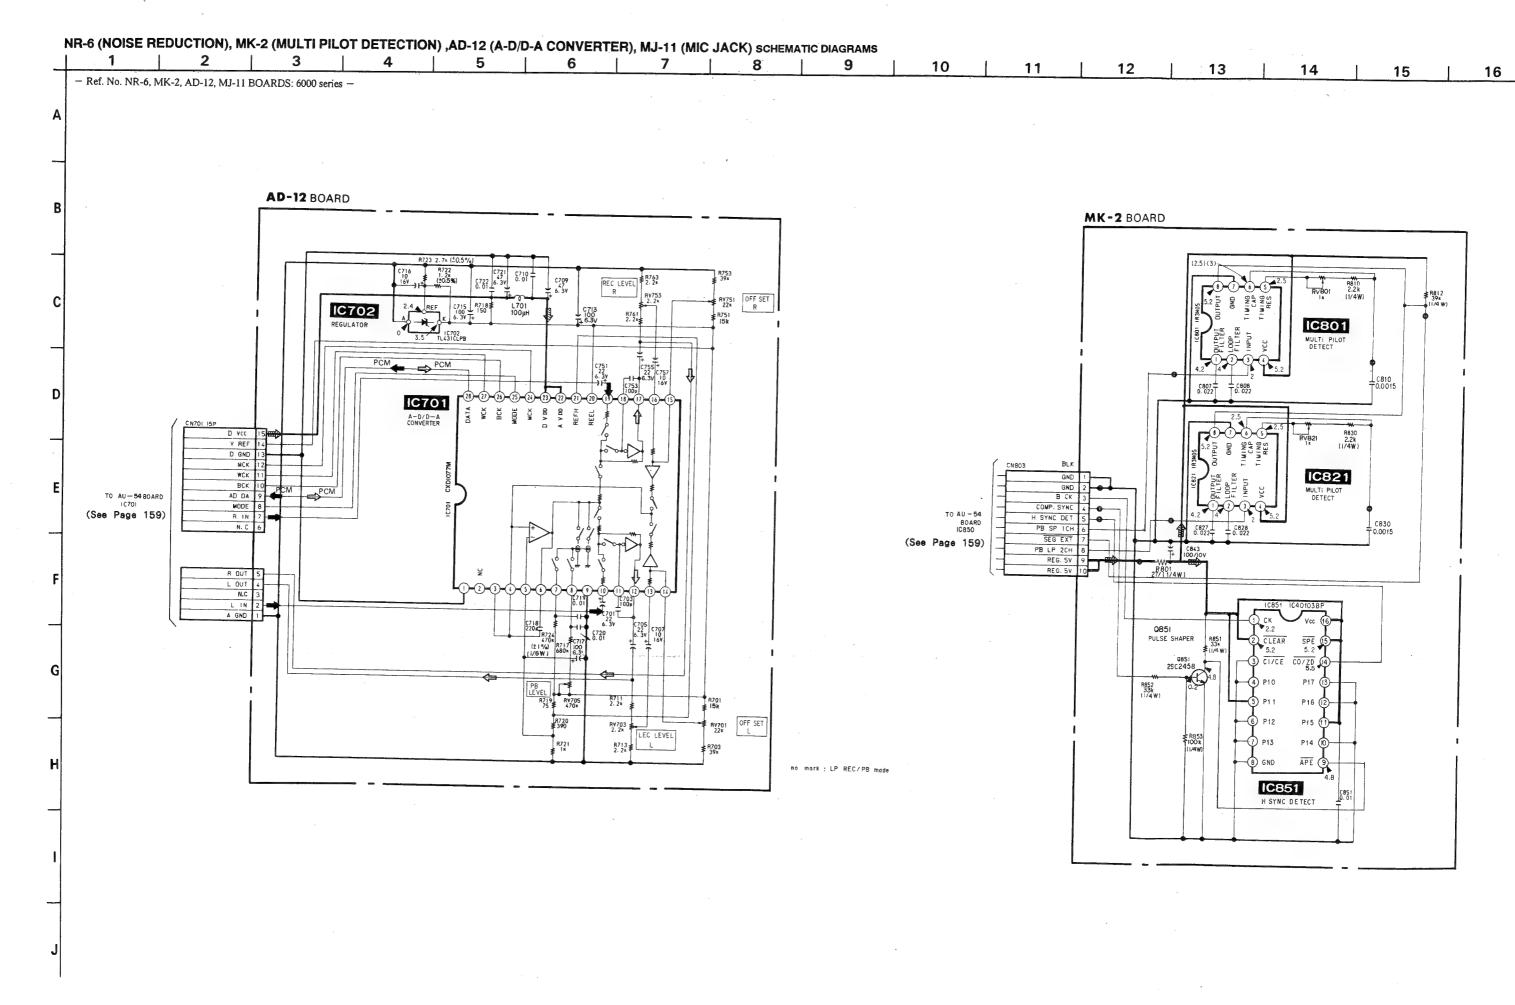

16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |



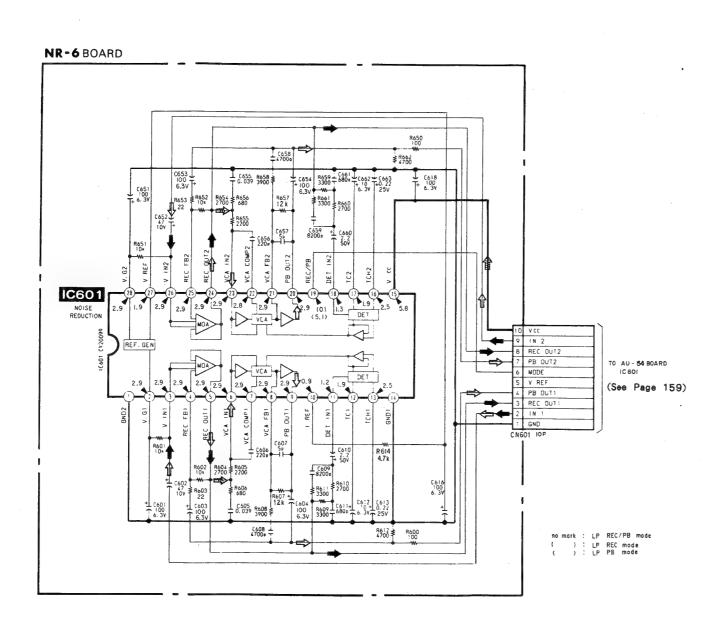

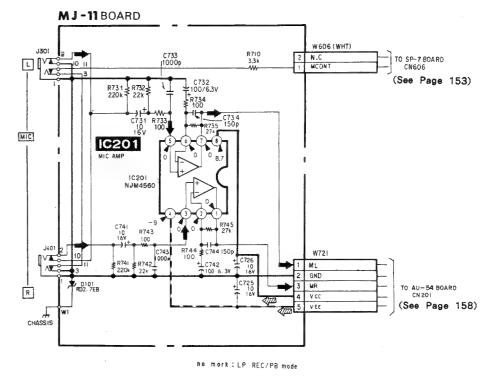

Signal path

İ		V	IDEC	Signal	ALIDIO Sizzal
		CHROMA	Υ	Y/CHROMA	AUDIO Signal
	REC				-
	РВ				



AF-20 (AFM PROCESS) PRINTED WIRING BOARDS

- Ref. No. AF-20 BOARD: 6000 series -


AF-20 (A

- Ref. No

VIDEO Signal AUDIO Signal CHROMA Y Y/CHROMA ₽

IC501

AF-20 BOARD

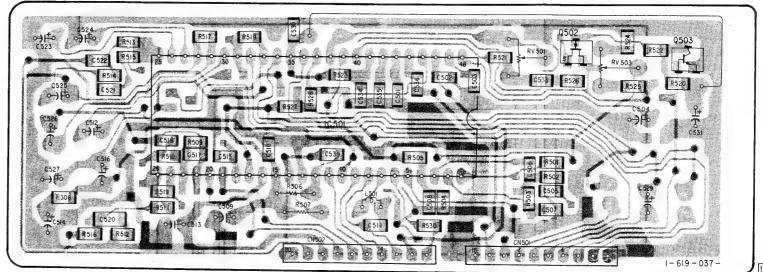


Caution:

Pattern face side: Parts on the pattern face side seen from

(Conductor Side) Parts on the parts face side seen from the


(Component side) parts face are indicated. Signal path

REC

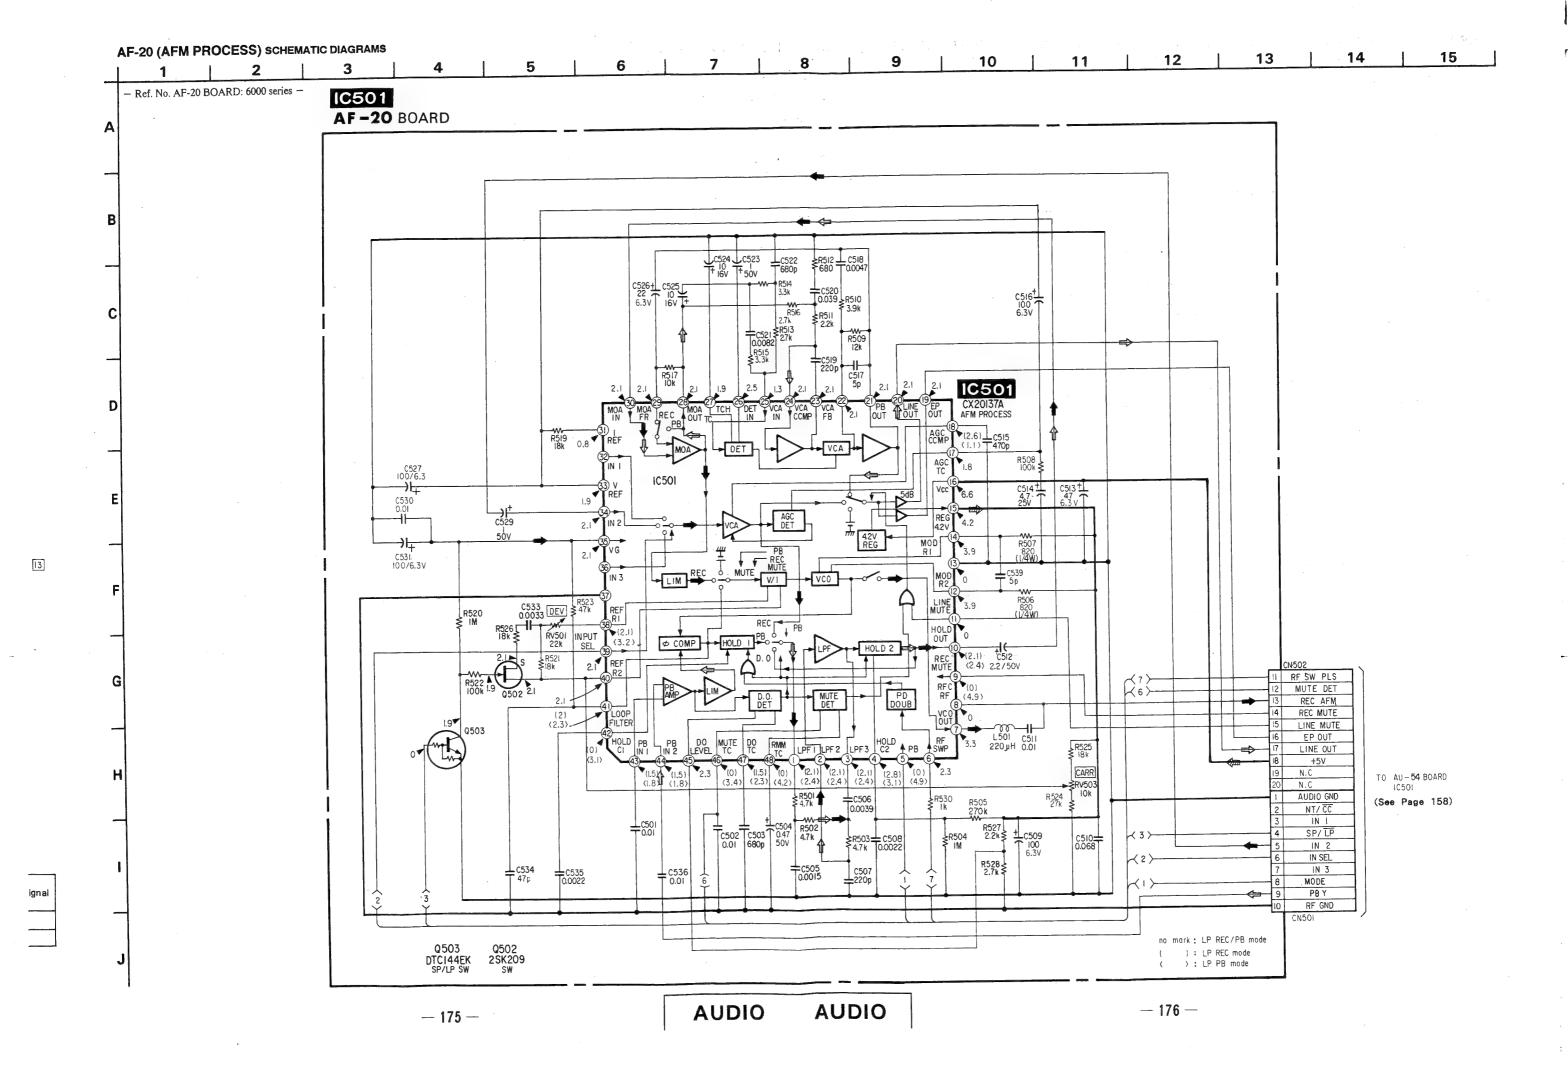

PW-62 (LEVEL METER/VOLUME/JACK/REMOTE CONTROL REDEIVER) PRINTED WIRING BOARDS

- Ref. No. PW-62 BOARD: 6000 series -

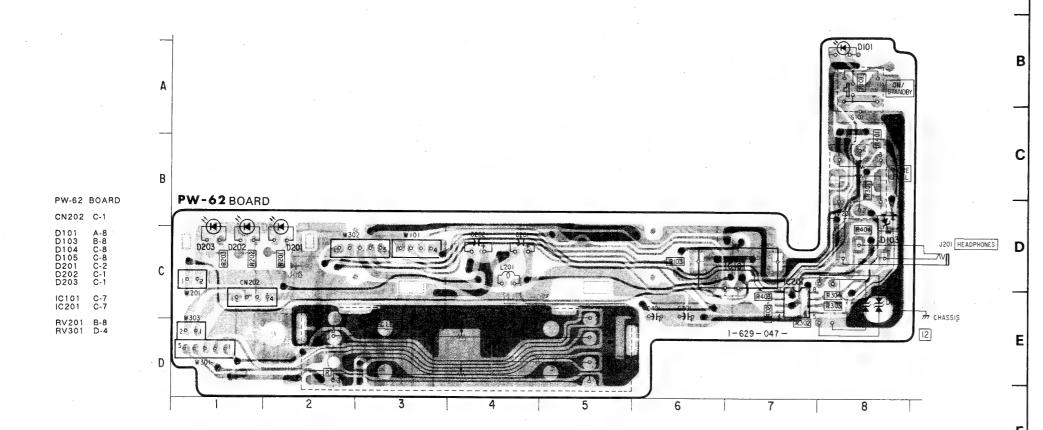


Caution: Pattern face side: Parts on the pattern face side seen from (Conductor Side) Parts face side: (Component side) parts face are indicated.

> **AUDIO AUDIO**

- Ref. No. PW-62 BOARD: 6000 series -W101 4P ON/STANDBY UNSW GND TO SP-7 DIOI TLGI23A POWER SW BOARD REMOTE ON/ STANDBY CN 014 REG 5V (See Page 126) RECEIVER CHASSIS GND TO AU-54 BOARD LLO CN204 GND LRI (See Page 158) REC LÈVEL W302 5P HLL HLR TO AU-54 BOARD --- WHT GND CN208 VCC (See Page 158) VEE


PW-62 (LEVEL METER/VOLUME/JACK/REMOTE CONTROL REDEIVER) sci

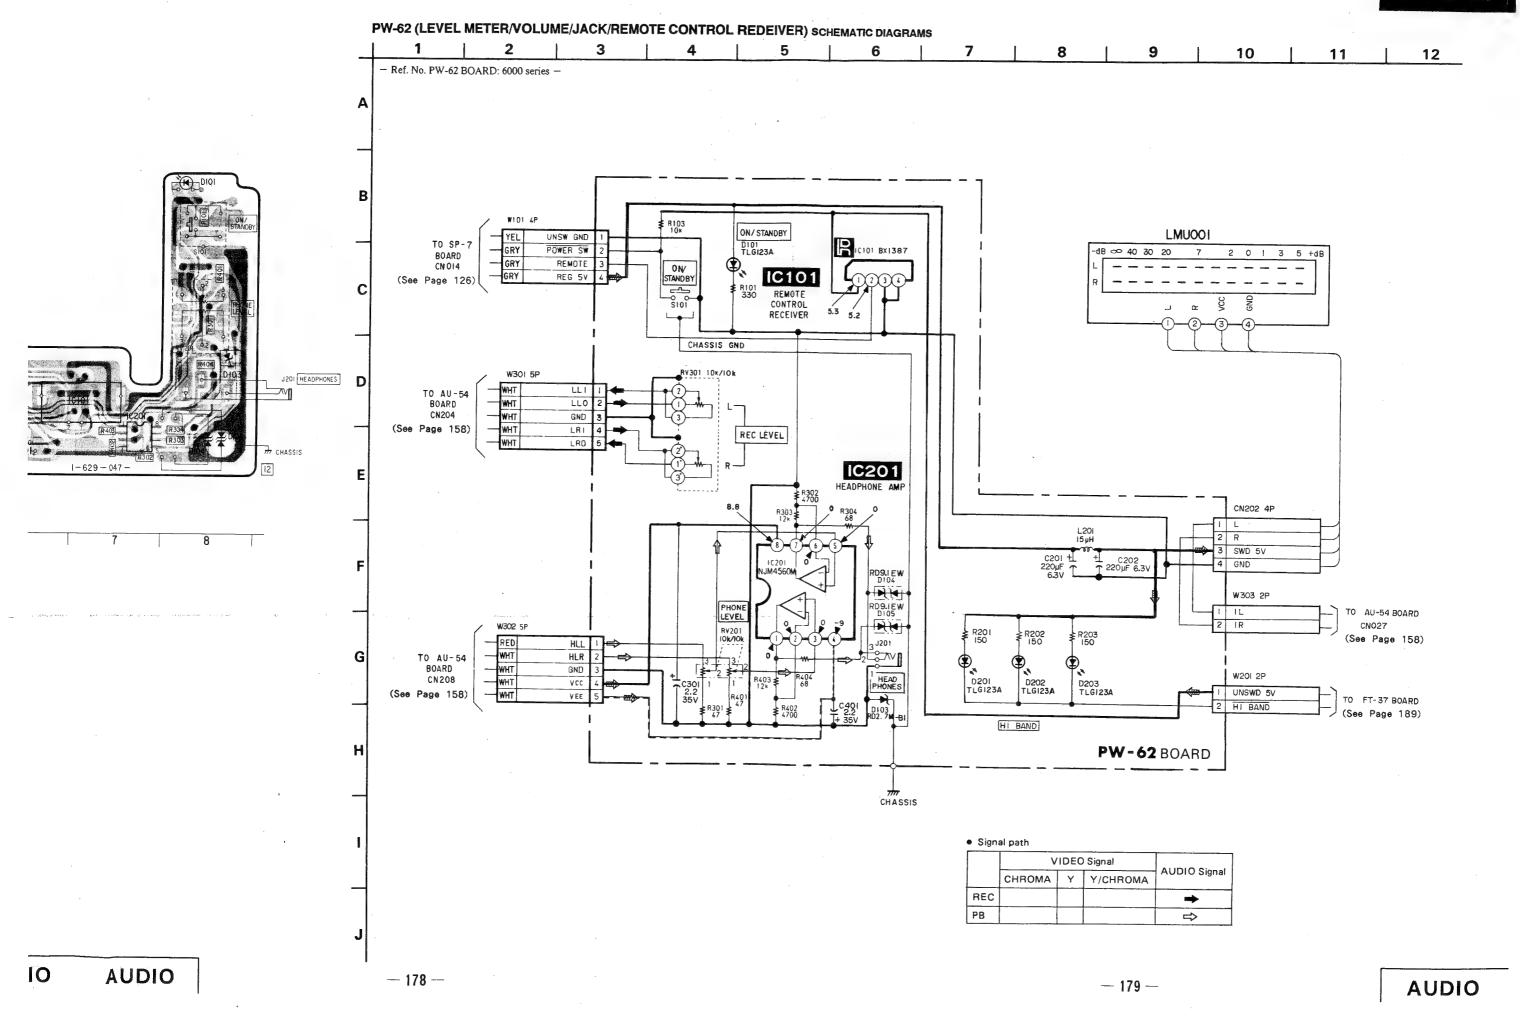






TU-82 (TUNER/VIF/SIF), TS-49 (TUNER CONTROL), PR-12 (TUNER PRESET SWITCH) PRINTED WIRING BOARDS


- Ref. No. TU-82, TS-49 BOARDS: 12000 series, PR-12 BOARD: 13000 series -

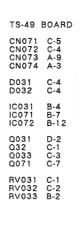


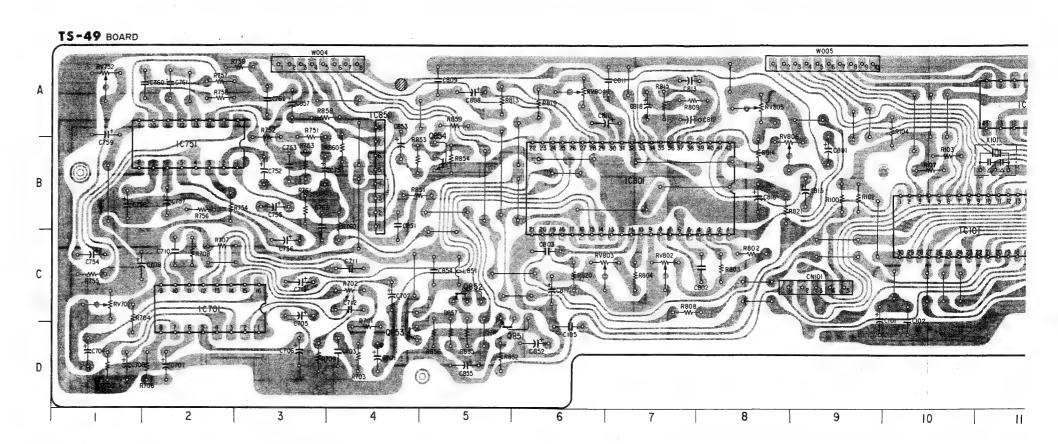


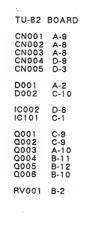

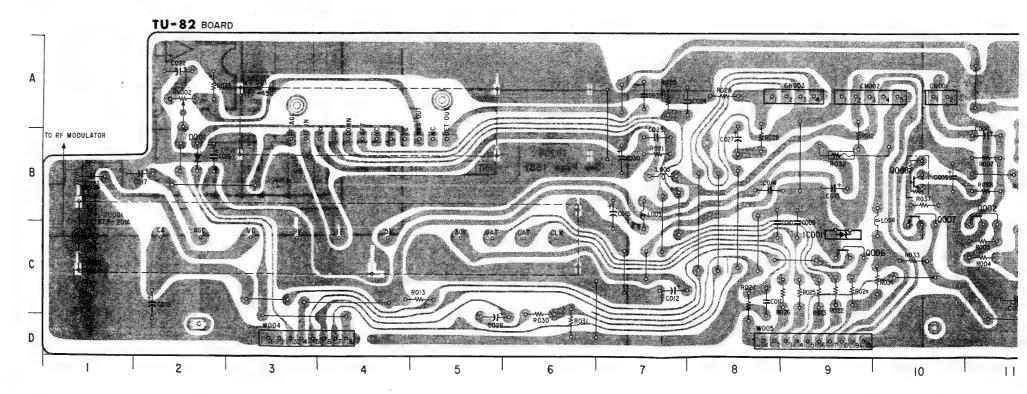


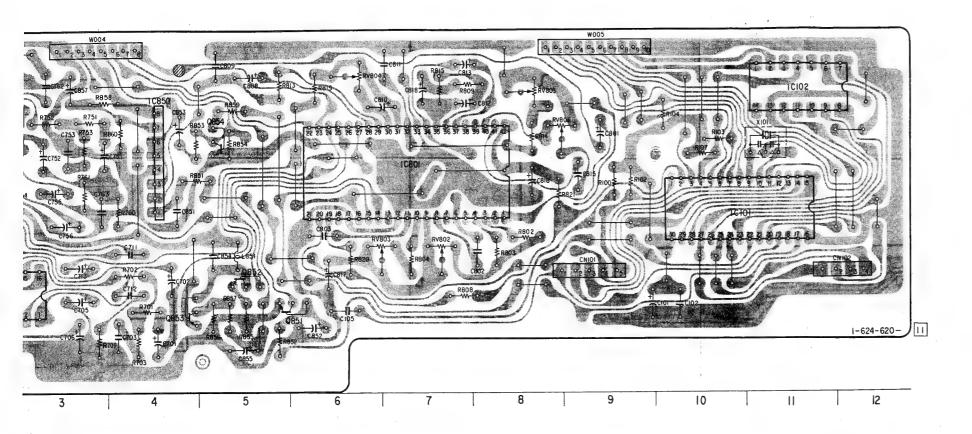


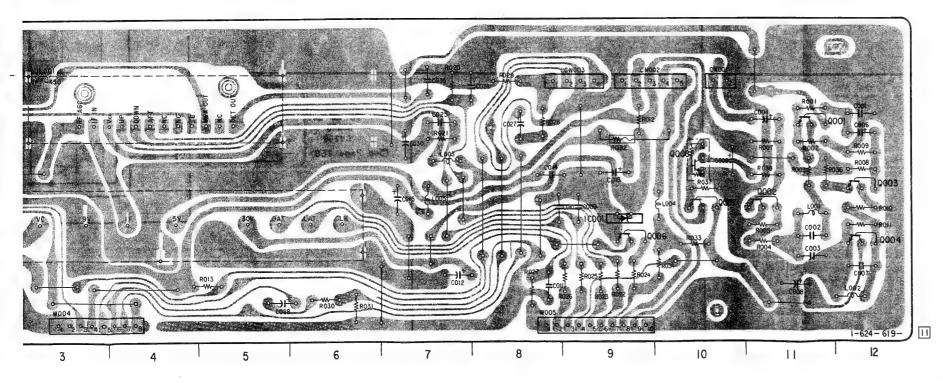

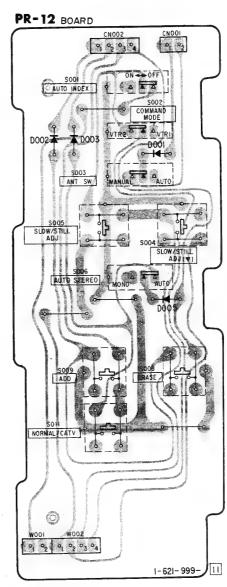

TUNER

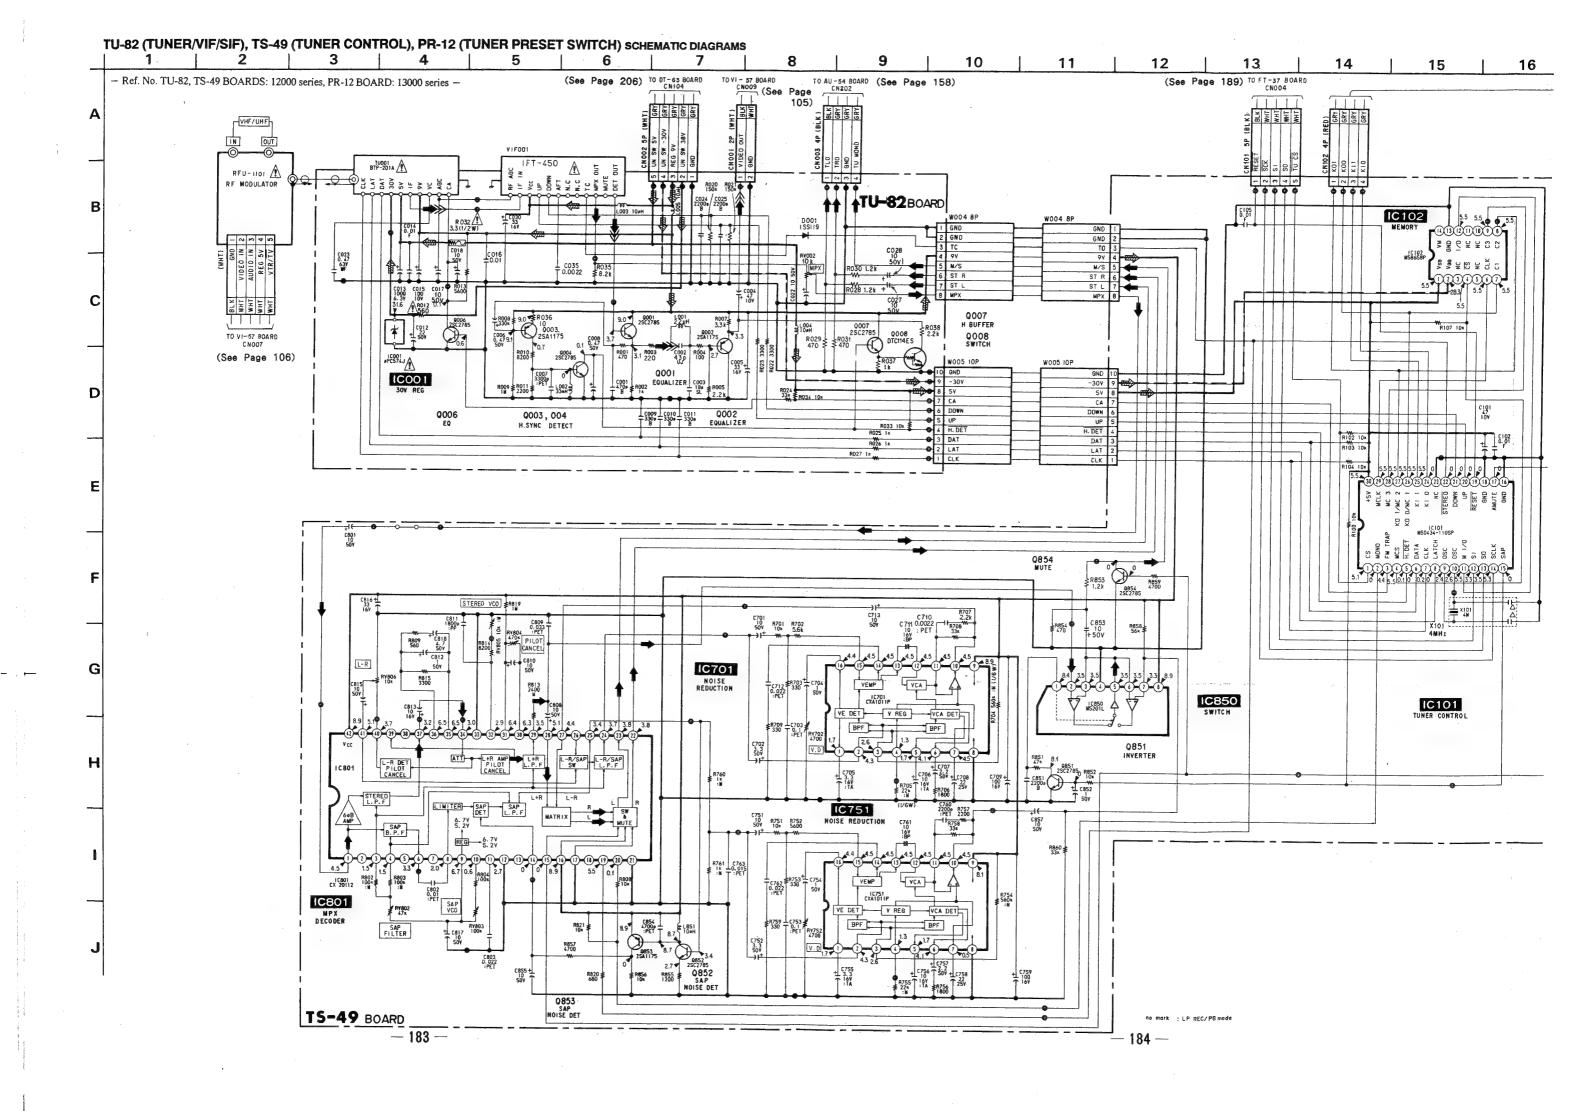


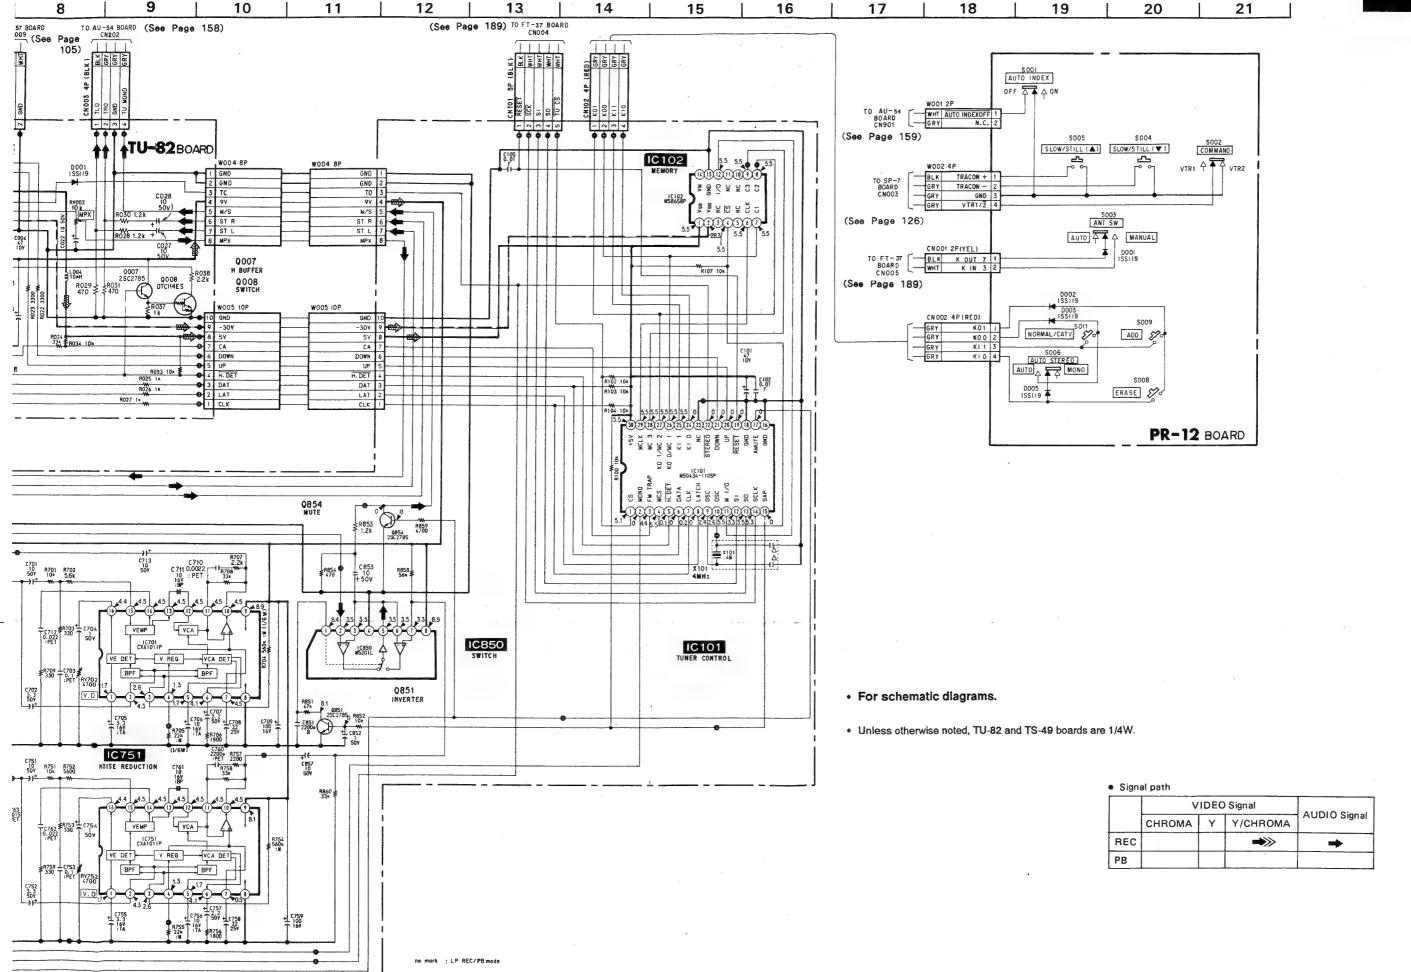



__ 184 —


EV-S900


FT-37 (TIMER/MODE CONTROL /JOG SHUTTLE/INDICATOR TUBE), CB-8 (THROUGH), FR-39 (LED) PRINTED WIRING BOARDS

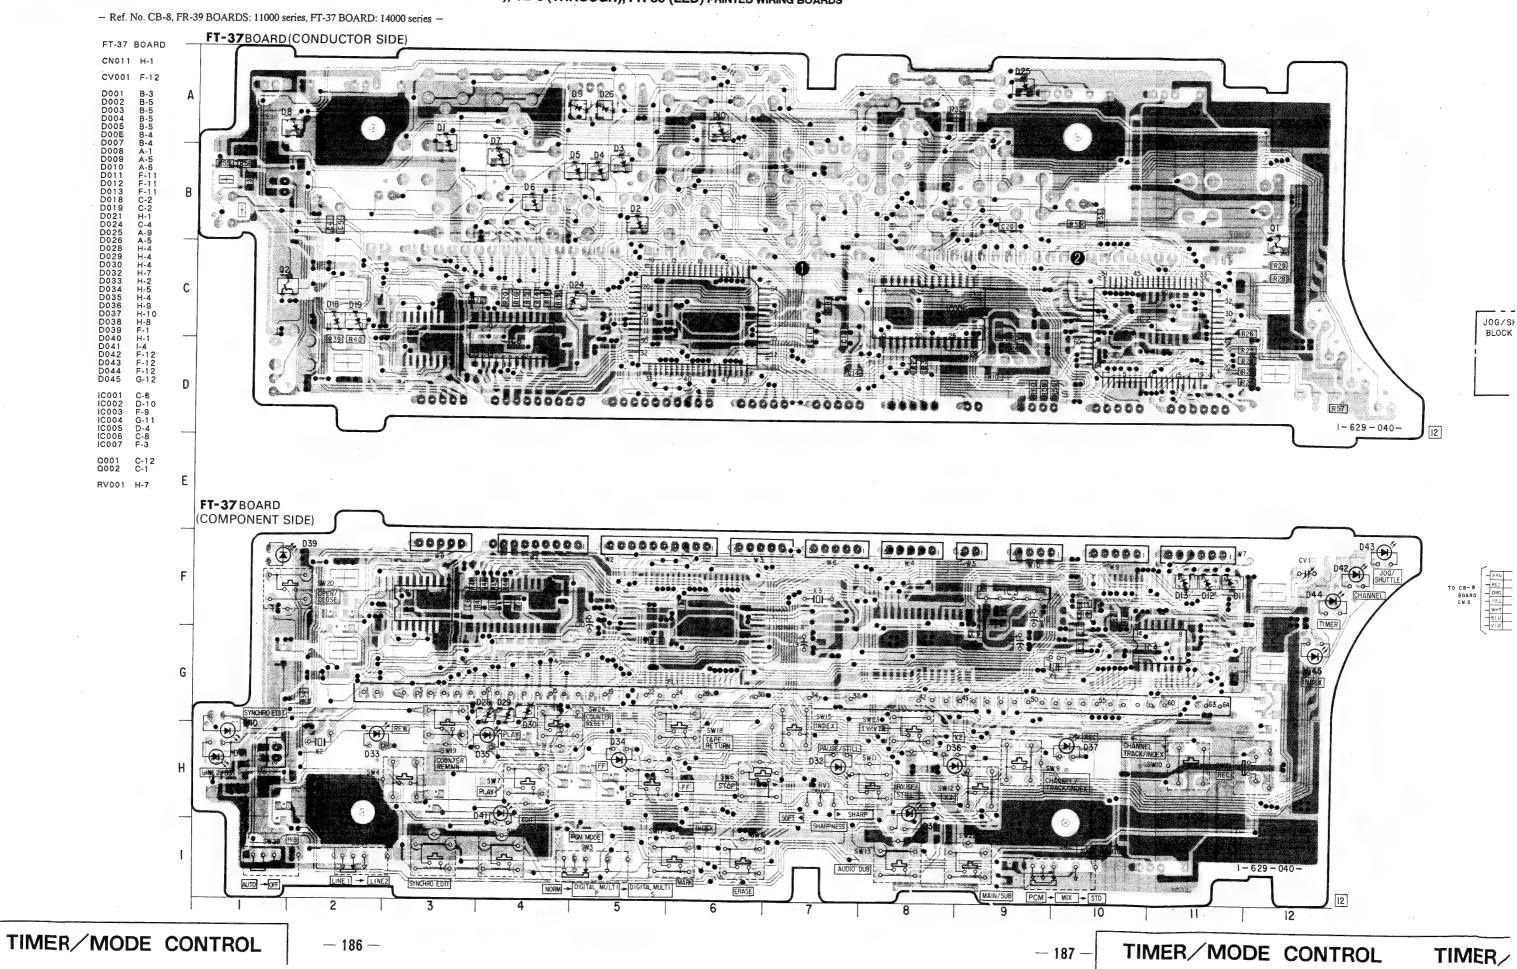


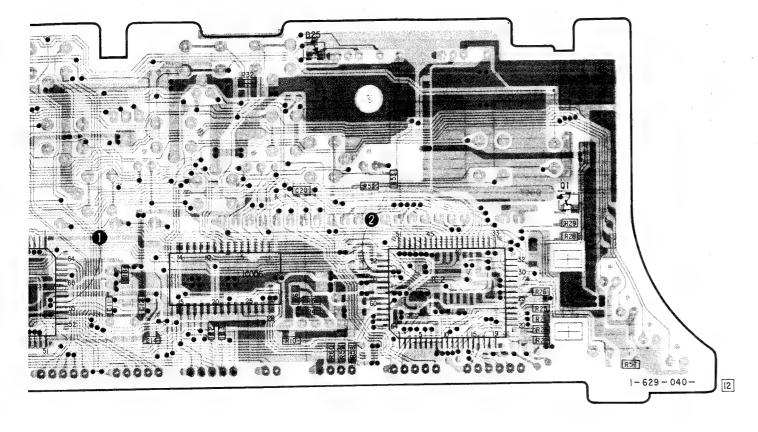


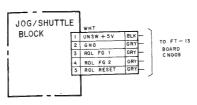

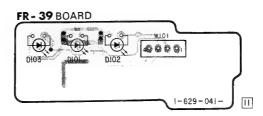

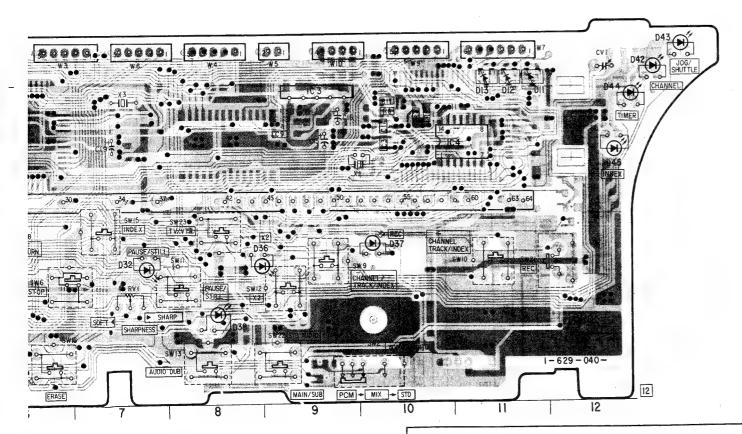

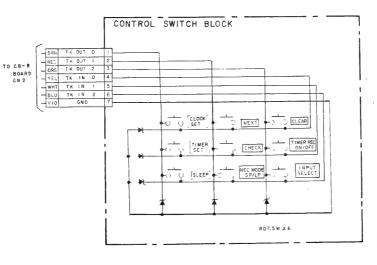

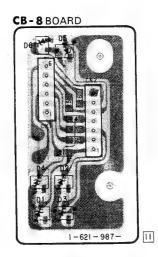

Caution:

Parts on the pattern face side seen from


the pattern face are indicated. Parts on the parts face side seen from the Parts face side:


(Component side)

TIMER/MODE CONTROL


TIMER/MODE CONTROL


— 188 —

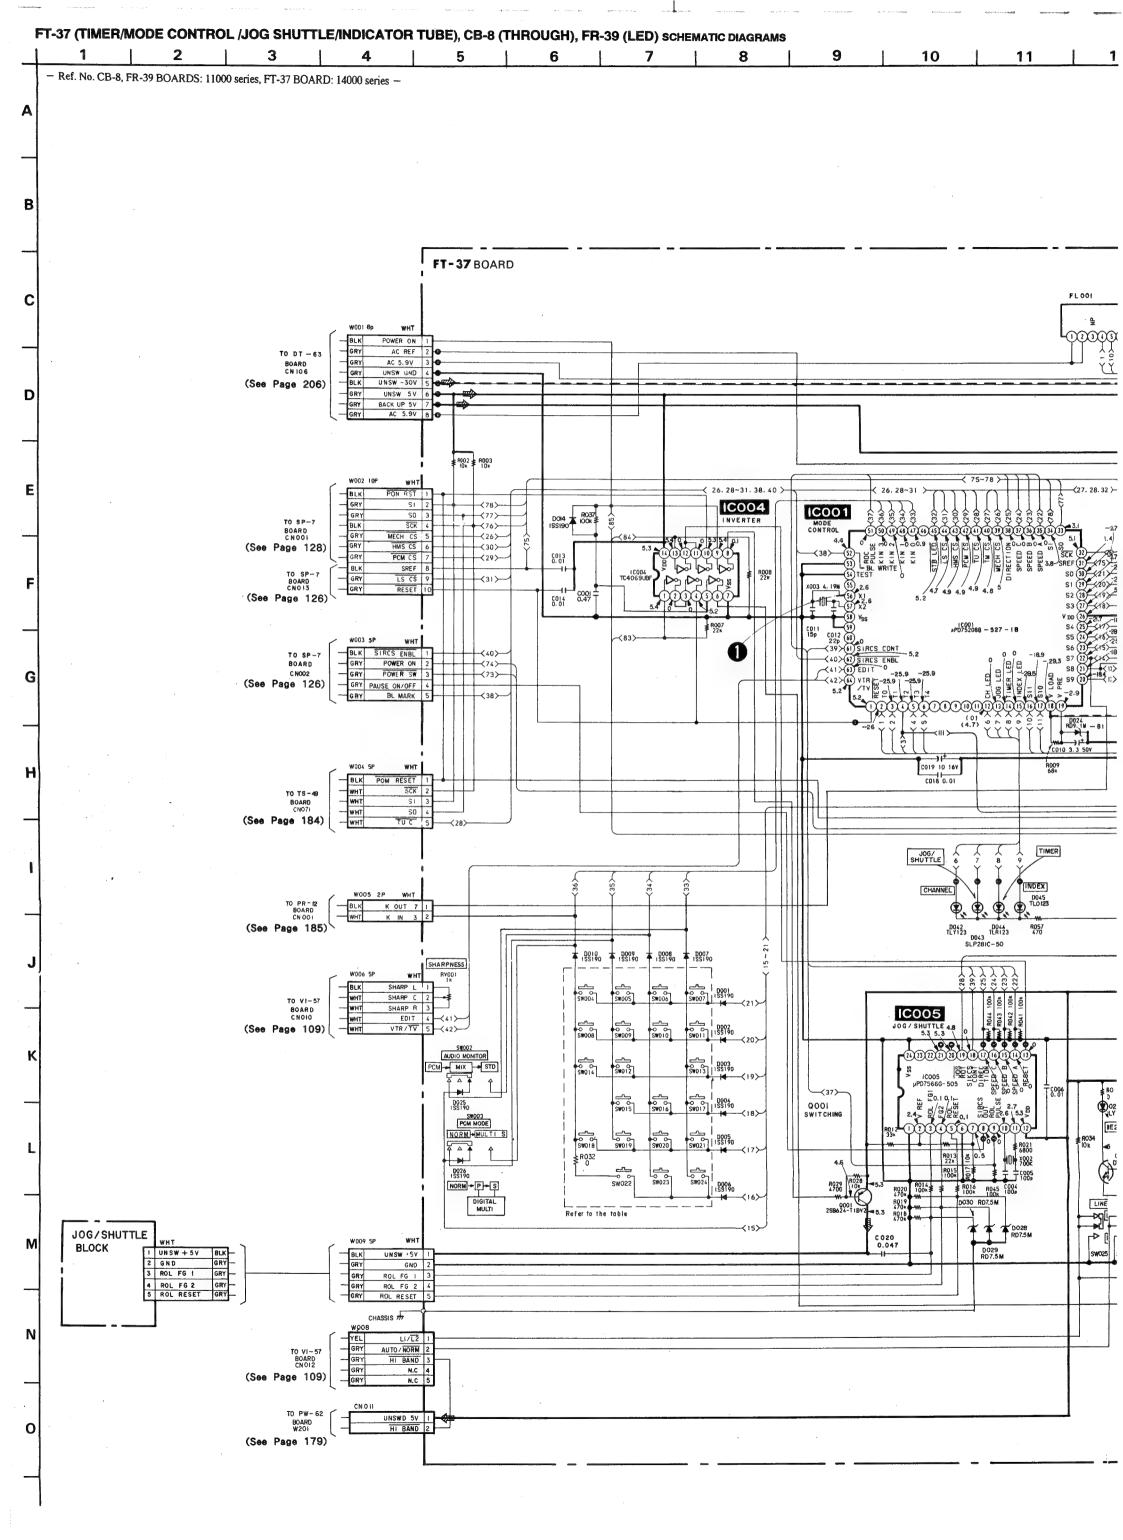


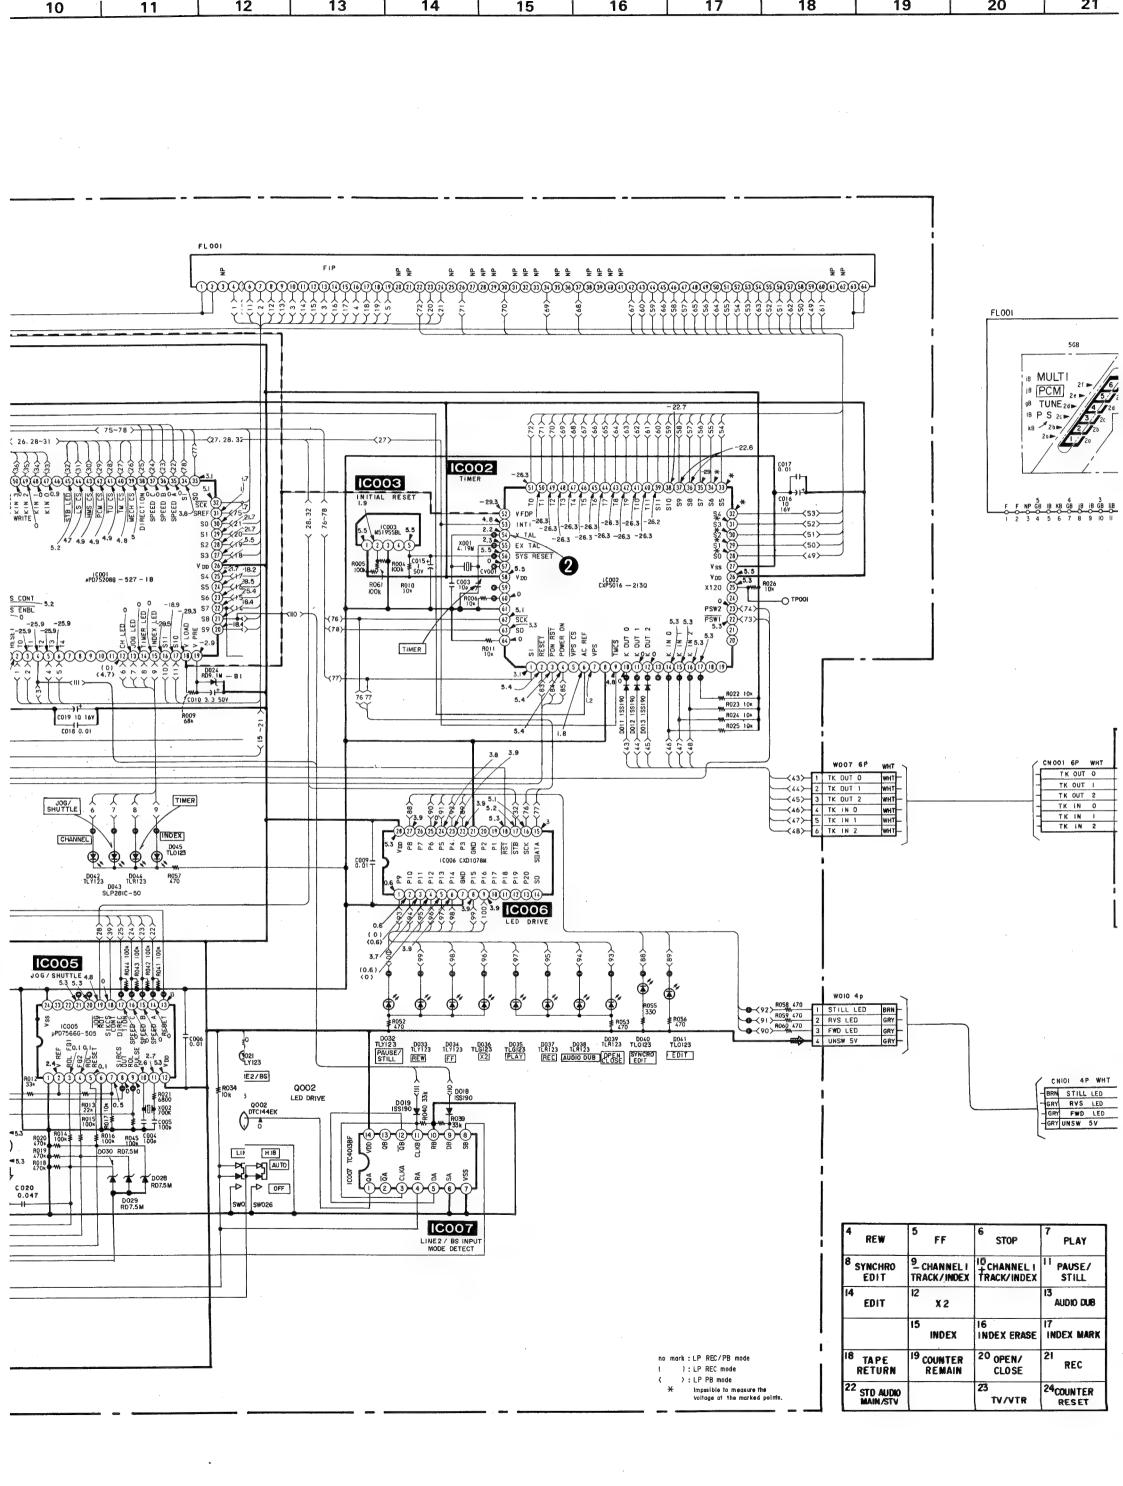

) 21 22 23 24 25 26 27 28 29 30 31

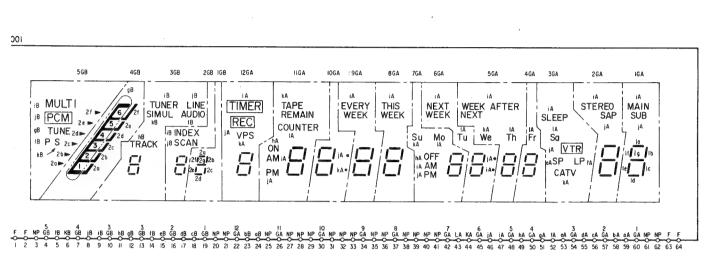

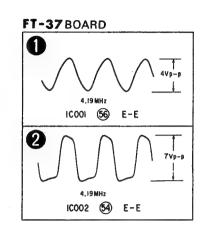


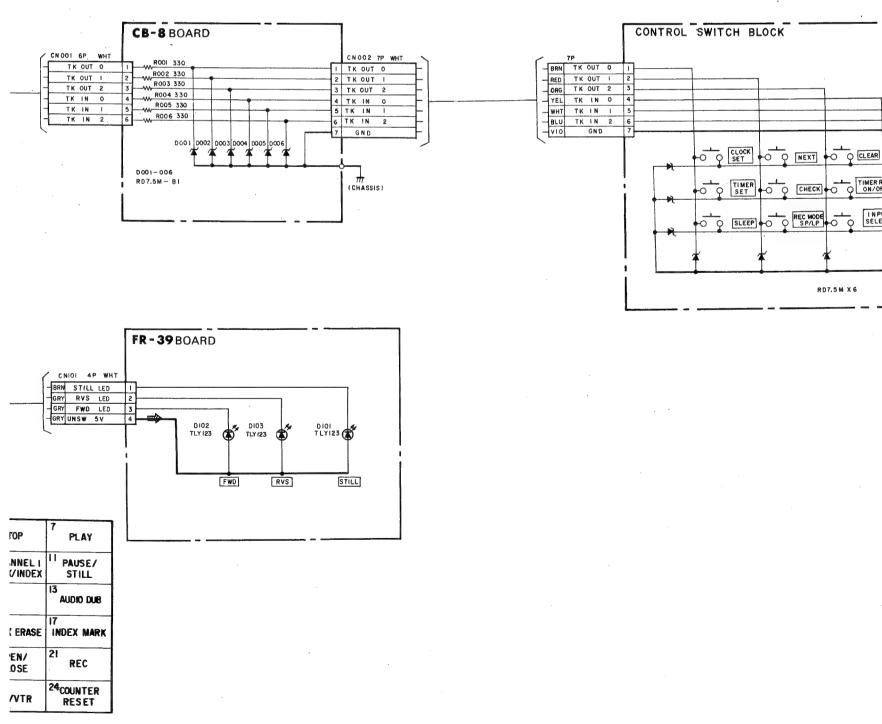


IO-16 (CONTROL S JACK), IO-17 (INPUT/OUTPUT TERMINAL) PRINTED WIRING BOARDS


- Ref. No. IO-16, IO-17 BOARDS: 7000 series -

IO-17 BOARD (CONDUCTOR SIDE)

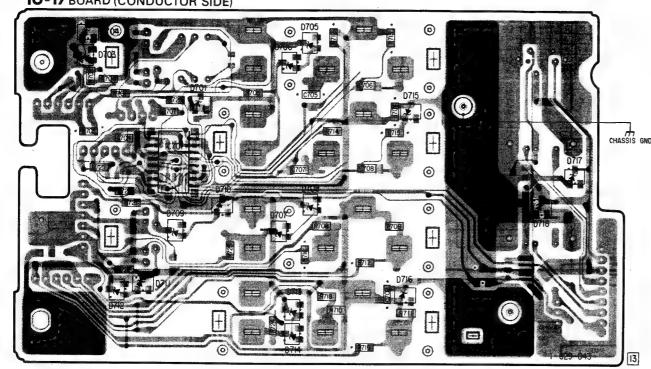



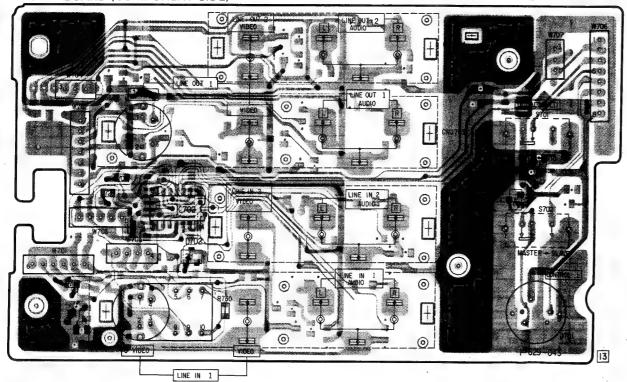

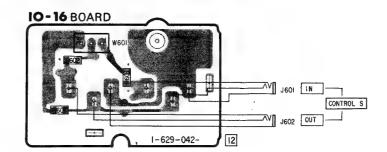

Caution:

Pattern face side: (Conductor Side)

Parts on the pattern face side seen from


Parts face side:


Parts on the parts face side seen from the

(Component side)

parts face are indicated.

IN/OUT

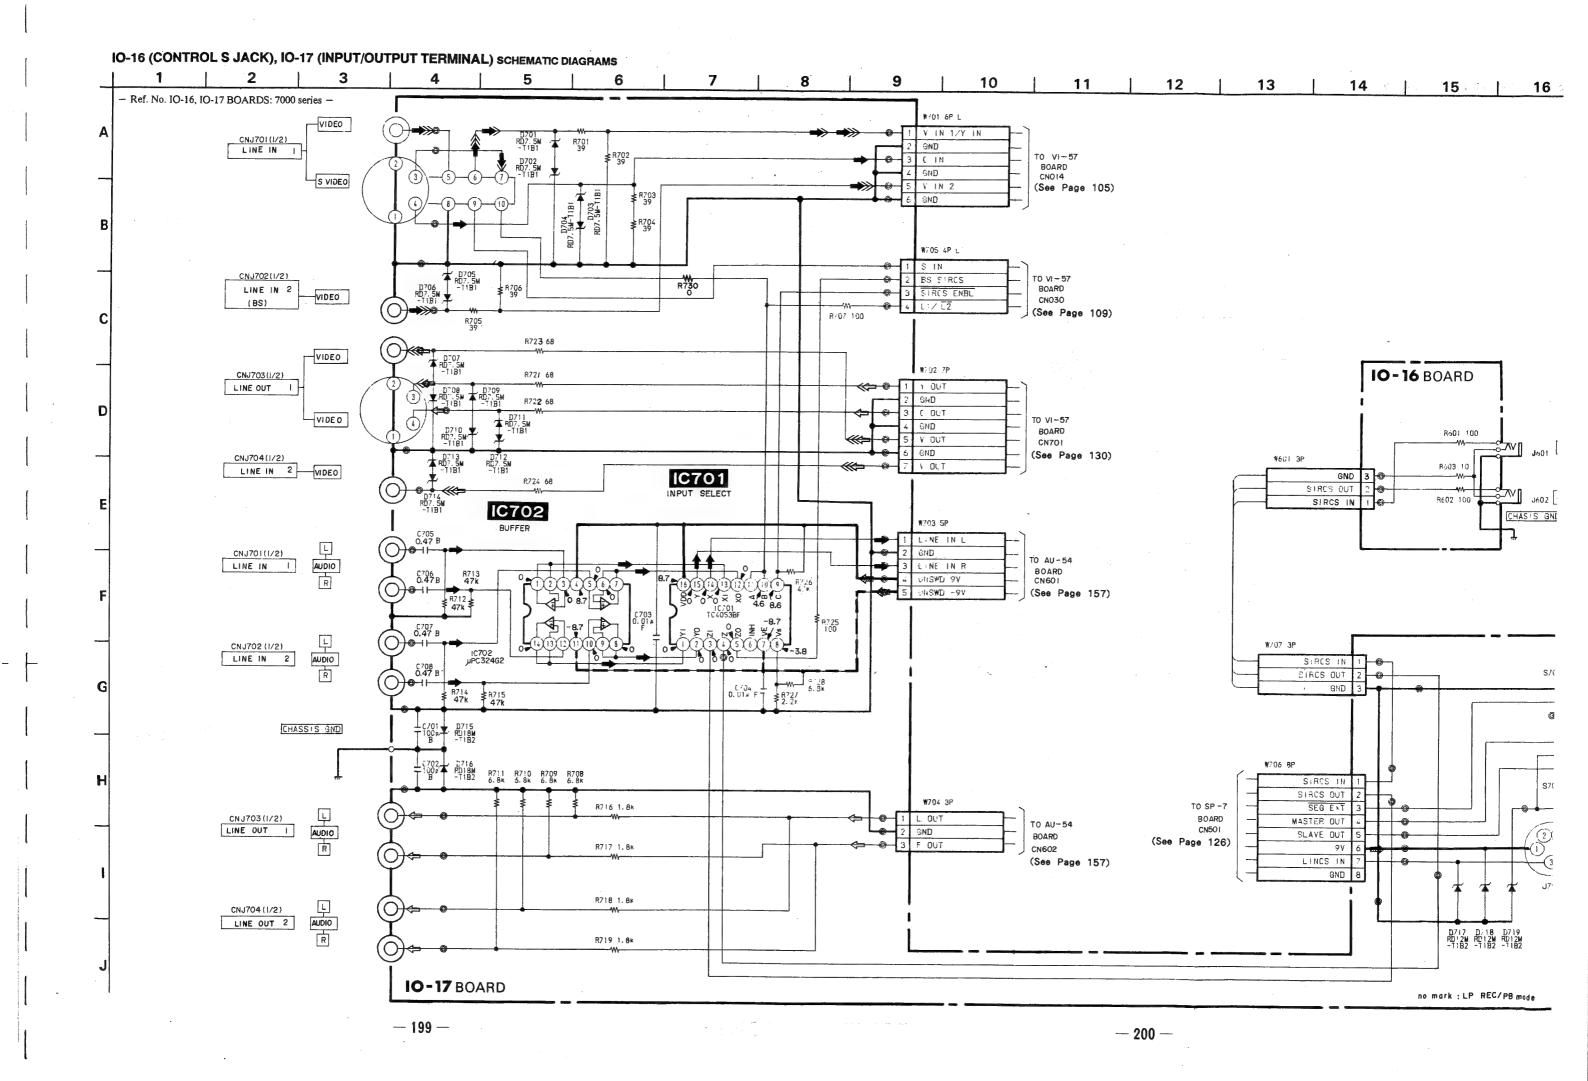


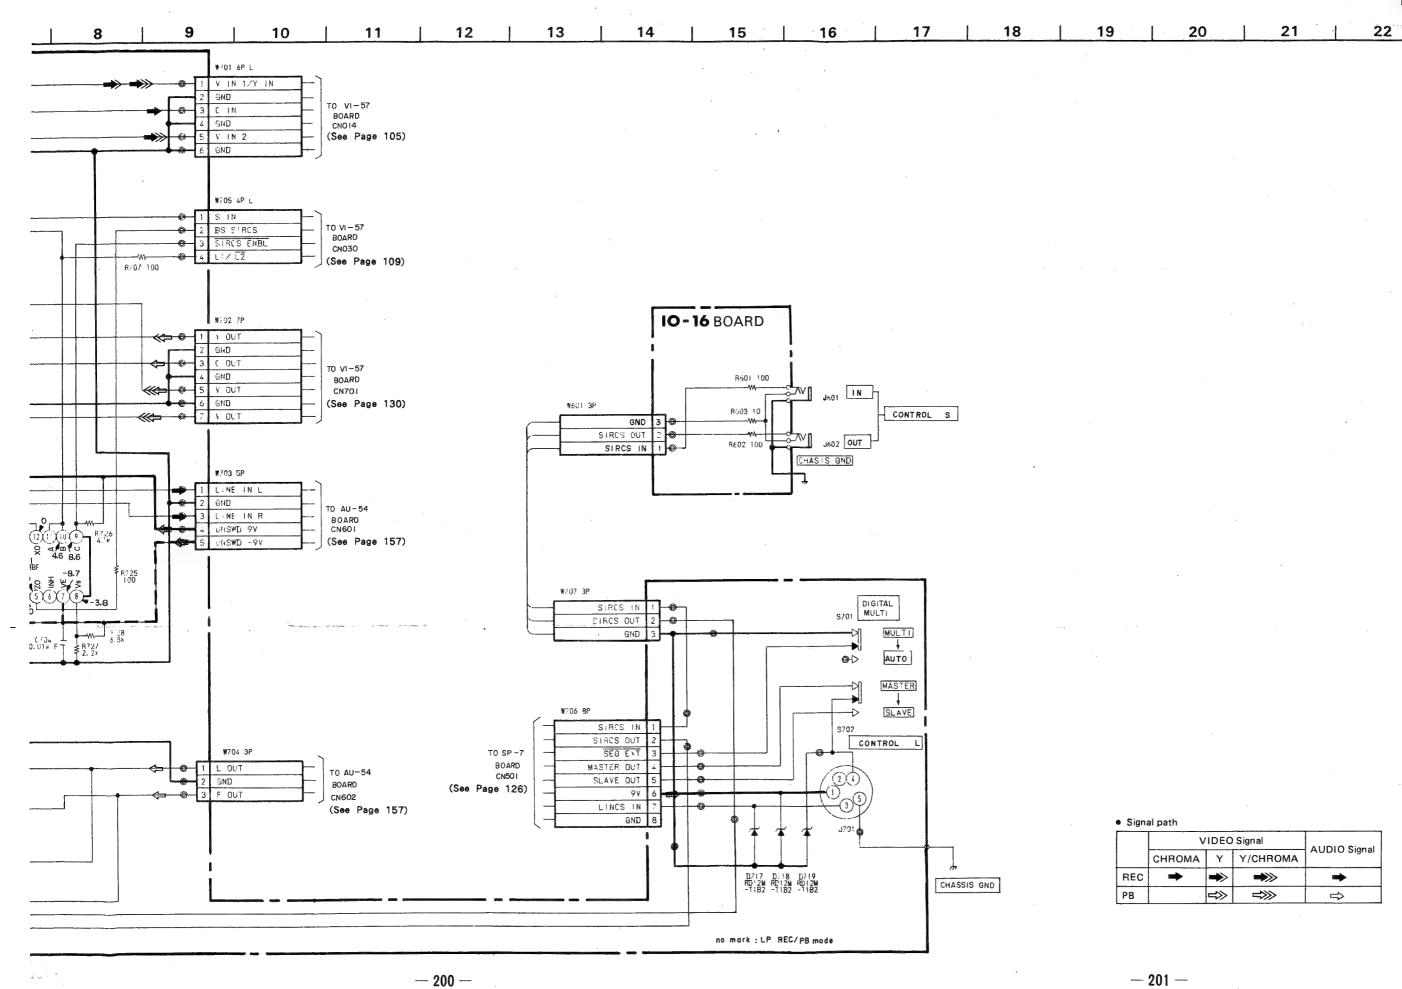






DR-35 (SWITCHING REGULATOR), DO-1 (REGULATOR), DT-63 (REGULATOR), DL-15 (RECT), DS-15 (LET) PRINTED WIRING BOARDS


- Ref. No. DR-35, DO-1, DT-63, DS-15, DL-15 BOARDS: 13000 series -

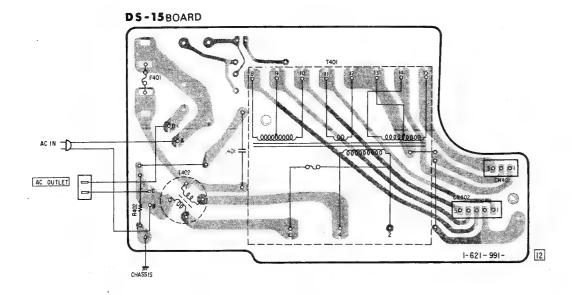


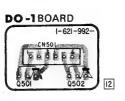


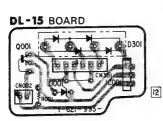


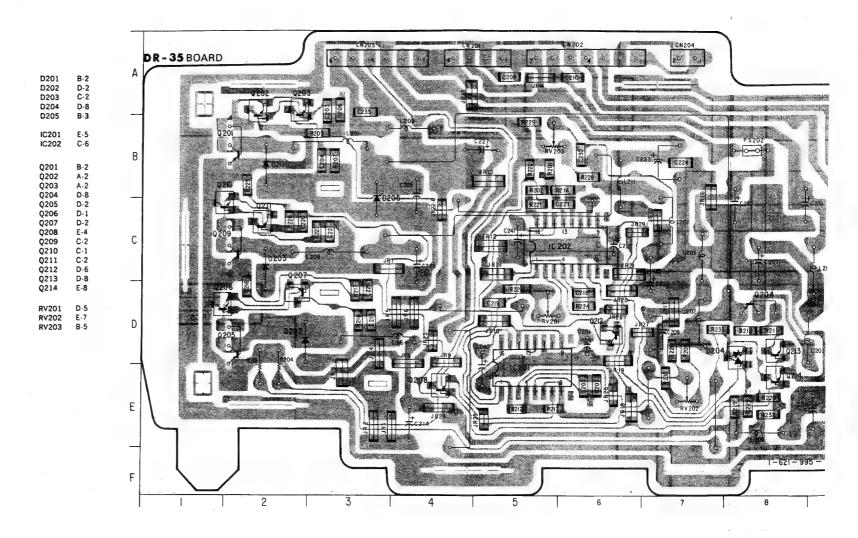

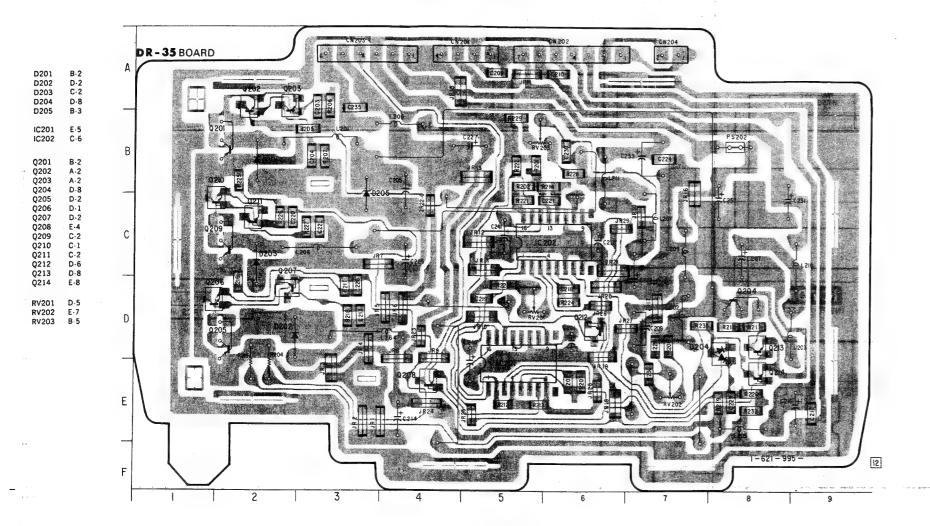

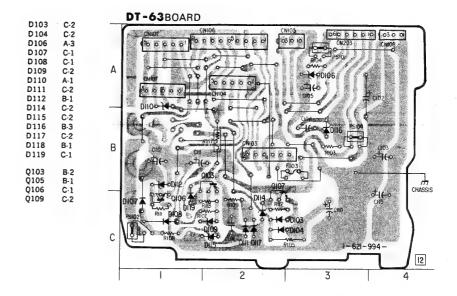

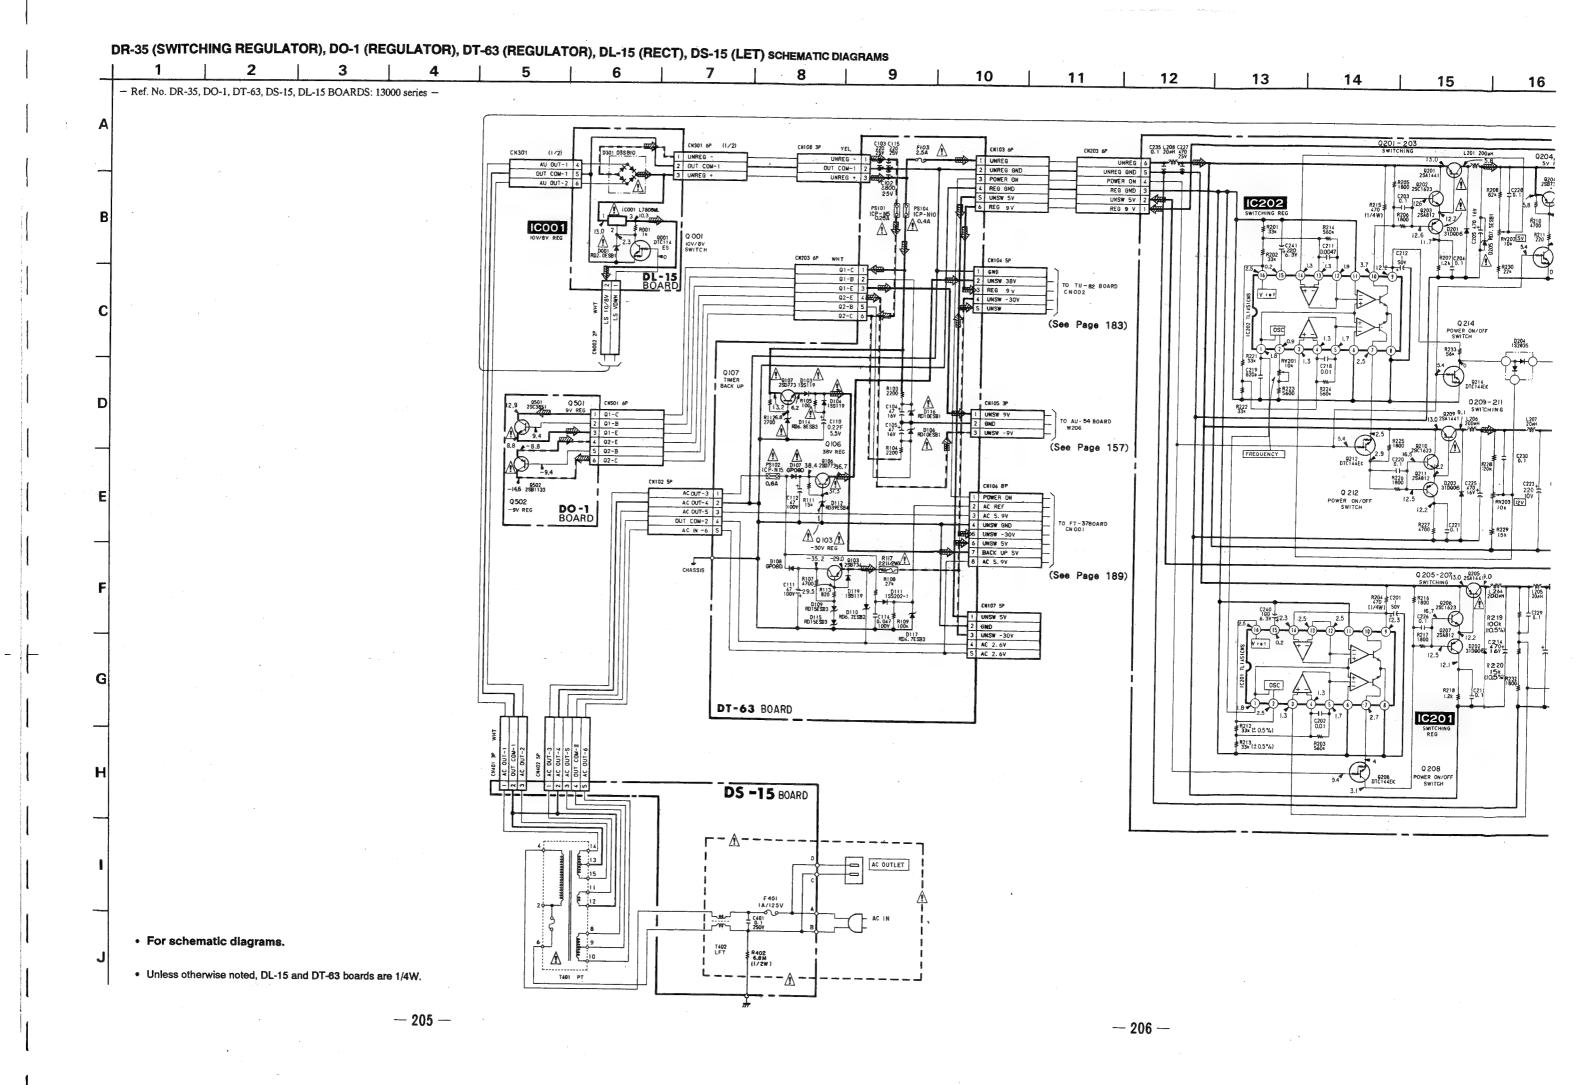

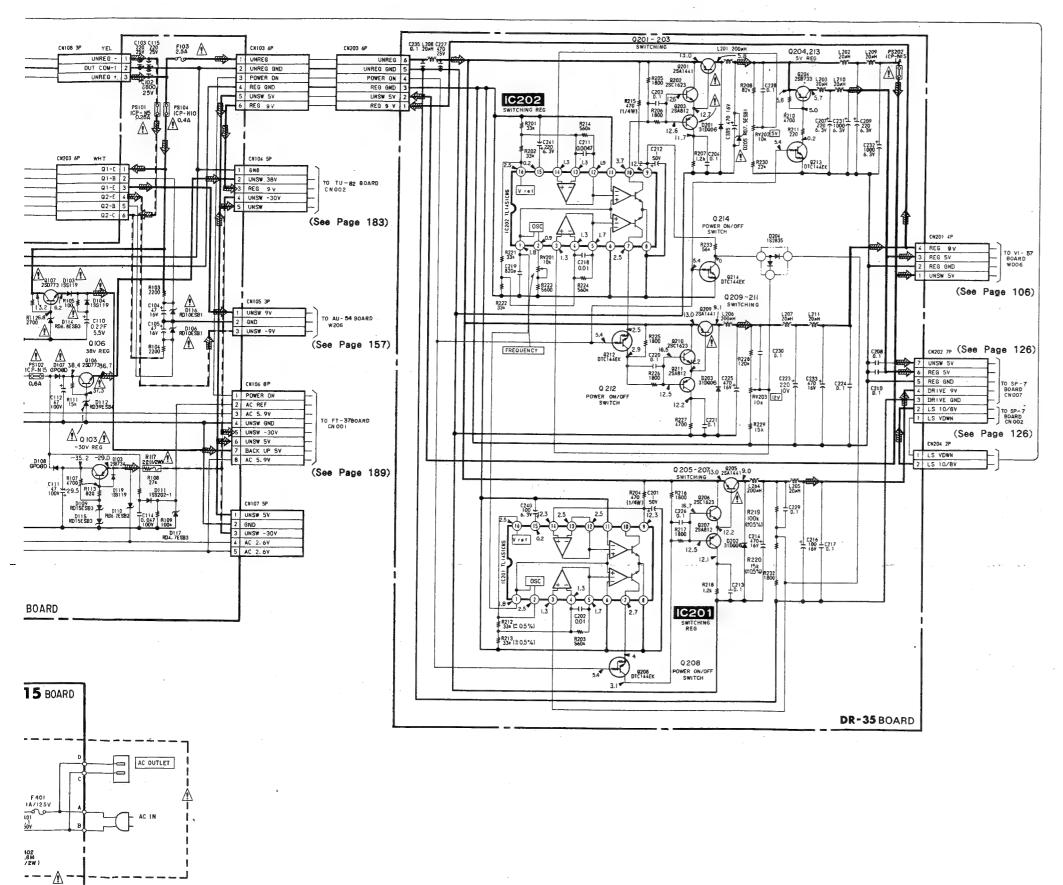

TOP VIEW

51 A.1-4 52 *1-6 53 A.3-7 54 *A-7 55 3-6

56 *A-7 57 *1-6 58 *3-7 59 *1-6 60 <u>A.1-5</u>

61 A.1-5 62 3-6 63 *3-7 64 *3-7 65 3-7

4-3. SEMICONDUCTORS

BA3707 LB1640N 2SA1175 FMW1 **AA3422S** NJM4560S 2SC2785 FMW2 2SC2785-E 000 **BA401** M51955BL D3SB10 M5201L 2SA1441 IMZ1 **BA7036LS** EQA11-09A MC14538BF 2SB1133-R 2SC3851 2SD1266 PT360FS 2SD1406 BX1387 **GL450S** TA7374P 155119 2SB733 1SS202-1 CX20030 2SB733-4 RD10ES-B1 CX20031 2SB734 RD15ES-B3 CX20032 2SD773 RD2.0ES-B1 CX20035 RD2.7ES-B GP-2S09-B CX23011 CX23054 RD2.7ES-B2 RD39ES-B4 **CXA1234AR** RD4.7ES-B3 CXD1066Q RD6.2ES-B2 TL431CLPB MB64H428PF RD6.8ES-B3 **RD7.5 ES-B1** 1-14-2 2SB740 SLP281C-50 **TLY123** CXP5016-253G μPD7519HG-060-36 31DQ06 CXP5048H-111Q CXP5048H-113Q MB674101PF FMS1FE μPD75104G-547-1B μPD75106G-529-1B U05G

SECTION 5 EXPLODED VIEWS

NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

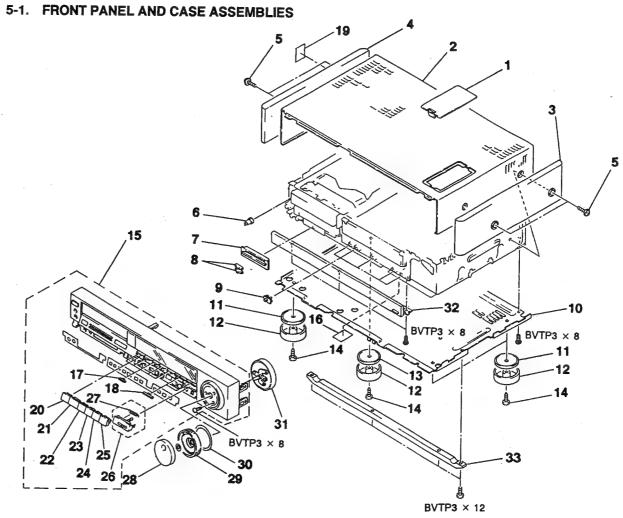

No.	Part No.	<u>Description</u> Ren	mark ,	No.	Part No.	Description	Remark			
1 2 3 4 5	3-716-941-11 X-3713-417-1 X-3713-418-1	WOOD (RIGHT) ASSY, SIDE		18 19 20 21 22	*3-703-848-01 X-3713-409-1 X-3713-407-1	CAP, CH BUTTON LABEL (N), SUB CAUTION KEY (2) ASSY, REW KEY (2) ASSY, FWD KEY (2) ASSY, FF	reality is			
6 7 8 9 10	3-716-868-01 3-716-882-01	COVER ASSY, SLIDE KEY, SLIDE		23 24 25 26 27	3-716-856-11 X-3713-412-1 X-3713-410-1 X-3713-413-3		27			
11 12 13 14 15	X-3713-423-1 3-722-148-01 3-721-343-11	SPACER (A), FOOT FOOT ASSY (G) SPACER (B), FOOT SCREW (M4X10), FIXED PANEL ASSY, FRONT 17, 18, 20	-27	28 29 30 31 32	3-721-202-21 3-716-831-01 1-464-784-11	DIAL, JOG RIMG, SHUTTLE SPACER ENCODER, ROTARY SWITCH BLOCK, CONTROL				
16 17	*3-703-845-01 3-722-133-01	LABEL (N) (U/C), MAIN CAUTION CAP, COUNTER BUTTON		33	3-722-162-01					

SECTION 5 EXPLODED VIEWS


-XX, -X mean standardized parts, so they may have some differences from the original one.

The construction parts of an assembled part are indicated with a collation number in the remark column.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not


The components identified by mark A or dotted line with mark
A are critical for safety.
Replace only with part number

Les composants identifiés par une marque A sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifé.

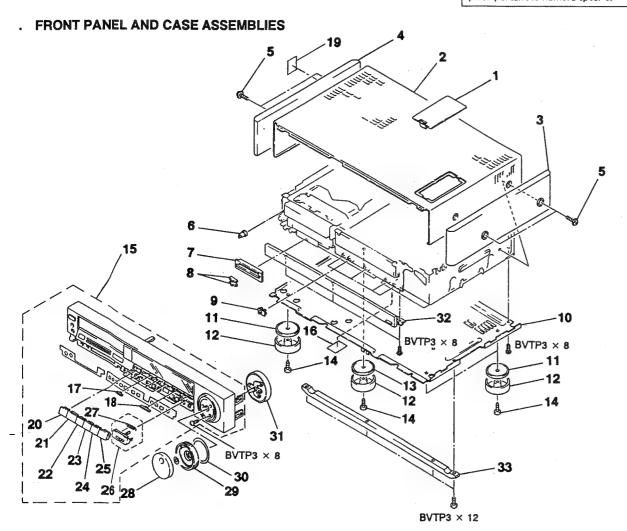


Part No.	Description	Remark	No.	Part No.	Description	Remark
3-722-146-01 3-716-941-11 X-3713-417-1 X-3713-418-1 3-721-342-11	LID, PRESET CASE, UPPER WOOD (RIGHT) ASSY, SIDE WOOD (LEFT) ASSY, SIDE SCREW, SIDE WOOD		18 19 20 21 22	3-722-122-01 *3-703-848-01 X-3713-409-1 X-3713-407-1 X-3713-408-1	CAP, CH BUTTON LABEL (N), SUB CAUTION KEY (2) ASSY, REW KEY (2) ASSY, FWD KEY (2) ASSY, FF	
3-716-867-11 X-3711-980-1 3-716-868-01 3-716-882-01 *3-716-913-21	KNOB, HP COVER ASSY, SLIDE KEY, SLIDE KNOB, SLIDE PLATE, BOTTOM	-	23 24 25 26 27	3-716-856-11 X-3713-412-1 X-3713-410-1 X-3713-413-3 3-689-531-01	KEY, STOP KEY (2) ASSY, PAUSE KEY (2) ASSY, X2 KEY (2) ASSY, REC SPRING, TENSION	27
3-722-147-01 X-3713-423-1 3-722-148-01 3-721-343-11 X-3713-428-1	SPACER (A), FOOT FOOT ASSY (G) SPACER (B), FOOT SCREW (M4X10), FIXED PANEL ASSY, FRONT 17, 18,	, 20-27	28 29 30 31 32	3-720-487-21 3-721-202-21 3-716-831-01 1-464-784-11 1-464-785-71	DIAL, JOG RIMG, SHUTTLE SPACER ENCODER, ROTARY SWITCH BLOCK, CONTROL	
*3-703-845-01 3-722-133-01	LABEL (N) (U/C), MAIN CAUTION CAP, COUNTER BUTTON		33	3-722-162-01	STAY, BOTTOM	

5-2. POWER BLOCK AND REAR PANEL ASSEMBLIES

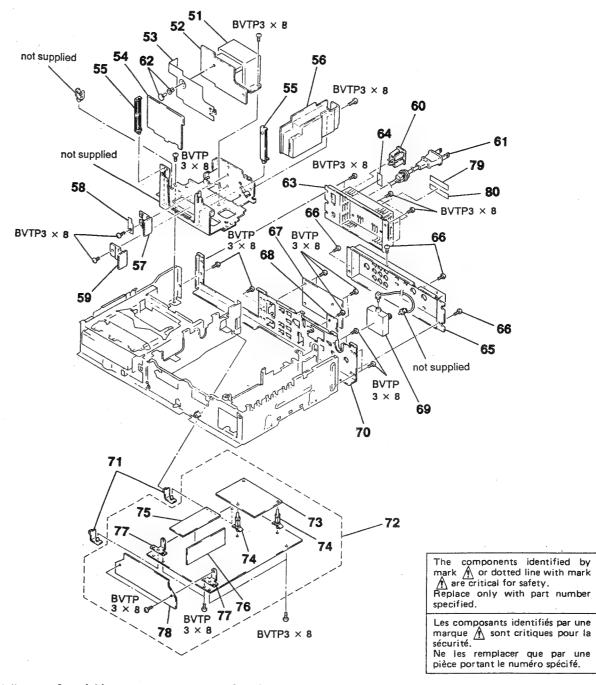


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
51 52 53 54 55	*1-621-991-11 A.3-716-892-01 *A-7070-324-A	TRANSFORMER, POWER (T401) DS-15 BOARD SHEET (LARGE), INSULATING DT-63 BOARD, COMPLETE GUIDE, CHASSIS		66 67 68 69 70	*A-7061-497-B *1-629-042-11 <u>A.1-466-156-11</u>	MODULATOR, RF (RFU-1011)	
56 57 58 59 60	*A-7061-589-A *1-621-992-11	DR-35 BOARD, COMPLETE DO-1 BOARD BRACKET, DO-1 MOUNT DL-15 BOARD		71 72 73 74 75	*3-701-832-00 *A-7061-371-B *A-7061-374-A *3-703-353-07	HINGE, CIRCUIT BOARD VI-57 BOARD, COMPLETE YC-56 BOARD, COMPLETE	73-78
61 62 63 64 65	*3-716-911-21 *3-703-270-00	RIVET, NYLON COVER, POWER LABEL, AC12OV 60HZ		76 77 78 79 80	*3-722-118-01 *A-7061-372-B	JG-11 BOARD, COMPLETE LABEL, TELESONIC	


5-3. BOARD ASSEMBLY

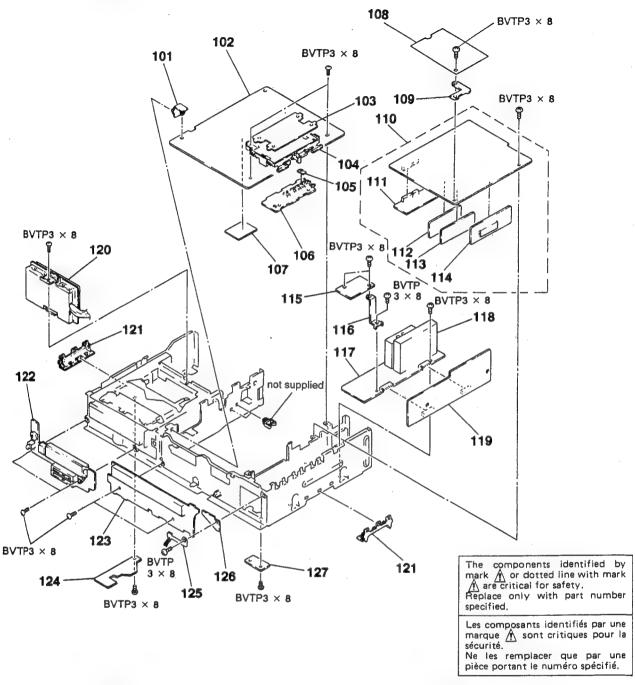


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
101 102 103 104 105	*A-7061-727-A 3-716-841-61	HINGE, CIRCUIT BOARD SP-7 BOARD, COMPLETE SHEET, PRESET PRESET (MAIN) KNOB (P), SLIDE	107	115 116 117 118 119	*3-716-961-01 *A-7060-462-A <u>1-463-771-11</u>		118
106 107 108 109 110	*A-7061-073-A *X-3711-990-1 *3-716-962-01	PR-12 BOARD, COMPLETE DM-18 BOARD, COMPLETE PLATE (AU) ASSY, SHIELD BRACKET (AU) AU-54 BOARD, COMPLETE	111-114	120 121 122 123 124	3-716-907-01 *A-7051-370-A *A-7061-674-A	RP-68 BOARD, COMPLETE PROTECTOR, FRAME PW-62 BOARD, COMPLETE FT-37 BOARD, COMPLETE MJ-11 BOARD, COMPLETE	
111 112 113 114	*A-7060-913-A *A-7068-148-A	AD-12 BOARD, COMPLETE NR-6 BOARD, COMPLETE MK-2 BOARD, COMPLETE AF-20 BOARD, COMPLETE		125 126 127	3-722-158-01 *1-629-041-11 *1-621-987-11		

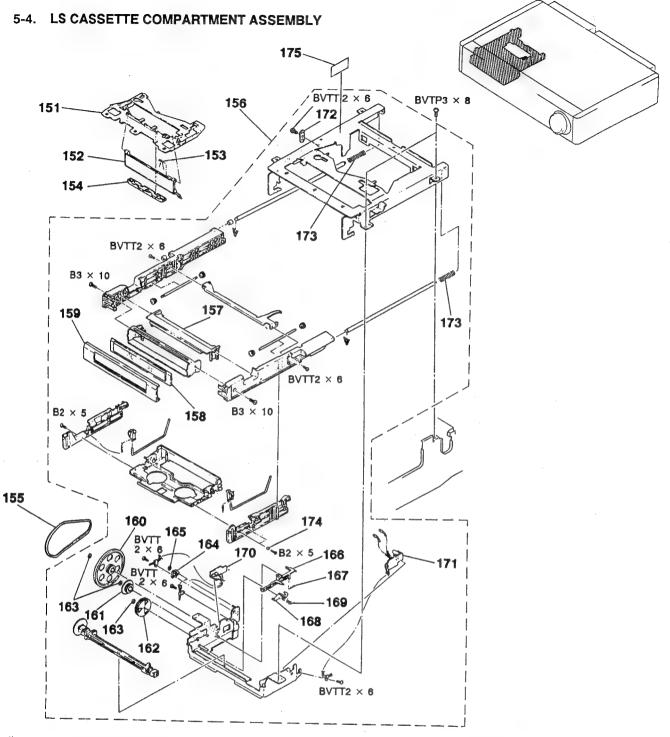


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
151 152 153 154 155	3-716-908-01 X-3711-965-1 3-713-686-01 3-716-884-01 3-713-670-01	CLAMP, LAMP MIRROR ASSY SPRING HOLDER, LAMP BELT, LS		164 165 166 167 168	3-716-821-01 3-669-465-00 3-716-937-01 3-716-825-01 3-716-850-01	WASHER (1.5), STOPPER SLIDER, LOCK SPRING, TENSION	
156 157 158 159 160	3-716-885-01 3-722-117-01	CASSETTE COMPARTMENT ASSY (2) PLATE, SLOPE GLASS (2), WINDOW PLATE, ORNAMENTAL, WINDOW PULLEY, MIDWAY	157-174	169 170 171 172 173	3-713-687-01 *1-621-998-11 *1-621-997-11 *3-716-944-01 3-716-949-01	TE-6 BOARD TE-5 BOARD BRACKET, STOPPER, SHAFT	
161 162 163	3-716-819-01 X-3711-968-1 3-669-596-00	GEAR, DECELERATION GEAR ASSY, LIMITER WASHER (2.3), STOPPER		174 175	*3-657-841-01 *3-703-044-26	SPACER 2X2 LABEL, CAUTION	

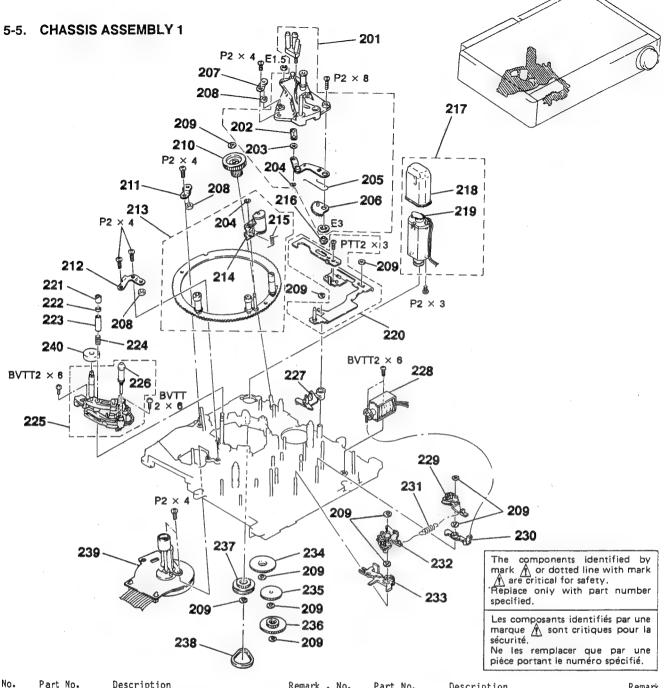


No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
201 202 203 204 205	A-7040-001-A 3-686-663-01 3-701-436-21 3-315-384-31 3-686-701-01	WASHER, STOPPER	202-206	221 222 223 224 225	3-686-912-01	FLANGE, #3 #4 GUIDE GUIDE, #3 #4 SPRING, COMPRESSION	226
206 207 208 209 210	*3-686-503-01 3-697-538-01	GEAR, SECTOR RETAINER, ROLLER ROLLER, RING WASHER (1.5), STOPPER GEAR, NO.10		226 227 228 229 230	*3-686-636-04 1-454-377-31 X-3686-574-1	ARM, T.S RÉLEASE SOLENOID, PLUNGER (BRAKE) (PM90 BRAKE ASSY, MAIN, TAKE-UP	1)
211 212 213 214 215	*3 -686 -675 -01 A -7040 -123 -A X -3686 -648 -1	PLATE, TOP, ROLLER STOPPER, RING RING ASSY, THREADING 20 ARM ASSY, PINCH ROLLER SPRING, TORSION	4, 214, 215	231 232 233 234 235	X-3713-429-1 *3-686-629-01 3-686-508-01	BRAKE ÁSSY, MAIN, S SLIDER, SELECTION, UPPER & LOWE GEAR, NO. 2	R
216 217 218 219 220	A-7040-065-A *3-686-757-01 1-161-057-00	RETAINER, LOCK SLODER MOTOR ASSY, L (THREADING)(M9 CAP, SHIELD, L MOTOR CAP, CERAMIC 0.033MF X SLIDER ASSY, LOCK		238 239 240	X-3686-514-1 3-686-546-01 8-835-247-01	BELT, L- MOTOR MOTOR, DC BHF-2804D (CAPSTAN) (M906)
				240			M906)

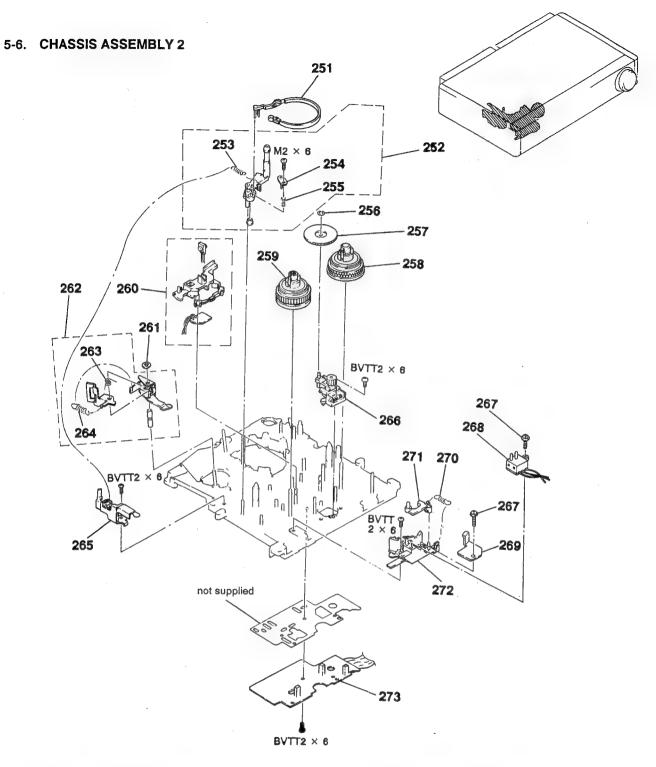

No.	Part No.	Description	Remark	No.	Part No.	Description		Remark
251 252 253 254 255	A-7040-071-A 3-699-519-01 *X-3686-523-1	BAND ASSY, TENSION REGULATOR ARM ASSY, TENSION REGULATOR SPRING, TENSION PLATE ASSY, TENSION REGULATOR SPRING, COMPRESSION	253-255	263 264 265 266 267	3-686-568-01 3-686-885-01 *X-3686-525-1 X-3711-963-1 3-669-480-11	SPRING, TORSION SPRING, TENSION HOOK ASSY, SPRING DRIVING COMPLETE ASSY + PTPWH 2		
256 257 258 259 260	X-3711-998-1	GEAR (B) ASSY, DRIVING TABLE ASSY, REEL, TAKE-UP TABLE ASSY, REEL, S		268 269 270 271 272	1-554-942-11 *3-686-991-01 3-696-082-01 *3-686-637-01 *3-686-760-01	SWITCH, PUSH (RECOG L) STOPPER, REEL TABLE SPRING, TENSION BRAKE (S), SOFT GUIDE, BAND	(\$ 902)	
261 262	3-669-465-00 A-7040-008-A	WASHER (1.5), STOPPER ARM ASSY, PINCH PRESS	263, 264	273	*A-7061-543-A	RS-17 BOARD, COMPLETE		

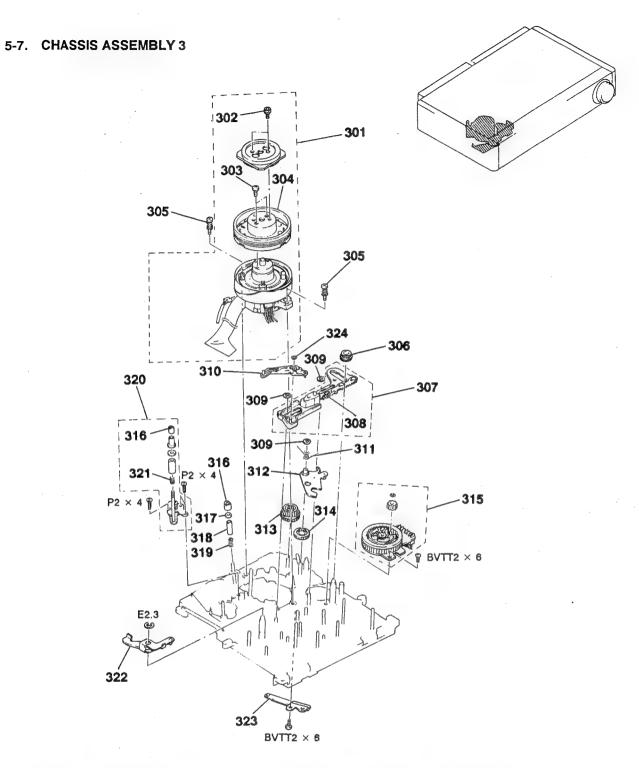

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
301 302 303 304 305	3-686-422-01 3-686-493-01 A-7049-188-A	DRUM ASSY (DGH-35A-R) WASHER (2X2.7), BOLT, HOLE SCREW +P 2X5 TYPE 1 DRUM ASSY, ROTARY (UPPER) (DGR- SCREW ASSY, FITTING	302-304 -35-R)	313 314 315 316 317		GEAR, NO.8 L-SW ASSY	
306 307 308 309 310	*A-7040-010-A 3-686-886-01	GEAR, DRIVING, GUIDE, SLANT SLIDER ASSY, L SPRING, TENSION WASHER (1.5), STOPPER ARM ASSY	308	318 319 320 321 322	A-7040-058-A 3-699-514-01	GUIDE, #3 #4 SPRING, COMPRESSION GUIDE BLOCK COMPLETE ASSY, #5 SPRING, COMPRESSION LEVER ASSY, PINCH PRESS	316, 321
311 312		SPRING, TORSION CHANGE ASSY, DRIVE	,	323 324	1-535-535-11 3-315-384-31	TERMINAL, SHAFT GROUND WASHER, STOPPER	

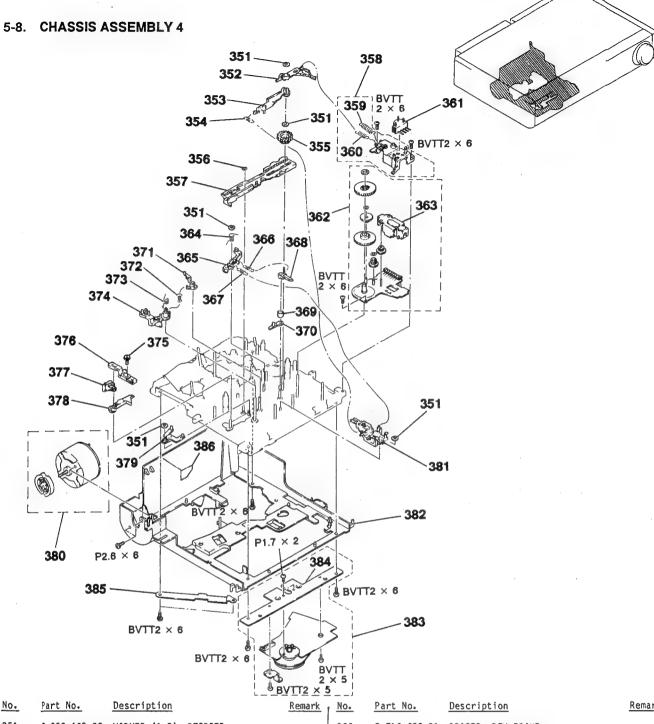

No.	Part No.	Description	Remark	No.	Part No.	Description		Remark
351 352 353 354 355	3-669-465-00 X-3711-987-2 *X-3686-528-4 3-686-903-01 3-686-909-01	WASHER (1.5), STOPPER BRAKE ASSY, T.S ARM ASSY, B RELEASE SPRING, TENSION GEAR, MODE OUTPUT		369 370 371 372 373	3-716-933-01 *3-686-580-01 3-686-996-01 3-686-905-02 3-686-603-04	ARM, SÉT UP BRAKE (S), HARD SPRING, TENSION		
356 357 358 359 360	3-315-384-31 3-716-935-01 A-7040-168-A 3-722-110-01 3-714-035-01		359, 360	374 375 376 377 378	*3-686-644-01 3-686-528-01 *3-686-642-01 3-716-934-01 *3-686-643-01	PLATE, ADJÚSTMENT,	BAND	
361 362 363 364 365	1-571-680-21 A-7090-029-A 8-835-138-01 3-686-579-01 *3-686-634-01	SWITCH, PUSH (3 KEY) (M-SW ASSY MOTOR, DC (DNR-5301B) SPRING ARM, RL	363	379 380 381 382 383	*X-3686-530-1 A-7090-661-A *3-686-656-01 *3-716-915-01 8-835-282-03	MOTOR BLOCK ASSY, L	S(LINEAR %AT	TE)(M905)
366 367 368	3-686-906-01 3-686-904-01 X-3711-993-1		— 21	384 385 386	*3-716-922-01 *3-716-894-01 *3-722-175-01	BRACKET, REEL MOTOR RETAINER, ROTOR SPACER, MD		

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

The components identified by mark A or dotted line with mark A are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

When indicating parts by reference number, please include the board name

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS

All resistors are in ohms METAL: Metal-film resistor

METAL OXIDE : Metal Oxide-film resis-

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS In each case, $U: \mu$, for example: UA...: μΑ..., UPA...: μPA..., UPB...: μPB..., UPC...: μPC..., UPD...: μPD...
- CAPACITORS $\mathsf{MF}: \mu\mathsf{F}, \mathsf{PF}: \mu\mu\mathsf{F}$

• COILS

the b	ooard name.		F : 1	nonflami	mable		,	MMH: mH,	UH : μ	4		
No.	Part No.	Description	<u>.</u>		Remark	No.	Part No.	Description				Remark
	*A-7060-462-A		D, COMPLETE			Q003	8-729-117-54	TRANSISTOR 2	SA1175	- F		
	CAP	ACITOR	*****			Q004 Q006 Q007	8-729-178-54 8-729-178-54 8-729-178-54	TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	SC2785 SC2785 SC2785	-F -F -F		
C001 C002 C003	1-102-114-00 1-102-966-00 1-102-953-00	CERAMIC	470PF 43PF 18PF	10% 5% 5%	50V 50V 50V	Q008	8-729-900-80 RE:	TRANSISTOR D	TC114E	S		
C004 C005	1-124-446-11 1-124-963-11	ELECT	47MF 33MF	20% 20%	10V 16V	R001 R002 R003	1-249-413-11 1-249-417-11	CARBON	470 1K	5% 5%	1/4W 1/4W	
C006 C007 C008	1-124-902-00 1-130-477-00 1-124-902-00	MYLAR ELECT	0.47MF 0.0033MF 0.47MF	20% 5% 20%	50V 50V 50V	R004 R005	1-249-409-11 1-249-405-11 1-249-421-11	CARBON	220 100 2.2K	5% 5% 5%	1/4W 1/4W 1/4W	
C009 C010	1-102-112-00		330PF 330PF	10% 10%	50V 50V	R007 R008 R009	1-249-423-11 1-247-891-00 1-247-903-00	CARBON CARBON CARBON	3.3K 330K 1M	5% 5% 5%	1/4W 1/4W 1/4W	
C011 C012 C013 C014			330PF 22MF 1000MF	10% 20% 20%	50V 50V 6.3V	R010 R011	1-249-428-11 1-249-421-11	CARBON CARBON	8. 2K 2. 2K	5% 5%	1/4W 1/4W	
C015 C016	1-101-004-00	ELECT	0.01MF 100MF 0.01MF	20%	50V 10V 50V	R013 R020	1-247-825-31 1-249-426-11 1-247-883-00	CARBON CARBON	560 5.6K 150K	5% 5% 5%	1/4W 1/4W 1/4W	
C017 C018 C022	1-123-875-11 1-123-875-11 1-123-875-11	ELECT	10MF 10MF 10MF	20% 20% 20%	50V 50V 50V	R021 R022 R023	1-247-883-00 1-249-423-11 1-249-423-11	CARBON	150K 3.3K	5% 5%	1/4W 1/4W	
C023	1-130-776-00	CERAMIC	0.47MF 0.0022MF	10%	63V 50V	R024 R025 R026	1-249-435-11 1-249-417-11 1-249-417-11	CARBON CARBON	3.3K 33K 1K 1K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
C025 C027 C028 C030	1-123-875-11 1-123-875-11		0.0022MF 10MF 10MF 33MF	10% 20% 20% 20%	50V 50V 50V	R027 R028	1-249-417-11	CARBON	1K 1.2K	5% 5%	1/4W 1/4W	•
C035	1-102-121-00		0.0022MF	10%	16V 50V	R029 R030 R031 R032 A	1-249-413-11 1-249-418-11 1-249-413-11 .1-212-946-00	CARBON CARBON CARBON FUS IBLE	470 1.2K 470 3.3	5% 5% 5%	1/4W 1/4W 1/4W	r
		NECTOR				R033	1-249-429-11			5%	1/2W	F
CN002	*1-560-890-00 *1-560-893-00 *1-560-892-00	PIN. CONNECT	OR SP			R034 R035 R036	1-249-429-11 1-249-428-11 1-249-393-11	CARBON CARBON CARBON CARBON	10K 10K 8.2K 10	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
	<u>D100</u>	DE				R037		CARBON	1K	5%	1/4W	
D001	8-719-911-19	DIODE 1SS119				R038	[1-249-421-11		2.2K	5%	1/4W	
	<u>1C</u>							IABLE RESISTOR	-			
IC001 <u></u> A	8-759-157-40	IC UPC574J				RV002	1-228-994-00		BON 10	<		
	COIL	<u>.</u>			Ì		TUN					
L001	1-408-413-00	INDUCTOR	22UH			TU001 <u>∧</u>	.1-463-771-11	TUNER, ET (BT	P-201A)		
L002 L003	1-410-093-11 1-408-409-00	INDUCTOR	33MMH 10UH				<u>IF</u>	BLOCK				
L004 L005	1-408-409-00 1-408-409-00	INDUCTOR INDUCTOR	10UH 10UH		7	VIF001	1-464-817-31 CON		-450S)			
		IS IS TOR				W004		NECTOR DO	8.DD ***	00 4 00	0.0	
Q001 Q002	8-729-178-54 8-729-117-54	TRANSISTOR 2	SC2785-F SA1175-F			W005	1-566-286-11 1-566-287-11	CONNECTOR, BO	ARD TO	BOARD	8P 10P	

TS-49

No. Part No.	Description		Remark	No.	Part No.	Description				Remark
*A-7060-463-A	TS-49 BOARD, COM				CON	INECTOR				
CAP	<u>ACITOR</u>	,,,,,			*1-560-893-00 *1-560-892-00					
C101 1-124-446-11 C102 1-101-004-00 C105 1-101-004-00 C701 1-123-875-11	ELECT 47MF CERAMIC 0.01 CERAMIC 0.01 ELECT 10MF	MF MF	10V 50V 50V 50V	IC101 IC102	<u>IC</u> 8-759-604-16 8-759-602-52	IC M50434-11 IC M58658P	1.0SP			
C702 1-123-382-00	ELECT 3.3M		50V	IC751	8-752-030-26 8-752-030-26	IC CXA1011P				
C703 1-130-495-00 C704 1-124-499-11 C705 1-131-368-00 C706 1-131-365-00 C707 1-124-925-11	MYLAR 0.1M ELECT 1MF TANTALUM 3.3M TANTALUM 10MF ELECT 2.2M	20% F 10% 10%	50V 50V 16V 16V 50V	IC801 IC850	8-752-011-20 8-759-602-48					
C708 11-126-233-11		20%	25V	L851	1-410-071-11	_	10MM	Н		
C709 1-126-101-11 C710 1-130-475-00 C711 1-126-320-11			16V 50V		TRA	NS IS TOR				
C712 1-130-487-00	MYLAR 0.02		16V 50V	Q851 Q852	8-729-178-54 8-729-178-54	TRANSISTOR 2				
	ELECT 10MF ELECT 10MF ELECT 3.3MI	,-	50V 50V 50V	0853	8-729-117-54 8-729-178-54	TRANSISTOR 2 TRANSISTOR 2	S A1 175 -	F		
C753 1-130-495-00 C754 1-124-499-11	MYLAR 0.1MI ELECT 1MF	F 5% 20%	50V 50V	R100	1-249-429-11	<u>ISTOR</u> CARBON	10K	5%	1/4W	
C755 1-131-368-00 C756 1-131-365-00 C757 1-124-925-11 C758 1-126-233-11 C759 1-126-101-11	ELECT 22MF	10% 20% 20%	16V 16V 50V 25V	R102 R103 R104 R107	1-249-429-11 1-249-429-11 1-249-429-11 1-249-429-11	CARBON CARBON CARBON CARBON	10K 10K 10K 10K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
C759 1-126-101-11 C760 1-130-475-00 C761 1-126-320-11 C762 1-130-487-00 C763 1-130-485-00 C801 1-123-875-11	MYLAR 0.01	22MF 5% 20% 2MF 5%	16V 50V 16V 50V 50V 50V	R701 R702 R703 R704 R705	1-249-429-11 1-249-426-11 1-249-411-11 1-215-487-00 1-215-453-00	CARBON CARBON CARBON METAL METAL	10K 5.6K 330 560K 22K	5% 5% 5% 1%	1/4W 1/4W 1/4W 1/6W 1/6W	
C802 1-130-483-00 C803 1-130-487-00 C808 1-123-875-11 C809 1-130-489-00	MYLAR 0.01M MYLAR 0.022 ELECT 10MF MYLAR 0.033	MF 5% 2MF 5% 20% 3MF 5%	50V 50V 50V 50V	R706 R707 R708 R709 R751	1-249-420-11 1-249-421-11 1-249-435-11 1-249-411-11 1-249-429-11	CARBON CARBON CARBON CARBON CARBON	1.8K 2.2K 33K 330 10K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	
C810 1-123-875-11 C811 1-130-021-00 C812 1-124-438-00 C813 1-126-157-11 C815 1-123-875-11 C816 1-124-963-11	FILM 0.001 ELECT 1MF ELECT 10MF ELECT 10MF	20% I 8MF 5% 20% 20% 20% 20%	50V 50V 50V 16V 50V 16V	R752 R753 R754 R755 R756	1-249-426-11 1-249-411-11 1-215-487-00 1-215-453-00 1-249-420-11	CARBON CARBON METAL METAL CARBON	5.6K 330 560K 22K 1.8K	5% 5% 1% 1% 5%	1/4W 1/4W 1/6W 1/6W 1/4W	
C817 1-123-875-11 C818 1-124-927-11 C851 1-102-121-00	ELECT 10MF	20%	50V 50V 50V 50V 50V	R757 R758 R759 R760 R761	1-249-421-11 1-249-435-11 1-249-411-11 1-215-421-00 1-215-421-00	CARBON CARBON CARBON METAL METAL	2.2K 33K 330 1K 1K	5% 5% 5% 1%	1/4W 1/4W 1/4W 1/6W 1/6W	
C854 1-130-479-00	MYLAR 0.004 ELECT 10MF		50V 50V 50V	R802 R803 R804 R808 R809	1-215-469-00 1-215-469-00 1-249-441-11 1-249-429-11 1-249-414-11	METAL METAL CARBON CARBON CARBON	100K 100K 100K 10K 560	1% 1% 5% 5% 5%	1/6V 1/6W 1/4W 1/4W 1/4W	

TS-49 PR-12 DS-15 TM-94

No. Part No.	Description	Remark	No.	Part No.	Description			Remark
R813 1-215-430-00 R814 1-249-428-11 R815 1-249-423-11 R819 1-247-903-00 R820 1-249-415-11	CARBON 8.2K 5% 1/4W CARBON 3.3K 5% 1/4W CARBON 1M 5% 1/4W		\$005 \$006 \$008 \$009 \$011	1-554-174-00 1-553-716-11 1-554-174-00 1-554-174-00 1-554-174-00	SWITCH, SLII SWITCH, KEY SWITCH, KEY	DE (AUTÓ S BOARD (ER. BOARD (AD	TEREO) ASE) D)	·
R821 1-249-429-11 R851 1-249-437-11 R852 1-249-429-11 R853 1-249-418-11 R854 1-249-413-11	CARBON 47K 5% 1/4W CARBON 10K 5% 1/4W CARBON 1.2K 5% 1/4W			*1-621-991-11	DS -15 BOARD)	*****	*****
R855 1-249-418-11 R856 1-249-429-11 R857 1-249-425-11 R858 1-249-438-11 R859 1-249-425-11	CARBON 10K 5% 1/4W CARBON 4.7K 5% 1/4W CARBON 56K 5% 1/4W			*1-533-189-11 <u>CAP</u> 3. 1-136-212-12	ACITOR	0.1MF	20%	250V
R860 1-249-435-11	CARBON 33K 5% 1/4W			CON	NECTOR			
VA	RIABLE RESISTOR		CN401	*1-560-891-00	PIN, CONNECT	TOR 3P		
RV752 1-228-993-00 RV802 1-228-996-00	RES, ADJ, CARBON 47K		F401 <u></u>	FUS 	- FUSE, GLASS	-TUBE		
RV803 1-228-997-00 RV804 1-228-999-00					ISTOR			
RV805 1-228-994-00 RV806 1-228-994-00	RÉS, ADJ, METAL GLAZE 10K RES, ADJ, CARBON 10K	•	R402 <u>A</u>	. 1-202-729 <i>-</i> 00 <u>TRA</u>	SOLID NSFORMER	6.8M 1	0% 1/2W	
<u>cor</u>	NECTOR		T402 <u></u>	. 1-421-357-31	TRANSFORMER,	LINE FIL	TER	
	CONNECTOR, BOARD TO BOARD 10P CONNECTOR, BOARD TO BOARD 8P			*****			*****	****
· CRY	<u>rs tal</u>			*1-623-612-11	TM-94 BOARD			
	OSCILLATOR, CERAMIC (4MHz)	******		*3-716-962-01 7-685-646-79 7-685-646-79	SCREW +BVTP	3X8 TYPE2	IT-3	
*A-7060-465-A	PR-12 BOARD, COMPLETE			CAP	ACITOR			
<u>cor</u>	NNECTOR		C001 C002 C003	1-130-495-00 1-124-925-11 1-101-004-00	ELECT	0.1MF 2.2MF	5% 20%	50V 50V 50V
CN001 1-506-481-11 CN002 1-506-483-21	PIN, CONNECTOR 2P		0003			0.01MF		501
DIC			CNOOL	*1-564-019-11	NECTOR DIN CONNECT	מם מח׳		
	DIODE 1SS119		011001	IC	in, comeo	OK 3F		
D002 8-719-911-19 D003 8-719-911-19	DIODE 1SS119		IC002	8-759-200-90 8-759-240-11 8-759-240-11	IC TC4011BP			
SWI	ITCH .		10003		ISTOR			
\$002 1-553-716-11 \$003 1-553-716-11	SWITCH, SLIDE (AUTO INDEX) SWITCH, SLIDE (COMMAND) SWITCH, SLIDE (ANT SW) SWITCH, KEY BOARD (SLOW/STILL)	R001 R002	1-249-433-11 1-249-434-11	CARBON	22K 5 27K 5		

The components identified by mark \(\bar{\Lambda} \) or dotted line with mark \(\bar{\Lambda} \) are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

TM-94 RP-68

No. Part No.	Description		Remark	No.	Part No.	Description			Remark
VAR RV001 1-228-996-00	IABLE RESISTOR RES, ADJ, CARBON 47K	*****	*****	C149 C150 C151	1-163-809-11 1-163-091-00 1-163-809-11 1-163-090-00 1-163-009-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	8PF 0.047MF 7PF	10% 0.25PF 10% 0.25PF 10%	25V
	RP-68 BOARD, COMPLETE			C160 C201 C202 C203	1-135-157-21 1-135-148-21 1-135-148-21 1-163-021-00	TANTAL. CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP	1.5MF 1.5MF	20% 20% 20%	6.3V 10V 10V 50V
	TANTAL. CHIP 1.5MF	20%	100	C204	1-163-021-00	CERAMIC CHIP			50V
C102 1-135-148-21 C103 1-163-021-00 C104 1-163-021-00	TANTAL. CHIP 1.5MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	20%	10V 50V 50V	C205 C206 C207	1-135-161-21 1-163-038-00 1-163-038-00	CERAMIC CHIP CERAMIC CHIP	0.1MF 0.1MF	20%	6.3V 25V 25V
	TANTAL. CHIP 22MF	20%	6.3V	C208 C209	1-135-161-21 1-163-021-00	CERAMIC CHIP		20%	6.3V 50V
C107 1-163-038-00 C108 1-135-161-21 C109 1-163-021-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF TANTAL. CHIP 22MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.047MF	20%	25V 25V 6.3V 50V 25V	C210 C211 C212 C213	1-163-809-11 1-163-021-00 1-163-021-00 1-163-092-00	CERAMIC CHIP	0.01MF 0.01MF	10% 0.25PF	25V 50V 50V 50V
	CERAMIC CHIP 0.022MF		500	C214	1-162-993-11			10%	16V
C113 1-163-092-00 C114 1-162-993-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 9PF CERAMIC CHIP 0.22MF CERAMIC CHIP 0.01MF	0.25PF 10%	50V 50V 16V 50V	C215 C216 C217 C218 C219	1-163-021-00 1-163-809-11 1-163-021-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF 0.01MF 0.01MF	10%	50V 25V 50V 50V
C117 1-163-033-00 C118 1-163-021-00	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.022MF CERAMIC CHIP 0.01MF CERAMIC CHIP 9PF CERAMIC CHIP 0.22MF	10% 0.25PF 10%	25V 50V 50V 50V 16V	C220 C221 C222 C223	1-163-092-00 1-162-993-11 1-163-021-00 1-163-088-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.22MF 0.01MF 5PF	0.25PF 10% 10% 0.25PF	16V 50V 50V 50V
C121 1-163-021-00 C122 1-163-088-00 C123 1-163-021-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 5PF CERAMIC CHIP 0.01MF	10% 0.25PF	50V 50V 50V	C224 C225 C226	1-163-077-00 1-135-161-21 1-163-021-00	CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1MF 22MF 0.01MF	20%	50V 6.3V 50V
	CERAMIC CHIP 0.1MF TANTAL. CHIP 22MF	20%	50V 6.3V	C227 C228 C229	1-163-021-00	TANTAL. CHIP	1MF	20% 20%	50V 16V 6.3V
C127 1-163-021-00 C128 1-124-438-00 C129 1-135-161-21	TANTAL. CHIP 22MF	20% 20%	50V 50V 50V 6.3V 50V	C230 C231 C232 C233	1-135-161-21 1-163-021-00 1-163-021-00 1-135-091-00 1-163-088-00	CERAMIC CHIP	0.01MF 0.01MF 1MF	10% 20% 0.25PF	50V 50V 16V 50V
C132 1-135-091-00	CERAMIC CHIP 0.01MF TANTAL. CHIP 1MF CERAMIC CHIP 5PF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.0047MF	10% 20% 0.25PF	50V 16V 50V 50V 50V	C240 C241 C242 C243	1-163-021-00 1-163-038-00 1-163-038-00 1-163-021-00 1-135-157-21 1-163-021-00	CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP	0.1MF 0.1MF 0.01MF 10MF	20%	25V 25V 50V 6.3V 50V
C141 1-163-105-00 C142 1-163-129-00 C143 1-163-021-00	TANTAL. CHIP 10MF CERAMIC CHIP 33PF CERAMIC CHIP 330PF CERAMIC CHIP 0.01MF	20% 5% 5%	50V 16V 50V 50V 50V	C245 C246 C247 C248	1-163-121-00 1-163-105-00 1-163-809-11 1-163-090-00 1-163-121-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	150PF 33PF 0.047MF 7PF	5% 5% 10% 0.25PF	50V 50V 25V 50V 50V
C145 (1-163-021-00 C146 1-163-127-00	TANTAL. CHIP 10MF CERAMIC CHIP 0.01MF CERAMIC CHIP 270PF CERAMIC CHIP 39PF	20% 5% 5%	6.3V 50V 50V 50V	C250 C251	1-163-103-00 1-163-809-11 1-163-090-00	CERAMIC CHIP CERAMIC CHIP	27PF 0.047MF	5% 10% 0.25PF	50V 25V

No.	Part No.	Description		Remark	No.	Part No.	Description		Remark
C253 C260 C301 C302 C303	1-135-157-21 1-163-021-00 1-163-021-00	CERAMIC CHIP 0.001MF TANTAL. CHIP 10MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	10% 20%	50V 6.3V 50V 50V	L203 L204 L205 L206	1-410-385-11	INDUCTOR INDUCTOR CHIP INDUCTOR CHIP	22UH	
C304 C305 C306 C307 C308	1-163-021-00 1-163-021-00 1-163-038-00 1-163-021-00	TANTAL. CHIP 10MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	20%	16V 50V 50V 25V 50V 50V	L209 L301 L302 L401 L402	1-408-970-21	INDUCTOR CHIP INDUCTOR	10UH	
				301		TRA	NS ISTOR		
C309 C401 C402 C403 C404	1-163-021-00 1-163-009-11	CERAMIC CHIP 0.001MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.001MF CERAMIC CHIP 100PF	20% 10% 10% 5%	16V 50V 50V 50V 50V	Q101 Q102 Q103 Q104 Q105	8-729-202-38 8-729-202-38 8-729-901-05 8-729-312-22	TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR DTA TRANSISTOR 2SA TRANSISTOR DTO	3326N 1124EK 11122	
C405 C406 C407 C408 C409	1-163-121-00 1-163-115-00 1-163-021-00	CERAMIC CHIP 100PF CERAMIC CHIP 150PF CERAMIC CHIP 82PF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	5% 5% 5%	50V 50V 50V 50V 50V	Q106 Q107 Q201 Q202 Q203	8-729-102-07 8-729-102-07 8-729-202-38 8-729-202-38	TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR DTA	2223-F13 2223-F13 23326N 23326N	
C410	1-163-021-00	CERAMIC CHIP 0.01MF		50V	•				
	CON	INECTOR			Q204 Q205	8-729-102-07	TRANSISTOR 2S C	2223-F13	
CN002 CN003	*1-506-467-11 *1-506-471-11	SOCKET, CONNECTOR 19P PIN, CONNECTOR 2P PIN, CONNECTOR 6P			0301 0302 0303	8-729-901-01 8-729-901-01	TRANSISTOR 250 TRANSISTOR DTO TRANSISTOR DTO	144EK 144EK	
CN004	1-506-470-11	PIN, CONNECTOR 5P PIN, CONNECTOR 8P			Q304 Q307		TRANSISTOR 2SO TRANSISTOR 2SO		
CN007	1-506-468-11	PIN, CONNECTOR 3P PIN, CONNECTOR 3P PIN, CONNECTOR 7P		:	0308 0402 0403	8-729-100-66 8-729-100-76	TRANSISTOR 2S O TRANSISTOR 2S A TRANSISTOR 2S A	1623 812	
	DIO	DE			Q405	8-729-312-22	TRANSISTOR 2SA	1122	
D101	9. 719 100 02	DIODE 102025				RES	ISTOR		
D102 D103 D202 D203	8-719-801-48 8-719-801-41 8-719-801-48 8-719-801-41	DE DIODE 152835 DIODE 152835 DIODE 155193 DIODE 155196 DIODE 155196 DIODE 155196 IC CXA1234AR IC CXA1234AR			R101 R102 R103 R104 R105	1-216-214-00 1-216-065-00 1-216-214-00 1-216-065-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 5% 4.7K 5% 4.7K 5% 4.7K 5% 27K 5%	1/8W 1/10W 1/8W 1/10W
	<u>IC</u>								,
IC001 IC002	8-752-033-00 8-752-033-00	IC CXA1234AR IC CXA1234AR			R106 R107 R108 R109	1-216-077-00	METAL GLAZE METAL GLAZE	47K 5% 15K 5% 15K 5% 1.8K 5%	1/10W 1/10W 1/10W 1/10W
	<u>C01</u>	<u>L</u>			R110	1-216-089-00		47K 5%	1/10W
L101 L102 L103 L104 L105	1-410-656-11 1-410-385-11 1-408-973-21 1-408-973-21	INDUCTOR CHIP 150UH INDUCTOR CHIP 22UH INDUCTOR 18UH INDUCTOR 18UH INDUCTOR CHIP 10UH			R111 R112 R113 R114 R115	1-216-091-00 1-216-077-00 1-216-075-00	METAL GLAZE METAL GLAZE METAL GLAZE	22K 5% 56K 5% 15K 5% 12K 5% 1.8K 5%	1/10W 1/10W 1/10W 1/10W 1/10W
L106 L109 L201 L202	1-410-656-11	INDUCTOR CHIP 22UH INDUCTOR CHIP 100UH INDUCTOR CHIP 150UH INDUCTOR CHIP 22UH			R116 R117 R118 R119	1-216-089-00 1-216-053-00 1-216-035-00 1-216-025-00	METAL GLAZE METAL GLAZE	47K 5% 1.5K 5% 270 5% 100 5%	1/10W 1/10W 1/10W 1/10W

RP-68 PW-62

No.	Part No.	Description				Remark	No.	Part No.	Descrip	tion				Remark
R121 R122 R123	1-216-025-00 1-216-053-00 1-216-682-11 1-216-683-11 1-216-061-00	METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP METAL GLAZE	100 1.5K 20K 22K 3.3K		1/10W 1/10W 1/10W 1/10W 1/10W		R244 R301 R302 R303 R304	1-216-296-00 1-216-089-00 1-216-073-00 1-216-045-00 1-216-091-00	METAL G METAL G METAL G METAL G METAL G	LAZE LAZE LAZE	0 47K 10K 680 56K	5% 5% 5% 5% 5%	1/8W 1/10W 1/10W 1/10W 1/10W	
R128 R131 R134	1-216-089-00 1-216-049-00 1-216-061-00 1-216-097-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 1K 3.3K 100K 100K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R305 R306 R307 R308 R309	1-216-061-00 1-216-085-00 1-216-077-00 1-216-039-00 1-216-047-00	METAL G METAL G METAL G METAL G	LAZE LAZE LAZE	3.3K 33K 15K 390 820	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R137 R138 R139	1-216-073-00 1-216-001-00 1-216-031-00 1-216-081-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 10 180 22K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R310 R311 R401 R402 R403	1-216-035-00 1-216-041-00 1-216-085-00 1-216-081-00 1-216-035-00	METAL G METAL G METAL G METAL G	LAZE LAZE LAZE	270 470 33K 22K 270	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R142 R143 R144	1-216-081-00 1-216-001-00 1-216-031-00 1-216-296-00 1-216-214-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 10 180 0 4.7K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/8W 1/8W		R404 R405 R406 R407 R408	1-216-033-00 1-216-021-00 1-216-009-00 1-216-081-00 1-216-057-00	METAL G METAL G METAL G METAL G	LAZE LAZE LAZE	220 68 22 22K 2.2K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R203 R204 R205	1-216-065-00 1-216-214-00 1-216-065-00 1-216-085-00 1-216-091-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 4.7K 4.7K 33K 56K	5% 5% 5% 5% 5%	1/10W 1/8W 1/10W 1/10W 1/10W		R409 R410 R411 R412 R413	1-216-041-00 1-216-041-00 1-216-041-00 1-216-296-00 1-216-296-00	METAL G METAL G METAL G METAL G	LAZE LAZE LAZE	470 470 470 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/8W 1/8W	
R208 R209 R210	1-216-079-00 1-216-076-00 1-216-054-00 1-216-089-00 1-216-748-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	18K 13K 1.6K 47K 39K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R414 R415 R421 R422 R423	1-216-296-00 1-216-296-00 1-216-295-00 1-216-043-00 1-216-295-00	METAL GI METAL GI METAL GI METAL GI	LAZE LAZE LAZE	0 0 0 560	5% 5% 5% 5%	1/8W 1/8W 1/10W 1/10W 1/10W	
R213 R214 R215	1-216-091-00 1-216-079-00 1-216-075-00 1-216-054-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	56K 18K 12K 1.6K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W			1-230-496-11 1-230-496-11	RES, ADRES, ADRES, ADRES, ADRES	J, CAR	BON 10	K		
	1 -216 -089 -00	METAL GLAZE	47K 1.5K	5% 5%	1/10W			1-230-496-11 1-230-496-11	RES, AD					
R218	1-216-049-00 1-216-025-00	METAL GLAZE METAL GLAZE	1K 100	5% 5%	1/10W 1/10W		*****	*****	*****	*****	*****	****	*****	*****
	1-216-025-00 1-216-053-00	METAL GLAZE METAL GLAZE	100 1.5K	5% 5%	1/10W 1/10W			*A-7051-370-A	PW-62 1	BOARD,	COMPL:	ETE ***		
R232 R233 R234	1-216-061-00 1-216-061-00 1-216-061-00 1-216-097-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 3.3K 3.3K 100K 100K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W			*3-662-205-00 *3-674-390-00 *3-721-598-11 *3-722-119-01	HOLDER HOLDER HOLDER HOLDER,	(B), LI (HIFI)	ED LED			
	1-216-031-00	METAL GLAZE	180	5%	1/10W				ACITOR					
R238 R239	1-216-001-00 1-216-081-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10 22K 10K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	Transit de la constitución de la	C201 C202 C301 C401	1-124-635-00 1-124-635-00 1-124-257-00 1-124-257-00	ELECT ELECT		220MF 220MF 2.2MF 2.2MF		20% 20% 20% 20%	6.3V 6.3V 35V 35V
	1-216-081-00	METAL GLAZE METAL GLAZE	22K 10	5% 5%	1/10W 1/10W			CON	NECTOR					
R243	1-216-031-00		180	5%	1/10W		CN202	1-506-469-11	PIN, CO	NNECTO	R 4P			

PW-62 VI-57

No.	Part No.	Description			Remark	No.	Part No.	Description			Remark
	DIO	<u>DE</u>					*A-7061-371-B	VI -57 BOARD	, COMPLETE		
D101 D103 D104	8-719-105-32 8-719-907-29	DIODE SLP281C- DIODE RD2.7M-B DIODE EQA11-09	2 A					, NC-8 Boar	he CH-44 Board and YC-56		0), JG-11
D105 D201	8-719-907-29 8-719-920-05	DIODE EQA11-09 DIODE TLY123	A				*3-703-353-07 *3-710-578-01 *3-722-118-01	COVER, VOLUM	IE. 6 MOLD		
D202 D203	8-719-920-05 8-719-920-05	DIODE TLY123 DIODE TLY123					7-685-646-79 7-685-646-79	SCREW +BVTP	3X8 TYPE2 I	T-3	
	IC						CAP	ACITOR			
IC101 IC201	8-741-138-70 8-759-745-64	IC BX-1387 IC NJM4560M			·	C001 C002	1-163-021-00 1-126-177-11	ELECT	100MF	20%	50V 6.3V
	JAC	<u>K</u>				C003 C089 C101	1-126-157-11 1-163-035-00 1-163-038-00	CERAMIC CHIP CERAMIC CHIP		20%	16V 50V 25V
J201	1-507-792-00	JACK (HEADPHON	ES)							= 4	
	<u>C01</u>	<u>L</u>				C102 C103	1-163-133-00	CERAMIC CHIP	0.047MF	5%	50V 50V
L201	1-408-972-21	INDUCTOR	15UH			C104 C105 C106	1-163-038-00	CERAMIC CHIP	0.001MF	10%	25V 50V
	LEV	EL METER					1-163-021-00	CERAMIC CHIP			50V
LMU001	1-520-503-11	METER UNIT, LE) LEVE	L		C107 C108	1-163-035-00 1-126-177-11	CERAMIC CHIP	100MF	20%	50V 6.3V
	RES	ISTOR				C109 C110	1-126-157-11 1-163-035-00	CERAMIC CHIP		20%	16V 50V
R101 R103	1-216-037-00			5%	1/10W	C111	1-124-438-00	ELECT	1MF	20%	50V
R201 R202	1-216-073-00 1-216-029-00	METAL GLAZE	50	5% 5%	1/10W 1/10W	C112 C113	1-126-154-11 1-126-094-11	ELECT ELECT	47MF 4.7MF	20% 20%	6.3V 25V
R203	1-216-029-00 1-216-029-00			5% 5%	1/10W 1/10W	C114 C115	1-126-094-11 1-163-035-00	ELECT CERAMIC CHIP		20%	25V 50V
R301	1-216-017-00			5%	1/10W	C116	1-124-638-11	ELECT	22MF	20%	6.3V
R302 R303 R304	1-216-075-00	METAL GLAZE	.2K !	5% 5%	1/10W 1/10W	C117 C118	1-163-113-00 1-163-131-00	CERAMIC CHIP	390PF	5% 5%	50V 50V
R401	1-216-021-00 1-216-017-00			5% 5%	1/10W 1/10W	C119 C120	1-163-129-00 1-163-128-00	CERAMIC CHIP		5% 5%	50V 50V
R402	1-216-065-00			5%	1/10W	C121	1-163-021-00	CERAMIC CHIP	0.01MF	10%	50V
R403 R404	1-216-075-00 1-216-021-00	METAL GLAZE 6		5% 5%	1/10W 1/10W	C122 C123	1-163-109-00 1-163-088-00	CERAMIC CHIP CERAMIC CHIP		5% 0.25PF	50V 50V
	VARI	ABLE RESISTOR				C124 C125	1-126-094-11	ELECT CERAMIC CHIP	4.7MF 0.01MF	20%	25V 50V
RV201	1-228-988-00	RES, VAR, CARBO	N 10K,	/10K			1-163-035-00	CERAMIC CHIP			50V
K 4 3 0 1		RES, VAR, SLIDE	10K/	10K			1-126-157-11	CERAMIC CHIP ELECT	10MF	20%	50V 16V
6101	SWIT					C129 C130	1-163-009-11 1-163-134-00	CERAMIC CHIP	0.001MF 510PF	10% 5%	50V 50V
\$101		SWITCH, KEY BOA	•		· /	C131	1-163-021-00	CERAMIC CHIP	0.01MF	10%	50 V
******	********	******	****	*****	*******	C132 C133		CERAMIC CHIP ELECT	0.047MF 0.22MF	20%	50V 50V
						C134 C135	1-163-035-00 1-126-157-11	CERAMIC CHIP		20%	50V 16V
						C136	1-126-157-11	ELECT	10MF	20%	16V
						C137 C139		CERAMIC CHIP CERAMIC CHIP		5%	50V 25V

VI-57

No.	Part No.	Description		Remark	No.	Part No.	Description			Remark
C140 C141 C142 C143 C144	1-163-241-11 1-163-111-00 1-124-229-00 1-163-123-00 1-163-137-00	CERAMIC CHIP 39PF CERAMIC CHIP 56PF ELECT 33MF CERAMIC CHIP 180PF CERAMIC CHIP 680PF	5% 5% 20% 5% 5%	50V 50V 10V 50V 50V	C224 C225 C226 C227 C228	1-163-009-11 1-124-638-11 1-163-035-00 1-124-638-11 1-163-035-00	CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP	22MF 0.047MF 22MF	10% 20% 20%	50V 6.3V 50V 6.3V 50V
C147 C148 C150 C151 C153	1-163-038-00 1-126-157-11 1-126-157-11 1-126-157-11 1-163-093-00	CERAMIC CHIP 0.1MF ELECT 10MF ELECT 10MF ELECT 10MF CERAMIC CHIP 10PF	20% 20% 20% 5%	25V 16V 16V 16V 50V	C229 C231 C232 C234 C235	'1-163-093-00 1-163-111-00 1-163-035-00 1-163-093-00 1-126-154-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	56PF 0.047MF	5% 5% 5% 20%	50V 50V 50V 50V 6.3V
C154 C155 C158 C160 C161	1-163-128-00 1-124-589-11 1-163-117-00 1-163-119-00 1-163-091-00	CERAMIC CHIP 300PF ELECT 47MF CERAMIC CHIP 100PF CERAMIC CHIP 120PF CERAMIC CHIP 8PF	5% 20% 5% 5% 0•25PF	50V 10V 50V 50V 50V	C236 C237 C238 C239 C240	1-126-154-11 1-163-096-00 1-163-113-00 1-163-099-00 1-163-099-00	ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	68PF 18PF	20% 5% 5% 5% 5%	6.3V 50V 50V 50V
C162 C163 C164 C180 C181	1-163-105-00 1-123-875-11 1-163-111-00 1-163-035-00 1-163-035-00	CERAMIC CHIP 33PF ELECT 10MF CERAMIC CHIP 56PF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF	5% 20% 5%	50V 50V 50V 50V 50V	C301 C302 C303 C304 C305	1-163-119-00 1-163-111-00 1-163-117-00 1-163-125-00 1-163-117-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	56PF 100PF 220PF	5% 5% 5% 5%	50V 50V 50V 50V
C182 C183 C184 C185 C186	1-126-157-11 1-163-035-00 1-126-157-11 1-163-035-00 1-126-157-11	ELECT 10MF CERAMIC CHIP 0.047MF ELECT 10MF CERAMIC CHIP 0.047MF ELECT 10MF	20% 20% 20%	16V 50V 16V 50V 16V	C306 C307 C308 C309 C310	1-163-021-00 1-163-081-00 1-163-133-00 1-163-009-11 1-163-129-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.22MF 470PF 0.001MF	5% 10% 5%	50V 25V 50V 50V 50V
C187 C190 C191 C195 C196	1-126-157-11 1-126-154-11 1-163-131-00 1-163-099-00 1-163-117-00	ELECT 10MF ELECT 47MF CERAMIC CHIP 390PF CERAMIC CHIP 18PF CERAMIC CHIP 100PF	20% 20% 5% 5% 5%	16V 6.3V 50V 50V	C311 C312 C313 C314 C315	1-163-035-00 1-163-109-00 1-163-015-00 1-163-117-00 1-163-105-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	47PF 0.0033MF 100PF	5% 10% 5% 5%	50V 50V 50V 50V 50V
C198 C201 C202 C203 C204	1-124-638-11 1-163-009-11 1-163-035-00 1-126-177-11 1-163-009-11	ELECT 22MF CCRAMIC CHIP 0.001MF CERAMIC CHIP 0.047MF ELECT 100MF CERAMIC CHIP 0.001MF	20% 10% 20% 10%	6.3V 50V 50V 6.3V 50V	C316 C317 C318 C319 C321	1-163-038-00 1-163-117-00 1-163-021-00 1-163-104-00 1-163-125-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	100PF 0.01MF 30PF	5% 5% 5%	25V 50V 50V 50V 50V
C205 C206 C207 C208 C209	1-126-162-11 1-163-105-00 1-163-125-00 1-163-105-00 1-163-021-00	ELECT 3.3MF CERAMIC CHIP 33PF CERAMIC CHIP 220PF CERAMIC CHIP 33PF CERAMIC CHIP 0.01MF	20% 5% 5% 5%	50V 50V 50V 50V 50V	C322 C323 C325 C334 C336	1-163-021-00 1-163-038-00 1-163-038-00 1-163-021-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF 0.1MF 0.01MF		50V 25V 25V 50V 50V
C211 C212 C213 C214 C215	1 -163-021-00 1 -126-094-11 1 -126-094-11 1 -124-257-00 1 -163-133-00	CERAMIC CHIP 0.01MF ELECT 4.7MF ELECT 4.7MF ELECT 2.2MF CERAMIC CHIP 470PF	10% 20% 20% 20% 5%	50V 25V 25V 50V	C401 C402 C403 C404 C405	1-163-035-00 1-126-154-11 1-163-035-00 1-163-145-00 1-163-127-00	CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	47MF 0.047MF 0.0015MF	20% 10% 5%	50V 6.3V 50V 50V
C216 C217 C218 C219 C220	1 -126 -094 -11 1 -163 -121 -00 1 -124 -257 -00	CERAMIC CHIP 33PF ELECT 4.7MF CERAMIC CHIP 150PF ELECT 2.2MF CERAMIC CHIP 56PF	5% 20% 5% 20% 5%	50V 25V 50V 50V 50V	C406 C407 C408 C409 C410	1-163-035-00 1-163-115-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF 82PF 0.01MF	5% 0.25PF	50V 50V 50V 50V
C221 C222 C223	1-163-021-00	CERAMIC CHIP 27PF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.047MF	5%	50V 50V 50V	C411 C412 C415	1-163-035-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF	5%	50V 50V 50V

Color Colo	No.	Part No.	Description		Domanie	N-	D+ N-				
1-163-035-00 CERAMIC CHIP 0.047MF 50V C542					Remark	No.	Part No.				Remark
1-18-2-13-0-10 CERAMIC CHIP 0.047MF 50V C542 1-163-035-00 CERAMIC CHIP 0.047MF 50V C642 1-163-035-00 CERAMIC CHIP 0.047MF 50V C642 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C603 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C604 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C604 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C605 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C605 1-163-035-00 CERAMIC CHIP 0.047MF 50V C604 1-163-035-00 CERAMIC CHIP 0.047MF 50V C604 1-163-035-00 CERAMIC CHIP 0.047MF 50V C604 1-163-035-00 CERAMIC CHIP 0.047MF 50V C702 1-163-035-00 CERAMIC CHIP 0.047MF 50V C702 1-163-035-00 CERAMIC CHIP 0.047MF 50V C702 1-163-035-00 CERAMIC CHIP 0.047MF 50V C703 1-124-470-00 ELECT 0.00MF 20% 6.3V C704 1-163-035-00 CERAMIC CHIP 0.047MF 50V C704 1-163-035-00 CERAMIC CHIP 0.047MF 50V C705 1-163-035-00 CERA	C417	1-163-035-00	CERAMIC CHIP 0.047MF			1				20%	
C420 1-163-093-00 CERAMIC CHIP 10-097WF 5X 50V C603 1-163-093-00 CERAMIC CHIP 10-097 5X 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C603 1-163-093-00 CERAMIC CHIP 10-097WF 50V C703 1-12-471-00 CERAMIC CHIP 10-097WF 50V C703 1-12-471-10 CERAMIC CHIP 10-097WF 50V C703			CERAMIC CHIP 0.047MF				1-163-035-00	CERAMIC CHI	P 0.047MF		50V
C423	C420										
C424		1-163-097-00	CERAMIC CHIP 15PF				1-163-021-00	CERAMIC CHI	P 0.01MF	10%	50V
1-163-095-00 CERMIC CHIP 70F SV C605 1-163-035-00 CERMIC CHIP 0.047MF SV C612 1-163-035-00 CERMIC CHIP 0.047MF SV C613 1-163-035-00 CERMIC CHIP 0.047MF SV C613 1-126-094-11 ELECT 2.2447 20% SOV C613 1-126-094-11 ELECT 2.2447 20% C613 1-126-094-11 ELECT 2.2447 20% C613 1-126-094-11 ELECT 2.2447 20% C613 1-124-471-00 ELECT 2.2447 20% C613 1-124-481-00 ELECT 2.2447 20% C613 1-124-141-10 E	C423	1-163-099-00	CERAMIC CHIP 18PF				1-163-035-00				
C426				0.25PF		C605	1-163-035-00	CERAMIC CHI	0.047MF		50 V
C428	0426	•									
1-163-021-00 CERAMIC CHIP 0.01MF 50V C702 1-163-033-00 CERAMIC CHIP 0.01MF 50V C702 1-163-035-00 CERAMIC CHIP 0.047MF 50V C703 1-163-035-00 CERAMIC CHIP 0.047MF 50V C703 1-163-035-00 CERAMIC CHIP 0.047MF 50V C703 1-124-471-00 ELECT 1000MF 20% 6.3V C703 1-124-579-10 ELECT 1000MF 20% 6.3V C703 1-124-589-11 ELECT 47MF 20% 50V C703 1-124-589-11 ELECT 47MF 20% 6.3V C703 1-124-5154-11 ELECT 47MF 20% 6.3V C703 1-124-5154-11 ELECT 47MF 20% 6.3V C703 1-124-5154-11 ELECT 47MF 20% 6.3V C703	C427	1-163-035-00	CERAMIC CHIP 0.047MF	_	50V					**	
C430 1-163-035-00 CERAMIC CHIP 0.047MF	C429	1-163-125-00	CERAMIC CHIP 0.01MF	5%							50V
C433 1-163-094-01 ELECT 4.7MF 20% 55% 50V C704 1-124-171-00 ELECT 1000MF 20% 6.3V C704 1-126-176-11 ELECT 20MF 20% 10V C705 1-163-023-00 CERAMIC CHIP 0.01MF 50V C706 1-163-023-00 CERAMIC CHIP 0.01MF 50V C706 1-163-023-00 CERAMIC CHIP 0.01MF 50V C706 1-163-023-00 CERAMIC CHIP 0.01MF 20% 6.3V C706 1-163-023-00 CERAMIC CHIP 10PF 5% 50V C803 1-163-035-00 CERAMIC CHIP 0.047MF 20% 6.3V C706 1-163-023-00 CERAMIC CHIP 27PF 5% 50V C803 1-163-035-00 CERAMIC CHIP 0.047MF 25% C706 1-163-035-00 CERAMIC CHIP 0.047MF 25% C706 1-163-035-00 CERAMIC CHIP 0.047MF 25% C706 1-124-654-11 ELECT 4.7MF 20% 6.3V C706 1-124-654-11 ELECT 4.7MF 20% 6.3V C706 1-126-154-11 ELECT 1.7MF 20% 6.3V C706 1-126-154-11 ELECT 1.7MF 20% 6.3V C706 1-12	C430	1-163-035-00	CERAMIC CHIP 0.047MF						0.047MF	20%	
C433 1-126-094-11 ELECT		1-163-021-00	CERAMIC CHIP 0.01MF	E er							
C433 1-163-103-00 CERAMIC CHIP 10PF 5% 50V C800 1-126-159-1 ELECT 47MF 20% 10V C437 1-163-093-00 CERAMIC CHIP 10PF 5% 50V C803 1-126-159-1 ELECT 47MF 20% 6.3V C439 1-163-103-00 CERAMIC CHIP 27PF 5% 50V C803 1-126-159-1 ELECT 47MF 20% 6.3V C440 1-124-463-00 CERAMIC CHIP 3PPF 5% 50V C803 1-126-153-00 CERAMIC CHIP 0.1MF 25V C441 1-163-241-11 CERAMIC CHIP 3PPF 5% 50V C805 1-126-154-1 ELECT 47MF 20% 6.3V C442 1-163-241-11 CERAMIC CHIP 3PPF 5% 50V C806 1-126-154-1 ELECT 47MF 20% 6.3V C443 1-163-030-00 CERAMIC CHIP 27PF 5% 50V C806 1-126-154-1 ELECT 47MF 20% 6.3V C444 1-163-241-11 CERAMIC CHIP 27PF 5% 50V C809 1-126-154-1 ELECT 47MF 20% 6.3V C444 1-163-031-00 CERAMIC CHIP 0.01MF 50V C809 1-126-154-1 ELECT 47MF 20% 6.3V C445 1-126-094-11 ELECT 4.7MF 20% 25V C809 1-126-154-1 ELECT 47MF 20% 6.3V C446 1-163-013-00 CERAMIC CHIP 9.01MF 50V C810 1-163-097-00 CERAMIC CHIP 0.01MF 50V C446 1-163-035-00 CERAMIC CHIP 9.047MF 5% 50V C810 1-163-035-00 CERAMIC CHIP 0.01MF 50V C446 1-163-035-00 ELECT 2.2MF 20% 50V C811 1-126-154-1 ELECT 47MF 20% 6.3V C450 1-124-257-00 ELECT 2.2MF 5% 50V C812 1-163-035-00 CERAMIC CHIP 0.01MF 50V C470 1-163-035-00 CERAMIC CHIP 0.047MF 50V C815 1-163-035-00 CERAMIC CHIP 0.01MF 50V C471 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-021-00 CERAMIC CHIP 0.01MF 50V C502 1-163-035-00 CERAMIC CHIP 0.047MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C503 1-163-035-00 CERAMIC CHIP 0.047MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C504 1-163-035-00 CERAMIC CHIP 0.047MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C505 1-163-035-00 CERAMIC CHIP 0.047MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C506 1-163-035-00 CERAMIC CHIP 0.047MF 50V C821 1-163-021-00 CERAMIC CHIP 0.0	C433	1-126-094-11	ELECT 4.7MF		257						
C437 1-163-093-00 CERAMIC CHIP 10PF 5% 50V C803 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C803 1-163-035-00 CERAMIC CHIP 27PF 5% 50V C804 1-163-038-00 CERAMIC CHIP 3PPF 5% 50V C805 1-163-038-00 CERAMIC CHIP 0.1MF 25V C804 1-163-038-00 CERAMIC CHIP 3PPF 5% 50V C805 1-163-038-00 CERAMIC CHIP 0.1MF 25V C805 1-163-038-00 CERAMIC CHIP 0.1MF 20% 6.3V C805 1-163-038-00 CERAMIC CHIP 0.1MF 20% 6.3V C806 1-126-154-11 ELECT 47MF 20% 6.3V C804 1-163-031-00 CERAMIC CHIP 10PF 5% 50V C809 1-126-154-11 ELECT 10MF 20% 16V C804 1-163-031-00 CERAMIC CHIP 0.01MF 50V C810 1-163-097-00 CERAMIC CHIP 10PF 5% 50V C809 1-126-154-11 ELECT 47MF 20% 6.3V C810 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C810 1-163-035-00 CERAMIC CHIP 10PF 5% 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C820 1-163-021-00 CERAMIC CHIP 0.047MF 50V C820 1-163-021-00 CERAMIC CHIP 0.047MF 50V C820 1-163-021-00 CERAMIC CHIP 0.047MF 50V C821 1-163-035-00 CERAMIC CHIP 0.047MF 50V C821		1-163-021-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 27PF	5%							50V
C439 1-163-103-00 CERAMIC CHIP 27PF 5% 50V C803 1-163-035-00 CERAMIC CHIP 0.1MF 25V C804 1-163-035-00 CERAMIC CHIP 0.1MF 25V C804 1-163-035-00 CERAMIC CHIP 0.1MF 25V C805 1-163-035-00 CERAMIC CHIP 0.1MF 25V C806 1-163-035-00 CERAMIC CHIP 0.1MF 20% 6.3V C806	C437										
C440 1-124-463-00 ELECT 0.1MF 20% 50V C806 1-163-038-00 ERAMIC CHIP 0.1MF 20% 6.3V C806 1-126-154-11 ELECT 47MF 20% 6.3V C806 1-126-154-11 ELECT 47MF 20% 6.3V C806 1-126-157-11 ELECT 47MF 20% 6.3V C806 1-126-157-11 ELECT 47MF 20% 6.3V C807 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 47MF 20% 6.3V C810 1-163-097-00 ERAMIC CHIP 0.01MF 50V C810 1-163-097-00 ERAMIC CHIP 0.047MF 50V C811 1-126-154-11 ELECT 47MF 20% 6.3V C812 1-163-093-00 ERAMIC CHIP 0.047MF 50V C812 1-163-093-00 ERAMIC CHIP 0.047MF 50V C814 1-163-091-00 ERAMIC CHIP 0.047MF 50V C815 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C816 1-163-093-00 ERAMIC CHIP 0.047MF 50V C817 1-126-157-11 ELECT 10MF 20% 16V C503 1-163-093-00 ERAMIC CHIP 0.047MF 50V C820 1-163-093-00 ERAMIC CHIP 0.047MF 50V C820 1-163-093-00 ERAMIC CHIP 0.047MF 50V C820 1-163-093-00 ERAMIC CHIP 0.047MF 50V C821 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-00 ERAMIC CHIP 0.047MF 50V C903 1-163-093-10 ERAMIC CHIP 0.047MF 50V C903 1-163-093-10 ERAMIC CHIP 0.047MF 50V C903 1-		1-163-103-00	CERAMIC CHIP 27PF	5%	50V	C803	1-163-035-00	CERAMIC CHIP	0.047MF	20%	
C442 1-163-241-11 CERAMIC CHIP 39PF 5% 50V C806 1-126-154-11 ELECT 47MF 20% 6.3V C443 1-163-103-00 CERAMIC CHIP 0.01MF 5% 50V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 6.3V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 16V C809 1-126-157-11 ELECT 10MF 20% 6.3V C810 1-163-093-00 CERAMIC CHIP 10PF 5% 50V C811 1-126-154-11 ELECT 47MF 20% 6.3V C812 1-163-093-00 CERAMIC CHIP 0.047MF 50V C812 1-163-093-00 CERAMIC CHIP 0.047MF 50V C814 1-163-035-00 CERAMIC CHIP 0.047MF 50V C815 1-163-038-00 CERAMIC CHIP 0.047MF 25V C816 1-163-038-00 CERAMIC CHIP 0.047MF 25V C816 1-163-038-00 CERAMIC CHIP 0.047MF 25V C817 1-126-157-11 ELECT 10MF 20% 16V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.047MF 50V C901 1-163-001-11 CERAMIC CHIP 0.047MF 50V C901 1-163-001-11 CERAMIC	C440	1-124-463-00	ELECT 0.1MF								
C444 1-163-021-00 CERAMIC CHIP 0.01MF 50V C810 1-163-021-00 CERAMIC CHIP 0.01MF 50V C814 1-163-021-00 CERAMIC CHIP 0.047MF 50V C815 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-035-00 CERAMIC CHIP 0.047MF 50V C817 1-163-035-00 CERAMIC CHIP 0.047MF 50V C818 1-163-021-00 CERAMIC CHIP 0.047MF 50V C819 1-163-021-00 CERAMIC CHIP 0.047MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMI	C441			5%	50V			ELECT		20%	
C444 1-163-021-00 CERAMIC CHIP 0.01MF 50V C810 1-163-037-00 CERAMIC CHIP 0.047MF 50V C811 1-126-154-11 ELECT 4.7MF 20% 25V C811 1-126-154-11 ELECT 4.7MF 50V C812 1-163-035-00 CERAMIC CHIP 0.047MF 50V C813 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-035-00 CERAMIC CHIP 0.01MF 50V C816 1-163-035-00 CERAMIC CHIP 0.01MF 50V C806 1-163-035-00 CERAMIC CHIP 0.01MF 50V C808 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.01MF 50V C809 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C903 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C904 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C904 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C904 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C904 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C904 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C905 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP 0.04MMF 50V C906 1-163-021-00 CERAMIC CHIP		1-163-241-11	CERAMIC CHIP 39PF								
C448 1-163-093-00 CERAMIC CHIP 10PF 5% 50V C812 1-163-035-00 CERAMIC CHIP 0.01MF 50V C816 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-035-00 CERAMIC CHIP 0.01MF 25V C816 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-035-00 CERAMIC CHIP 0.01MF 25V C816 1-163-035-00 CERAMIC CHIP 0.047MF 50V C816 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C905 1-163-021-00 CERAMIC CHIP 0.047MF 50V C905 1-163-0	C444	1-163-021-00	CERAMIC CHIP 0.01MF	,	50V	C810		CERAMIC CHIP	10MF 15PF		
C450 1-124-257-00 ELECT 2.2MF 20% 50V C813 1-163-021-00 CERAMIC CHIP 0.01MF 50V C814 1-163-035-00 CERAMIC CHIP 0.047MF 50V C815 1-163-038-00 CERAMIC CHIP 0.047MF 25V C816 1-163-038-00 CERAMIC CHIP 0.047MF 20% 6.3V C817 1-126-157-11 ELECT 10MF 20% 16V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C822 1-126-157-11 ELECT 10MF 20% 16V C822 1-126-157-11 ELECT 10MF 20% 16V C822 1-163-035-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C829 1-163-035-00 CERAMIC CHIP 0.047MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C821 1-163-035-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C810 1-163-035-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.047MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C901 1-163-035-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C905 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-009-11 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-009-11 CERAMIC CHIP 0.047MF 50V C906 1-163-009-11 CERAMIC CHIP 0.047MF 50V C906 1-163-009-11 CERAMIC CHIP 0.047MF									47MF	20%	
C464 1-163-015-00 CERAMIC CHIP 0.047MF C470 1-163-035-00 CERAMIC CHIP 0.047MF C501 1-126-154-11 ELECT 47MF 20% 6.3V C816 1-163-038-00 CERAMIC CHIP 0.1MF 25V C816 1-163-038-00 CERAMIC CHIP 0.047MF 20% 6.3V C816 1-163-038-00 CERAMIC CHIP 0.1MF 25V C817 1-126-157-11 ELECT 10MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHI		1-124-257-00	ELECT 2.2MF	20%	50V	C813					
C473 1-163-035-00 CERAMIC CHIP 0.047MF 20% 6.3V C816 1-163-038-00 CERAMIC CHIP 0.1MF 25V C816 1-163-038-00 CERAMIC CHIP 0.1MF 20% 16V C817 1-126-157-11 ELECT 10MF 25V C817 1-126-157-11 ELECT 10MF 25V C817 1-126-157-11 ELECT 10MF 20% 16V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-035-00 CERAMIC CHIP 0.047MF 50V C904 1-163-09-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-091-11 ELECT 10MF 20% 16V C905 1-163-091-11 ELECT 10MF 20% 6.3V C905 1-163-091-11 ELECT		1-163-115-00	CERAMIC CHIP 82PF		50V	C814	1-163-021-00	CERAMIC CHIP	0.01MF		50V
C502 1-163-035-00 CERAMIC CHIP 0.047MF 50V C818 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C900 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C904 1-163-089-11 CERAMIC CHIP 0.047MF 50V C905 1-163-021-00 CERAMIC CHIP 0.047MF 50V C905 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-089-11 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-1	C473	1-163-035-00	CERAMIC CHIP 0.047MF		50V	C816	14 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4				
C503 1-163-021-00 CERAMIC CHIP 0.01MF 50V C819 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C822 1-126-157-11 ELECT 10MF 50V C822 1-126-157-11 ELECT 10MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 50V C822 1-126-157-11 ELECT 10MF 50V C822 1-126-157-11 ELECT 10MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-021-00 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906			•	20%	6.37	C817	1-126-157-11	ELECT	10MF	20%	16V
C504 1-163-021-00 CERAMIC CHIP 0.01MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C821 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 50V C820 1-163-021-00 CERAMIC CHIP 0.01MF 50V C822 1-126-157-11 ELECT 10MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 50V C902 1-126-157-11 ELECT 10MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 50V C904 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 ELECT 10MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-11 ELECT 10MF 20% 16V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-11 ELECT 10MF 20% 16V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-11 ELECT 10MF 20% 16V C906 1-163-035-11 ELECT 22MF 20% 6.3V C906 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C906 1-	C503	1-163-035-00 1-163-021-00	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.01MF				1-163-021-00				
C506 1-163-035-00 CERAMIC CHIP 0.047MF 50V C822 1-126-157-11 ELECT 10MF 20% 16V C822 1-163-021-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C901 1-163-035-00 CERAMIC CHIP 0.047MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C901 1-163-035-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-1		1-163-021-00	CERAMIC CHIP 0.01MF		50V	C820	1-163-021-00	CERAMIC CHIP	0.01MF		50V
C509 1-163-021-00 CERAMIC CHIP 0.01MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C903 1-163-035-00 CERAMIC CHIP 0.047MF 50V C904 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C904 1-163-19-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C908 1-163-19-00 CERAMIC CHIP 120PF 5% 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C906 1-163-021-00 CERAMIC CHIP 0.047MF 50V C907 1-163-021-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C908 1-163-035-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C937 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 10MF 20% 16V C937 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 10MF 20% 16V C937 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 22MF 20% 6.3V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-11 CERAMIC CHIP 0.001		1-163-035-00	CERAMIC CHIP 0.047MF							20%	
C510 1-163-035-00 CERAMIC CHIP 0.047MF 50V C901 1-163-021-00 CERAMIC CHIP 0.01MF 50V C902 1-126-157-11 ELECT 10MF 20% 16V C903 1-163-021-00 CERAMIC CHIP 0.047MF 50V C904 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-035-00 CERAMIC CHIP 0.047MF 50V C904 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-129-00 CERAMIC CHIP 0.047MF 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C905 1-163-119-00 CERAMIC CHIP 120PF 5% 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-001-10 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 22MF 20% 6.3V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 10% 10% 10% 10%	C507	1-163-035-00	CERAMIC CHIP 0.047MF				1-163-021-00	CERAMIC CHIP	0.01MF		50V
C511 1-163-035-00 CERAMIC CHIP 0.047MF 50V C903 1-163-021-00 CERAMIC CHIP 0.01MF 10% 25V C904 1-163-035-00 CERAMIC CHIP 0.047MF 50V C904 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-097-11 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-019-00 CERAMIC CHIP 120PF 5% 50V C907 1-163-021-00 CERAMIC CHIP 0.047MF 50V C908 1-163-021-00 CERAMIC CHIP 0.047MF 50V C908 1-163-021-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C936 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 10MF 20% 16V C936 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 22MF 20% 6.3V C937 1-163-101-00 CERAMIC CHIP 22PF 5% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009	C510	1-163-035-00	CERAMIC CHIP 0.047MF				1-163-021-00	CERAMIC CHIP	0.01MF	204	
C515 1-163-035-00 CERAMIC CHIP 0.047MF 50V C905 1-163-035-00 CERAMIC CHIP 0.047MF 50V C906 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 0.047MF 10% 25V C906 1-163-035-00 CERAMIC CHIP 120PF 5% 50V C907 1-163-021-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C936 1-163-035-00 CERAMIC CHIP 15PF 5% 50V C910 1-126-157-11 ELECT 22MF 20% 6.3V C937 1-163-010-00 CERAMIC CHIP 22PF 5% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-11 CERAMIC CHIP			CERAMIC CHIP 0.047MF			C903	1-163-021-00	CERAMIC CHIP	0.01MF	•-	50V
C531 1-163-129-00 CERAMIC CHIP 330PF 5% 50V C906 1-163-809-11 CERAMIC CHIP 0.047MF 10% 25V C907 1-163-035-00 CERAMIC CHIP 120PF 5% 50V C907 1-163-021-00 CERAMIC CHIP 0.01MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C937 1-163-035-00 CERAMIC CHIP 15PF 5% 50V C926 1-124-638-11 ELECT 22MF 20% 6.3V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-11 CERA			,							10%	
C534 1-163-035-00 CERAMIC CHIP 0.047MF 50V C908 1-126-157-11 ELECT 10MF 20% 16V C910 1-126-157-11 ELECT 10MF 20% 16V C936 1-163-035-00 CERAMIC CHIP 0.047MF 50V C910 1-126-157-11 ELECT 10MF 20% 16V C937 1-163-0101-00 CERAMIC CHIP 0.047MF 50V C926 1-124-638-11 ELECT 22MF 20% 6.3V C937 1-163-101-00 CERAMIC CHIP 22PF 5% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V C950 1-163-009-11 CERAMIC CHIP 0	C531	1-163-129-00	CERAMIC CHIP 330PF	5%	50V	C906	1-163-809-11	CERAMIC CHIP	0.047MF 0.047MF	10%	
C535 1-163-097-00 CERAMIC CHIP 15PF 5% 50V C910 1-126-157-11 ELECT 10MF 20% 16V C536 1-163-035-00 CERAMIC CHIP 0.047MF 50V C926 1-124-638-11 ELECT 22MF 20% 6.3V C537 1-163-101-00 CERAMIC CHIP 22PF 5% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V	C534	1-163-035-00	CERAMIC CHIP 0.047MF				1-163-021-00	CERAMIC CHIP	0.01MF		50V
C537 1-163-101-00 CERAMIC CHIP 22PF 5% 50V C950 1-163-009-11 CERAMIC CHIP 0.001MF 10% 50V	C535										
		1-163-035-00	CERAMIC CHIP 0.047MF					ELECT	22MF		
		1-163-106-00	CERAMIC CHIP 36PF			C951	1-163-009-11	CERAMIC CHIP	0.001MF 0.001MF		

VI-57

No.	Part No.	Description	Remark	No.	Part No.	Description	Remark
C952 C953	1-163-035-00 1-163-035-00	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF	50V 50V	FL102 FL201 FL202 FL203	1-236-370-11 1-235-496-11 1-415-637-11 1-415-652-11		
CE301	1-567-306-11	FILTER, CÉRAMIC		FL401	1-409-397-11	TRAP	
0, 002	CON	INFCTOR		FL 801	1-415-647-11	DELAY LINE, LC	
CNUU3	1-506-473-11	DIN CONNECTOR 80			IC		
CN003 CN007 CN009 CN010 CN012	1-506-470-11 1-506-467-11 1-506-470-11 1-506-470-11	Description CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF TER FILTER, CERAMIC INECTOR PIN, CONNECTOR 8P PIN, CONNECTOR 5P PIN, CONNECTOR 6P PIN, CONNECTOR 6P PIN, CONNECTOR 4P PIN, CONNECTOR 4P PIN, CONNECTOR 2P CONNECTOR 3P PIN, CONNECTOR 3P PIN, CONNECTOR 3P PIN, CONNECTOR 3P PIN, CONNECTOR 7P PIN, CONNECTOR 7P PIN, CONNECTOR 7P		IC001 IC002 IC101 IC102 IC201	8-759-200-84 8-759-200-79 8-752-003-00 8-752-031-01 8-752-003-10	IC TC4081BF IC TC4049BF IC CX20030 IC CXA1047M IC CX20031	
CN013 CN014 CN030 CN201 CN301	1-506-467-11 1-506-471-11 1-506-469-11 1-506-467-11	PIN, CONNECTOR 2P PIN, CONNECTOR 6P PIN, CONNECTOR 4P PIN, CONNECTOR 8P PIN, CONNECTOR 2P		IC302 IC401 IC402 IC801 IC802	8-752-914-56 8-759-200-79 8-759-925-60 8-759-941-68 8-759-941-68	IC CX23054 IC TA8607F IC BA401 IC BA7131F IC BA7131F	
CN310 CN311 CN701 CN702	*1-506-776-11 *1-566-148-11 1-506-472-11 1-506-472-11	CONNECTOR, BOARD TO BOARD 19P CONNECTOR, BOARD TO BOARD 18P PIN, CONNECTOR 7P PIN, CONNECTOR 7P		10000	8-759-941-68 8-759-710-09 8-759-710-09 8-759-927-52	IC BA7131F IC NJM2233AM IC NJM2233AM	
	DIO				100	<u>L</u>	
D001 D002 D003 D004 D005	8-719-100-05 8-719-100-05 8-719-100-03	DIODE 1S2837 DIODE 1S2837 DIODE 1S2837 DIODE 1S2835 DIODE 1S2835		L101 L102 L103 L104 L106	1-408-970-21 1-408-973-21 1-408-972-21 1-408-976-21 1-408-973-21	INDUCTOR INDUCTOR	100H 180H 150H 33UH 180H
D006 D008 D012 D013 D101	8-719-100-05 8-719-100-05 8-719-100-05	DIODE 1S2835 DIODE 1S2837 DIODE 1S2837 DIODE 1S2837 DIODE 1S2837 DIODE 1SS193		L107 L110 L111 L112 L113	1-410-388-21	INDUCTOR CHIP	39UH 22UH 4.7UH 180UH 56UH
D104 D301 D303 D402 D403	8-719-100-03 8-719-100-03 8-719-100-05	DIODE 1S2835 DIODE 1S2835 DIODE 1S2835 DIODE 1S2837 DIODE 1SS123		L114 L115 L116 L201 L202	1-408-973-21 1-410-378-11 1-408-980-21 1-408-972-21 1-408-984-21		18UH 5.6UH 68UH 15UH 15OUH
D405 D410 D411 D601 D602	8-719-100-05 8-719-800-76 8-719-100-05	DIODE 1S2837 DIODE 1S2837 DIODE 1SS123 DIODE 1S2837 DIODE 1S2837		L203 L204 L205 L206 L207	1-408-978-21 1-410-390-11 1-408-960-21 1-408-960-21	INDUCTOR INDUCTOR CHIP INDUCTOR INDUCTOR	47UH 56UH 1.5UH 1.5UH 1.5UH
D603 D950	8-719-100-05 8-719-100-05	DIODE 1S 2837 DIODE 1S 2837		L209	1-410-386-11	INDUCTOR CHIP	27UH
	DEI	LAY_LINE		L210 L301	1-410-388-21	INDUCTOR CHIP	39UH 100UH
DL001 DL002	1-415-342-00	DELAY LINE, 1H DELAY LINE, 1H		L302 L303	1-408-983-21 1-408-948-00	INDUCTOR INDUCTOR	120UH 220UH
		LTER		L304 L305	1-408-981-21 1-408-968-21	INDUCTOR INDUCTOR	82UH 6.8UH
FL101	1-236-371-11	LPF, REC (Y)		L401 L402	1-408-974-21 1-410-072-21	INDUCTOR INDUCTOR	22UH 820UH

No.	Part No.	Description		Remark	No.	Part No.	Description	1.	Remark
	•						-		
L403	1-408-985-21		180UH		Q111	8-729-901-01			
L404		INDUCTOR	6.8UH			8-729-300-55			
L405	1-408-963-11		2. 7UH		Q113	8-729-901-01			
L406 L407	1-408-968-21 1-408-973-21	INDUCTOR INDUCTOR	6.8UH 18UH		Q114 Q115	8-729-901-04 8-729-901-01	TRANS IS TOR		
L40/	1-400-5/3-21	THEOCIOK	10011		CITA	0-729-301-01	TRAILS 13 TUR	DICITAL	
L408	1-408-989-21	INDUCTOR	470UH		0116	8-729-102-76	TRANS IS TOR	2S A 81 2	
L409	1-408-989-21	INDUCTOR	470UH		0117		TRANS IS TOR		
L410	1-408-972-21	INDUCTOR	15UH		0118	8-729-100-66	TRANS IS TOR		
L411	1-408-973-21	INDUCTOR	18UH		Q119	8-729-100-66	TRANS IS TOR	2SC1623	
L412	1-408-976-21	INDUCTOR	33UH		Q120	8-729-901-04	TRANS IS TOR	DTA114EK	
L413	1-408-970-21	INDUCTOR	1.01112		0121	0 720 100 66	TDAME ICTOR	2001622	
L414	1-408-970-21	INDUCTOR	10UH 10UH		Q121 Q122		TRANS IS TOR		
L415	1-408-968-21	INDUCTOR	6.8UH		0123	8-729-100-66	TRANS IS TOR		
L418	1-408-970-21	INDUCTOR	10UH		Q124	8-729-100-66	TRANS IS TOR		
L501	1-408-982-11	INDUCTOR	100UH		0125	8-729-100-66	TRANS IS TOR		
	_ \\\	21.0001011	200011		4.20	0 123 200 00	110.100 20 1011	2001020	
L531	1-408-984-21		150UH		Q126	8-729-100-66			
L532		INDUCTOR	82UH		Q127	8-729-100-66	TRANS ISTOR		
L533	1-408-975-21		27UH		Q128	8-729-100-66			
L534	1-408-969-21	INDUCTOR	8. 2UH		Q129	8-729-100-66	TRANS IS TOR		
L601	1-408-982-11	INDUCTOR	100UH		Q130	8-729-100-66	TRANS IS TOR	2501623	
L701	1-408-982-11	INDUCTOR	100UH		Q131	8-729-901-01	TRANS IS TOR	DTC144EK	
L801	1-408-982-11		100UH		0133	8-729-901-06			
L901	1-408-970-21	INDUCTOR	1 OUH			8-729-901-01	TRANS IS TOR	DTC144EK	
					Q151	8-729-100-66	TRANS IS TOR	2SC1623	
	VAR	IABLE COIL			Q152	8-729-100-66	TRANS IS TOR	2SC1623	
L V 201	1-408-520-00	COIL, VARIABLE	15UH		Q201	8-729-901-01			
	TDA	NETETOD			Q202	8-729-901-01			
	IKA	NS IS TOR			0203		TRANS IS TOR		
Q001	8-729-901-01	TRANS IS TOR DTC	1 AAFK		Q204 Q205	8-729-901-01 8-729-901-06	TRANS IS TOR TRANS IS TOR		
0002		TRANSISTOR DTA			QL00	0-723-301-00	TITALO 13 FOR	DINITTER	
0003	8-729-901-01	TRANSISTOR DTC			Q206	8-729-100-76	TRANS IS TOR	2SC1623	
Q004	8-729-901-06	TRANSISTOR DTA			Q207		TRANS IS TOR		
Q005	8-729-900-53	TRANSISTOR DTC	114EK		Q208	8-729-100-66			
0000	0 700 001 01				Q209	8-729-901-00	TRANS IS TOR		
Q006	8-729-901-04	TRANSISTOR DTA			Q210	8-729-901-00	TRANS IS TOR	DTC124EK	
Q007 Q008	8-729-901-01 8-729-901-01	TRANSISTOR DTC			0211	0 720 100 70	TO ANC TO TOO	20 4 0 1 2	
0009	8-729-901-06	TRANSISTOR DTA	144EK		Q211	8-729-100-76			
0010		TRANSISTOR DTC	144FK		Q212 Q213	8-729-100-76 8-729-901-01	TRANS IS TOR		
40.0	5 ,25-501-01		m + 75-1%		Q214	8-729-900-89	TRANS IS TOR		
Q011	8-729-201-79	TRANSISTOR 2SD	1406		Q301	8-729-100-66	TRANS IS TOR		
Q012 A	ƥ8 - 729 -113-31	TRANSISTOR 2SB	144EK 144EK 144EK 1406 733-2 144EK 144EK		~- ~ ·	200 00			
Q013	8-729-901-01	TRANSISTOR DTC	144EK	·	Q302	8-729-100-66	TRANS IS TOR	2S C 1623	
Q015	8 -729 - 901 -06	TRANSISTOR DTA	144EK .		Q303	8-729-100-66	TRANS ISTOR		
Q020	8-729-100-76	TRANSISTOR 2SA	812		Q304		TRANS IS TOR		
01.01	0 700 001 00	T0410 10 T00			Q305	8-729-100-66	TRANS ISTOR		
0101		TRANSISTOR DTA			Q306	8-729-100-66	TRANS IS TOR	2SC1623	
Q102 Q103	8-729-901-01 8-729-901-01	TRANSISTOR DTC			0207	0 720 001 01	TO ANC IC TOO	OTC144EV	
Q103	8-729-901-01	TRANSISTOR DTC TRANSISTOR DTA			Q307 Q308	8-729-901-01 8-729-901-01	TRANS IS TOR		
0105	8-729-202-38	TRANSISTOR DIA			Q308 Q401	8-729-901-01	TRANS IS TOR		
4100	0-153-605-30	100131310K 23C	332011		Q401 Q402	8-729-100-66	TRANS IS TOR		
Q106	8-729-202-38	TRANSISTOR 2SC	3326N		Q402 Q403	8-729-901-01	TRANS IS TOR		
Q107	8-729-100-76	TRANSISTOR 2SA			4.55	0-723-301-01	TIVING 13 TOK	DIOXTEN	
0108	8-729-901-01	TRANSISTOR DTC			Q404	8-729-901-04	TRANS IS TOR	DTA114EK	
Q109	8-729-901-01	TRANSISTOR DTC			Q405	8-729-901-01	TRANS IS TOR		
Q110	8-729-901-01	TRANSISTOR DTC		l l	Q406	8-729-901-06	TRANS IS TOR		

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque 🐧 sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

VI-57

No.	Part No.	Description	Remark	, No.	Part No.	Description				Remark
Q408	8-729-100-66	TRANSISTOR 2SC1623		Q611		TRANSISTOR 2	C1 622			NCMUT K
0409	8-729-100-66	TRANSISTOR 2SC1623		Q612	8-729-100-66	TRANSISTOR 2				
Q411 Q412	8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		Q613	8-729-100-76	TRANSISTOR 2				
Q413	8-729-100-66	TRANS ISTOR 25C1623		Q614 Q615	8-729-901-01 8-729-901-01	TRANSISTOR D TRANSISTOR D				
Q414	8-729-100-66	TRANSISTOR 25 C1623		Q616	8-729-901-06	TRANS IS TOR D	TA144E)	<		
Q415 Q416	8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR DTA114EK		Q619	8-729-901-01	TRANSISTOR D		<		
Q417	8-729-100-66	TRANS ISTOR 2SC1623		Q701 Q702	8-729-100-76 8-729-100-76	TRANSISTOR 25				
Q418		TRANSISTOR 2SC1623		Q703	8-729-100-76	TRANSISTOR 2				
Q419 Q420	8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SA812		Q704	8-729-100-76	TRANS ISTOR 25			•	
Q421	8-729-100-66	TRANSISTOR 25 A612		Q801 Q802	8-729-100-66 8-729-100-66	TRANSISTOR 25				
Q422 Q423	8-729-100-76	TRANSISTOR 2SA812		Q803	8-729-100-66	TRANSISTOR 25	C1623			1
•		TRANSISTOR 2SC1623 TRANSISTOR 2SC1623 TRANSISTOR 2SA812 TRANSISTOR 2SC1623 TRANSISTOR 2SA812 TRANSISTOR 2SA812 TRANSISTOR 2SC1623		Q804	8-729-100-66	TRANSISTOR 25				
Q424 Q425		TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		Q805 Q806	8-729-100-76 8-729-100-66	TRANSISTOR 25	A812			
Q426	8-729-100-76	TRANSISTOR 2SA812		Q807	8-729-100-66	TRANS IS TOR 2S	C1623			
Q429 Q430	8-729-100-66 8-729-901-01	TRANSISTOR 2SC1623 TRANSISTOR DTC144EK		8080	8-729-100-66	TRANSISTOR 25	C1623			
Q431				Q809	8-729-901-01	TRANSISTOR DI				
Q432	8-729-901-01	TRANSISTOR DTC144EK TRANSISTOR DTC144EK		Q810 Q811	8-729-100-66 8-729-100-66	TRANSISTOR 25	C1623			
Q433	8-729-202-38	TRANS ISTOR 2SC3326N		Q812	8-729-100-66	TRANS ISTOR 2S	C1623			
Q435 Q436	8-729-901-01 8-729-901-01	TRANSISTOR DTC144EK TRANSISTOR DTC144EK		Q813 Q901	8-729-100-76 8-729-901-04	TRANSISTOR 2S	A812			
Q437		TRANSISTOR DTC144EK								
0501	8-729-100-66	TRANSISTOR 25C1623		Q902 Q950	8-729-901-04 8-729-903-10	TRANSISTOR DT	All4EK W1			
Q502 Q503	8-729-100-66	TRANSISTOR 2SC1623		Q951	8-729-907-46	TRANSISTOR IM	Z1			
Q504	8-729-100-66 8-729-901-06	TRANSISTOR 2SC1623 TRANSISTOR DTA144EK		Q952 Q953		TRANSISTOR 2S TRANSISTOR DT				
Q505	8-729-312-22	TRANSISTOR 2SA1122D								
Q506 Q531	8-729-312-22	TRANS IS TOR 2S A1122D		Q954	8-729-100-66		C1523			
Q532	8-729-901-01	TRANSISTOR 2SC1623 TRANSISTOR DTC144EK			RES I	STOR				
Q533	8-729-901-01	TRANSISTOR DTC144EK	.	R001	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
Q534	8-729-122-63	TRANSISTOR 2SA1226	İ	R002 R003	1 -216 -089 -00 1 -216 -097 -00	METAL GLAZE METAL GLAZE	47K 100K	5% 5%	1/10W 1/10W	
Q535	8-729-100-66	TRANSISTOR 2SC1623		R004	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
Q536 Q537		TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		R005	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
Q538	8-729-100-66	TRANSISTOR 2SC1623		R006	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
Q539	8-729-100-66	TRANSISTOR 2SC1623		R007 R008		METAL GLAZE	470	5%	1/10W	
0540	8-729-102-08	TRANSISTOR 2SC2223-F14		R009		METAL GLAZE METAL GLAZE	4.7K 0	5% 5%	1/10W 1/10W	
Q541 Q542		TRANSISTOR 2SC2223-F14 TRANSISTOR DTC144EK		R013	1-216-641-11	METAL CHIP	390	0.50%		
Q601		TRANSISTOR 2SA812		R014	1-216-653-11	METAL CHIP	1.2K	0.50%	1/10W	
Q602	8-729-100-66	TRANSISTOR 2SC1623		R015 R016	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
Q603	8-729-100-76	TRANSISTOR 2SA812		R017		METAL GLAZE METAL GLAZE	1.8K 100	5% 5%	1/10W 1/10W	
Q604 Q605	8-729-100-66 8-729-901-06	TRANSISTOR 2SC1623 TRANSISTOR DTA144EK		R018		METAL GLAZE	10K	5%	1/10W	
Q606	8-729-901-01	TRANSISTOR DTC144EK		R019	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
Q607	8-729-901-01	TRANSISTOR DTC144EK		R020	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
Q608	8-729-312-22	TRANSISTOR 2SA1122D		R021- R022		METAL GLAZE METAL GLAZE	330 330	5% 5%	1/10W 1/10W	
Q609	8-729-312-22	TRANSISTOR 2SA1122D	1	R024		METAL GLAZE	10K	5%	1/10W	

No.	Part No.	Description				Remark	No.	Part No.	Description				Remark
R025 R027 R029 R030 R050	1-216-073-00 1-216-295-00 1-216-295-00 1-216-073-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 0 0 10K 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R141 R142 R143 R144 R145	1-216-083-00 1-216-081-00 1-216-049-00 1-216-081-00 1-216-748-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	27K 22K 1K 22K 39K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R060 R087 R089 R094 R096	1-216-049-00 1-216-073-00 1-216-073-00 1-216-037-00 1-216-032-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 330	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R146 R148 R149 R151 R153	1-216-748-11 1-216-044-00 1-216-041-00 1-216-049-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	39K 620 470 1K 2.2K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R097 R098 R099 R101 R102	1-216-043-00 1-216-073-00 1-216-057-00 1-216-113-00 1-216-099-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 2.2K 470K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R154 R155 R156 R157 R158	1-216-081-00 1-216-081-00 1-216-101-00 1-216-057-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 22K 150K 2.2K 470	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R103 R104 R105 R106 R107	1-216-075-00 1-216-081-00 1-216-077-00 1-216-085-00 1-216-109-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 15K 33K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R159 R160 R162 R163 R164	1-216-045-00 1-216-040-00 1-216-043-00 1-216-057-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 430 560 2.2K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R108 R109 R110 R111 R112	1-216-049-00 1-216-081-00 1-216-081-00 1-216-295-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 22K 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R165 R166 R167 R168 R169	1-216-073-00 1-216-083-00 1-216-081-00 1-216-043-00 1-216-021-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 27K 22K 560 68	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R113 R114 R115 R116 R117	1-216-089-00 1-216-091-00 1-216-083-00 1-216-093-00 1-216-667-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL CHIP	56K 27K 68K	5% 5% 5% 5% 0.50%	1/10W 1/10W 1/10W 1/10W 1/10W		R170 R171 R172 R173 R174	1-216-045-00 1-216-055-00 1-216-049-00 1-216-049-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 1.8K 1K 1K 2.2K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R118 R119 R120 R121 R122	1-216-643-11 1-216-641-11 1-216-653-11 1-216-089-00 1-216-663-11	METAL CHIP METAL CHIP METAL CHIP METAL GLAZE METAL CHIP	390 1.2K 47K	0.50% 0.50% 0.50% 5% 0.50%	1/10W 1/10W 1/10W		R175 R176 R177 R178 R179	1-216-083-00 1-216-059-00 1-216-049-00 1-216-033-00 1-216-034-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	27K 2.7K 1K 220 240	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R123 R124 R125 R126 R127	1-216-671-11 1-216-679-11 1-216-065-00 1-216-075-00 1-216-071-00	METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	15K 4.7K 12K	5%			R180 R181 R182 R183 R184	1-216-057-00 1-216-043-00 1-216-057-00 1-216-083-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 560 2.2K 27K 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R128 R129 R130 R131 R132	1-216-666-11 1-216-666-11 1-216-103-00 1-216-663-11 1-216-667-11	METAL CHIP METAL CHIP METAL GLAZE METAL CHIP METAL CHIP	4.3K 180K	0.50%	1/10W 1/10W 1/10W		R185 R186 R187 R188 R189	1-216-053-00 1-216-043-00 1-216-031-00 1-216-033-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.5K 560 180 220 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R133 R134 R135 R136 R137	1-216-645-11 1-216-032-00 1-216-097-00	METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	560 200 100K	0.50% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R190 R191 R192 R193 R194	1-216-039-00 1-216-075-00 1-216-081-00 1-216-057-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 12K 22K 2.2K 560	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R138 R139 R140	1-216-653-11 1-216-641-11 1-216-049-00	METAL CHIP METAL CHIP METAL GLAZE	390	0.50% 0.50% 5%			R195 R196 R197	1-216-295-00 1-216-295-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 220	5% 5% 5%	1/10W 1/10W 1/10W	

VI-57

No.	Part No.	Description			Remark	No.	Part No.	Description				Remark
R198 R199 R201 R202 R203	1-216-027-00 1-216-073-00 1-216-033-00 1-216-037-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	120 5; 10K 5; 220 5; 330 5; 560 5;	1/10W 1/10W 1/10W		R256 R257 R258 R259 R260	1-216-081-00 1-216-049-00 1-216-073-00 1-216-081-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 1K 10K 22K 560	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R204 R205 R206 R207 R208	1-216-081-00 1-216-081-00 1-216-049-00 1-216-063-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 59 22K 59 1K 59 3.9K 59 1K 59	1/10W 1/10W 1/10W		R261 R262 R263 R264 R265	1-216-041-00 1-216-043-00 1-216-041-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 560 470 1K 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R209 R210 R211 R213 R214	1-216-049-00 1-216-035-00 1-249-431-11 1-216-295-00 1-216-057-00	METAL GLAZE METAL GLAZE CARBON METAL GLAZE METAL GLAZE	1K 52 270 53 15K 53 0 53 2.2K 53	1/10W 1/4W 1/10W		R266 R267 R268 R301 R302	1-216-065-00 1-216-057-00 1-216-057-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 2.2K 2.2K 1K 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R216 R217 R218 R219 R220	1-216-049-00 1-216-295-00 1-216-065-00 1-216-081-00 1-216-045-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 0 5% 4.7K 5% 22K 5% 680 5%	1/10W 1/10W 1/10W		R303 R304 R305 R306 R307	1-216-105-00 1-216-039-00 1-216-051-00 1-216-081-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220K 390 1.2K 22K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R221 R222 R223 R224 R225	1-216-043-00 1-216-065-00 1-216-097-00 1-216-075-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 4.7K 5% 100K 5% 12K 5% 2.2K 5%	1/10W 1/10W 1/10W		R308 R309 R310 R311 R312	1-216-051-00 1-216-057-00 1-216-063-00 1-216-065-00 1-216-067-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.2K 2.2K 3.9K 4.7K 5.6K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R226 R227 R228 R229 R230	1-216-039-00 1-216-035-00 1-216-748-11 1-216-073-00 1-216-117-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 5% 270 5% 39K 5% 10K 5% 680K 5%	1/10W 1/10W 1/10W		R313 R314 R315 R316 R317	1-216-049-00 1-216-085-00 1-216-085-00 1-216-057-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 33K 33K 2.2K 560	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R231 R232 R233 R234 R235	1-216-075-00 1-216-081-00 1-216-081-00 1-216-081-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 5% 22K 5% 22K 5% 22K 5% 22K 5%	1/10W 1/10W		R318 R319 R320 R321 R322	1-216-065-00 1-216-073-00 1-216-089-00 1-216-085-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 10K 47K 33K 560	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R236 R237 R238 R239 R240	1-216-029-00 1-216-027-00 1-216-015-00 1-216-083-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	150 5% 120 5% 39 5% 27K 5% 1K 5%	1/10W 1/10W		R323 R324 R325 R326 R327	1-216-043-00 1-216-073-00 1-216-077-00 1-216-041-00 1-216-036-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 10K 15K 470 300	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R241 R244 R245 R246 R247	1 -216 -065 -00 1 -216 -059 -00 1 -216 -051 -00 1 -216 -1 21 -00 1 -216 -089 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 5% 2.7K 5% 1.2K 5% 1M 5% 47K 5%	1/10W 1/10W 1/10W		R328 R329 R330 R331 R332	1-216-041-00 1-216-041-00 1-216-073-00 1-216-077-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 470 10K 15K 470	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R248 R249 R250 R251 R252	1-216-067-00 1-216-049-00 1-216-049-00 1-216-041-00 1-216-031-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 5% 1K 5% 1K 5% 470 5% 180 5%	1/10W 1/10W		R333 R401 R402 R403 R404	1-216-073-00 1-216-073-00 1-216-029-00 1-216-073-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 10K 150 10K 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R253 R254 R255	1-216-041-00 1-216-041-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZÉ	470 5% 470 5% 10K 5%	1/10W		R405 R406 R407	1-216-041-00 1-216-035-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE	470 270 560	5% 5% 5%	1/10W 1/10W 1/10W	

No.	Part No.	Description			Remark	No.	Part No.	Description				Remark
R408 R409 R410 R411 R412	1-216-081-00 1-216-081-00 1-216-041-00 1-216-045-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 5% 22K 5% 470 5% 680 5% 470 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R463 R464 R465 R468 R469	1-216-081-00 1-216-073-00 1-216-073-00 1-216-089-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 10K 10K 47K 10K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R414 R415 R416 R417 R418	1-216-043-00 1-216-039-00 1-216-073-00 1-216-049-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 390 5% 10K 5% 1K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R472 R476 R478 R479 R486	1-216-043-00 1-216-089-00 1-216-085-00 1-216-073-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 47K 33K 10K 470	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R419 R420 R421 R422 R423	1-216-073-00 1-216-033-00 1-216-049-00 1-216-045-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 220 5% 1K 5% 680 5% 220 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R487 R490 R501 R502 R503	1-216-041-00 1-216-089-00 1-216-043-00 1-216-295-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 47K 560 0 4.7K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R424 R425 R426 R427 R428	1-216-295-00 1-216-075-00 1-216-748-11 1-216-041-00 1-216-037-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 12K 5% 39K 5% 470 5% 330 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R504 R505 R507 R508 R510	1-216-035-00 1-216-033-00 1-216-053-00 1-216-057-00 1-216-069-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	270 220 1.5K 2.2K 6.8K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R429 R431 R432 R433 R434	1-216-035-00 1-216-081-00 1-216-081-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	270 5% 22K 5% 22K 5% 1K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R511 R512 R513 R514 R515	1-216-049-00 1-216-041-00 1-216-069-00 1-216-041-00 1-216-047-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 470 6.8K 470 820	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R435 R436 R437 R438 R439	1-216-073-00 1-216-049-00 1-216-073-00 1-216-069-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 1K 5% 10K 5% 6.8K 5% 27K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R517 R518 R519 R520 R531	1-216-089-00 1-216-089-00 1-216-089-00 1-216-089-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 47K 47K 47K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R440 R441 R442 R443 R444	1 -216 -295 -00 1 -216 -081 -00 1 -216 -047 -00 1 -216 -029 -00 1 -216 -051 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 22K 5% 820 5% 150 5% 1.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R532 R533 R534 R535 R536	1-216-043-00 1-216-035-00 1-216-059-00 1-216-043-00 1-216-079-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 270 2.7K 560 18K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R445 R446 R447 R448 R449	1-216-081-00 1-216-081-00 1-216-045-00 1-216-052-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 5% 22K 5% 680 5% 1.3K 5% 33K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R537 R538 R540 R542 R543	1-216-049-00 1-216-073-00 1-216-073-00 1-216-049-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 10K 10K 1K 22K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R450 R451 R452 R453 R454	1 -216 -079 -00 1 -216 -085 -00 1 -216 -069 -00 1 -216 -073 -00 1 -216 -073 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	18K 5% 33K 5% 6.8K 5% 10K 5% 10K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R544 R545 R546 R547 R548	1-216-081-00 1-216-041-00 1-216-049-00 1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 470 1K 470 470	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R455 R456 R457 R458 R459	1-216-085-00 1-216-081-00 1-216-043-00 1-216-047-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 5% 22K 5% 560 5% 820 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R549 R550 R551 R552 R553	1-216-295-00 1-216-041-00 1-216-041-00 1-216-065-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 470 470 4.7K 27K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R460 R461 R462	1 -216 -077 -00 1 -216 -051 -00 1 -216 -051 -00	METAL GLAZE METAL GLAZE METAL GLAZE	15K 5% 1.2K 5% 1.2K 5%	1/10W 1/10W 1/10W		R554 R555 R556	1-216-081-00 1-216-046-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	22K 750 10K	5% 5% 5%	1/10W 1/10W 1/10W	

VI-57

No.	Part No.	Description			Remark	No.	Part No.	Description			Remark
R558 R560 R601 R602 R603	1-216-073-00 1-216-059-00 1-216-057-00 1-216-065-00 1-216-748-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 2.7K 5% 2.2K 5% 4.7K 5% 39K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R711 R712 R777 R802 R803	1-216-043-00 1-216-043-00 1-216-295-00 1-216-025-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5 0 5 100 5	% 1/10W % 1/10W % 1/10W % 1/10W % 1/10W	
R604 R605 R606 R607 R608	1-216-075-00 1-216-081-00 1-216-097-00 1-216-055-00 1-216-059-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 5% 22K 5% 100K 5% 1.8K 5% 2.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R804 R805 R806 R807 R808	1-216-081-00 1-216-053-00 1-216-067-00 1-216-073-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.5K 5 5.6K 5	% 1/10W	
R609 R610 R611 R612 R613	1-216-059-00 1-216-111-00 1-216-061-00 1-216-041-00 1-216-069-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.7K 5% 390K 5% 3.3K 5% 470 5% 6.8K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R809 R810 R811 R812 R813	1-216-045-00 1-216-045-00 1-216-029-00 1-216-060-00 1-216-045-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5 680 5 150 5 3K 5 680 5	% 1/10W % 1/10W	
R614 R615 R616 R617 R618	1-216-073-00 1-216-073-00 1-216-077-00 1-216-041-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 10K 5% 15K 5% 470 5% 22K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R814 R815 R816 R817 R818	1-216-073-00 1-216-049-00 1-216-065-00 1-216-049-00 1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5 1K 5 4.7K 5 1K 5 8.2K 5	% 1/10W % 1/10W % 1/10W	
R619 R620 R622 R623 R624	1-216-057-00 1-216-041-00 1-216-083-00 1-216-047-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 470 5% 27K 5% 820 5% 22K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R819 R820 R821 R822 R823	1-216-081-00 1-216-071-00 1-216-081-00 1-216-049-00 1-216-045-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 5 8.2K 5 22K 5 1K 5 680 5	% 1/10W % 1/10W % 1/10W	
R625 R626 R627 R628 R629	1-216-039-00 1-216-049-00 1-216-073-00 1-216-073-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 5% 1K 5% 10K 5% 10K 5% 220 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R824 R825 R826 R827 R828	1-216-073-00 1-216-027-00 1-216-045-00 1-216-073-00 1-216-053-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5; 120 5; 680 5; 10K 5; 1.5K 5;	% 1/10W % 1/10W % 1/10W	
R640 R641 R642 R643 R654	1-216-089-00 1-216-089-00 1-216-089-00 1-216-089-00 1-216-059-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 5% 47K 5% 47K 5% 47K 5% 2.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R829 R834 R835 R836 R837	1-216-073-00 1-216-073-00 1-216-033-00 1-216-032-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 55 10K 55 220 55 200 55 470 55	% 1/10W % 1/10W % 1/10W	
R655 R656 R657 R658 R659	1-216-045-00 1-216-053-00 1-216-049-00 1-216-051-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5% 1.5K 5% 1K 5% 1.2K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R838 R839 R840 R841 R843	1-216-073-00 1-216-041-00 1-216-077-00 1-216-057-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 59 470 59 15K 59 2.2K 59 560 59	% 1/10W % 1/10W % 1/10W	
R660 R661 R662 R665 R666	1 -216 -097 -00 1 -216 -081 -00 1 -216 -295 -00 1 -216 -091 -00 1 -216 -091 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 5% 22K 5% 0 5% 56K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R844 R845 R846 R901 R902	1-216-295-00 1-216-030-00 1-216-051-00 1-216-081-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 55 160 55 1.2K 55 22K 55 1K 55	6 1/10W 6 1/10W 6 1/10W	
R667 R695 R705 R706 R707	1-216-057-00 1-216-063-00 1-216-043-00 1-216-043-00 1-216-043-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 3.9K 5% 560 5% 560 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R903 R904 R931 R950 R952	1-216-069-00 1-216-069-00 1-216-049-00 1-216-085-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	6.8K 59 6.8K 59 1K 59 33K 59 10K 59	% 1/10W % 1/10W % 1/10W	
R708 R709 R710	1 -216 -043 -00 1 -216 -043 -00 1 -216 -043 -00	METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 560 5% 560 5%	1/10W 1/10W 1/10W		R953 R954 R955	1-216-067-00 1-216-055-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 59 1.8K 59 10K 59	6 1/10W	

No. Part No.	Description	Remark	, No.	Part No.	Description			Remark
	METAL GLAZE 4.7K 5% 1/10W METAL GLAZE 22K 5% 1/10W METAL GLAZE 4.7K 5% 1/10W METAL GLAZE 4.7K 5% 1/10W	Name of the second	C210 C211 C212 C212 C213 C214	1-163-021-00 1-124-234-00 1-126-157-11 1-163-038-00 1-163-127-00	CERAMIC CHIP	22MF 10MF 0.1MF	20% 20% 5%	50V 16V 16V 25V 50V
R962 1-216-037-00 R963 1-216-069-00 R964 1-216-061-00	METAL GLAZE 8.2K 5% 1/10W METAL GLAZE 330 5% 1/10W METAL GLAZE 6.8K 5% 1/10W METAL GLAZE 3.3K 5% 1/10W RIABLE RESISTOR		C215 C216 C217 C218 C219	1-163-127-00 1-126-157-11 1-126-157-11 1-163-033-00 1-124-589-11	ELECT	10MF 10MF	5% 20% 20%	50V 16V 16V 50V 16V
RV101 1-228-993-00 RV102 1-228-994-00 RV107 1-228-994-00 RV108 1-228-989-00 RV109 1-228-994-00	RES, ADJ, CARBON 4.7K RES, ADJ, CARBON 10K RES, ADJ, CARBON 10K RES, ADJ, CARBON 470		C220 C221 C222 C223 C224	1-163-034-00	ELECT CERAMIC CHIP CERAMIC CHIP	10MF 0.033MF 39PF	20% 5%	50V 16V 50V 50V 50V
RV110 1-228-998-00 RV201 1-228-994-00 RV202 1-228-994-00 RV501 1-228-990-00 RV502 1-228-989-00	RES, ADJ, CARBON 220K RES, ADJ, CARBON 10K RES, ADJ, CARBON 10K RES, ADJ, CARBON 1K RES, ADJ, CARBON 470		C225 C226 C227 C228 C229	1-124-234-00 1-124-589-11 1-163-035-00 1-126-157-11 1-126-157-11	ELECT CERAMIC CHIP ELECT	22MF 47MF 0.047MF 10MF 10MF	20% 20% 20% 20%	16V 16V 50V 16V 16V
RV503 1-228-990-00 RV601 1-228-991-00 RV602 1-228-991-00 RV604 1-228-996-00	RES, ADJ, CARBON 1K RES, ADJ, CARBON 2.2K RES, ADJ, CARBON 2.2K RES, ADJ, CARBON 47K RES, ADJ, CARBON 4.7K		C231 C232 C233 C234 C235		CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF 0.047MF 33PF	5% 5%	25V 25V 50V 50V 50V
RV950 1-228-994-00	RES, ADJ, METAL GLAZE 10K ANSFORMER		C236 C237 C238 C239 C240	1-163-035-00 11-163-021-00 1-126-157-11 1-163-035-00 1-124-589-11	CERAMIC CHIP ELECT CERAMIC CHIP	0.01MF 10MF	20%	50V 50V 16V 50V 16V
<u>cor</u>	NNECTOR CONNECTOR, BOARD TO BOARD 18P		C241 C242 C243 C244 C245	1-163-035-00 1-126-157-11 1-163-021-00 1-124-234-00 1-126-157-11	ELECT CERAMIC CHIP ELECT	10MF	20% 20% 20%	50V 16V 50V 16V
CR\ X201 1-567-412-11	<u>/STAL</u> VIBRATOR, CRYSTAL (10.7MHz)	*****	C246 C247	1-163-127-00 1-163-127-00 1-163-035-00 1-126-157-11 1-163-033-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	270PF 270PF 0.047MF 10MF	5% 5% 20%	50V 50V 50V 16V 50V
CAF	JG-11 BOARD, COMPLETE ***********************************	1000	C251 C252 C253 C254 C255	1-124-589-11 1-163-035-00 1-163-021-00 1-126-094-11 1-163-009-11	CERAMIC CHIP ELECT	0.01MF 4.7MF	20% 20% 10%	16V 50V 50V 25V 50V
C201 1-163-035-00 C202 1-163-105-00 C203 1-163-105-00 C204 1-163-021-00 C205 1-126-157-11	CERAMIC CHIP 33PF 5% CERAMIC CHIP 33PF 5% CERAMIC CHIP 0.01MF	50V 50V 50V 50V 16V		1-163-038-00 1-163-093-00 1-163-021-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF 10PF 0.01MF 0.01MF	5%	25V 50V 50V 50V 25V
C206 1-163-035-00 C207 1-126-154-11 C208 1-163-035-00 C209 1-126-157-11	ELECT 47MF 20% CERAMIC CHIP 0.047MF	50V 6.3V 50V 16V	C262 C263 C264	1-163-038-00 1-126-154-11	CERAMIC CHIP		20% 20%	25V 6.3V 16V

JG-11

	No.	Part No.	Description	1	Remark ,	No.	Part No.	Description				Remark
	C266		CERAMIC CHIP 0.1MF	-	5V	Q213		TRANSISTOR 2S	1812			<u>itematik</u>
						Q214 Q215	8-729-100-76	TRANSISTOR 2S TRANSISTOR 2S	A812			
		FIL	TER			Q216 Q217	8-729-100-76	TRANSISTOR 2S TRANSISTOR 2S	A812			
	CF201	1-567-390-11	FILTER, CERAMIC CERAMIC TRAP (4.5MHZ)			Q219		TRANSISTOR 2S				
	CIZUZ	CUN	NECTOR			Q221 Q222	8-729-901-01	TRANSISTOR DT TRANSISTOR 2S	C144EK			
	CN201	1-506-469-11	PIN, CONNECTOR 4P			0223 0224	8-729-100-76	TRANSISTOR 2S TRANSISTOR DT	A812			
	CN202	1-506-473-11	PIN, CONNECTOR 8P PIN, CONNECTOR 10P			0225		TRANSISTOR 2S				
	0.1.200	DIO	UE.			Q226		TRANSISTOR DT				
	D201	8-719-100-05	DIODE 152837				RES	ISTOR				
	D203 D204	8-719-100-05 8-719-100-05	DIODE 1S2837			R201 R202	1-216-049-00		1K 1K	5% 5%	1/10W 1/10W	
		IC				R203 R205	1-216-097-00 1-216-113-00	METAL GLAZE	100K 470K	5% 5%	1/10W 1/10W	
	IC201	8-752-322-24	IC CXL1008M			R206	1-216-129-00	METAL GLAZE	2.2M	5%	1/10W	
	IC202 IC203	8-752-322-24 8-759-207-38	IC CXL1008M IC TA7374P			R207 R208	1-216-129-00	METAL GLAZE METAL GLAZE	2.2M 220K	5% 5%	1/10W 1/10W	
	IC204 IC205	8-759-941-68 8-759-941-68	IC BA7131F IC BA7131F			R209 R210	1-216-073-00	METAL GLAZE METAL GLAZE	10K 220K	5% 5%	1/10W 1/10W	
		COII	L			R211	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
	L201		INDUCTOR 68UH			R212 R213	1-216-057-00 1-216-027-00	METAL GLAZE METAL GLAZE	2.2K 120	5% 5%	1/10W 1/10W	
	L202 L203	1-408-982-11 1-408-982-11	INDUCTOR 100UH INDUCTOR 100UH			R214 R215	1-216-049-00 1-216-065-00	METAL GLAZE METAL GLAZE	1K 4.7K	5% 5%	1/10W 1/10W	
	L204 L205	1-408-970-21 1-408-982-11	INDUCTOR 10UH INDUCTOR 100UH			R216	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
	L206	1-408-980-21	INDUCTOR 68UH			R217 R218	1-216-039-00 1-216-033-00	METAL GLAZE METAL GLAZE	390 220	5% 5%	1/10W 1/10W	
	L207 L208	1-408-982-11				R219 R220	1-216-079-00	METAL GLAZE METAL GLAZE	390 18K	5% 5%	1/10W 1/10W	
	L209 L210	1-408-970-21 1-408-982-11	INDUCTOR 10UH INDUCTOR 100UH	,		R221		METAL GLAZE	8. 2K	5%	1/10W	
٠.	L211	1-408-971-21						METAL GLAZE METAL GLAZE	1.8K 1M	5% 5%	1/10W 1/10W	
	L212 L213	1-408-978-21 1-408-982-11	INDUCTOR 100UH			R225 R226	1-216-053-00	METAL GLAZE METAL GLAZE	560 1.5K	5% 5%	1/10W 1/10W	
	L214		INDUCTOR CHIP 4.7UH			R227		METAL GLAZE	1K	5%	1/10W	
	0001	•	NS IS TOR			R228 R229		METAL GLAZE METAL GLAZE	12K 22K	5% 5%	1/10W 1/10W	
	Q201 Q202	8-729-100-76	TRANS ISTOR 2SA812 TRANS ISTOR 2SA812 TRANS ISTOR 2SA812				1-216-089-00 1-216-025-00	METAL GLAZE METAL GLAZE	47K 100	5% 5%	1/10W 1/10W	
	Q203 Q204	8-729-100-76	TRANSISTOR 2SA812 TRANSISTOR 2SA812 TRANSISTOR 2SA812				1-216-073-00		10K	5%	1/10W	
	Q205 Q206		TRANSISTOR 2S A812			R234	1-216-049-00 1-216-025-00	METAL GLAZE	1K 100	5% 5%	1/10W 1/10W	
	0207 0208	8-729-901-01 8-729-901-01 8-729-100-76	TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR 2SA812			R235 R236	1-216-033-00	METAL GLAZE METAL GLAZE	220 10K	5% 5% 5%	1/10W 1/10W 1/10W	
	Q209 Q210	8-729-100-76 8-729-100-66 8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623			R237	1-216-043-00	METAL GLAZE	560		1/10W	
	Q211		TRANSISTOR 2SC1623			R238 R239 R240	1-216-041-00 1-216-033-00 1-216-039-00	METAL GLAZE METAL GLAZE METAL GLAZE	470 220 390	5% 5% 5%	1/10W 1/10W	
	Q212		TRANS IS TOR 2S C1623		1	R241		METAL GLAZE	820	5%	1/10W	

JG-11 CH-44

No.	Part No.	Description			Remark	, No.	Part No.	Description			Remark
R242 R243 R244 R245 R246	1-216-043-00 1-216-048-00 1-216-073-00 1-216-073-00 1-216-077-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 910 5% 10K 5% 10K 5% 15K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV202	VAR 1-228-991-00 1-228-991-00	RES, ADJ, CA	RBON 2.2K RBON 2.2K		
R247 R248 R249 R250 R251	1-216-049-00 1-216-097-00 1-216-081-00 1-216-081-00 1-216-105-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 100K 5% 22K 5% 22K 5% 22K 5%	1/10W 1/10W 1/10W 1/10W 1/10W			*A-7061-373-A		, COMPLETE	******	********
R252 R253 R254 R255 R256	1-216-073-00 1-216-081-00 1-216-073-00 1-216-105-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 22K 5% 10K 5% 220K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C001 C002 C003 C004 C005	1-163-098-00 1-163-009-11 1-163-109-00 1-163-129-00 1-163-129-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.001MF 47PF 330PF	5% 10% 5% 5% 5%	50V 50V 50V 50V
R257 R258 R259 R260 R261	1-216-027-00 1-216-073-00 1-216-065-00 1-216-039-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	120 5% 10K 5% 4.7K 5% 390 5% 220 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C006 C007 C008 C009 C010	1-163-021-00 1-163-063-00 1-131-358-00 1-126-094-11 1-135-149-21	CERAMIC CHIP CERAMIC CHIP TANTALUM ELECT TANTAL. CHIP	0.022MF 6.8MF 4.7MF	10% 20% 20%	50V 50V 25V 35V 10V
R262 R263 R264 R265 R266	1-216-039-00 1-216-071-00 1-216-079-00 1-216-055-00 1-216-119-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 5% 8.2K 5% 18K 5% 1.8K 5% 820K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C011 C012 C013 C014 C016	1-163-021-00 1-163-021-00 1-163-075-00 1-126-157-11 1-216-295-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT METAL GLAZE	0.01MF	20% 1/10W	50V 50V 50V 16V
R267 R268 R269 R270 R271	1 -216 -121 -00 1 -216 -049 -00 1 -216 -025 -00 1 -216 -025 -00 1 -216 -025 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1M 5% 1K 5% 100 5% 100 5% 100 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C017 C018 C019 C020 C021	1-124-257-00 1-135-072-21 1-163-205-00 1-163-076-00 1-124-257-00	ELECT TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP ELECT	0.001MF	20% 20% 10% 20%	50 V 35 V 50 V 50 V 50 V
R272 R273 R274 R275 R276	1-216-049-00 1-216-025-00 1-216-037-00 1-216-045-00 1-216-059-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 100 5% 330 5% 680 5% 2.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C022 C023 C024 C025 C026	1-124-257-00 1-163-009-11 1-163-129-00 1-163-035-00 1-163-117-00	ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	330PF 0-047MF	20% 10% 5%	50V 50V 50V 50V
R277 R278 R279 R280 R281	1-216-035-00 1-216-038-00 1-216-037-00 1-216-037-00 1-216-067-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	270 5% 360 5% 330 5% 330 5% 5.6K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C027 C028 C029 C031 C032	1-163-009-11 1-126-157-11 1-163-021-00 1-163-021-00 1-163-129-00	CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	10MF 0.01MF 0.01MF	10% 20% 5%	50V 16V 50V 50V 50V
R282 R283 R284 R287 R288	1-216-081-00 1-216-083-00 1-216-295-00 1-216-051-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 5% 27K 5% 0 5% 1.2K 5% 10K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C034 C035 C036 C037 C038	1-163-104-00 1-163-125-00 1-163-129-00 1-163-129-00 1-124-463-00		220PF 330PF	5% 5% 5% 5% 20%	50V 50V 50V 50V
R290 R291 R292 R293 R294	1-216-089-00 1-216-073-00 1-216-049-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE	47K 5% 10K 5% 1K 5% 1K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C039 C040	and the state of t	CERAMIC CHIP		20%	50V 50V
R295	1-216-049-00	METAL GLAZE	1K 5%	1/10W		CV001	1-141-227-00	CAP, CERAMIC	TRIMMER 20P	F	

CH-44 YC-56

	No.	Part No.	Description				Remark	No.	Part No.	Description			Remark
		<u>1C</u>						ĺ	*A-7061-374-A				
	IC001	8-752-003-23								******	******		
	IC002	8-759-924-94	IC CX22021						CAF	ACITOR			
		COI	<u>L</u>					C001 C002	1-163-035-00 1-124-638-11		0.047MF 22MF	20%	50V
	L001	1-408-976-21		33UH				C002	1-126-157-11		10MF	20% 20%	6.3V 16V
	L002 L003	1-408-985-21 1-408-981-21		180U 82UH				C004 C005	1-163-021-00 1-163-021-00				50V 50V
	L004	1-408-968-21		6.8U								20%	
		RES	IS TOR					C006 C007	1-124-638-11 1-124-638-11	ELECT	22MF 22MF	20% 20%	6.3V 6.3V
	R002	1-216-295-00	METAL GLAZE	0	5%	1/10W		C008	1-163-106-00 1-163-107-00			5% 5%	50V 50V
	R003	1-216-073-00	METAL GLAZE	10K	5%	1/10W		C010	1-163-107-00			5%	50V 50V
	R004 R005	1-216-053-00 1-216-065-00	METAL GLAZE METAL GLAZE	1.5K 4.7K	5% 5%	1/10W 1/10W		C011	1-124-635-00	FLECT	220MF	20%	6.3V
	R006	1-216-075-00	METAL GLAZE	12K	5%	1/10W		C012	1-124-638-11	ELECT	22MF	20%	6.3V
	R007	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W		CO13 CO14	1-163-129-00 1-163-115-00			5% 5%	50V 50V
	R008	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W		C015	1-163-115-00			5%	50V
	R009	1-216-025-00	METAL GLAZE	100	5%	1/10W		0016		T1 507	47145		c 24
	R010 R011	1-216-081-00 1-216-097-00	METAL GLAZE METAL GLAZE	22K 100K	.5% 5%	1/10W 1/10W		C016 C019	1-126-154-11 1-126-154-11	ELECT	47MF 47MF	20% 20%	6.3V 6.3V
			712 712	20010	٠,,	272011		C020	1-124-638-11	ELECT	22MF	20%	6.3V
	R012	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W		C021	1-163-035-00	CERAMIC CHIP	0.047MF		50V
	R013 R015	1-216-073-00 1-216-081-00	METAL GLAZE METAL GLAZE	10K 22K	5% 5%	1/10W 1/10W		C022	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
	R016	1-216-081-00	METAL GLAZE	22K	5%	1/10W	· ·	C023	1-163-021-00	CERAMIC CHIP	0.01MF		50V
	R017	1-216-043-00	METAL GLAZE	560	5%	1/10W		C024	1-163-035-00	CERAMIC CHIP			50V
	R018	1-216-043-00	METAL GLAZE	560	5%	1/10W		CO25 CO26	1-163-075-00 1-163-097-00	CERAMIC CHIP		5%	50V 50V
	R019	1-216-073-00	METAL GLAZE	10K	5%	1/10W		C027	1-163-021-00	CERAMIC CHIP		3/6	50V
	R020 R021	1-216-027-00	METAL GLAZE	120	5%	1/10W		6000	1 163 001 00		0.0145		FOU
	R022		METAL GLAZE METAL GLAZE	10K 22K	5% 5%	1/10W 1/10W		C028 C029	1-163-021-00 1-126-094-11	CERAMIC CHIP ELECT	4.7MF	20%	50V 25V
								C030	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
	R023 R024	1 -216 -067 -00 1 -216 -065 -00	METAL GLAZE METAL GLAZE	5.6K 4.7K	5% 5%	1/10W 1/10W		CO31 CO32	1-163-035-00 1-163-021-00	CERAMIC CHIP			50V 50V
	R026	1-216-073-00	METAL GLAZE	10K	5%	1/10W			1-103-021-00	CERMITO CHIP	O. OTHI		
	R029 R030	1-216-103-00 1-216-065-00	METAL GLAZE	180K 4.7K	5%	1/10W		C033	1-163-021-00	CERAMIC CHIP			50V
	11000	1-210-003-00	HETAL GLAZE	4.75	3,6	1/10W		C034 C035	1-163-021-00 1-163-035-00	CERAMIC CHIP			50V 50V
		VARI	ABLE RESISTOR				1	C036	1-126-094-11	ELECT	4.7MF	20%	25V
	RV001	1-230-524-11	RES. ADJ. SOL	ID 22K				C037	1-163-119-00	CERAMIC CHIP	120PF	5%	50V
		1-230-523-11	RES, ADJ, SOL	ID 10K				C038	1-163-021-00				50V
		TRAN	S FORMER					CO39 CO40	1-163-035-00 1-163-021-00				50V 50V
		711/4	- OKITEK				İ	CO41	1-163-021-00	CERAMIC CHIP			50V
	T001	1-409-386-11	C E TRAP					C042	1-163-021-00	CERAMIC CHIP	0.01MF		507
		CRYS	TAL					C043	1-163-021-00				50V
	X001	1-567-505-11	OSCILLATOR, C	RYSTAL	14.4	3MH >)		CO44 CO45	1-163-035-00 1-126-154-11	CERAMIC CHIP	0.047MF 47MF	20%	50V 6.3V
								C045	1-163-035-00	CERAMIC CHIP		20%	50V
,	*****	******	*****	*****	****	******	*****	C047	1-163-035-00	CERAMIC CHIP			50V
								C048	1-163-035-00	CERAMIC CHIP	0.047MF		50V
								C049	1-163-099-00	CERAMIC CHIP		5%	50V
							1	C050 C051	1-163-099-00 1-163-035-00	CERAMIC CHIP		5%	50V 50V
							•						

No.	Part No.	Description	Remark	, No.	Part No.	Description				Domark
			Nemat K							Remark
D001	8-719-101-23	DDE DIODE 1SS123 .AY LINE		Q023 Q024 Q025 Q026 Q027		TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	SC1623 SC1623 SC1623			
D1 00						,				
		DELAY LINE, 1H DELAY LINE, 1H		Q028		TRANSISTOR 2	SC1623			
	<u>1C</u>				RES	IS TOR				
IC00 IC00		IC MC1496MR IC MC1496MR		R001 R002 R003 R004	1-216-081-00 1-216-075-00 1-216-031-00 1-216-081-00	METAL GLAZE	22K 12K 180 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
	<u>C01</u>	<u>L</u> .		R005	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
L001 L002 L003 L004 L005	1-408-972-21 1-408-979-21 1-408-973-21 1-408-974-21 1-408-976-21	INDUCTOR 56UH INDUCTOR 18UH INDUCTOR 22UH		R006 R007 R008 R009 R010	1-216-043-00 1-216-043-00 1-216-043-00 1-216-043-00 1-216-043-00		560 560 560 560 560	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L006 L008 L009 L010 L011	1-408-970-21 1-408-984-21 1-408-972-21 1-408-973-21 1-408-972-21	INDUCTOR 150UH INDUCTOR 15UH INDUCTOR 18UH		R011 R012 R013 R014 R015	1-216-043-00 1-216-051-00 1-216-052-00 1-216-075-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 1.2K 1.3K 12K 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L012	1-408-977-21	INDUCTOR 39UH		R016	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
	VAF	HABLE COIL		R017 R018	1-216-055-00 1-216-075-00	METAL GLAZE METAL GLAZE	1.8K 12K	5% 5%	1/10W 1/10W	
LV00		COIL, VARIABLE 15UH COIL, VARIABLE 15UH		R019 R020	1-216-081-00 1-216-049-00	METAL GLAZE METAL GLAZE	22K 1K	5% 5%	1/10W 1/10W	
	TRA	INS IS TOR		R021 R022	1-216-295-00 1-216-053-00	METAL GLAZE METAL GLAZE	0 1.5K	5% 5%	1/10W 1/10W	
Q001 Q002 Q003	8-729-100-66 8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623 TRANSISTOR 2SC1623	į	R023 R024 R025	1-216-041-00 1-216-049-00 1-216-645-11	METAL GLAZE METAL GLAZE METAL CHIP	470 1K 560	5% 5% 0.50%	1/10W 1/10W	
Q004 Q005	8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		R026 R027	1-216-645-11 1-216-065-00	METAL CHIP METAL GLAZE	560 4.7K	0.50% 5%	1/10W 1/10W	
Q006		TRANSISTOR 2SA812		R028 R029	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
0007 0008		TRANSISTOR 2SA812		R030	1-216-041-00	METAL GLAZE METAL GLAZE	820 470	5% 5%	1/10W 1/10W	
Q009 Q010	8-729-100-66	TRANSISTOR 2SA812 TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		R031 R032	1-216-041-00 1-216-049-00	METAL GLAZE METAL GLAZE	470 1K	5% 5%	1/10W 1/10W	
Q011	1	TRANSISTOR 2SC1623		R033 R034	1-216-037-00		330 180	5% 5%	1/10W 1/10W	
0012 0013	8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		R035		METAL GLAZE	220	5%	1/10W	
0014 0015	8-729-100-66	TRANSISTOR 25C1623 TRANSISTOR 25C1623 TRANSISTOR 25C1623		R036	1-216-051-00	METAL GLAZE			1/10W	
Q015				R037 R038	1-216-049-00 1-216-295-00	METAL GLAZE	1K 0	5% 5%	1/10W 1/10W	
Q017 Q018	8-729-100-66 8-729-100-66 8-729-100-66	TRANS ISTOR 2SC1623 TRANS ISTOR 2SC1623 TRANS ISTOR 2SC1623		R039 R041	1-216-047-00 1-216-053-00	METAL GLAZE METAL GLAZE	820 1.5K	5% 5%	1/10W 1/10W	
0019 0020	8-729-100-66 8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		R042	1-216-047-00	METAL GLAZE	820	5%	1/10W	
				R043 R044	1-216-111-00 1-216-073-00	METAL GLAZE	390K 10K	5% 5%	1/10W 1/10W	
Q021 Q022	8-729-100-76 8-729-100-66	TRANSISTOR 2SA812 TRANSISTOR 2SC1623		R045 R046	1-216-041-00 1-216-045-00	METAL GLAZE METAL GLAZE	470 680	5% 5%	1/10W 1/10W	

YC-56 NC-8

No.	Part No.	Description			Remark	No.	Part No.	Description			Remark
R047 R048 R049 R050 R051	1-216-047-00 1-216-047-00 1-216-047-00 1-216-047-00 1-216-067-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	820 5% 820 5% 820 5% 820 5% 5.6K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R100 R101 R102 R103 R104	1-216-073-00 1-216-057-00 1-216-039-00 1-216-041-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 2.2K 5% 390 5% 470 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R052 R053 R054 R055 R056	1-216-075-00 1-216-049-00 1-216-041-00 1-216-041-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 5% 1K 5% 470 5% 470 5% 3.3K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R105 R106 R107 R108	1-216-073-00 1-216-077-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 15K 5% 1K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W	
R057 R058 R059 R060 R061	1 -216 -057 -00 1 -216 -073 -00 1 -216 -071 -00 1 -216 -043 -00 1 -216 -043 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 10K 5% 8.2K 5% 560 5% 560 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV001 RV002 RV003 RV004 RV005	1-228-989-00 1-228-990-00 1-228-990-00 1-228-989-00 1-228-991-00	RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, CAR	BON 470 BON 1K BON 1K BON 470		
R062 R063	1-216-045-00 1-216-045-00	METAL GLAZE METAL GLAZE	680 5% 680 5%	1/10W 1/10W			CON	NECTOR			
R064 R065	1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE	470 5% 470 5%	1/10W 1/10W		WOO1	*1-563-313-11		ARD TO BOAL	RD 19P	
R066	1-216-051-00	METAL GLAZE	1.2K 5%	1/10W			*****	•			*****
R067 R068 R069 R070	1-216-055-00 1-216-045-00 1-216-079-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 5% 680 5% 18K 5% 27K 5%	1/10W 1/10W 1/10W 1/10W			*A-7061-494-A	NC-8 BOARD,			
R071	1-216-045-00	METAL GLAZE	680 5%	1/10W			CAP	ACITOR			
R072 R073 R074 R075 R076	1-216-045-00 1-216-073-00 1-216-073-00 1-216-051-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5% 10K 5% 10K 5% 1.2K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C401 C402 C403 C404 C405	1-163-133-00 1-163-133-00 1-126-094-11 1-163-092-00 1-163-097-00	CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP	470PF 4.7MF 9PF	10% 10% 20% 0.25PF 5%	50V 50V 25V 50V 50V
R077 R078 R079 R080 R081	1-216-045-00 1-216-079-00 1-216-077-00 1-216-079-00 1-216-083-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5% 18K 5% 15K 5% 18K 5% 27K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C406 C407 C415 C416 C417	1-124-638-11 1-163-035-00 1-163-111-00 1-163-035-00 1-163-035-00	ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	56PF 0.047MF	20% 5%	6.3V 50V 50V 50V 50V
R082 R083 R084 R085 R086	1-216-045-00 1-216-045-00 1-216-073-00 1-216-073-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5% 680 5% 10K 5% 10K 5% 22K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C418 C419 C420 C421 C422	1-163-035-00 1-124-638-11 1-163-035-00 1-124-438-00 1-163-009-11	CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP	22MF 0.047MF 1MF	20% 20% 10%	50V 6.3V 50V 50V 50V
R087 R088 R089 R090 R091	1-216-055-00 1-216-049-00 1-216-083-00 1-216-075-00 1-216-069-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 5% 1K 5% 27K 5% 12K 5% 6.8K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C423 C424 C425		CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF	10%	50V 50V 50V
R092 R093 R094 R095 R096	1-216-075-00 1-216-075-00 1-216-081-00 1-216-059-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE	12K 5% 12K 5% 22K 5% 2.7K 5% 3.9K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		CN402	*1-564-785-11 *1-564-784-11 DIO	PIN, CONNECTO	OR 7P OR 6P		
R097 R098 R099	1 -216 -069 -00 1 -216 -075 -00 1 -216 -073 -00	METAL GLAZE METAL GLAZE METAL GLAZE	6.8K 5% 12K 5% 10K 5%	1/10W 1/10W 1/10W		D401 D402 D403 D405	8-719-801-41 8-719-801-41 8-719-100-05 8-719-800-76	DIODE 1SS196 DIODE 1SS196 DIODE 1S2837 DIODE 1SS123			

NC-8 CB-8 IO-16

No.	Part No.	Description		Remark	No.	Part No.	<u>Description</u> .				Remark
L40 L40 L40	02 1-408-972-21 03 1-408-982-11	INDUCTOR 15 INDUCTOR 15 INDUCTOR 10	JH JH		R445 R446 R447 R448 R449	1-216-049-00 1-216-057-00 1-216-031-00 1-216-051-00 1-216-092-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 2.2K 180 1.2K 62K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
LTC		ANS IS TOR	,,,		R450 R451	1-216-059-00 1-216-053-00	METAL GLAZE METAL GLAZE	2.7K 1.5K	5% 5%	1/10W 1/10W	
Q40 Q40 Q40	2 8-729-100-66	TRANSISTOR 2SC162	3		R452 R453 R457	1-216-055-00 1-216-073-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 10K 470	5% 5% 5%	1/10W 1/10W 1/10W	
Q40 Q40			K		R458 R459	1-216-049-00 1-216-061-00	METAL GLAZE METAL GLAZE	1K 3.3K	5% 5%	1/10W 1/10W	
Q40 Q40 Q41 Q41 Q42	7 8-729-100-66 8 8-729-901-01 9 8-729-901-01	TRANSISTOR 2SC1623 TRANSISTOR DTC144E TRANSISTOR DTC144E	B EK EK		*****	*********** *1-621-987-11		*****	****	*****	****
						CON	NECTOR				
Q42 Q42 Q42 Q42	8-729-901-01 8-729-901-01	TRANSISTOR DTC1446 TRANSISTOR DTC1446	K K	:	CN001 CN002	1-506-471-11 1-506-472-11					
Q42		TRANSISTOR DTA144				DIO	DE				
Q42 Q42 Q42	8 8-729-901-06	TRANSISTOR DTA144E TRANSISTOR DTA144E TRANSISTOR 2SC1623	K		D001 D002 D003 D004	8-719-106-22 8-719-106-22	DIODE RD7.5M- DIODE RD7.5M- DIODE RD7.5M- DIODE RD7.5M-	-B1 -B1	i		
	RES	SISTOR			D005		DIODE RD7.5M				
R40 R40 R40	2 1-216-037-00		5% 5% 5%	1/10W 1/10W 1/10W	D006		DIODE RD7.5M	-B1			
R40 R40	4 1 -216 -105 -00	METAL GLAZE 220k		1/10W 1/10W	R001	1-216-037-00		330	5%	1/10W	
R40 R40	6 1-216-037-00 7 1-216-041-00	METAL GLAZE 330 METAL GLAZE 470	5% 5%	1/10W 1/10W	R002 R003 R004	1-216-037-00 1-216-037-00 1-216-037-00	METAL GLAZE METAL GLAZE METAL GLAZE	330 330 330	5% 5% 5%	1/10W 1/10W 1/10W	
R40 R40 R41	9 1-216-045-00	METAL GLAZE 680	5% 5% 5%	1/10W 1/10W 1/10W	R005 R006	1-216-037-00	METAL GLAZE	330 330	5% 5%	1/10W 1/10W	
R41			5%	1/10W		*****				,	******
R41 R41 R41 R41	2 1-216-081-00 3 1-216-039-00 4 1-216-073-00	METAL GLAZE 22K METAL GLAZE 390 METAL GLAZE 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W		*1-629-042-11	IO-16 BOARD				
R41						JAC	K				
R41 R43 R43 R43	7 1-216-295-00 6 1-216-063-00 7 1-216-059-00	METAL GLAZE 0 METAL GLAZE 3.9 METAL GLAZE 2.7		1/10W 1/10W 1/10W 1/10W 1/10W	J601 J602	1-507-792-00	JACK (CONTROL JACK (CONTROL ISTOR				
R43 R44 R44 R44 R44	9 1-216-083-00 0 1-216-037-00 1 1-216-041-00 2 1-216-039-00	METAL GLAZE 27K METAL GLAZE 330 METAL GLAZE 470 METAL GLAZE 390	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R601 R602 R603	1-216-025-00 1-216-025-00 1-216-001-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 100 10	5% 5% 5%	1/10W 1/10W 1/10W	*****
					l						

IO-17 FR-39 MJ-11

No. Part No.	Description	Remark	No.	Part No.	Description				Remark
	IO-17 BOARD, COMPLETE ***********************************		R706 R707 R708 R709 R710	1-216-015-00 1-216-025-00 1-216-069-00 1-216-069-00 1-216-069-00	METAL GLAZE METAL GLAZE	39 100 6.8K 6.8K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C702 1-163-117-00 C703 1-163-021-00 C704 1-163-021-00	CERAMIC CHIP 100PF 5% CERAMIC CHIP 100PF 5% CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.47MF	50V 50V 50V 50V 16V	R711 R712 R713 R714 R715	1-216-069-00 1-216-089-00 1-216-089-00 1-216-089-00 1-216-089-00	METAL GLAZE	6.8K 47K 47K 47K 47K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C707 1-162-637-11	CERAMIC CHIP 0.47MF CERAMIC CHIP 0.47MF CERAMIC CHIP 0.47MF	16V 16V 16V	R716 R717 R718	1-216-055-00 1-216-055-00	METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 1.8K	5% 5% 5%	1/10W 1/10W 1/10W	
JAC	<u>K</u>		R719 R721	1-216-055-00	METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W	
CNJ702 1-568-212-11 CNJ703 1-537-115-21	TERMINAL BOARD (LINE IN 1) JACK 3P (LINE IN 2) TERMINAL BOARD (LINE OUT 1) JACK 3P (LINE OUT 2)		R722 R723 R724 R725	1-216-021-00 1-216-021-00 1-216-021-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	68 68 68 100	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
<u>D10</u>	DE		R726	1-216-089-00		47K	5%	1/10W	
D702 8-719-106-22 D703 8-719-106-22 D704 8-719-106-22	DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE RD7.5M-B1		R727 R728 R730	1-216-057-00 1-216-069-00 1-216-295-00	METAL GLAZE METAL GLAZE		5% 5% 5%	1/10W 1/10W 1/10W	
D706 8-719-106-22			S701	SWI	SWITCH, SLIDE	/DICIT	'AT MILE	TIN	
D707 8-719-106-22 D708 8-719-106-22	DIODE RD7.5M-B1		\$ 702		SWITCH, SLIDE	CONTR	OL L)	·	****
D710 8-719-106-22				*1-629-041-11					
	DIODE RD7.5M-B1			1-025-041-11	******				
D713 8-719-106-22 D714 8-719-106-22 D715 8-719-107-15	DIODE RD7.5M-B1		-	*3-697-607-01 DIO		LED		:	
D716 8-719-107-15			D101	8-719-812-32					
D717 8-719-106-71	DIODE RD12M-B2 DIODE RD12M-B2		D102 D103	8-719-920-05	DIODE SLP281C				
<u>IC</u>				*******				*****	*****
IC701 8-759-200-81 IC702 8-759-100-95				*A-7061-499-A	MJ-11 BOARD,	COMPLE	TE **		
JAC	<u>K</u>				ACITOR				
J701 1-562-589-11	SOCKET, DIN (SMALL TYPE) 5P	(CONTROL L)	C726	1-126-157-11	ELECT	10MF	2	20%	16V 16V
RES	ISTOR		C731 C732 C733	1-126-157-11		10MF 100MF		20%	16V 6.3V 50V
R701 1-216-015-00 R702 1-216-015-00 R703 1-216-015-00 R704 1-216-015-00 R705 1-216-015-00	METAL GLAZE 39 5% 1 METAL GLAZE 39 5% 1 METAL GLAZE 39 5% 1	/10W /10W /10W /10W /10W	C734 C741 C742 C743	1-163-121-00 1-126-157-11 1-124-225-00	CERAMIC CHIP	150PF 10MF 100MF			50V 16V 6.3V 50V

MJ-11 RS-17

No.	Part No.	Description				Remark	No.	Part No.	Description				Remark
C744	1-163-121-00	CERAMIC CHI	P 150PF		5%	507		1-506-467-11					
	DIO	DE					CNUUG	*1-506-467-11	PIN, CONNECT	UK ZP			
D101	8-719-109-59	D10DE RD2.7	ES - B1					<u>IC</u>					
	<u>IC</u>							8-759-107-68 8-759-100-93					
I C721	8-759-745-64	IC NJM4560M	-T1		:			TRA	ANS ISTOR				
	JAC	K						8-719-939-11					
J301 J401	1-507-899-00 1-507-899-00	JACK (SMALL	TYPE)	(MIC I	_)			8-719-939-11 8-719-939-11					
0102		PER RESISTOR	,	(1120-1	`'/			TRA	INS IS TOR				
JR049 JR050 JR051	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		Q001 Q002 Q003 Q004 Q005	8-729-901-01 8-729-901-01 8-729-903-97	TRANSISTOR D' TRANSISTOR D' TRANSISTOR D' TRANSISTOR FI TRANSISTOR FI	TC144EK TC144EK MS1FE			
	1-216-296-00		0	5%	1/8W			RES	ISTOR				
0.1.07.2		ISTOR	Ů	J#	1/ OH		R001 R002	1-216-081-00		22K	5%	1/10W	
R710 R731 R732 R733	1-216-061-00 1-216-105-00 1-216-081-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 220K 22K 100		1/10W 1/10W 1/10W 1/10W		R003 R004 R005	1-216-055-00 1-216-031-00 1-216-174-00 1-216-089-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 180 100 47K	5% 5% 5% 5%	1/10W 1/10W 1/8W 1/10W	
R734	1-216-025-00	METAL GLAZE	100	5%	1/10W		R007 R008	1-216-089-00 1-216-073-00	METAL GLAZE	47K 10K	5% 5%	1/10W 1/10W	
R735 R741 R742 R743	1-216-083-00 1-216-105-00 1-216-081-00	METAL GLAZE METAL GLAZE	27K 220K 22K	5%	1/10W 1/10W 1/10W		R009 R010	1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 10K	5% 5%	1/10W 1/10W	
R744	1-216-025-00 1-216-025-00	METAL GLAZE	100 100	5% 5%	1/10W 1/10W		R011 R012 R013	1-216-073-00 1-216-073-00 1-216-107-00	METAL GLAZE	10K 10K	5% 5%	1/10W 1/10W	
R745	1-216-083-00	METAL GLAZE	27K	5%	1/10W			1-216-107-00	METAL GLAZE	270K 10K 270K	5% 5% 5%	1/10W 1/10W 1/10W	
	************ *A-7061-543-A 3-712-410-01	RS -17 BOARD	, COMP	LETE	*****	******	R016 R017 R018 R019 R020	1-216-073-00 1-216-073-00 1-216-107-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 10K 270K 10K 270K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
		ACITOR					R021	1-216-296-00		0	5%	1/8W	
C001	1-163-038-00	CERAMIC CHIP				25V			RMISTOR		0,6	27011	
C003 C004	1-124-465-00 1-124-464-11 1-163-038-00 1-163-021-00	ELECT CERAMIC CHIP			20% 20% 10%	50V 50V 25V 50V		1-202-854-00	•		•		*****
	1-163-021-00				10%	500							
		NECTOR	3										
CN003 *	1-506-469-11 *1-506-469-11 *1-506-467-11	PIN, CONNECT PIN, CONNECT	OR 4P										

No.	Part No.	Description			Remark	No.	Part No.	Description				Remark
	*A-7061-589-A	DR -35 BOARD					<u>IC</u>					
	7-685-646-79	SCREW +BVTP	3X8 TYPE2 1	T-3			8-759-937-36 8-759-937-36					
	CAP	ACITOR					JUM	PER RESAISTOR	<u> </u>			
C201 C202 C203 C204 C205	1-126-160-11 71-163-021-00 71-163-038-00 71-163-038-00 71-126-103-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF	20% 10% 20%	50V 50V 25V 25V 16V	JR001 JR002 JR003 JR004 JR005		METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W	
C207 C208 C209 C210 C211	1-126-335-11	CERAMIC CHIP	220MF 0.1MF	20% 20% 10%	6.3V 25V 6.3V 25V 50V	JR009	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W	
C212 C213 C214 C216 C217	1-126-103-11	CERAMIC CHIP	470MF 100MF	20% 20% 20%	50V 25V 16V 16V 25V	JR012 JR013 JR014	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W	
C218 C219 C220 C221 C223	1-163-139-00		820PF 0.1MF	10% 5% 20%	50V 50V 25V 25V 10V	JR017 JR018 JR019	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W	
C224 C225 C226 C227 C228	1-123-336-00	ELECT CERAMIC CHIP	470MF 0.1MF 470MF	20% 20%	25V 16V 25V 25V 25V		1-216-296-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5% 5%	1/8W 1/10W 1/10W 1/10W 1/10W	
C229 C230 C231 C232 C233	1-163-038-00 1-163-038-00 1-126-168-11 1-126-168-11 1-126-103-11	CERAMIC CHIP ELECT ELECT		20% 20% 20%	25V 25V 6.3V 6.3V 16V	JR029	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C235 C240	1-163-038-00 1-126-101-11	CERAMIC CHIP	0.1MF 100MF	20%	25V 6.3V		<u>C01</u>	L				
C241	1-126 -335 -11		220MF	20%	6.3V	L201 L202 L203	1-408-945-00 1-408-944-00 1-408-944-00	COIL, CHOKE	20UH		• .	
	*1-560-892-00					L205 L206	1-408-944-00 1-408-945-00					
CN203	2 *1-560-895-00 3 *1-560-894-00 4 *1-560-890-00	PIN, CONNECT	OR 6P			L207 L208	1-408-944-00 1-408-944-00	COIL, CHOKE	200H 200H			
	DIC				:	L210	1-408-944-00 1-408-944-00	COIL, CHOKE	20UH 20UH			
D201 D202 D203	9-982-928-00	DIODE 31DQ06 DIODE 31DQ06 DIODE 31DQ06				L211 L264	1-408-944-00	·				
D204 D205		DIODE 1S 2835				DC 000^		LINK				
						PS 202/	↓ 1-532-637-21	LINK, IC (1	4)			

The components identified by mark \bigwedge or dotted line with mark \bigwedge are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque 🚹 sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

No.	Part No.	Description				Remark	No.	Part No.	Description		Remark
	TRA	NS ISTOR					RV203	1-226-703-11	RES, ADJ, METAL GLAZE	10K	
Q201 🛦	. 8-729-112-61	TRANSISTOR 25	SA1441				*****	******	*******	******	*****
Q202	8-729-100-66	TRANSISTOR 25						+4 7061 674 4	ET 27 DOADD COUDIET	. [-	
	8-729-216-22 8-729-113-33	TRANSISTOR 25						^A-/U01-0/4-A	FT-37 BOARD, COMPLET		
Q205 A	. 8-729-112-61	TRANSISTOR 29	A1441				-	1 510 410 11	THE	CO OCUT	
0206	8-729-100-66	TRANSISTOR 25	C1623					1-519-410-11 *3-689-521-01	INDICATOR TUBE, FLUOR HOLDER, LED, ROUND	ESCENT	
Q207	8-729-216-22	TRANSISTOR 25	A1162						KNOB (S), CONTROL		
0208 0209 A	8-729-901-01 8-729-112-61	TRANSISTOR DE						*3-695-988-01 *3-697-607-01	HOLDER (RE), LED HOLDER (SU), LED		
Q210	8-729-100-66							3-03/-00/-01	HOLDER (30), LED		
0211	8-729-216-22	TRANSISTOR 25	11162					*3-716-870-01 *3-716-871-01	HOLDER (LEFT), INDICA HOLDER (RIGHT), INDICA		
Q212	8-729-901-01	TRANS IS TOR DI							HOLDER, LED, 2 GANG	TION TOBE	
Q213		TRANSISTOR DI					ļ				
Q214	0-729-901-01	TRANSISTOR DI	10144EK			-		CAP	ACITOR		
	RES	ISTOR					C001		CERAMIC CHIP 0.47MF	ce	16V
R201	1 -216 -085 -00	METAL GLAZE	33K	5%	1/10W		C003 C004	1-163-093-00	CERAMIC CHIP 10PF CERAMIC CHIP 100PF	5% 5%	50V 50V
R202	1-216-085-00	METAL GLAZE	33K	5%	1/10W		C005	1-163-117-00	CERAMIC CHIP 100PF	5%	50V
R203 R204	1-216-115-00 1-249-413-11	METAL GLAZE CARBON	560K 470	5% 5%	1/10W 1/4W		C006	1-163-021-00	CERAMIC CHIP 0.01MF		507
R205	1-216-055-00		1.8K	5%	1/10W		C009	1-163-021-00	CERAMIC CHIP 0.01MF		50V
B206	1 216 055 00	METAL CLAZE	1 04		1 /1 01/		C010	1-126-162-11	ELECT 3.3MF	20%	50V
R206 R207	1-216-055-00 1-216-051-00	METAL GLAZE METAL GLAZE	1.8K 1.2K	5% 5%	1/10W 1/10W		C011 C012	1-163-097-00	CERAMIC CHIP 15PF CERAMIC CHIP 22PF	5% 5%	50V 50V
R208	1 -216 -095 -00	METAL GLAZE	82K	5%	1/10W		C013	1-163-021-00	CERAMIC CHIP 0.01MF	-,0	50V
R210 R211	1-216-065-00 1-216-033-00	METAL GLAZE METAL GLAZE	4.7K 220	5% 5%	1/10W 1/10W		C014	1_163.021.00	CERAMIC CHIP 0.01MF		50V
	1-210-055-00	HE THE GENZE	220	J /6	1/10#		C015	1-126-160-11	ELECT 1MF	20%	50V
R212	1 -216 -687 -11	METAL CHIP	33K		1/10W		C016		ELECT 10MF	20%	16V
R213 R214	1-216-687-11 1-216-115-00	METAL CHIP METAL GLAZE	33K 560K	5%	1/10W 1/10W		C017 C018	1-163-021-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	y	50V 50V
R215	1-249-413-11	CARBON	470	5%	1/4W				•		
R216	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W		C019 C020	1-126-157-11	ELECT 10MF CERAMIC CHIP 0.047MF	20%	16V 50V
R217	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W		0020	,1-105-055-00	CERTITIO CITIT GTGTTIII		301
R218 R219	1-216-051-00	METAL GLAZE METAL CHIP	1.2K	5% 0.50%	1/10W			CON	NECTOR		
R220	1-216-679-11	METAL CHIP	15K		1/10W		CN011	1-506-467-11	PIN, CONNECTOR 2P		
R221	1 –216 –085 –00	METAL GLAZE	33K	5%	1/10W			TOT	MMCO		
R222	1-216-085-00	METAL GLAZE	33K	5%	1/10W			IKI	MMER		
R223	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W		CV001	1-141-291-11	CAP, TRIMMER		
R224 R225	1 -216 -115 -00 1 -216 -055 -00	METAL GLAZE METAL GLAZE	560K 1.8K	5% 5%	1/10W 1/10W			DIO	UE		
R226	1-216-055-00	METAL GLAZE	1.8K		1/10W			,	DC .		
R227	1 216 065 00	METAL CLASE	4 7V	EN	1 /1 01		D001		DIODE 1S 2835		
	1-216-065-00 1-216-099-00		4.7K 120K		1/10W 1/10W		D002	8-719-100-03 8-719-100-03			
R229	1-216-077-00	METAL GLAZE	15K	5%	1/10W		D004		DIODE 152835		
R230 R232	1-216-081-00	METAL GLAZE	22K 1.8K	5% 5%	1/10W		D005	8-719-100-03	DIODE 1S 2835		
				J Ja	1/10W		D006	8-719-100-03	DIODE 1S 2835		
R233	1 -216 -0 91 -00	METAL GLAZE	56K	5%	1/10W		D007	8-719-100-03	DIODE 1S2835		
	VAR	IABLE RESISTOR	t				D008	8-719-100-03 8-719-100-03	DIODE 1S 2835 DIODE 1S 2835		
D11001			_				D010	8-719-100-03	DIODE 15 2835		
RV201 RV202	1-226-703-11 1-226-703-11	RES, ADJ, MET	AL GLA	ZE 10K			D011	0_710_100.03	DIODE 152835		
	1-220-703-11	nes, ADU ; I'IE I	AL ULA	TE TOK			DOTT	0-/13-100-03	DIUDE 12 5032		

The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque 🐧 sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

No.	Part No.	Description	Remark	No.	Part No.	Description			Remark
D012 D013 D014 D018 D019	8-719-100-03	DIODE 1S2835 DIODE 1S2835 DIODE 1S2835 DIODE 1S2835 DIODE 1S2835		R013 R014 R015 R016 R017	1-216-081-00 1-216-097-00 1-216-097-00 1-216-097-00 1-216-073-00	METAL GLAZE METAL GLAZE	100K 100K 100K	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
D021 D024 D025 D026 D028	8-719-812-32 8-719-106-43 8-719-100-03 8-719-100-03 8-719-106-22	DIODE TLY123 DIODE RD9.1M-B1 DIODE 1S2835 DIODE 1S2835 DIODE RD7.5M-B1		R018 R019 R020 R021 R022	1-216-113-00 1-216-113-00 1-216-113-00 1-216-069-00 1-216-073-00	METAL GLAZE METAL GLAZE	470K 470K 6.8K	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
D029 D030 D032 D033 D034	8-719-106-22 8-719-106-22 8-719-812-32 8-719-812-32 8-719-812-32	DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE TLY123 DIODE TLY123 DIODE TLY123		R023 R024 R025 R026 R028	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 10K 10K	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
D035 D036 D037 D038 D039	8-719-920-05 8-719-920-05 8-719-812-31 8-719-812-31 8-719-812-31	DIODE IS2835 DIODE IS2835 DIODE IS2835 DIODE TLY123 DIODE RD9.1M-B1 DIODE IS2835 DIODE IS2835 DIODE IS2835 DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE RD7.5M-B1 DIODE TLY123 DIODE TLY123 DIODE TLY123 DIODE TLY123 DIODE TLY123 DIODE TLY123 DIODE TLR123 DIODE AA3422S DIODE AA3422S DIODE AA3422S DIODE TLY123 DIODE SLP281C-50 DIODE SLP281C-50 DIODE AA3422S DIODE TLY123 DIODE SLP281C-50 DIODE TLY123 DIODE TLR123		R029 R030 R032 R034 R037	1-216-065-00 1-216-037-00 1-216-295-00 1-216-073-00 1-216-097-00	METAL GLAZE METAL GLAZE	330 ! 0 ! 10K !	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
D040 D041 D042 D043 D044	8-719-918-96 8-719-918-96 8-719-812-32 8-719-920-05 8-719-812-31	DIODE AA3422S DIODE AA3422S DIODE TLY123 DIODE SLP281C-50 DIODE TLR123		R039 R040 R041 R042 R043	1-216-085-00 1-216-085-00 1-216-097-00 1-216-097-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 100K 100K	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
D045	8-719-918-96	DIODE AA3422S		R044 R045	1-216-097-00 1-216-097-00	METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W	
	<u>IC</u>			R052 R053	1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE	470	5% 1/10W 5% 1/10W	
IC001 IC002/1 IC003 IC004 IC005	8-759-111-97 8-752-804-35 8-759-604-09 8-759-200-82 8-759-111-66	DIODE 1LR123 DIODE AA3422S IC UPD75208G-527-1B IC CXP5016-253Q IC M51955BL IC TC4069UBF IC UPD7566G-505 IC CXD1078M IC TC504013BF TRANSISTOR TRANSISTOR 2SB624-BV3 TRANSISTOR DTC144EK		R055 R056 R057 R058	1-216-037-00 1-216-041-00 1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	330 5 470 5 470 5 470 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
IC006	8-759-937-21	IC CXD1078M		R059 R060	1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W	
10007	TRA	NS ISTOR		R061	1-216-097-00	METAL GLAZE	100K 5	5% 1/10W	
Q001	8-729-162-43	TRANS ISTOR 2SB624-BV3			VAR	IABLE RESISTOR			
Q002	8-729-901-01	TRANSISTOR DTC144EK		RV001	1-237-219-11	RES, VAR, CAR	BON 1K		
	KES	15 TUK			IMS				1
R002 R003 R004 R005 R006	1-216-073-00 1-216-073-00 1-216-097-00 1-216-097-00 1-216-073-00	METAL GLAZE 10K 5% METAL GLAZE 100K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	SW003 SW004 SW005	1-570-854-11 1-570-854-11 1-554-174-00 1-554-174-00 1-554-174-00	SWITCH, SLIDE SWITCH, KEY B SWITCH, KEY B	PCM MC) OARD (RE OARD (FF	DDE) W)	
R007 R008 R009 R010 R011	1-216-081-00 1-216-081-00 1-216-093-00 1-216-073-00 1-216-073-00	METAL GLAZE 22K 5% METAL GLAZE 22K 5% METAL GLAZE 22K 5% METAL GLAZE 10K 5% METAL GLAZE 10K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	SW007 SW008 SW009	1-554-174-00 1-554-174-00 1-554-174-00 1-554-174-00	SWITCH, KEY B	OARD (SY OARD CHANNEL	.AY) YNCHRO EDIT 1 TRACK/INI	
R012	1-216-085-00		1/10W		1-554-174-00	(CHANNEL	1 TRACK/INE AUSE/STILL)	DEX +)

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque 🐧 sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

No. Part No.	Description	Remark	No.	Part No.	Description			Remark
SW014 1-554-174-00 SW015 1-554-174-00	SWITCH, KEY BOARD (AUDI	X)	C121 C122 C123 C201 C202	1-163-117-00 1-163-117-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	100PF 100PF	5% 5% 10% 20%	25V 50V 50V 50V 25V
	SWITCH, KEY BOARD (TAPE	RETURN) TER REMAIN)	C203 C204 C205 C206 C207	1-163-809-11 1-124-463-00 1-163-038-00 1-126-151-11 1-163-038-00	CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP	0.1MF 0.1MF 4.7MF	10% 20% 20%	25V 50V 25V 16V 25V
	SWITCH, KEY BOARD (TV/V	TR)	C208 C209 C210 C211 C212	1-126-162-11 1-126-096-11 1-126-096-11 1-126-096-11 1-126-096-11	ELECT ELECT ELECT	3.3MF 10MF 10MF 10MF	20% 20% 20% 20% 20%	50V 25V 25V 25V 25V
<u>CR</u>	YS TAL		C213	1-126-160-11		1MF	20%	50V
X002 1-567-714-11	VIBRATOR, CRYSTAL (4.19 OSCILLATOR, CERAMIC (70 OSCILLATOR, CERAMIC (4.	OKHz)	C214 C215 C216 C217	1-126-160-11 1-126-160-11 1-124-229-00 1-124-229-00	ELECT ELECT ELECT	1MF 1MF 33MF 33MF	20% 20% 20% 20%	50V 50V 10V 10V
******	*******	******	0210	1-124-229-00		33MF	20%	10V
*A -7061 - 727 -A	SP-7 BOARD, COMPLETE ***********************************	ard)	C222 C223 C224 C225	1-163-021-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.01MF 0.01MF		50V 50V 50V 50V
CA	PACITOR		C228	1-163-021-00			10%	50V
C003 1 -163 -117 -00	ELECT 10MF CERAMIC CHIP 0.1MF CERAMIC CHIP 100PF CERAMIC CHIP 100PF	20% 50V 25V 5% 50V 5% 50V	C229 C230 C231 C232	1-123-875-11 1-163-017-00 1-163-017-00 1-163-209-00	CERAMIC CHIP CERAMIC CHIP	0.0047MF	20% 10% 10% 5%	50V 50V 50V 50V
C020 1-123-875-11		20% 50V	C233 C234		CERAMIC CHIP		5% 5%	50V 50V
C023 1 -163 -038 -00	CERAMIC CHIP 0.1MF	25V 25V 25V 25V	C235 C236 C237	1-163-021-00 1-163-019-00 1-126-320-11	CERAMIC CHIP	0.01MF	10% 20%	50 V 50 V 16 V
C025 1-126-157-11		20% 16V	C238 C239	1-124-499-11 1-163-021-00	ELECT CERAMIC CHIP	1MF	20%	50V 50V
032 1-163-093-00	ELECT 10MF CERAMIC CHIP 0.1MF CERAMIC CHIP 10PF CERAMIC CHIP 10PF	20% 50V 25V 5% 50V 5% 50V	C240 C241 C242	1-163-037-11 1-163-037-11 1-163-017-00	CERAMIC CHIP CERAMIC CHIP GERAMIC CHIP	0.022MF 0.022MF	10% 10% 10%	25V 25V 50V
C050 1-163-038-00		25V	C243 C244	1-124-277-11 1-123-875-11		4.7MF 10MF	20% 20%	35V 50V
	CERAMIC CHIP 22PF CERAMIC CHIP 22PF	25V 5% 50V 5% 50V 10% 35V	C245 C246 C247	1-163-038-00	CERAMIC CHIP CERAMIC CHIP	0.1MF	10% 20%	25V 25V 50V
C083 1-124-261-00 C084 1-163-038-00 C085 1-163-038-00		20% 50V 25V 25V 25V	C248 C249 C250 C251 C255	1 -124 -499 -11 1 -164 -161 -11	CERAMIC CHIP CERAMIC CHIP	1MF 0.0022MF	20% 10% 10% 20%	50V 50V 50V 25V 6.3V
C087 1-161-772-11 C088 1-163-038-00	CERAMIC 0.1MF CERAMIC CHIP 0.1MF	10% 25V 25V	C256 C257	1-124-443-00 1-124-927-11	ELECT ELECT	100MF 4.7MF	20% 20%	6.3V 50V
C120 1 -163 -038 -00	CERAMIC CHIP 0.1MF	25V	J C258	1-124-925-11	ELECT	2.2MF	20%	50V

SP-7

No.	Part No.	Description	•	Remark	No.	Part No.	Description			Remark
C259 C260 C261 C262 C264	1-163-021-00 1-163-809-11 1-163-809-11	CERAMIC CHIP 0.01M CERAMIC CHIP 0.01M CERAMIC CHIP 0.047 CERAMIC CHIP 0.047 CERAMIC CHIP 47PF	F MF 10%	50V 50V 25V 25V 50V	C646 C647 C648 C650 C654	1-163-035-00 1-163-035-00 1-163-035-00 1-163-035-00 1-163-035-00	CERAMIC CHIP	0.047MF 0.047MF 0.047MF		50V 50V 50V 50V 50V
C470 C471 C472 C473 C485			MF 10% MF 10%	50V 25V 50V 25V 50V	C660 C661 C662 C663 C698	1-163-125-00 1-163-125-00 1-163-109-00 1-163-109-00 1-163-035-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	220PF 47PF 47PF	5% 5% 5% 5%	50V 50V 50V 50V 50V
C490 C491 C492 C493 C500	1-163-035-00 1-126-162-11 1-163-035-00 1-124-589-11 1-163-035-00	CERAMIC CHIP 0.047 ELECT 3.3MF CERAMIC CHIP 0.047 ELECT 47MF CERAMIC CHIP 0.047	20% MF 20% MF	50V 50V 50V 10V 50V	C701 C702 C703 C705 C706 C707	1-163-141-00 1-163-037-11 1-163-037-11 1-126-233-11	CERAMIC CHIP	0.047MF 0.001MF 0.022MF 0.022MF 22MF	10% 10% 5% 10% 10% 20%	50V 25V 50V 25V 25V 25V
C502 C591 C592 C593	1-163-111-00 1-163-111-00	CERAMIC CHIP 0.047 CERAMIC CHIP 390PF CERAMIC CHIP 56PF CERAMIC CHIP 56PF CERAMIC CHIP 0.047 CERAMIC CHIP 390PF	10% 5% 5%	50V 50V 50V 50V 50V	C708 C709 C710 C711 C712 C713	1-163-017-00 1-163-809-11 1-124-256-00 1-163-989-11 1-163-105-00 1-163-123-00	CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF 1.5MF 0.033MF 33PF	10% 10% 20% 10% 5%	50V 25V 50V 25V 50V 50V
C595 C600 C601 C602	1-163-021-00 1-163-035-00 1-163-809-11 1-126-157-11 1-163-035-00	CERAMIC CHIP 0.01M CERAMIC CHIP 0.047 CERAMIC CHIP 0.047 ELECT 10MF	F MF MF 10% 20%	50V 50V 25V 16V	C714 C715 C716 C717 C718	1-163-137-00 1-163-038-00 1-163-038-00 1-163-038-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	680PF 0.1MF 0.1MF 0.1MF	5%	50V 25V 25V 25V 25V 50V
C605 C606 C607 C608	1-163-093-00 1-163-115-00 1-163-035-00	CERAMIC CHIP 47PF CERAMIC CHIP 10PF CERAMIC CHIP 82PF CERAMIC CHIP 0.047		50V 50V 50V 50V	C719 C720 C721 C722	1-163-101-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.0015MF 22PF	20% 5% 5%	50V 25V 50V
C610 C611 C612 C613	1-163-035-00 1-126-157-11 1-163-035-00	CERAMIC CHIP 0.047 CERAMIC CHIP 0.047 ELECT 10MF CERAMIC CHIP 0.047 CERAMIC CHIP 0.004	4F 20% 4F	50V 50V 16V 50V 50V	C723 C724 C725 C726 C727	1-163-141-00 1-163-111-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.001MF 56PF 470PF	10% 5% 5% 5%	50 V 50 V 50 V 50 V 50 V
C614 C615 C616 C617 C618	1-163-035-00	ELECT 10MF CERAMIC CHIP 0.047 ELECT 0.47M ELECT 3.3MF ELECT 6.8MF		16V 50V 50V 50V 10V	C728 C730 C731	1-124-257-00 1-163-131-00 1-163-111-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	2.2MF 390PF 56PF	20% 5% 5% 5%	50V 50V 50V 50V
C619 C620 C624 C627	1-163-035-00 1-163-085-00	CERAMIC CHIP 22PF CERAMIC CHIP 0.047 CERAMIC CHIP 2PF CERAMIC CHIP 22PF	5%	50V 50V	C735 C736 C740 C770	1-163-809-11 1-163-021-00 1-124-925-11	CERAMIC CHIP CERAMIC CHIP	0.047MF 0.01MF 2.2MF	10% 10% 20%	25V 50V 50V 50V
C628 C629 C630 C632	1 -163-035-00 1 -126 -157 -11 1 -163-035-00	CERAMIC CHIP 0.047	1F 20% 1F	50V 16V 50V 50V	C785		CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.01MF 0.01MF 0.01MF	10% 10%	50V 50V 50V
C633 C635 C636 C639	1 -126 -157 -11 1 -126 -157 -11	ELECT 10MF ELECT 10MF CERAMIC CHIP 0.047	20% 20% 4F	16V 16V 50V	C803 C804 C805 C806	1-163-021-00 1-163-021-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.01MF 0.01MF 0.01MF		50V 50V 50V 50V
C645		CERAMIC CHIP 0.047	20% 4F	16V 50V	C807	1-163-021-00	CERAMIC CHIP	0.01MF		50V

No.	Part No.	Description	Remark	No.	Part No.	Description		Remark
C808 C809 C810 C811 C814	1-163-021-00 1-163-021-00 1-163-021-00 1-163-021-00 1-163-141-00	CERAMIC CHIP 0.01MF	50V 50V 50V 50V 50V	D020 D021 D060 D080	8-719-914-42 8-719-100-05	DIODE DAZO4K DIODE DAZO4K DIODE DAZO4K DIODE 132837 DIODE DAP2O2K		
C815 C816 C817 C818 C820	1-163-021-00 1-163-021-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.047MF	50V 50V 50V 50V 50V	D081 D082 D098 D099	8-719-914-44	DIODE DAP202K		
C821 C822 C823	1-163-035-00	CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF	50V 50V 50V	D120 D203 D204		DIODE DAP202K DIODE E10DS2 DIODE 1SS187		
		NECTOR		D205 D206 D208	8-719-914-44 8-719-801-45 8-719-914-44	DIODE DAP202K DIODE 188187		
CN002 CN003 CN004	1-506-470-11 *1-506-469-11	PIN, CONNECTOR 7P PIN, CONNECTOR 5P PIN, CONNECTOR 4P PIN, CONNECTOR 2P PIN, CONNECTOR 5P		D209 D210 D211 D212	8-719-914-43			
CN006 CN007	1-506-468-11 1-506-470-11	PIN, CONNECTOR 3P PIN, CONNECTOR 5P		D213 D214	8-719-914-44 8-719-914-44	DIODE DAP202K		
CN009 CN010	*1-506-467-11 1-506-472-11 *1-506-467-11	PIN, CONNECTOR 2P PIN, CONNECTOR 7P PIN, CONNECTOR 2P		D215 D216 D217 D218	8-719-914-44 8-719-914-44 8-719-100-05 8-719-914-43	DIODE DAP202K DIODE DAP202K DIODE 1S2837 DIODE DAN202K		
CN012 CN013 CN014	1-506-470-11 1-506-486-11 1-506-468-11 *1-506-469-11 1-506-468-11	PIN, CONNECTOR 7P PIN, CONNECTOR 3P		D223 D225 D226 D227 D230	8-719-914-43 8-719-100-05 8-719-914-44 8-719-100-05 8-719-105-82	DIODE DAN202K DIODE 1S 2837 DIODE DAP202K DIODE 1S 2837 DIODE RD5.1M-B2		
CN017 CN018 CN019	*1-506-467-11 *1-506-467-11 1-506-468-11 *1-506-467-11 1-506-471-11	PIN, CONNECTOR 2P PIN, CONNECTOR 3P		D231 D233 D280 D281	8-719-100-05 8-719-100-05 8-719-100-05 8-719-914-44	DIODE 1S2837		
CN021 CN022	1-506-470-11 1-506-467-11 *1-506-474-11	NIN CONSTITUTE ED		D282 D390	8-719-914-44 8-719-914-43 8-719-914-44	DIODE DAP202K DIODE DAN202K	•	
CN200 CN212	1-506-471-11 *1-506-476-11 *1-506-483-21	PIN, CONNECTOR 6P PIN, CONNECTOR 11P PIN, CONNECTOR 4P		D3 92 D3 93 D4 43 D4 61	8-719-100-05 8-719-914-43 8-719-801-45	DIODE 1S2837 DIODE DAN202K DIODE 1SS187 DIODE DAP202K		
CN214 CN215 CN216	1-506-471-11 *1-506-471-11 1-506-474-11 1-506-468-11	PIN, CONNECTOR SP PIN, CONNECTOR SP PIN, CONNECTOR SP PIN, CONNECTOR 6P PIN, CONNECTOR 11P PIN, CONNECTOR 4P PIN, CONNECTOR 6P PIN, CONNECTOR 6P PIN, CONNECTOR 9P PIN, CONNECTOR 3P		D463 D464 D470 D485	8-719-801-52 8-719-914-44	DIODE 1SS190 DIODE DAP202K DIODE 1S2837 DIODE 1S2837		
CN501 CN601 CN603	*1-566-128-11 1-506-473-11 1-506-472-11 1-506-484-11 1-506-473-11			D4 90 D501 D502 D600	8-719-101-23 8-719-101-23 8-719-100-05 8-719-108-24	DIODE 1SS123 DIODE 1SS123 DIODE 1S2837 DIODE 1SS223		
CN606 CN607	1-506-467-11 1-506-468-11	PIN, CONNECTOR 2P PIN, CONNECTOR 3P		D601 D603 D604	8-719-100-03	DIODE 1S2837 DIODE 1S2835 DIODE 1S2837		

No.	Part No.	Description	Remark	No.	Part No.	Description				Remark
D605 D701 D702	8-719-100-05	DIODE 1SS190 DIODE 1S2837 DIODE DAP202K		IC701	8-759-929-17 8-759-928-56 8-759-100-95	IC CXA1042M				
	FUS	<u>E</u>			JUM	PER RESISTOR				
F001 🛦	. 1-532-960-11	FUSE, MICRO 1.25A/125V		JR001	1-216-296-00	METAL GLAZE	0	5%	1/8W	
	FIL	TER			<u>C01</u>	L				
FL701 FL702	1-235-612-11 1-235-611-11	BPF (16KHz) BPF (46KHz)		L5 91 L601 L602	1-408-961-11 1-407-169-XX 1-407-169-XX	INDUCTOR	1.8UH 100UH 100UH	I		
	IC			L603 L606	1-407-169-XX 1-407-169-XX	INDUCTOR	100UH 100UH	1		
IC001 IC002 IC003 IC004 IC005	8-752-803-61 8-752-803-63 8-759-141-21 8-759-201-01 8-759-201-61	TER BPF (16KHz) BPF (46KHz) IC CXP5048H-111Q IC CXP5048H-113Q IC UPD75104G-547-1B IC TC4066BF IC TC40H004F IC LB1640N IC MB3763P IC MB3763PF IC MSM6411B-19RS IC TC4011BF		L607 L608 L611 L620	1-407-169-XX 1-407-169-XX 1-407-169-XX 1-408-965-21	INDUCTOR INDUCTOR	100UH 100UH 100UH 3.9UH			
IC007	8-759-801-60	IC LB1640N			<u>IC</u>	LINK				
IC008 IC009 IC010 IC011	8-759-913-67 8-759-908-81 8-759-920-94 8-759-200-68	IC LB1640N IC MB3763P IC MB3763PF IC MSM6411B-19RS IC TC40H000F IC UPD7566G-506		PS 004 <u>/</u> A	1-532-685-00 1-532-637-00 1-532-685-00	LINK, IC (1A)			
IC012	8-759-201-53 8-759-111-62	IC TC40H000F			TRA	NSISTOR				
IC201	8-759-920-94 8-759-803-47 8-759-100-94	IC MSM6411B-19RS IC LA5005M		Q010 Q011 Q012	8-729-901-01 8-729-901-01 8-729-901-01	TRANSISTOR D'TRANSISTOR D'	TC144EK TC144EK			
IC205 IC206	8-759-932-07 8-759-701-43	IC MB64H428PF IC MB674101PF IC NJM3414D		Q013 Q014 Q015	8-729-901-06		TC144EK TA144EK			
IC208	8-759-202-45 8-759-802-79 8-752-003-50	IC LB1616M	İ	Q020 Q021 Q022	8-729-900-53 8-729-901-05	TRANSISTOR D	TC114EK TA124EK			
IC211	8-759-925-66 8-759-701-36	IC BA6303F IC NJM3403AM		Q023 Q054	8-729-302-74 8-729-901-01	TRANSISTOR 25				
IC213	8-759-201-01 8-759-201-00	IC TC4066BF IC TC4052BF		Q055 Q060	8-729-901-01 8-729-901-06	TRANSISTOR DI	TC144EK TA144EK			
IC216	8-759-100-94 8-759-200-81 8-759-200-81	IC TC4053BF		Q070 Q071		TRANSISTOR DE	SB740			
IC218	8-759-200-81 8-759-100-94	IC TC4053BF		Q080 Q081 Q082 Q083	8-729-901-01 8-729-901-01 8-729-901-01	TRANSISTOR DI	ГС144EK ГС144EK			
10500	8-759-009-51 8-759-141-04 8-759-200-81	IC UPD75106G-529-1B		Q084	8-729-100-66 8-729-901-01		TC144EK			
IC502 IC600	8-759-200-81 8-759-207-74 8-752-010-20	IC TC4030BFHB		0086	8-729-901-01 8-729-100-76 8-729-901-01 8-729-100-76	TRANSISTOR 25	SA812 TC144EK			
IC601 IC602	8-752-321-97 8-759-911-18	IC CX23011		QO 90	8-729-901-01	TRANSISTOR 29 TRANSISTOR DI	TC144EK			
IC603 IC604 IC605	8-759-927-98 8-759-911-19 8-752-010-30			Q091 Q098 Q099 Q103	8-729-901-01 8-729-901-01 8-729-901-06 8-729-901-06	TRANSISTOR DI TRANSISTOR DI TRANSISTOR DI TRANSISTOR DI	TC144EK TA144EK			

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

				-				
No.	Part No.	Description	Remark	No.	Part No.	Description		Remark
Q120 Q121 Q122 Q123 Q201	8-729-901-01 8-729-901-01 8-729-901-01	TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTA114EK		Q282 Q285 Q286 Q287 Q288	8-729-901-06 8-729-901-01 8-729-901-01	TRANSISTOR DTC1441 TRANSISTOR DTA1441 TRANSISTOR DTC1441 TRANSISTOR DTC1441 TRANSISTOR DTC1441	K K K	
Q202 Q203 Q204 Q205 Q206	8-729-400-82 8-729-100-66 8-729-100-66	TRANSISTOR 2SC1623		Q289 Q390 Q401 Q470 Q471	8-729-901-01 8-729-901-01 8-729-100-76	TRANSISTOR DTC1444 TRANSISTOR DTC1444 TRANSISTOR DTC1444 TRANSISTOR 2SA812 TRANSISTOR DTC1444	K K	
Q207 Q208 Q209 Q210 Q211	8-729-100-76 8-729-400-82 8-729-901-01	TRANS ISTOR DTA144EK TRANS ISTOR 2S A812 TRANS ISTOR 2S D1266 -P TRANS ISTOR DTC144EK TRANS ISTOR DTC144EK		Q472 Q485 Q491 Q492 Q493	8-729-901-06 8-729-901-06 8-729-901-06	TRANSISTOR DTC1444 TRANSISTOR DTA1444 TRANSISTOR DTA1444 TRANSISTOR DTA1444 TRANSISTOR DTC1444	K K K	
Q212 Q213 Q214 Q215 Q226	8-729-100-67 8-729-901-01 8-729-901-01	TRANSISTOR 2SA1385-Z-L TRANSISTOR 2SC1623 TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK		Q500 Q501 Q502 Q591 Q601	8-729-901-01 8-729-901-01 8-729-100-66	TRANS IS TOR DTC144E TRANS IS TOR DTC144E TRANS IS TOR DTC144E TRANS IS TOR 2S C1623 TRANS IS TOR 2S C1623	K	
Q227 Q228 Q229 Q230 Q233	8-729-901-01 8-729-901-06	TRANSISTOR DTA144EK TRANSISTOR DTC144EK TRANSISTOR DTA144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK		Q603 Q604 Q605 Q606 Q698	8-729-901-06 8-729-901-01 8-729-901-01	TRANS ISTOR 2SC1623 TRANS ISTOR DTA144E TRANS ISTOR DTC144E TRANS ISTOR DTC144E TRANS ISTOR DTA144E	K K K	
Q235 Q236 Q237 Q238 Q239	8-729-901-01 8-729-901-06 8-729-901-01	TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTA144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK		Q701 Q702 Q703 Q704 Q705	8-729-100-66 8-729-901-01 8-729-100-76	TRANS IS TOR 2S C1623 TRANS IS TOR 2S C1623 TRANS IS TOR DTC144E TRANS IS TOR 2S A812 TRANS IS TOR 2S C1623	К	
Q240 Q242 Q243 Q244 Q245	8-729-901-01	TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTA144EK		Q706 Q707 Q708 Q709 Q710	8-729-100-66 8-729-100-66 8-729-100-76	TRANS ISTOR 2SC1623 TRANS ISTOR 2SC1623 TRANS ISTOR 2SC1623 TRANS ISTOR 2SA812 TRANS ISTOR 2SC1623		
Q246 Q248 Q249 Q250 Q251	8-729-901-01 8-729-901-01 8-729-901-06 8-729-100-66 8-729-100-66	TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTA144EK TRANSISTOR 2SC1623 TRANSISTOR 2SC1623		0711 0712 0713 0714 0715	8-729-901-01 8-729-100-66	TRANSISTOR 2SC1623 TRANSISTOR DTC144E TRANSISTOR 2SC1623 TRANSISTOR DTC144E TRANSISTOR 2SA812	K	
Q252 Q253 Q254 Q256 Q257	8-729-100-76 8-729-901-01 8-729-901-01	TRANSISTOR 2SA812 TRANSISTOR 2SA812 TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTC144EK TRANSISTOR DTA144EK		Q717 Q777 Q785	8-729-901-01 8-729-901-06	TRANSISTOR DTC144E TRANSISTOR DTC144E TRANSISTOR DTA144E ISTOR	Κ .	
Q258 Q260 Q261 Q262 Q263	8-729-901-06 8-729-302-74 8-729-302-74 8-729-302-74 8-729-901-06	TRANSISTOR DTA144EK TRANSISTOR 2SD1366AC TRANSISTOR 2SD1366AC TRANSISTOR 2SD1366AC TRANSISTOR DTA144EK		R001 R002 R003 R004 R005	1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE 10K METAL GLAZE 10K METAL GLAZE 10K METAL GLAZE 10K METAL GLAZE 10K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q264 Q280 Q281	8-729-901-04 8-729-100-66 8-729-901-01	TRANSISTOR DTA114EK TRANSISTOR 25C1623 TRANSISTOR DTC144EK		R008 R010 R012	1-216-057-00 1-216-073-00 1-216-073-00	METAL GLAZE 2.2K METAL GLAZE 10K METAL GLAZE 10K	5% 5% 5%	1/10W 1/10W 1/10W

SP-7

No.	Part No.	Description			Remark	No.	Part No.	Description				Remark
R013 R014 R015 R018 R019	1-216-081-00 1-216-061-00 1-216-081-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	22K 5% 3.3K 5% 22K 5% 10K 5% 10K 5%	1/10W 1/10W 1/10W		R156 R157 R158 R160 R161	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 10K 10K 10K 2.2K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R022 R023 R024 R025 R026	1-216-073-00 1-216-073-00 1-216-041-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 10K 5% 470 5% 10K 5% 10K 5%	1/10W 1/10W 1/10W		R162 R163 R170 R171 R200	1-216-073-00 1-216-073-00 1-216-061-00 1-216-097-00 1-249-448-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE CARBON	10K 10K 3.3K 100K 1.2	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/4W	
R027 R028 R029 R030 R031	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 10K 5% 10K 5% 10K 5% 10K 5%	1/10W 1/10W 1/10W		R202 R203 R204 R205 R206	1-216-097-00 1-216-055-00 1-216-065-00 1-216-049-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 1.8K 4.7K 1K 4.7K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R032 R033 R034 R050 R051	1-216-049-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 10K 5% 10K 5% 10K 5% 10K 5%	1/10W 1/10W 1/10W		R207 R208 R209 R212 R214	1-216-049-00 1-216-073-00 1-216-071-00 1-216-073-00 1-216-105-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 10K 8.2K 10K 220K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R052 R058 R070 R071 R072	1-216-073-00 1-216-073-00 1-216-081-00 1-216-051-00 1-247-712-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE CARBON	10K 5% 10K 5% 22K 5% 1.2K 5% 820 5%	1/10W 1/10W 1/10W		R215 R216 R217 R218 R219	1-216-113-00 1-216-667-11 1-216-667-11 1-216-059-00 1-216-113-00	METAL GLAZE METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE	470K 4.7K 4.7K 2.7K 470K	5% 0.50% 0.50% 5% 5%		
R073 R079 R080 R081 R082	1-249-447-11 1-216-097-00 1-216-001-00 1-216-081-00 1-216-065-00	CÁRBON METAL GLÁZE METAL GLÁZE METAL GLÁZE METAL GLÁZE	1 5% 100K 5% 10 5% 22K 5% 4.7K 5%	1/10W 1/10W 1/10W		R220 R221 R222 R223 R224	1-216-025-00 1-216-045-00 1-216-295-00 1-216-025-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100 680 0 100 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R083 R084 R085 R086 R087	1-216-049-00 1-216-041-00 1-216-073-00 1-216-097-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 470 5% 10K 5% 100K 5% 10K 5%	1/10W 1/10W 1/10W		R225 R226 R227 R228 R229	1-216-085-00 1-216-073-00 1-216-081-00 1-216-025-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 10K 22K 100 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R088 R089 R090 R096 R097	1-216-089-00 1-216-073-00 1-216-073-00 1-216-081-00 1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 5% 10K 5% 10K 5% 22K 5% 470K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R230 R231 R232 R233 R234	1-216-101-00 1-216-049-00 1-216-304-11 1-216-304-11 1-216-304-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	150K 1K 3.3 3.3 3.3	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R098 R099 R101 R102 R106	1-216-113-00 1-216-073-00 1-216-073-00 1-216-097-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47 OK 5% 10K 5% 10K 5% 10OK 5% 4.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R237 R238 R239 R240 R241	1-216-049-00 1-216-069-00 1-216-675-11 1-216-683-11 1-216-667-11	METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP METAL CHIP	1K 6.8K 10K 22K 4.7K	5% 5% 0.50% 0.50% 0.50%	1/10W	
R120 R121 R123 R151 R152	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 10K 5% 10K 5% 10K 5% 10K 5%	1/10W 1/10W		R242 R243 R244 R245 R246	1-216-683-11 1-216-669-11 1-216-681-11 1-216-121-00 1-216-681-11	METAL CHIP METAL CHIP METAL CHIP METAL GLAZE METAL CHIP	22K 5.6K 18K 1M 18K	0.50% 0.50% 0.50% 5% 0.50%	1/10W 1/10W 1/10W	
R153 R154 R155	1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 10K 5% 10K 5%	1/10W		R247 R248 R249	1-216-080-00 1-216-080-00 1-216-080-00	METAL GLAZE METAL GLAZE METAL GLAZE	20K 20K 20K	5% 5% 5%	1/10W 1/10W 1/10W	

No.	Part No.	Description				Remark	No.	Part No.	Description				Remark
R250 R251 R252 R253 R254	1-216-080-00 1-216-080-00 1-216-080-00 1-216-080-00 1-216-080-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	20K 20K 20K	5% 1, 5% 1, 5% 1,	/10W /10W /10W /10W /10W		R317 R319 R320 R321 R322	1-216-085-00 1-216-295-00 1-216-685-11 1-216-073-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE	33K 0 27K 10K 47K	5% 5% 0.50% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R255 R256 R257 R258 R259	1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 10K 10K	5% 1, 5% 1, 5% 1,	/10W /10W /10W /10W /10W		R323 R324 R326 R327 R328	1-216-073-00 1-216-099-00 1-216-109-00 1-216-061-00 1-216-091-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 120K 330K 3.3K 56K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R260 R261 R262 R263 R264	1-216-073-00 1-216-073-00 1-216-080-00 1-216-097-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 20K 100K	5% 1, 5% 1, 5% 1,	/10W /10W /10W /10W /10W		R329 R330 R331 R332 R333	1-216-117-00 1-216-117-00 1-216-081-00 1-216-113-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680K 680K 22K 470K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R266 R267 R268 R269 R270	1-216-073-00 1-216-073-00 1-216-081-00 1-216-049-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 22K 1K	5% 1/ 5% 1/ 5% 1/	/10W /10W /10W /10W /10W		R334 R335 R336 R337 R338	1-216-113-00 1-216-049-00 1-216-081-00 1-216-073-00 1-216-121-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470K 1K 22K 10K 1M	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R271 R280 R281 R282 R283	1-216-113-00 1-216-081-00 1-216-693-11 1-216-077-11 1-216-089-00	METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP METAL GLAZE	22K 56K 15K	5% 1/ 0.50% 1/ 0.50% 1/			R339 R340 R341 R342 R343	1-216-091-00 1-216-663-11 1-216-667-11 1-216-073-00 1-216-073-00	METAL GLAZE METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE	56K 3.3K 4.7K 10K	5% 0.50% 0.50% 5% 5%		
R284 R285 R286 R287 R288	1 -216 -081 -00 1 -216 -685 -11 1 -249 -441 -11 1 -216 -049 -00 1 -216 -049 -00	METAL GLAZE METAL CHIP CARBON METAL GLAZE METAL GLAZE	27K 100K 1K	0.50% 1/ 5% 1/ 5% 1/	/10W /10W /4W /10W /10W		R344 R345 R346 R347 R348	1-216-043-00 1-216-105-00 1-216-105-00 1-216-065-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 220K 220K 4.7K 47K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R290 R292 R293 R294 R295	1 -216 -073 -00 1 -216 -295 -00 1 -216 -073 -00 1 -216 -073 -00 1 -216 -103 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 10K 10K	5% 1/ 5% 1/ 5% 1/	/10W /10W /10W /10W /10W		R349 R350 R351 R352 R353	1-216-049-00 1-216-065-00 1-216-073-00 1-216-685-11 1-216-663-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP	1K 4.7K 1 OK 27K 3.3K	5% 5% 5% 0.50% 0.50%	1/10W 1/10W 1/10W 1/10W 1/10W	
R296 R297 R298 R299 R300	1-216-121-00 1-216-097-00 1-216-049-00 1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 1K 10K	5% 1/ 5% 1/ 5% 1/	/10W /10W /10W /10W /10W		R354 R355 R356 R357 R358	1-216-691-11 1-216-089-00 1-216-697-11 1-216-695-11 1-216-663-11	METAL CHIP METAL GLAZE METAL CHIP METAL CHIP METAL CHIP	47K 47K 82K 68K 3.3K	5% 0.50%	1/10W 1/10W 1/10W 1/10W 1/10W	
R303 R305 R306 R307 R308	1 -216 -073 -00 1 -216 -085 -00 1 -216 -077 -00 1 -216 -043 -00 1 -216 -043 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 15K 560	5% 1/ 5% 1/ 5% 1/	/10W /10W /10W /10W /10W		R359 R360 R361 R362 R363	1-216-693-11 1-216-073-00 1-216-089-00 1-216-073-00 1-216-073-00	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	56K 10K 47K 10K 10K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R309 R310 R311 R312 R313	1-216-073-00 1-216-043-00 1-216-113-00 1-216-113-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE	560 470K 470K	5% 1/ 5% 1/ 5% 1/	/10W /10W /10W /10W /10W		R364 R365 R366 R367 R368	1-216-091-00 1-216-097-00 1-216-105-00 1-216-089-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	56K 100K 220K 47K 33K	5% 5% 5% 5%	1/10W. 1/10W 1/10W 1/10W 1/10W	
R314 R315 R316	1 -216 -073 -00 1 -216 -085 -00 1 -216 -101 -00	METAL GLAZE METAL GLAZE METAL GLAZE	33K	5% 1/	/10W /10W /10W		R370 R371 R372	1-216-097-00 1-216-073-00 1-216-681-11	METAL GLAZE METAL GLAZE METAL CHIP	100K 10K 18K	5% 5% 0.50%	1/10W 1/10W 1/10W	

SP-7

	5												
No.	Part No.	<u>Description</u>				Remark	No.	Part No.	Description				Remark
R373 R375 R376 R377 R378	1 -216 -073 -00 1 -216 -697 -11 1 -216 -105 -00 1 -216 -105 -00 1 -216 -073 -00	METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	10K 82K 220K 220K 10K	5% 0.50% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R518 R519 R530 R591 R592	1-216-073-00 1-216-085-00 1-216-081-00 1-216-095-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 33K 22K 82K 100K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R380 R381 R382 R383 R384	1-216-113-00 1-216-113-00 1-216-101-00 1-216-683-11 1-216-667-11	METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP	470K 470K 150K 2:2K 4.7K	5% 5% 5% 0.50% 0.50%			R593 R595 R596 R607 R608	1-216-057-00 1-216-067-00 1-216-067-00 1-216-045-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5.6K 5.6K 680 100K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R385 R386 R388 R390 R391	1 -216 -683 -11 1 -216 -667 -11 1 -216 -073 -00 1 -216 -073 -00 1 -216 -097 -00	METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	22K 4.7K 10K 10K 100K	5%			R609 R610 R611 R612 R614	1-216-049-00 1-216-049-00 1-216-001-00 1-216-053-00 1-216-045-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 10 1.5K 680	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R392 R395 R396 R397 R398	1-216-065-00 1-216-073-00 1-216-699-11 1-216-685-11 1-216-109-00	METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP METAL GLAZE	4.7K 10K 100K 27K 330K	5% 0.50% 0.50%	1/10W 1/10W 1/10W 1/10W 1/10W		R615 R616 R617 R618 R619	1-216-051-00 1-216-049-00 1-216-073-00 1-216-071-00 1-216-051-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.2K 1K 10K 8.2K 1.2K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R399 R401 R403 R404 R405	1-216-073-00 1-216-073-00 1-216-295-00 1-216-049-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 10K 0 1K 3.9K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R620 R621 R622 R623 R624	1-216-645-11 1-216-073-00 1-216-077-00 1-216-077-00 1-216-049-00	METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 10K 15K 15K 1K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R406 R408 R461 R462 R470	1-216-295-00 1-216-115-00 1-216-097-00 1-216-085-00 1-216-109-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 560K 100K 33K 330K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R625 R626 R627 R628 R632	1-216-033-00 1-216-061-00 1-216-081-00 1-216-079-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220 3.3K 22K 18K 33K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R471 R472 R473 R474 R475	1 -216 -109 -00 1 -216 -109 -00 1 -216 -097 -00 1 -216 -049 -00 1 -216 -097 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	330K 100K 1K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R633 R634 R635 R636 R637	1-216-085-00 1-216-085-00 1-216-029-00 1-216-065-00 1-216-069-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 33K 150 4.7K 6.8K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R476 R485 R486 R492 R493	1-216-073-00 1-216-091-00 1-216-073-00 1-216-105-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 56K 10K 220K 10K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R638 R640 R641 R650 R652	1-216-069-00 1-216-073-00 1-216-085-00 1-216-049-00 1-216-109-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	6.8K 10K 33K 1K 330K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	٠.
R494 R502 R504 R505 R506	1 -216-085-00 1-216-073-00 1-216-061-00 1-216-061-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 3.3K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R653 R660 R661 R662 R664	1-216-109-00 1-216-073-00 1-216-073-00 1-216-033-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	330K 10K 10K 220 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R508 R509 R510 R511 R514	1 -216 -081 -00 1 -216 -081 -00 1 -216 -081 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	22K 22K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R665 R671 R672 R697 R698		METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 220 2.2K 470 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R515 R516 R517	1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K	5%	1/10W 1/10W 1/10W		R699 R701 R702	1-216-049-00 1-216-105-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 220K 22K	5% 5% 5%	1/10W 1/10W 1/10W	

							•					
No.	Part No.	Description			Remark	No.	Part No.	Description				Remark
R703 R704 R705 R706 R707	1-216-089-00 1-216-097-00 1-216-079-00 1-216-117-00 1-216-091-00	METAL GLAZE METAL GLAZE METAL GLAZE	47K 5% 100K 5% 18K 5% 680K 5% 56K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R762 R764 R770 R785 R786	1-216-073-00 1-216-073-00 1-216-121-00 1-216-049-00 1-216-051-00	METAL GLAZE METAL GLAZE	10K 10K 1M 1K 1.2K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R708 R709 R710 R711 R712	1-216-073-00 1-216-097-00 1-216-089-00 1-216-073-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 100K 5% 47K 5% 10K 5% 100K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R801 R802 R803 R804 R805	1-216-049-00 1-216-049-00 1-216-049-00 1-216-049-00 1-216-037-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 1K 1K 330	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R713 R715 R716 R717 R718	1-216-111-00 1-216-049-00 1-216-065-00 1-216-061-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390K 5% 1K 5% 4.7K 5% 3.3K 5% 3.3K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R806 R807 R808 R809 R810	1-216-049-00 1-216-049-00 1-216-049-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 1K 1K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R719 R720 R721 R722 R723	1-216-061-00 1-216-085-00 1-216-081-00 1-216-049-00 1-216-079-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 5% 33K 5% 22K 5% 1K 5% 18K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R811 R812 R813 R814 R815	1-216-049-00 1-216-049-00 1-216-049-00 1-216-025-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 1K 100 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R724 R725 R726 R727 R728	1-216-085-00 1-216-045-00 1-216-073-00 1-216-077-00 1-216-027-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 5% 680 5% 10K 5% 15K 5% 120 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R816 R817 R818 R819	1-216-049-00 1-216-049-00 1-216-037-00 1-216-037-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 330 330	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
D 720	1 216 025 00	METAL OLATE	070 54				VAR	IABLE RESISTOR				
R729 R730 R731 R732 R733	1-216-035-00 1-216-039-00 1-216-076-00 1-216-057-00 1-216-051-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	270 5% 390 5% 13K 5% 2.2K 5% 1.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV201 RV202 RV203 RV204	1-228-998-00 1-228-998-00 1-228-993-00 1-228-993-00	RES, ADJ, MET RES, ADJ, MET RES, ADJ, CAR RES, ADJ, CAR	AL GLA: BON 4. BON 4.	ZE 220 7K 7K		
R734 R735 R736 R737 R738	1-216-049-00 1-216-085-00 1-216-081-00 1-216-049-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 33K 5% 22K 5% 1K 5% 3.3K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV206 RV207 RV208 RV209	1-228-995-00 1-228-995-00 1-228-995-00 1-228-995-00 1-228-999-00 1-228-993-00	RES, ADJ, CAR RES, ADJ, MET. RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, CAR	AL GLA: BON 22) AL GLA: BON 470	ZE 22K K ZE 22K OK		
R739 R740 R741 R742 R743	1-216-061-00 1-216-065-00 1-216-061-00 1-216-061-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 5% 4.7K 5% 3.3K 5% 3.3K 5% 4.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV212 RV215 RV216 RV217	1-228-993-00 1-228-991-00 1-228-991-00 1-228-997-00 1-228-997-00	RES, ADJ, CAR RES, ADJ, CAR RES, ADJ, MET. RES, ADJ, MET. RES, ADJ, MET. RES, ADJ, MET.	BON 4.7 AL GLAZ AL GLAZ	7K ZE 2.2 ZE 2.2 ZE 100	K K K	
R744 R745 R746 R747 R748	1-216-051-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	18K 5% 33K 5% 2K 5% 2.2K 5% 1.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	•	RV601 RV602 RV603 RV604	1-230-521-11 1-230-522-11	RES, ADJ, SOL RES, ADJ, SOL RES, ADJ, SOL RES, ADJ, SOL	ID 2.2k ID 4.7k ID 100k ID 10K			
R749	1-216-049-00	METAL GLAZE	1K 5%	1/10W	1					-		
R750 R753 R754 R755	1-216-049-00 1-216-069-00 1-216-057-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 6.8K 5% 2.2K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W		X001 X002	1-567-346-11 1-567-121-00	VIBRATOR, CRYS	STAL			
R759 R760 R761	1-216-073-00 1-216-067-00 1-216-748-11	METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 5.6K 5% 39K 5%	1/10W 1/10W 1/10W		X080 X120 X201	1-567-192-11 1-527-841-11	OSCILLATÓR, CO OSCILLATOR, CO VIBRATOR, CRYS	ERAMIC ERAMIC			

SP-7 DM-18 AU-54

No.	Part No.	Description				Remark	No.	Part No.	Description			Remark
X600	1-567-419-11	VIBRATOR, LI					R009 R010	1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 5% 10K 5%	1/10W	
	*A-7061-073-A		, COMPL	ETE			R011 R012 R013	1-216-059-00 1-216-222-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE	2.7K 5% 10K 5% 1K 5%	1/10W 1/8W 1/10W	
	CAP	ACITOR					R014 R015	1-216-085-00 1-216-073-00	METAL GLAZE METAL GLAZE	33K 5% 10K 5%	1/10W 1/10W	
C001 C002	1-163-021-00 1-130-483-00	CERAMIC CHIP	0.01MF		5%	50V 50V	R016 R017 R018	1-216-073-00 1-216-057-00 1-216-077-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 2.2K 5% 15K 5%	1/10W 1/10W 1/10W	
C003 C004 C005	1-130-491-00 1-130-491-00 1-126-157-11	MYLAR ELECT	0.047M 0.047M 10MF		5% 5% 20%	50V 50V 16V	R019 R026 R030	1-216-206-00 1-216-684-11 1-216-073-00	METAL GLAZE METAL CHIP METAL GLAZE	2.2K 5% 24K 0.5 10K 5%	1/8W 50% 1/10W 1/10W	
C006 C007	1-163-038-00	CERAMIC CHIP	0.1MF		204	25V 25V	*****	*****		•		
C008 C009 C010	1-124-282-00 1-124-589-11 1-124-257-00	ELECT ELECT	22MF 47MF 2.2MF		20% 20% 20%	16V 10V 50V		*A-7061-728-A	AU -54 BOARD			
C011	1-124-282-00	ELECT	22MF		20%	16V			(Including t Board(IC501 NR-6 Board(), MK-2 Boa		
	CON	NECTOR						BAND PAS	,	10001 / 1		
CN001	1-563-311-11	CONNECTOR, B	DARD TO	BOARD	10P		BPF 801	1-235-517-11		PASS (230k	(HZ)	
	DIO	<u>DE</u>						1-235-517-11				
D001 D009 D010	8-719-801-45 8-719-801-45 8-719-101-23	DIODE 1SS187 DIODE 1SS187 DIODE 1SS123					C101	CAP. 1-163-075-00	ACITOR CERAMIC CHIP	0.047MF		50V
	IC						C211 C213	1-124-443-00	ELECT ELECT	100MF 100MF	20% 20%	10V 10V
IC001 IC002	8-759-937-25 8-759-132-40	IC BA6303 IC UPC324C					C214 C216	1-163-075-00 1-163-075-00	CERAMIC CHIP	0.047MF	0.0%	50V 50V
10003		PER RESISTOR	3				C218 C219 C220	1-124-443-00 1-124-443-00 1-124-443-00	ELECT ELECT ELECT	100MF 100MF 100MF	20% 20% 20%	10V 10V 10V
JR001	1 -216 -295 -00	METAL GLAZE	0	5%	1/10W		C226 C227	1-163-075-00	CERAMIC CHIP CERAMIC CHIP	0.047MF	20%	50V 50V
JR002 JR003 JR004 JR005	1-216-295-00 1-216-295-00 1-216-295-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/8W		C305 C306 C308	1-124-499-11 1-163-075-00 1-130-495-00	ELECT CERAMIC CHIP MYLAR	1MF 0.047MF 0.1MF	20% 5%	50V 50V 50V
JR006 JR007	1-216-296-00 1-216-296-00		0 0	5% 5%	1/8W		C309 C310	1-163-101-00 1-163-117-00	CERAMIC CHIP CERAMIC CHIP	22PF	5% 5%	50V 50V
	TRA	NS IS TOR					C311 C312	1-130-472-00	MYLAR CERAMIC CHIP	0.0012MF 100PF	5% 5%	50V 50V
Q007	8-729-901-01	TRANSISTOR D	C144EK				C313 C314	1-130-474-00 1-130-489-00	MYLAR MYLAR	0.0018MF 0.033MF	5% 5%	50V 50V
	RES	ISTOR					C321		ELECT	10MF	20%	500
R001 R004	1-216-069-00 1-216-073-00	METAL GLAZE METAL GLAZE	6.8K 10K	5% 5%	1/10W 1/10W		C331 C405 C406	1-163-023-00 1-124-499-11 1-163-075-00	CERAMIC CHIP ELECT CERAMIC CHIP	1MF 0.047MF	10% 20%	50V 50V 50V
R005 R006 R007	1-216-083-00 1-216-689-11 1-216-691-11	METAL GLAZE METAL CHIP METAL CHIP	27K 39K 47K		1/10W 1/10W 1/10W		C408 C409	1-130-495-00 1-163-101-00	MYLAR CERAMIC CHIP	0.1MF 22PF	5% 5%	50V 50V
R008	1-216-089-00	METAL GLAZE	47K	5%	1/10W		C410 C411	1-163-117-00	CERAMIC CHIP MYLAR	100PF 0.0012MF	5% 5%	50V 50V

No.	Part No.	Description		Remark	No	Dart No	Description				Domank
No. C412		Description CERAMIC CHIP 100PF	5%	50V	No.	Part No. 8-759-240-52	Description				Remark
C413 C414	1-130-474-00	MYLAR 0-0018MF	5% 5%	50V 50V	IC 203 IC 301	8-759-145-58 8-759-700-40	IC UPC4558C IC NJ4560S				
C421	1-124-261-00	ELECT 10MF	20%	507	IC 302	8-759-208-06	IC TC4051BPHE	1			
C431		CERAMIC CHIP 0.015MF	10%	50V	IC303	8-759-700-40	IC NJM4560S				
C502 C507	1-163-075-00 1-124-499-11	CERAMIC CHIP 0.047MF ELECT 1MF	20%	50V 50V	IC304 IC401	8-759-700-40 8-759-700-40	IC NJM4560S IC NJM4560S				
C701 C801		ELECT 100MF CERAMIC CHIP 0.047MF	20%	10V 50V	IC402 IC403	8-759-208-06 8-759-700-40	IC TC40518PHE	1			
C802		CERAMIC CHIP 0.022MF		50V	IC404	8-759-700-40	IC NJM4560S				
C803 C804		CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF		50V 50V		8-759-200-81 8-759-200-81					
C805	1-126-160-11	ELECT 1MF	20%	50V	IC701	8-752-322-57	IC CX23010				
C806 C821		CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF		50V 50V	10901	8-759-933-22					
C822	1-163-063-00	CERAMIC CHIP 0.022MF		50V		JUM	PER RESISTOR				
C823 C824		CERAMIC CHIP 0.047MF CERAMIC CHIP 0.047MF		50V 50V		1-216-295-00		0	5% 5%	1/10W 1/10W	
C825 C826	1-124-499-11	ELECT 1MF CERAMIC CHIP 0.047MF	20%	50V 50V	JR003		METAL GLAZE	0	5% 5%	1/10W 1/10W	
C840	1-124-446-11		20%	100		1-216-295-00		Ŏ	5%	1/10W	
C841	1-163-063-00	CERAMIC CHIP 0.022MF		50V	JR006	1-216-295-00	METAL GLAZE	0	5%	1/10W	
C901 C902		CERAMIC CHIP 0.0033MF	20% 10%	50V 50V		1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0 0	5% 5%	1/10W 1/10W	
C903	1-124-589-11	ELECT 47MF	20%	100		1-216-295-00	METAL GLAZE METAL GLAZE	0 0	5% 5%	1/10W 1/10W	
C904 C921	1-124-465-00	CERAMIC CHIP 0.033MF	20% 10%	50V 25V	JR011	1-216-295-00	METAL GLAZE	0	5%	1/10W	
	1-124-902-00		20%	50V	JR012	1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W	
	CON	NECTOR			JR016	1-216-295-00	METAL GLAZE	0	5% 5%	1/10W	
CN201	1-506-470-11	PIN, CONNECTOR 5P				1-216-295-00	METAL GLAZE			1/10W	
CN204	1-506-471-11	PIN, CONNECTOR 4P PIN, CONNECTOR 6P				1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W	
CN205 CN207	1-506-469-11 *1-506-467-11	PIN, CONNECTOR 4P PIN, CONNECTOR 2P				1-216-295-00	METAL GLAZE METAL GLAZE	0 0	5% 5%	1/10W 1/10W	
		PIN, CONNECTOR 5P			JR022	1-216-295-00	METAL GLAZE	0	5%	1/10W	
CN501	1-506-470-11	PIN, CONNECTOR 5P PIN, CONNECTOR 5P			JR023 JR025	1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W	
	1-506-468-11	PIN, CONNECTOR 3P			JR026	1-216-295-00	METAL GLAZE	0	5%	1/10W	
		PIN, CONNECTOR 3P				1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W	
CNAOI		PIN, CONNECTOR 5P PIN, CONNECTOR 5P PIN, CONNECTOR 3P PIN, CONNECTOR 3P PIN, CONNECTOR 2P DE DIODE RD2-7FS-B2				1-216-295-00	METAL GLAZE	0	5%	1/10W	
	<u>D10</u>	<u>DE</u>				1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0	5% 5%	1/10W 1/10W	
D701	8-719-109-60	DIODE RD2. 7ES -B2				1-216-295-00		0	5% 5%	1/10W 1/10W	
	FIL	TER				1-216-295-00		0	5%	1/10W	
FL301	1-235-565-21	FILTER, LOW PASS (15KHz) FILTER, LOW PASS (15KHz)			JR035	1-216-295-00 1-216-295-00	METAL GLAZE	0 0	5% 5%	1/10W 1/10W	
FL501	1-235-484-11	FILTER, BAND PASS (1.5MH	iz)		JR037	1-216-295-00	METAL GLAZE	0	5%	1/10W	
	IC					1-216-295-00		0	5%	1/10W	
IC101	8-759-937-21	IC CXD1078M				1-216-295-00 1-216-295-00		0	5% 5%	1/10W 1/10W	

No.	Part No.	Description				Remark	No.	Part No.	Description				Remark
JR041 JR042 JR043 JR044 JR045	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		Q210 Q211 Q212 Q213 <u>↑</u> Q301	8-729-100-66 8-729-100-76 8-729-100-76 8-729-177-32 8-729-602-00	TRANS IS TOR 2: TRANS IS TOR 2: TRANS IS TOR 2: TRANS IS TOR 2: TRANS IS TOR 2:	SA812 SA812 SD773	2		
JR046 JR047 JR053 JR054 JR055	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/8W		Q302 Q401 Q402 Q502 Q701	8-729-100-66 8-729-602-00 8-729-100-66 8-729-901-01 8-729-100-66	TRANSISTOR 2: TRANSISTOR 2: TRANSISTOR 2: TRANSISTOR D TRANSISTOR 2:	SK433C SC1623 TC144EH	ζ.		
JR056 JR057 JR058 JR059 JR060	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0	5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		Q801 Q802 Q803 Q821 Q822	8-729-100-66 8-729-100-76 8-729-100-66 8-729-100-66 8-729-100-76	TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25	A812 C1623 C1623			
JR061 JR062 JR063 JR064	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 !	5% 5%	1/8W 1/8W 1/8W 1/8W		Q823 Q901	8-729-100-66 8-729-100-76	TRANSISTOR 25 TRANSISTOR 25 ISTOR				
JR065	1-216-296-00	METAL GLAZE			1/8W								
JR066 JR067 JR068 JR069 JR070	1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 !	5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R102 R104 R107 R110 R113	1-216-073-00 1-216-081-00 1-216-073-00 1-216-073-00 1-216-044-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 22K 10K 10K 620	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR072 JR074 JR075 JR076 JR077	1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 !	5% 5% 5%	1/8W 1/8W 1/8W 1/8W		R201 R205 R206 R207 R210	1-216-061-00 1-216-097-00 1-216-097-00 1-216-097-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 100K 100K 100K 33K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR078 JR079 JR080 JR081 JR082	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5	5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R211 R216 R217 R218 R220	1-216-073-00 1-216-097-00 1-216-097-00 1-216-097-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 100K 100K 100K 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR083 JR084 JR085 JR086 JR087	1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00 1 -216 -296 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5 0 5 0 5	5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R221 R230 R233 R236 R237	1-216-089-00 1-216-061-00 1-216-069-00 1-216-071-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 3.3K 6.8K 8.2K 10K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR089 JR090 JR091	1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5	5% 5%	1/8W 1/8W 1/8W		R238 R240 R241 R242 R244	1-216-061-00 1-216-061-00 1-216-074-00 1-216-061-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 3.3K 11K 3.3K 22K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
	<u>C011</u>												
L 921	-	NS IS TOR	33UH		•		R305 R307 R309 R310 R316	1-216-295-00 1-216-079-00 1-216-093-00 1-216-099-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 18K 68K 120K 3.9K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
Q201 Q203 Q204 Q208 <u>A</u> . Q209	8-729-100-66	TRANSISTOR DT TRANSISTOR 2S TRANSISTOR DT TRANSISTOR 2S TRANSISTOR 2S	C1623 C144EK B733				R319 R320 R321 R322	1-249-437-11 1-249-440-11 1-216-001-00 1-216-101-00	CARBON CARBON METAL GLAZE METAL GLAZE	47K 82K 10 150K	5% 5% 5% 5%	1/4W 1/4W 1/10W 1/10W	

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque 🐧 sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

AU-54 AD-12

No.	Part No.	Description			Remark	1 No.	Part No.	Description			Remark
R327 R330 R331 R332 R333	1 -216 -059 -00 1 -216 -053 -00 1 -216 -025 -00 1 -216 -095 -00 1 -247 -854 -11	METAL GLAZE METAL GLAZE	2.7K 5 1.5K 5 100 5 82K 5 9.1K 5	% 1/10W % 1/10W % 1/10W		R503 R505 R506 R562 R563	1-216-063-00 1-216-063-00 1-216-049-00 1-216-069-00 1-216-067-00		3. 9K 5% 3. 9K 5% 1K 5% 6. 8K 5% 5. 6K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R334 R335 R336 R337 R338	1-249-393-11 1-249-414-11 1-247-860-11 1-216-065-00 1-249-423-11	CARBON CARBON METAL GLAZE	10 5; 560 5; 16K 5; 4.7K 5; 3.3K 5;	4 1/4W 4 1/4W 6 1/10W		R564 R565 R566 R570 R701	1-216-065-00 1-216-089-00 1-216-073-00 1-216-047-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 5% 47K 5% 10K 5% 820 5% 470 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R339 R340 R345 R346 R347	1-249-423-11 1-247-844-11 1-249-427-11 1-216-025-00 1-216-748-11	CARBON CARBON CARBON METAL GLAZE METAL GLAZE	3. 3K 59 3. 6K 59 6. 8K 59 100 59 3 9K 59	6 1/4W 6 1/4W 6 1/10W		R801 R802 R803 R804 R805	1-216-057-00 1-216-063-00 1-216-077-00 1-216-073-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 3.9K 5% 15K 5% 10K 5% 10OK 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R349 R350 R351 R360 R362	1-216-069-00 1-249-425-11 1-249-423-11 1-247-828-11 1-247-858-11	METAL GLAZE CARBON CARBON CARBON CARBON	6.8K 57 4.7K 57 3.3K 57 750 57 13K 57	1/4W 1/4W 1/4W		R806 R807 R808 R809 R821	1-216-063-00 1-216-074-00 1-216-053-00 1-216-041-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.9K 5% 11K 5% 1.5K 5% 470 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R363 R370 R407 R409 R410	1-249-432-11 1-216-059-00 1-216-079-00 1-216-093-00 1-216-099-00	CARBON METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	18K 5% 2.7K 5% 18K 5% 68K 5% 120K 5%	1/10W 1/10W 1/10W		R822 R823 R824 R825 R826	1-216-063-00 1-216-077-00 1-216-073-00 1-216-097-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.9K 5% 15K 5% 10K 5% 100K 5% 3.9K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R416 R419 R420 R421 R422	1-216-063-00 1-249-437-11 1-249-440-11 1-216-001-00 1-216-101-00	METAL GLAZE CARBON CARBON METAL GLAZE METAL GLAZE	3.9K 5% 47K 5% 82K 5% 10 5% 150K 5%	1/4W 1/4W 1/10W		R827 R828 R829 R901 R902	1-216-074-00 1-216-047-00 1-216-041-00 1-216-073-00 1-216-066-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	11K 5% 820 5% 470 5% 10K 5% 5.1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R427 R430 R431 R432 R433	1-216-059-00 1-216-053-00 1-216-025-00 1-216-095-00 1-247-854-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE CARBON	2.7K 5% 1.5K 5% 100 5% 82K 5% 9.1K 5%	1/10W 1/10W 1/10W		R904 R905 R906 R907 R908	1-216-089-00 1-216-089-00 1-216-081-00 1-216-073-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 5% 47K 5% 22K 5% 10K 5% 4.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R435 R436 R437 R438 R439	1-249-414-11 1-247-860-11 1-216-065-00 1-216-061-00 1-249-423-11	CARBON CARBON METAL GLAZE METAL GLAZE CARBON	560 5% 16K 5% 4.7K 5% 3.3K 5% 3.3K 5%	1/4W 1/10W 1/10W		R909 R951	1-216-089-00 1-216-073-00	METAL GLAZE METAL GLAZE	47K 5% 10K 5%	1/10W 1/10W	****
R440 R445 R446 R447 R449	1 -247 -844 -11 1 -249 -427 -11 1 -216 -025 -00 1 -249 -436 -11 1 -216 -069 -00	CARBON CARBON METAL GLAZE CARBON METAL GLAZE	3.6K 5% 6.8K 5% 100 5% 39K 5% 6.8K 5%	1/4W 1/10W 1/4W			A-7068-113-A *1-622-010-11 CAP	AD -12 BOARD ************************************	*****		
R450 R451 R460 R462 R463	1-249-425-11 1-249-423-11 1-247-828-11 1-247-858-11 1-249-432-11	CARBON CARBON CARBON CARBON CARBON	4.7K 5% 3.3K 5% 750 5% 13K 5% 18K 5%	1/4W 1/4W 1/4W 1/4W		C701 C703 C705 C707 C709	1-124-638-11 1-163-117-00 1-124-638-11 1-126-157-11	-	22MF 100PF 22MF 10MF 47MF	20% 5% 20% 20% 20%	6.3V 50V 6.3V 16V 6.3V
R470 R501 R502	1-216-059-00 1-216-075-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE.	2.7K 5% 12K 5% 4.7K 5%	1/10W		C710 C713 C715		CERAMIC CHIP ELECT ELECT		20%	50V 6.3V 6.3V

AD-12 AF-20

No.	Part No.	Description			Remark	No.	Part No.	Description			Remark
C716	1-126-157-11	FLECT	1 OMF	20%	16V		*A-7068-021-A	AF -20 BOARD	COMPLETE		
C717	1-126-177-11	ELECT	100MF	20%	6.3V		7, 7000 021 H	******			
C718 C719	1-103-709-00	POLYSTYRENE CERAMIC CHIP		5%	50V 50V		*1-619-037-11	AF 20 ROADD			
C720		CERAMIC CHIP			50V		~1-019-037-11	AF-20 BUARD			
C721	1-126-154-11	ELECT	4 7MF	20%	6.3V		CAP	ACITOR			
C722		CERAMIC CHIP		20%	50V	C501	1-163-021-00	CERAMIC CHIP	0.01MF		50V
C751	1-124-638-11		22MF	20%	6.3V	C502	1-163-021-00			**	50V
C753 C755	1-163-117-00	CERAMIC CHIP	22MF	5% 20%	50V 6.3V	C503 C504	1-163-137-00		0.47MF	10% 20%	50V 50V
						C505	1-163-145-00			10%	50V
C757	1-126-157-11	ELECT	10MF	20%	16V	C506	1-163-016-00	GERAMIC CHIP	0.0039MF	10%	50V
	CON	NECTOR				C507	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
CN701	1-563-533-11	CONNECTOR BE	DARD TO BO	ARN 15P		C508 C509	1-164-161-11		0.0022MF 100MF	10% 20%	50V 6.3V
		301111201011,	371110 10 00			C510	1-163-036-00			20%	50V
	IC					C511	1-163-021-00	CERAMIC CHIP	0.01ME		50V
IC702	8-759-914-44	IC TL431CLPB				C512	1-124-257-00		2.2MF	20%	50V
						C513	1-126-154-11		47MF	20%	6.3V
	<u>C01</u>	L				C514	1-126-094-11		4.7MF	20%	25V 50V
L701	1-408-421-00	INDUCTOR	100UH			C515	1-163-133-00	CERAMIC CHIP	47027	5%	204
	·DEC	ISTOR				C516 C517	1-126-177-11		100MF	20% 0.25PF	6.3V
	KES	13 10K				C518		CERAMIC CHIP		10%	50V
R701	1-216-083-00		27K 5%			C519	1-163-125-00	CERAMIC CHIP		5%	50V
R703 R711	1-216-748-11		39K 5% 2.2K 5%			C520	1-163-079-00	CERAMIC CHIP	0.039MF	10%	25V
R713	1-216-057-00		2.2K 5%			C521	1-163-020-00	CERAMIC CHIP	0.0082MF	10%	50V
R717	1-216-117-00	METAL GLAZE	680K 5%	1/10W		C522	1-163-137-00			10%	50V
0710	1 016 000 00	METAL OLATE	150 54			C523	1-126-160-11		1MF	20%	50V
R718 R719	1-216-029-00	METAL GLAZE METAL GLAZE	150 5% 75 5%			C524 C525	1-126-157-11 1-126-157-11	ELECT	10MF 10MF	20% 20%	16V 16V
R720	1-216-039-00		390 5%			6323	1-120-13/-11	CCCCI	TOPIC	20%	101
R721	1-216-049-00	METAL GLAZE	1K 5%	1/10W		C526	1-124-638-11		22MF	20%	6.3V
R722	1-216-653-11	METAL CHIP	1.2K 0.	50% 1/10W		C527	1-126-177-11		100MF	20%	6.3V
R723	1-216-661-11	METAL CHIP	2.7K 0.	50% 1/10W		C529 C530	1-124-438-00	ELECT	1MF	20%	50V 50V
R724	1-215-485-00		470K 1%			C531		ELECT	100MF	20%	6.3V
R751	1-216-083-00		27K 5%			0001			200111	,-	
R753	1-216-748-11		39K 5%			C533	1-163-015-00	CERAMIC CHIP		10%	50V
R761	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W		C534	1-163-109-00	CERAMIC CHIP		5%	50V
R763	1-216-057-00	METAL CLAZE	2.2K 5%	1/10W		C535 C536	1-164-161-11	CERAMIC CHIP		10%	50V 50V
11700	1-210-037-00	METAL GLAZE	L. LN JA	1/10W		C539	1-163-088-00			0.25PF	
	VAR	IABLE RESISTOR	3					NECTOR			
RV701	1-228-995-00	RES, ADJ, CA	RBON 22K				CON	NECTOR			
RV703		RES, ADJ, CAI	RBON 2.2K			CN501	*1-564-788-11	PIN, CONNECT	OR 10P		1
RV705	1-228-999-00					CN502	*1-564-788-11	PIN, CONNECTO	OR 10P		
RV751 RV753	1-228-995-00	RES, ADJ, CAI					10				
										,	
**************************************	*****	**********	****	******	*****	10501	8-752-013-71	IC CX20137A	*		
							<u>C01</u>	<u>L</u>			

When indicating parts by reference number, please include the board name.

220UH

L501 1-408-948-00 INDUCTOR

AF-20 MK-2 NR-6

No.	Part No.	Description			Remark	No.	Part No.	Description	÷			Remark
	TRA	INS IS TOR					COM	INECTOR				
Q502 Q503	8-729-220-93 8-729-901-01	TRANSISTOR 2				CN803	*1-564-788-11	PIN, CONNECT	OR 10P			
	RES	ISTOR					IC					
R501 R502 R503	1-216-065-00 1-216-065-00 1-216-065-00		4.7K ! 4.7K ! 4.7K !	5% 1/10W		IC821	8-759-913-62 8-759-913-62 8-759-206-68	IC IR3NO5				
R504 R505	1-216-121-00	METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W			TRA	NS IS TOR				
R506	1-249-416-11	CARBON	820	5% 1/4W		Q851	8-729-119-78		SC2785HF	E		
R507 R508	1-249-416-11 1-216-097-00	CARBON METAL GLAZE	100K !	5% 1/4W 5% 1/10W			RES	ISTOR				
R509 R510 R511	1-216-075-00 1-216-063-00	METAL GLAZE METAL GLAZE	3.9K 5	5% 1/10W 5% 1/10W 5% 1/10W		R801 R810 R812 R830	1-249-398-11 1-249-421-11 1-249-436-11	CARBON CARBON	2.2K 39K	5% 5% 5%	1/4W 1/4W 1/4W	
R512	1-216-045-00	METAL GLAZE	680 5	5% 1/10W		R851	1-249-421-11	CARBON CARBON	2.2K 33K	5% 5%	1/4W 1/4W	
R513 R514 R515	1-216-059-00 1-216-061-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 5	5% 1/10W 5% 1/10W 5% 1/10W		R852 R853	1-249-435-11 1-249-441-11			5% 5%	1/4W 1/4W	
R516	1-216-059-00	METAL GLAZE		5% 1/10W			VAR	IABLE RESISTO	<u>R</u>	,		
R517 R519 R520 R521	1-216-073-00 1-216-079-00 1-216-121-00 1-216-079-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	18K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W			1-228-990-00 1-228-990-00					
	,			-,,		ade ade ade ade ade ade ade	and a standard ride with other					
								******	*****	****	*****	
R522 R523 R524 R525	1 -216 -097 -00 1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00	METAL GLAZE METAL GLAZE	47K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W			*A-7060-913-A	NR -6 BOARD,	COMPLET	Έ	*****	
R523	1-216-089-00	METAL GLAZE	47K 5 27K 5 18K 5	5% 1/10W			*A-7060-913-A	NR-6 BOARD,	COMPLET	Έ	*****	
R523 R524 R525	1-216-089-00 1-216-083-00 1-216-079-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 5 27K 5 18K 5 18K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W		C601 C602 C603	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11	NR-6 BOARD, *********** ACITOR ELECT ELECT ELECT ELECT	COMPLET************************************	Έ *	20% 20% 20%	6.3V 10V 6.3V
R523 R524 R525 R526 R527 R528	1-216-089-00 1-216-083-00 1-216-079-00 1-216-079-00 1-216-057-00 1-216-059-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 5 27K 5 18K 5 18K 5 2.2K 5 2.7K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W		C601 C602	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11	NR-6 BOARD, ******* ACITOR ELECT ELECT ELECT ELECT ELECT ELECT	COMPLET	**	20% 20%	6.3V 10V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503	1-216-089-00 1-216-083-00 1-216-079-00 1-216-079-00 1-216-057-00 1-216-059-00 1-216-049-00 VAR 1-228-995-00 1-228-994-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA RES, ADJ, CA	47K 27K 27K 27K 27K 27K 27K 2.2K 2.7K 2.7	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W		C601 C602 C603 C604 C605 C606 C607 C608	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00	NR-6 BOARD, ************ ACITOR ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP MYLAR	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M	E *	20% 20% 20% 20% 5% 10% 0.25PF	6.3V 10V 6.3V 6.3V 50V 50V 50V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503	1-216-089-00 1-216-083-00 1-216-079-00 1-216-079-00 1-216-059-00 1-216-049-00 VAR 1-228-995-00 1-228-994-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA RES, ADJ, CA	47K 5 27K 5 18K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	***********************	C601 C602 C603 C604 C605	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-130-479-01 1-163-088-00 1-130-479-00 1-163-020-00	NR-6 BOARD, *********** ACITOR ELECT ELECT ELECT ELECT HYLAR CERAMIC CHIP CERAMIC CHIP	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M	E *	20% 20% 20% 20% 5% 10% 0.25PF	6.3V 10V 6.3V 6.3V 50V 50V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503	1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00 1 -216 -079 -00 1 -216 -057 -00 1 -216 -059 -00 1 -216 -049 -00 VAR 1 -228 -995 -00 1 -228 -994 -00 ***********************************	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA ************************************	47K 27K 518K 518K 518K 518K 518K 518K 518K 518	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	****	C601 C602 C603 C604 C605 C606 C607 C608 C609 C610	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00 1-163-020-00 1-124-257-00 1-163-137-00 1-127-558-11	NR-6 BOARD, ************ ACITOR ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP MYLAR CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP ELECT (SOLID)	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M 0.0082M 2.2MF	E *	20% 20% 20% 20% 5% 10% 0.25PF 5% 10% 20%	6.3V 10V 6.3V 6.3V 50V 50V 50V 50V 50V 50V 50V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503	1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00 1 -216 -079 -00 1 -216 -057 -00 1 -216 -059 -00 1 -216 -049 -00 VAR 1 -228 -995 -00 1 -228 -994 -00 ***********************************	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA ************************************	47K 5 27K 5 18K 5 18K 5 2.2K 5 2.7K 5 1K 5	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W		C601 C602 C603 C604 C605 C606 C607 C608 C609 C610	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00 1-163-020-00 1-124-257-00 1-163-137-00 1-127-558-11 1-127-558-11 1-127-502-00 1-126-177-11	NR-6 BOARD, *********** ACITOR ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP ELECT ELECT CERAMIC CHIP ELECT ELE	100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M 0.0082M 2.2MF 680PF 10MF 0.22MF	E *	20% 20% 20% 20% 5% 10% 0.25PF 10% 20% 10% 20%	6.3V 10V 6.3V 50V 50V 50V 50V 50V 50V 50V 50V 50V 6.3V 25V 6.3V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503 ********	1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00 1 -216 -079 -00 1 -216 -057 -00 1 -216 -059 -00 1 -216 -049 -00 VAR 1 -228 -995 -00 1 -228 -994 -00 ****************** *A -7068 -148 -A CAP 1 -161 -055 -00 1 -161 -055 -00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA ************************************	47K 27K 518K 518K 518K 518K 518K 518K 518K 518	5% 1/10W 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	******* 25V 25V	C601 C602 C603 C604 C605 C606 C607 C608 C609 C610	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00 1-163-020-00 1-124-257-00 1-163-137-00 1-127-558-11 1-127-502-00	NR-6 BOARD, *********** ACITOR ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP ELECT ELECT CERAMIC CHIP ELECT ELE	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M 0.0082M 2.2MF 680PF 10MF 0.22MF	E *	20% 20% 20% 20% 5% 10% 5% 10% 20% 10% 20%	6.3V 10V 6.3V 6.3V 50V 50V 50V 50V 50V 50V 50V 50V 50V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503	1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00 1 -216 -079 -00 1 -216 -057 -00 1 -216 -059 -00 1 -216 -049 -00 VAR 1 -228 -995 -00 1 -228 -994 -00 **********************************	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE IABLE RESISTO RES, ADJ, CA ************* MK-2 BOARD, ********** ACITOR CERAMIC CERAMIC FILM CERAMIC GERAMIC	47K 5 27K 5 18K 5 18K 5 2.2K 5 2.7K 5 1K 5 RBON 22K RBON 10K ************************************	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 6% 1/10W	25V 25V 50V 25V	C601 C602 C603 C604 C605 C606 C607 C608 C609 C610 C611 C612 C613 C616 C618	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00 1-163-020-00 1-124-257-00 1-163-137-00 1-127-558-11 1-127-502-00 1-126-177-11 1-126-177-11 1-126-177-11	NR-6 BOARD, ************ ACITOR ELECT ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP ELECT CERAMIC CHIP ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 5PF 0.0047M 0.0082M 2.2MF 10MF 0.22MF 10MF 100MF 100MF	E *	20% 20% 20% 20% 5% 10% 0.25PF 10% 20% 20% 20% 20% 20% 20% 20%	6.3V 10V 6.3V 6.3V 50V 50V 50V 50V 50V 50V 6.3V 6.3V 6.3V 6.3V
R523 R524 R525 R526 R527 R528 R530 RV501 RV503 ************************************	1 -216 -089 -00 1 -216 -083 -00 1 -216 -079 -00 1 -216 -079 -00 1 -216 -057 -00 1 -216 -059 -00 1 -216 -049 -00 VAR 1 -228 -995 -00 1 -228 -994 -00 **********************************	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE ABLE RESISTO RES, ADJ, CA ************ MK-2 BOARD, ********** ACITOR CERAMIC CERAMIC FILM CERAMIC FILM FILM	47K 27K 518K 518K 518K 518K 518K 518K 518K 518	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W 1/10W 1/10W 5% 1/10W 5% 1/10W 5% 10% 5% 10% 5% 10%	25V 25V 50V	C601 C602 C603 C604 C605 C606 C607 C608 C609 C610 C611 C612 C613 C616 C618	*A-7060-913-A CAP 1-126-177-11 1-124-446-11 1-126-177-11 1-126-177-11 1-130-490-11 1-163-125-00 1-163-088-00 1-130-479-00 1-163-020-00 1-124-257-00 1-163-137-00 1-127-558-11 1-127-502-00 1-126-177-11 1-126-177-11	NR-6 BOARD, ************ ACITOR ELECT ELECT ELECT ELECT MYLAR CERAMIC CHIP CERAMIC CHIP MYLAR CERAMIC CHIP ELECT CERAMIC CHIP ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT ELECT	COMPLET ******* 100MF 47MF 100MF 100MF 0.039MF 220PF 0.0047M 0.0082M 2.2MF 680PF 10MF 0.22MF 100MF	E*	20% 20% 20% 20% 5% 10% 5% 10% 20% 10% 20% 20% 20% 20% 20% 20%	6.3V 10V 6.3V 6.3V 50V 50V 50V 50V 50V 50V 6.3V 6.3V 6.3V

NR-6 LD-1 MS-4 LS-9 TE-6 TE-5 DL-15

No	Dant No	Doganintian			Domanic	N.a.	Doub No.	Description	Damaidi
No.	Part No.	Description			Remark	No.	Part No.	Description	Remark
C658 C659	1-130-479-00 1-163-020-00	CERAMIC CHIP		5% 10%	50V 50V		A-/090-029-A	MS -4 BOARD, COMPLETE	
C660 C661 C662	1-124-257-00 1-163-137-00 1-127-558-11	ELECT CERAMIC CHIP ELECT(SOLID)		20% 10% 20%	50V 50V 6.3V		*1-506-485-11	PIN, CONNECTOR (HOOK TYPE)	
C663	1 -127 -502-00	ELECT(SOLID)		20%	25V		CAP	ACITOR	
0000			0. ZZj*ii	20,6	234	C902	1-163-038-00	CERAMIC CHIP 0.1MF	25V
011501	-	NECTOR				*****	*****	*********	*****
CNOOT	*1-565-002-11	PIN, CONNECTO	IR 15P					LS -9 BOARD	
	<u>IC</u>							******	
10601	8-752-009-90	IC CX20099		•			*1-506-485-11	PIN, CONNECTOR (HOOK TYPE)	
	RES	ISTOR				*****	******	**********	*****
R 600 R 601	1-216-025-00	METAL GLAZE	100 5%	1/10W			*1-621-998-11	TE-6 BOARD	
R602	1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 5% 10K 5%	1/10W 1/10W					
R603 R604	1-216-009-00 1-216-059-00	METAL GLAZE METAL GLAZE	22 5% 2.7K 5%	1/10W 1/10W			*3-716-845-01	HOLDER (LEFT), SENSOR	
R605	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W	-		TRA	NS ISTOR	
R606 R607	1-216-045-00 1-216-075-00	METAL GLAZE METAL GLAZE	680 5% 12K 5%	1/10W 1/10W		Q001	8-729-904-10	PT360FS	
R608 R609	1-216-063-00	METAL GLAZE METAL GLAZE	3.9K 5% 3.3K 5%	1/10W 1/10W			SWI	тсн	
R610	1-216-059-00	METAL GLAZE	2.7K 5%	1/10W		S001 S002		SWITCH, LEAF (CASSETTE DOWN L) SWITCH, LEAF (LS TOP)	
R611 R612	1-216-061-00 1-216-065-00	METAL GLAZE METAL GLAZE	3.3K 5%	1/10W				*********	
R614	1-216-065-00	METAL GLAZE	4.7K 5% 4.7K 5%	1/10W 1/10W					
R650	1-216-025-00	METAL GLAZE	100 5%	1/10W			*1-621-997-11	TE-5 BOARD	
R651 R652	1-216-073-00 1-216-073-00	METAL GLAZE METAL GLAZE	10K 5% 10K 5%	1/10W 1/10W			*3-716-844-01	HOLDER (RIGHT), SENSOR	
R653 R654	1-216-009-00 1-216-059-00	METAL GLAZE METAL GLAZE	22 5% 2.7K 5%	1/10W 1/10W				OT LAMP	
R655	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W		Pt 0.01	1-518-621-21		
R656 R657	1-216-045-00 1-216-075-00	METAL GLAZE METAL GLAZE	680 5% 12K 5%	1/10W 1/10W			1-518-621-21		
R658 R659	1-216-063-00 1-216-061-00	METAL GLAZE METAL GLAZE	3.9K 5% 3.3K 5%	1/10W			TRA	NS IS TOR	
R660	1-216-059-00	METAL GLAZE	2.7K 5%	1/10W 1/10W		Q001	8-729-904-10	PT360FS	
R661	1-216-061-00		3.3K 5%	1/10W			SWI	TCH .	
R662	1-216-065-00		4.7K 5%	1/10W		\$001	1-570-112-11	SWITCH, LEAF (CASSETTE DOWN R)	
*****	****	*****	*****	******	******	*****	******	***********	******
	*A-7070-024-A	LD-1 BOARD,					*1-621-993-11	DI -15 ROARD	
	D10	ne .						******	
D901	8-719-928-54	-4,					DIO	DE	4
			<u> </u>					DIODE RD2.0ESB1	
****	*****	**********	*********	*****	******	D301 A	.8-719-309-XX	DIODE D3S810	

The components identified by mark \bigwedge or dotted line with mark \bigwedge are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

When indicating parts by reference number, please include the board name.

DL-15 DO-1 DT-63

No.	Part No.	Descrip	tion		Remark	No.	Part No.	Description				Remark	
IC001/	<u>IC</u> ∆8-759-803-56 <u>TR/</u>		8ML			D114 A	8-719-107-94 \(8-719-110-90 \) \(8-719-109-97 \) \(8-719-110-42 \) \(4-8-719-110-16 \)	DIODE RD39E DIODE RD6.8 DIODE RD15E	S -84 ES -83 S83				
Q001		TRANS IS	TOR DTC114ES			D117 D119	8-719-109-75 8-719-911-19	DIODE RD4.7	ES -B2 9TD				
R001	1-249-417-11		1K	5% 1/4W	ŕ		FUS	<u>E</u>					
	******					F103 ⚠	. 1-532-780-21	FUSE, MICRO	(S ECONE	ARY)	(2.5A)		
	*1-621-992-11		OARD					LINK				•	
	TRA	NS IS TOR				PS102/	1-532-727-11 1-532-679-00 1-532-605-00	LINK. IC (O.	4A)				
0501 <u>∱</u> 0502 <u>∱</u>	.8-729-303-61 .8-729-804-67	TRANS IS	TOR 2SC3851 FOR 2SB1133-R					NS IS TOR					
	*****				******	Q106 🕰	.8-729-103-43 .8-729-177-32 .8-729-177-32	TRANSISTOR 2	2S D773				
,	*A-7070-324-A	DT-63 !	BOARD, COMPLET	TE **		, , ,		ISTOR	.00.70	•			
	*1-621-994-11	DT-63 I	30ARD			R103	1-249-421-11	CARBON	2.2K	5%	1/4W		
	CAP	ACITOR				R104 R105 <u>↑</u>	1-249-421-11 1-246-449-25	CARBON	2.2K 100	5% 5%	1/4W 1/4W		
C102 C103	1-124-771-00 1-123-334-00	ELECT	6800MF 220MF	20% 20%	25V 25V	R107 R108	1-249-425-11 1-249-434-11	CARBON	4.7K 27K	5% 5%	1/4W 1/4W		
C104 C105 C110	1-123-332-00 1-123-332-00 1-125-445-11	ELECT	47MF 47MF AYERS 0.22F	20% 20%	16V 16V 5.5V	R109 R111 R112	1-249-441-11 1-249-431-11 1-249-422-11	CARBON	100K 15K 2.7K	5% 5% 5%	1/4W 1/4W 1/4W	•	
C111 C112 C114	1-124-931-11 1-124-931-11 1-108-634-11	ELECT MYLAR	47MF 47MF 0.047MF	20% 20% 10%	100V 100V 100V		1-249-416-11 1-212-966-00	FUS IBLE	820 22	5% 5% ****	1/4W 1/2W	F ******	
C115	1-123-334-00 CON	NECTOR	220MF	20%	25V			CELLANEOUS	,				
CN102 *	1-560-893-00		INFCTOR SP						A DV				
CN104 * CN105 * CN106 *	1-560-893-00 1-560-891-00 1-560-896-00 1-560-893-00	PIN, CON PIN, CON PIN, CON	INECTOR 5P INECTOR 3P INECTOR 8P			<u>A</u>		SWITCH BLOCK	F (RFU1	011)			
CN108 * CN203 *	1-560-891-00 1-560-894-00	PIN, CON PIN, CON	NECTOR 3P			C901	1-161-057-00	CORD, POWER CAP, CERAMIC	0.033M	FΧ			
D103 A	DIO					M901 M903 M904	8-835-282-03 8-835-138-01 A-7040-065-A	MOTOR, DC (D.	NR -53011	3) (C	ONTROL)		
D104 A. D106 A. D107 A. D108	8-719-911-19 8-719-911-19 8-719-110-16 8-719-908-03 8-719-200-02	DIODE 1S DIODE RD DIODE GP DIODE 10	S119TD 910ES -B1 908D 9E -1			M905 M906 PM901A S 901 S 902	A-7090-661-A 8-835-247-01 1-454-377-31 1-571-680-21	MOTOR BLOCK MOTOR, DC BH SOLENOID, PL SWITCH, PUSH	ASSY, LS F-2804D UNGER (I	S (LI (CAP BRAKE) (RE	NEAR SKA STAN)	ATE)	
D109 D110	8-719-110-42 8-719-109-93	DIODE RD	15ES -B3 6.2ES -B2				1-554-942-11 1-448-837-11			L)			

The components identified by mark or dotted line with mark are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifé.

ACCESSORIES AND PACKING MATERIALS

Part No.	Description	Remark
A-6767-422-A 1-417-139-11 1-513-379-00 1-551-086-31 1-558-076-41	CORD, CONNECTION	(US)
1-558-543-11 1-559-457-11 *3-677-503-00 *3-713-408-01 *3-713-465-01	CORD, CONNECTION SHEET, PROTECTION CASE, ACCESSORY	
*3-722-142-01 *3-722-143-01 *3-722-144-11 3-786-709-21 3-786-709-31	INDIVIDUAL CARTON MANUAL, INSTRUCTION	
8-883-112-29	V8-6CLHSP	

HARDWARE LIST

Part No.	Description	Remark
7 -621-255-50 7 -627 -553-48 7 -628-254-00	SCREW +P 2X4 SCREW +P 2X8 SCREW, PRECISION +P 2X4 SCREW +PS 2.6X5 SCREW +B 3X10	
7-685-133-19 7-685-234-19 7-685-646-79	SCREW +P 2x3 NON-SLIT TYPE2 SCREW +P 2.6X6 TYPE1 SCREW +KTP 2.6X8 TYPE2NON-SLIT SCREW +BVTP 3X8 TYPE2 IT-3 SCREW +BVTP 3X12 TYPE2 IT-3	
	SCREW +PTT 2X3 (S) SCREW +BVTT 2X6 (S)	
<u>ST0</u>	PRING	
7-624-102-04 7-624-105-04 7-624-106-04	STOP RING 1.2 (E TYPE) STOP RING 1.5, TYPE -E STOP RING 2.3, TYPE -E STOP RING 3.0, TYPE -E STOP RING 5, TYPE-CS	
STE	EL BALL	

7-671-112-01 STEEL, BALL

SECTION 7 MECHANICAL ADJUSTMENT

7-1. PREPARATION ITEMS FOR MECHANISM SECTION CHECKING, ADJUSTMENT AND REPLACEMENT

Note: Regarding removal of cabinet and respective boards, see Section 2. DISASSEMBLY.

7-1-1. LS Cassette Compartment Assembly and Operation without Tape Inserted

Note: The set will not operate if there is a strong light source near it.

1. Threading Method (See Fig. 7-1.)

- 1) Remove the front panel, upper case, and bottom plate according to Section 2. DISASSEMBLY, 2-1. and 2-2.
- 2) Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY, 2-16. (Do not remove the connectors.)
- 3) Place the tape over the pin emerging from the push switch 1.
- 4) Place the cap 2, etc., over the LED assembly.
- 5) Push the lock holder 3 in the direction of arrow A.
- 6) Short the leaf switch 4 using a clip 5, etc.
- 7) Connect the power supply and press the power button to turn on the power.

- Putting into playback state (See Fig. 7-1.)
- 1) Perform "1. Threading Method".
- Hook the rubber band 6 between S reel and T reel. 2)
- Press the playback button, and when the T reel side starts to rotate, push the tension regulator arm assembly 10 in the direction of the arrow B. (At this time, the tension regulator band is released and S reel side rotates.)
- 4) Press the STOP button to stop.

Putting into recording state (See Fig. 7-1.)

- 2) Hook the rubber band 6 between S reel and T reel.
- Press the recording button, and when the T reel starts to rotate, push the tension regulator arm assembly 10 in the direction of the arrow B. (At this time, the tension regulator band is released and S reel rotates.)
- Press the STOP button to stop.

Eject

Press the EJECT button.

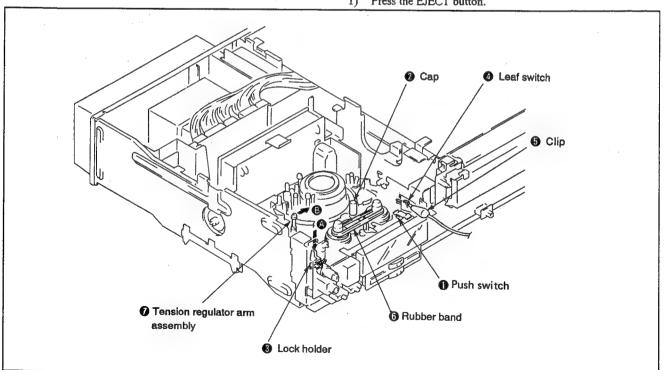


Fig. 7-1.

7-1-2. Handling of Mode Selector

1. Name of individual parts (Exterior)

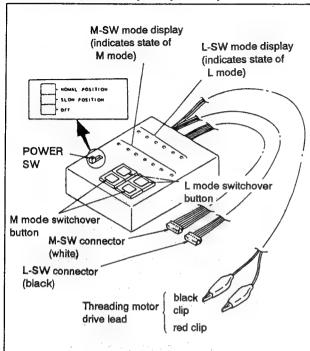


Fig. 7-2.

2. Connection (See Fig. 7-3.)

- Remove the front panel, upper case and bottom plate according to Section 2. DISASSEMBLY 2-1., 2-2.
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16. (Do not disconnect the connectors.)
- Disconnect the connectors on the MS-4 board and LS-9 board (one each).
- Insert the M-SW connector (6P connector, 6 harness, white) 1 into the MS-4 board on the set.
- 5) Insert the L-SW connector (6P connector, 4 harness, black) 2 into the LS-9 board on the set.
- 6) Connect the red clip of the threading motor drive lead (3) to the red lead wire side of the threading motor and the black clip to the brown lead wire side.

3. Caution

- When operating L-SW, be sure to set the M-SW mode to LOADING/UNLOADING.
- When operating M-SW, be sure to set the L-SW mode to LOADING TOP or LOADING END.

4. Handling

BLANK lights up regardless of L MODE or M MODE when it is in neither mode during select.

1) L-MODE

- When the right L-MODE switch button is pressed continuously, the display lights up from LOADING TOP
 → LOADING END, in order in right direction.
- To go from LOADING END

 LOADING TOP, press
 the left switch button continuously until the desired
 MODE is reached.
- In slow position, the L mode operates more slowly than for normal position.

2) M-MODE

- Set L-SW to LOADING TOP before performing EJECT.
- Set L-SW to LOADING END to perform FF/REW → RVS or RVS → FF/REW.
- When the right M-MODE switch button is pressed continuously, the display lights up from EJECT → RVS, in order in right direction.
- To go from RVS → EJECT, press the left switch button continuously until the desired MODE is reached.

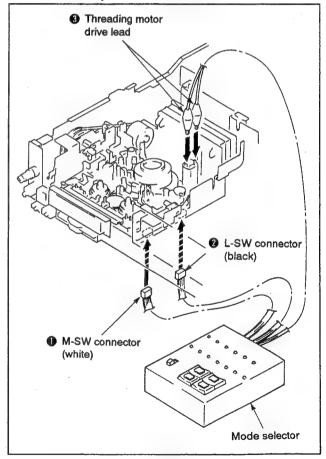


Fig. 7-3.

7-2. PERIODIC CHECK AND MAINTENANCE

Please perform the following periodic checks and maintenance in order to obtain optimum set function and performance, and to keep the mechanism and tape in good condition. Also, perform the maintenance below after repair, regardless of the length of time the set has been used by the user.

7-2-1. Cleaning of Rotary Drum Assembly

 Press a chamois cloth (Ref. No. J-2) soaked in cleaning fluid (Ref. No. J-1) lightly against the rotary drum assembly, and slowly turn the rotary upper drum assembly counterclockwise by hand to clean.

Note: Do not use the power supply to rotate the motor, and do not rotate the motor clockwise by hand.

Also, there is a danger of damaging the head tip if the chamois cloth is moved vertically relative to the head tip (up/down direction of drum), so please follow the instruction above for cleaning.

7-2-2. Cleaning of Tape Path (See Fig. 7-4.)

 Place the LS cassette compartment assembly in EJECT state, and clean the tape path (No. 1 to No. 11 guides, capstan shaft, pinch roller, IP roller guide) with a chamois cloth soaked in cleaning fluid.

7-2-3. Cleaning of Drive System

1) Clean the drive system (timing belt, surface of reel tables) with a cloth soaked in cleaning fluid.

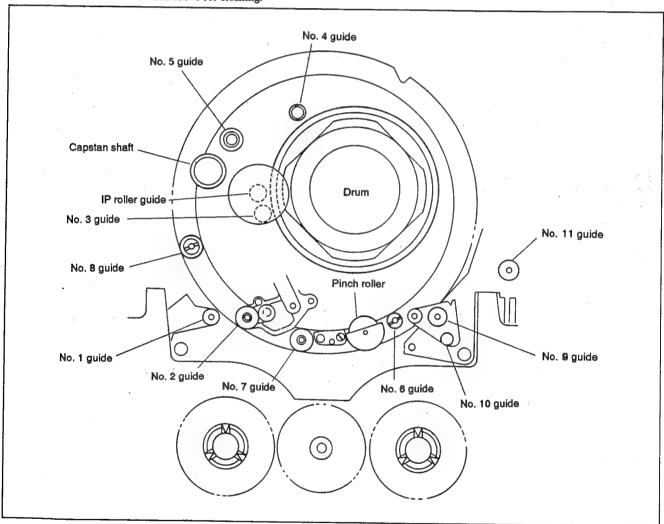


Fig. 7-4.

7-2-4. Periodic Check

Perform following according to number of hours of use.

OCleaning ⊚Lublication ★Replacement ☆Check

		Hours of Use (H)										
Location		500	1,000	1,500	2,000	2,500	3,000	3,500	4,000	4,500	5,000	Notes
96 ti	Cleaning of tape path surface	0	0	- O	0	0	0	0	0	0	0	Be careful of oil
Tape path	Cleaning and degaussing of rotary drum assembly	0	0	0	0	0	0	0	0	0	0	Be careful of oil
	Threading motor belt	0	0	0	0	0	0	0	*	0	0	3-686-546-01 Replace here, or replace every two years.
_	Brake planger	_	_		0		_		0	-	_	1-454-377-31
Drive System	Capstan shaft bearing	-	0	_	0	_	0	_	0	_	0	Be careful not to get oil on the tape path surface.
۵	Threading motor	_	☆	-	☆	-	☆	_	☆	-	☆	A-7040-065-A
Ì	Control motor	_	☆	_	☆	_	⊹☆	_	☆	_	☆	8-835-138-01
	LS motor belt	0	0	0	0	0	0	0	*	0	0	3-713-670-01
	LS motor	-	☆		☆	-	☆	-	☆	_	☆	A-7090-661-A
	Reel motor	-	☆	_	☆	_	☆	-	☆	-	☆	8-835-282-03
	Abnormal noise	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	
Performance Check	Back tension measurement	_	☆	_	☆		☆		☆	_	☆	
formar Check	Brake system	-	☆	-	☆	-	☆		☆	· _	☆	
Perl	FWD, RVS torque measurement	_	☆	_	☆		☆	_	☆	_	☆	

Note: When performing an overhaul, refer to the items above when replacing parts.

Note: Regarding oil

 Be sure to use designated oil. (There is a danger of trouble occurring if a different viscosity is used.)
 Oil: Parts No. 7-661-018-01

(Mitsubishi Diamond Oil hydrofluid EP56)

- Be sure to use clean oil when lubricating the shaft bearing, because there is a danger of wear and burning if dirty oil is used.
- One drop of oil means the amount which sticks to a 2 mm diameter rod, as shown in Fig. (See Fig. 7-5.)

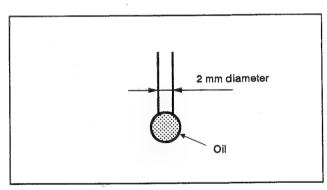


Fig. 7-5.

7-2-5. Service Jig Table

Ref. No.	Name	Part No.Jig	Use	Notes
J-1	Cleaning fluid	Y-2031-001-1		
J-2	Chamois cloth	2-034-697-00		
J-3	Head degausser	Commercially sold		
J-4	Small adjustment mirror, Spare mirror	J-6080-029-A J-6080-030-1	SL-5052	Tape path
J-5	Alignment tape(WR5-7NE)	8-967-995-13		Tape path
J-6	Dial tension gauge	J-6080-827-A		Various torque measurements
J-7	Tension measurement reel	J-6080-831-A		with ϕ 30 tape
J-8	Tension measurement reel	J-6080-832-A		with ϕ 16 string
J-9	No.10 gear phase jig	J-6080-823-A	GD-2047	
J-10	No.6 guide lock screwdriver	J-6080-826-A		
J-11	Rotary drum jig	(packed with the rotary	upper drum	for repair)
J-12	FWD, RVS winding torque cassette	J-6080-824-A	GD-2086	
J-13	Mode selector	J-6080-825-A		for all models
J-14	Track shift & monitor jig	J-6080-843-A		Tape path
J-15	RF/SWP connector	J-6080-883-A		Tape path
J-16	CTL connector	J-6080-884-A		Tape path

Other equipment:

- Oscilloscope
- Analog tester(20 k Ω)

J-1	J-2	J-3	J-4
J-5	J-6	J-7	1-8
J-9	J-10	J-11 (packed with the rotary upper drum for repair)	J-12
J-13	J-14	J-15	J-16

7-3. MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT

Note: • Use the mode selector (Ref. No. J-13) for this mechanical check, adjustment and replacement.

• The mode inside the ____ is the mode set by pressing the mode selector button.

7-3-1. Fly wheel

1. Removal (See Fig. 7-6.)

1) While holding the claws 2 of the IP roller guide 1, remove the fly wheel 3.

2. Mounting (See Fig. 7-6.)

1) With the large hole of the fly wheel 3 down, push onto the IP roller guide 1 until it clicks into place.

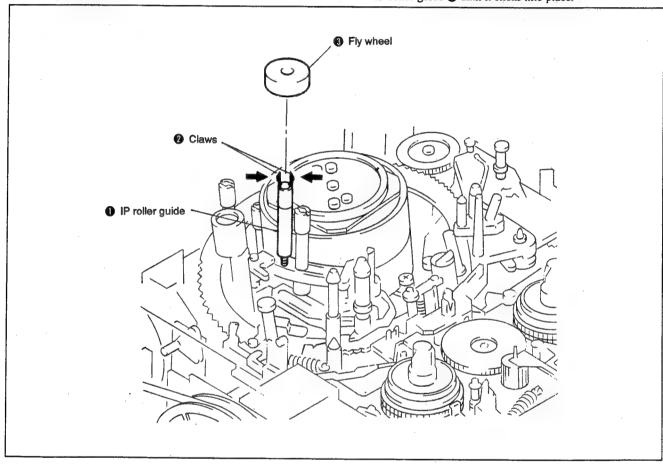


Fig. 7-6.

7-3-2. S Reel Table Assembly

- 1. Removal (See Fig. 7-7.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 2) Set to FF/REW mode.
- 3) Remove screw 1 and remove reel table stopper 2.
- Remove the S reel table assembly (3).
 Note: Be sure to hold the upper reel claw section when removing. (See Fig. 7-7. (Note))
- 2. Mounting (See Fig. 7-7.)
- 1) Put a half drop of oil on the upper spherical part of shaft 4.
- Move the S main brake assembly in the direction of arrow.
- 3) Mount the S reel table assembly (3), being careful not to hit the tension regulator band assembly (6).
- 4) Mount the reel table stopper 2 and tighten with screw 1.
- 5) Set to LOADING/UNLOADING mode.
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.

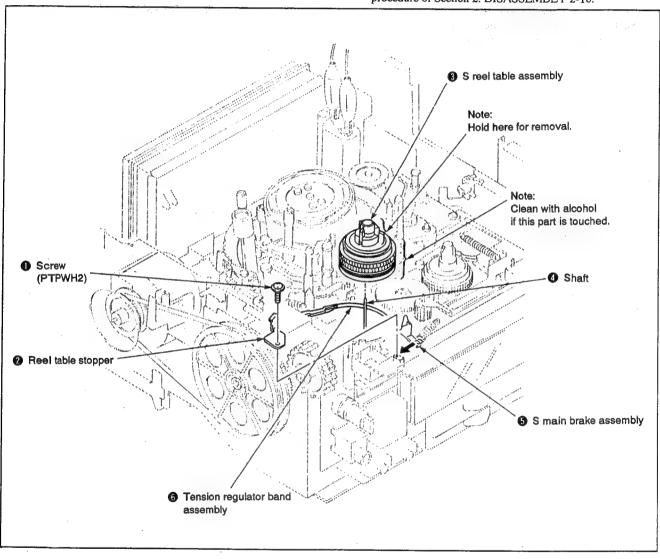


Fig. 7-7.

7-3-3. T Reel Table Assembly

- 1. Removal (See Fig. 7-8.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 2) Set to UNLOADING WAIT mode.
- 3) Hook the spring 2 on the T.S brake assembly 1 to the claw of lock slider assembly.
- 4) Remove the stopper washer 3 and remove the T.S brake assembly 1.
- 5) Set to EJECT mode.
- 6) Move drive gear B assembly 4 in the direction of the arrow.
- 7) Remove T reel table assembly 6.
 - Note: Be sure to hold the upper reel claw section when removing. (See Fig. 7-8. (Note))

- 2. Mounting (See Fig. 7-8.)
- 1) Put a half drop of oil on the upper spherical part of shaft 16.
- 2) Move the drive gear B assembly 4 in the direction of the arrow. (Confirm EJECT mode.)
- 3) Mount the T reel table assembly 6.
- 4) Mount the T.S brake assembly 1 and fix the stopper washer 3.
- 5) Hook the spring 2 to the T.S brake assembly 1 claw.
- 6) Set to LOADING TOP, LOADING/UNLOADING mode.
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.

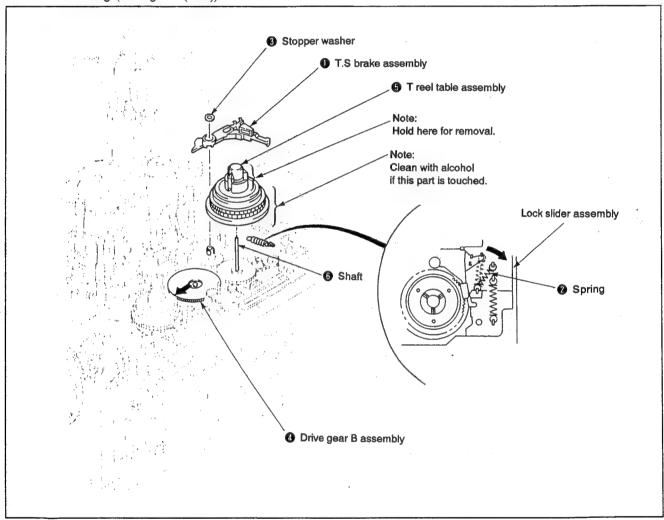


Fig. 7-8.

7-3-4. Pinch Press Arm Assembly

- 1. Removal (See Fig. 7-9.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 2) Hook the spring 1 to the pinch press arm assembly 2.
- 3) Remove the stopper washer 3 and remove the pinch press arm assembly 2.
- 2. Mounting (See Fig. 7-9.)
- 1) Put a half drop of oil on the shaft 4.
- 2) Mount the pinch press arm assembly 2 and fix the stopper washer 3.
- 3) Hook the spring 1 to the tension regulator spring hook assembly 5.
- 4) Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.

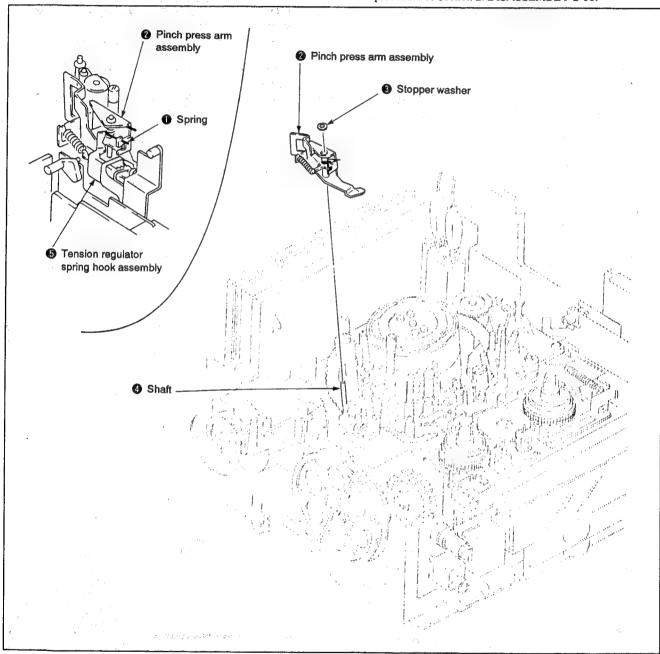


Fig. 7-9.

7-3-5. Tension Regulator Arm Assembly

- 1. Removal (See Fig. 7-10.)
- Remove the mechanism block according to Section 2. DISASSEMBLY 2-15.
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 3) Remove the LS motor belt 1
- Remove the four screws 2 and move the front base 3 in the direction of arrow.
- Change the spring position as described in 7-3-4.
 Removal, 2).
- 6) Remove the tension spring **4**. (Note its hooking position.)
- 7) Remove the screw **5** and remove the tension regulator spring hook assembly **6**.
- 8) Set to FF/REW mode.
- 9) Remove the tension regulator band assembly claw 1.
- 10) Remove the tension regulator arm assembly (3).

- 2. Mounting (See Fig. 7-10.)
- 1) Put a half drop of oil on the shaft **9**.
- 2) Mount the tension regulator arm assembly ③, inserting the tension regulator load arm assembly pin ① in the tension regulator arm assembly ③ cam groove (on the back).
- Mount the tension regulator band assembly claw 1. (Do not touch the band or change its shape.)
- 4) Set to LOADING/UNLOADING mode.
- Mount the tension regulator spring hook assembly (3) and tighten with screw (3).
- Replace the tension spring 4 in its original position and lock the screw.
- 7) Hook the spring according to 7-3-4. 2. Mounting, 3). (See Fig. 7-9.)
- 8) Mount the front base 3 and tighten with four screws 2.
- 9) Mount the LS motor belt 1.
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.
- Mount the mechanism block in opposite procedure of Section 2. DISASSEMBLY 2-15.

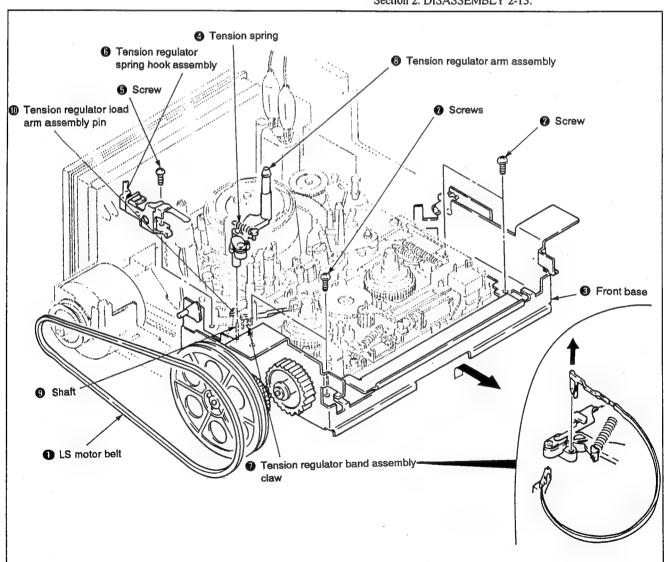


Fig. 7-10.

7-3-6. Tension Regulator Band Assembly

- 1. Removal (See Fig. 7-11.)
- 1) Remove the S reel table assembly according to 7-3-2.
 1. Removal. (See Fig. 7-7.)
- 2) Remove the band arm claw 1.
- 3) Remove the claw 2 and remove the tension regulator band assembly 3.
- 2. Mounting (See Fig. 7-11.)
- 1) Mount the tension regulator band assembly **3**. (Do not touch the band or change its shape.)
- 2) Fit the band arm claw 1.
- 3) Mount the S reel table assembly according to 7-3-2.2. Mounting. (See Fig. 7-7.)
- 4) Perform 7-3-22. FWD Back Tension Adjustment.

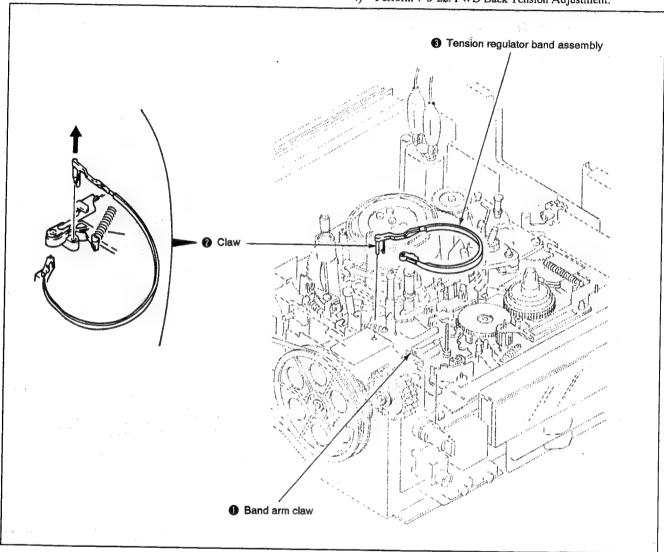


Fig. 7-11.

7-3-7. Threading Motor Assembly

- 1. Removal (See Fig. 7-12.)
- 1) Turn on the power supply and press the power button.
- 2) Press the EJECT button. (Be sure to turn off the power after setting to the EJECT mode. If the power does not come on, eject the tape manually according to Section 2. DISASSEMBLY 2-17.)
- Open the SP-7 board according to Section 2.
 DISASSEMBLY 2-6.
- 4) Remove the connector 2 from the SP-7 board 1.
- 5) Remove the threading motor belt 3.
- 6) Remove the two screws 4.
- 7) Remove the threading motor assembly **5**.

- 2. Mounting (See Fig. 7-12.)
- 1) Mount the threading motor assembly **5** and tighten with the two screws **4**.
- 2) Mount the threading motor belt 3.
- 3) Connect the connector **2** to the SP-7 board **1**.
- Mount the SP-7 board in opposite procedure of Section 2. DISASSEMBLY 2-6.

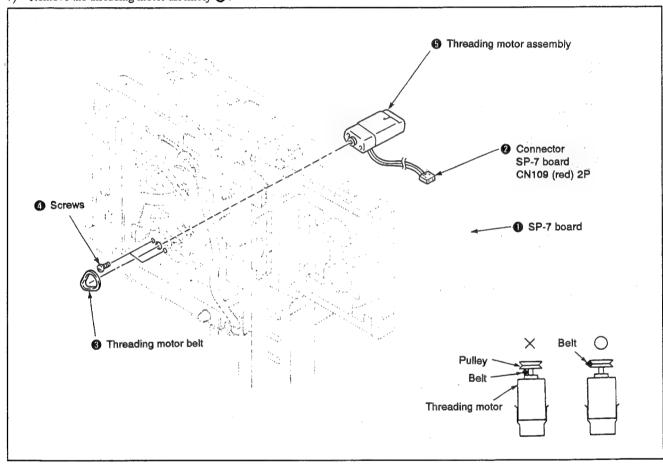


Fig. 7-12.

7-3-8. Threading Ring Assembly

- 1. Removal (See Fig. 7-13.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- Remove the mechanism block according to Section 2. DISASSEMBLY 2-15.
- Operate the mode selector, and move the guide base assembly 10 until just before it locks, and the No. 2 guide assembly 20 until just before it locks where the ring stopper 30 screw is visible.

(Do not move threading ring assembly 10.)

- 4) Remove the stopper washer 4 and remove No. 10 gear 5.
- 5) Remove the screw **6**, and remove the roller stop plate **7** and ring roller **8**.
- Remove the two screws (1), and remove the ring stopper (3) and ring roller (10).
- Remove the threading ring assembly in the direction of arrow.

Note: When removing the threading ring assembly **10**, be sure not to come into contact with the drum.

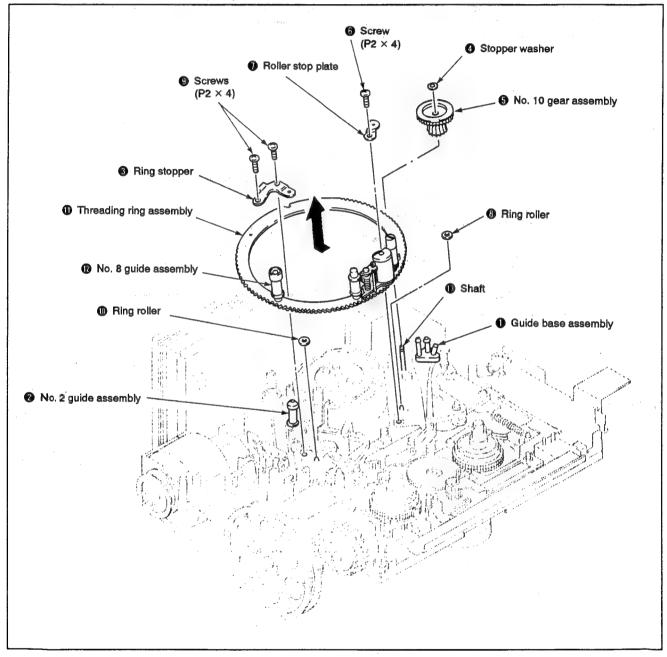


Fig. 7-13.

2. Mounting (See Fig. 7-14.)

- 1) Mount the threading ring assembly ① so that it becomes in the unthreaded state (pinch roller arm assembly is on the front panel side.) (Confirm that it is in the state in Removal, 3).)
- 2) Mount the ring roller ① and ring stopper ③ and tighten with the two screws ⑤ . (No. 8 guide assembly ② should be closer to the front panel than the ring stopper ③ .)
- 3) Mount the ring roller 3 and roller stop plate 1 and tighten with screw 3. (Confirm that the threading ring assembly matches the three ring rollers.)
- 4) Put a half drop of oil on the shaft 13.
- Check that the protrusions on the drive changer assembly are in the indentations of the L-SW assembly and insert the No. 10 gear phase jig (Ref. No. J-9).

- 6) Mount No. 10 gear assembly 3 and fix stopper washer 4 while pushing the No. 8 guide assembly 12 against the ring stopper 3.
- 7) Pull out the No. 10 gear phase jig.
- 8) Set to LOADING TOP mode.
- 9) Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.
- 10) Mount the mechanism block in opposite procedure of Section 2. DISASSEMBLY 2-15.

Note: Be sure to perform 7-4. TAPE PATH ADJUSTMENT after mounting.

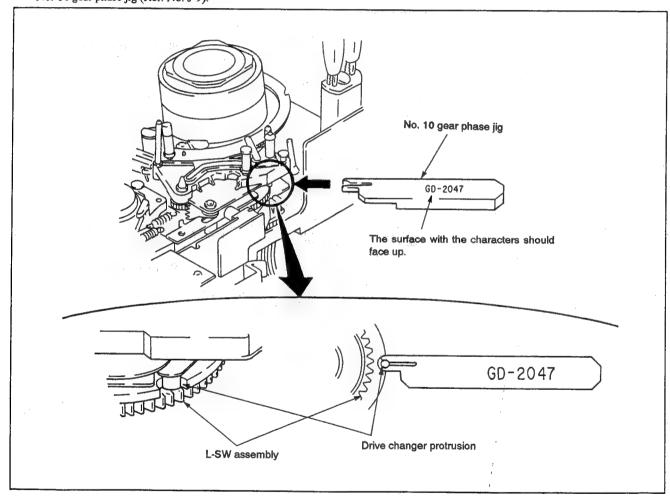


Fig. 7-14.

7-3-9. Pinch Roller Arm Assembly

- 1. Removal (See Figs. 7-15. through 7-19.)
- Remove the threading ring assembly according to 7-3-8.
 Removal. (See Fig. 7-13.)
- 2) Remove the stopper washer ①. (See Fig. 7-15.)
- Change the position of the torsion spring 3 on No. 7 guide assembly 2. (See Fig. 7-16.)
- 4) Turn the pinch roller arm assembly 4 in the direction of arrow. (See Fig. 7-17.)
- 5) Remove the pinch roller arm assembly 4 in the direction of arrow. (See Fig. 7-18.)
- 6) Remove the torsion spring 3. (See Fig. 7-19.)

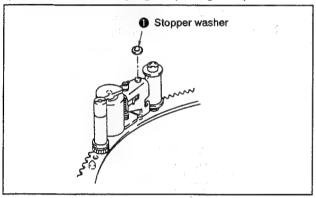


Fig. 7-15.

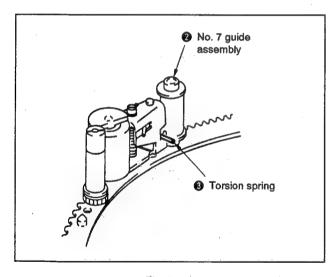


Fig. 7-16.

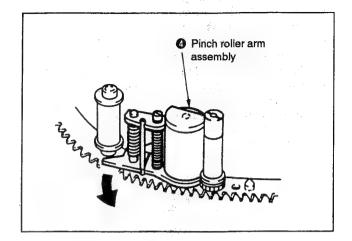


Fig. 7-17.

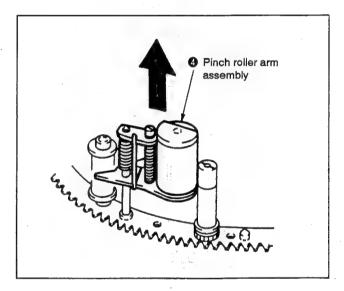


Fig. 7-18.

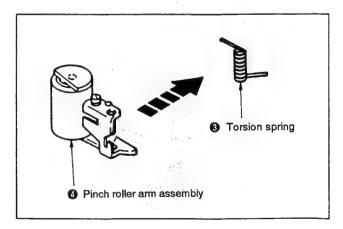


Fig. 7-19.

- 2. Mounting (See Figs. 7-20. through 7-26.)
- 1) Hook the torsion spring 3. (See Fig. 7-20.)
- 2) Insert the clip **5** or another thin rod inside the pinch roller arm assembly hole **6**. (See Figs. 7-21. and 7-22.)
- 3) Put the end of the clip 6 to the threading ring assembly shaft 7 and mount the pinch roller arm assembly 6. (See Figs. 7-23. and 7-24.)
- Hook the torsion spring on No. 7 guide assembly 2. (See Fig. 7-25.)
- 5) Fix the stopper washer ①. (See Fig. 7-26.)
- 6) Mount the threading ring assembly according to 7-3-8.
 2. Mounting. (See Fig. 7-13.)

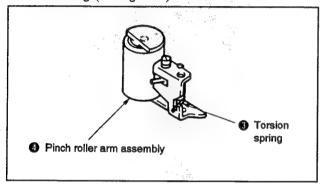


Fig. 7-20.

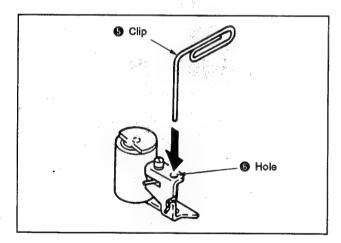


Fig. 7-21.

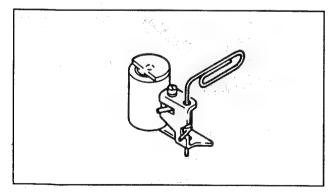


Fig. 7-22.

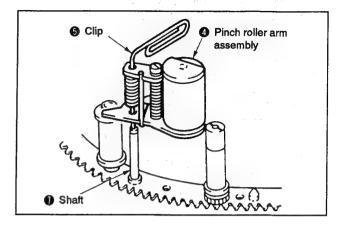


Fig. 7-23.

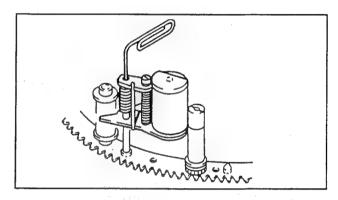


Fig. 7-24.

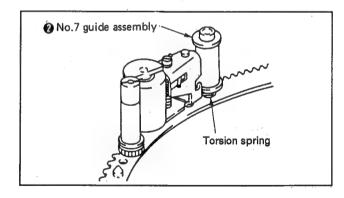


Fig. 7-25.

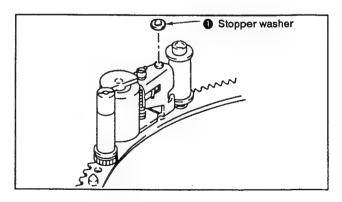


Fig. 7-26.

7-3-10. Slant Guide Chassis Assembly

- 1. Removal (See Fig. 7-27.)
- Remove the threading ring assembly according to 7-3-8.
 Removal. (See Fig. 7-13.)
- 2) Remove screw 1 and E ring 2.
- 3) Remove the slant guide chassis assembly 3.

- 2. Mounting (See Figs. 7-27. through 7-29.)
- Operate the mode selector, and line up the right edge of the L slider assembly and the right edge of the lock slider assembly. (See Fig. 7-28.)
- 2) Set the slant guide chassis assembly guide base assembly in unthreaded state (guide base assembly is on front panel side) and mount. (See Fig. 7-29.)

Note: At this time, check the engagement position of the slant guide driving gear and L slider section assembly gear. (See Fig. 7-33.)

- 3) Insert the E ring 2 and tighten with screw 1.
- 4) Put in the state in 7-3-8. 1. Removal, 3).
- Mount the threading ring assembly according to 7-3-8.Mounting. (See Figs. 7-13. and 7-14.)

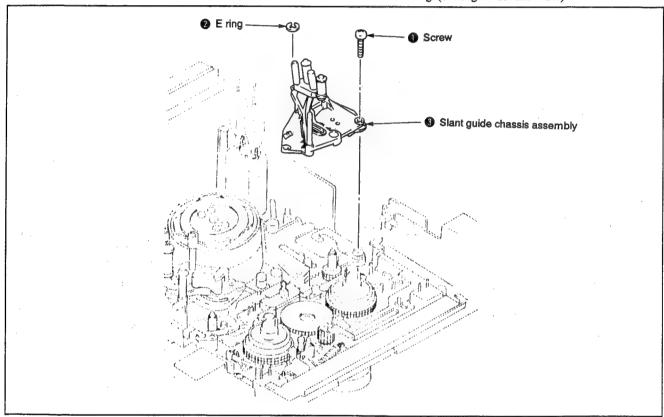


Fig. 7-27.

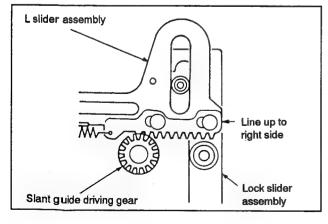


Fig. 7-28.

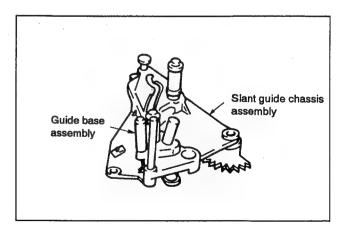


Fig. 7-29.

7-3-11. Entrance Guide Assembly (No. 2 Guide Assembly)

- 1. Removal (See Fig. 7-30.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 2) Turn the rotary upper drum counterclockwise, so that the head section dose not touch the entrance guide assembly 1.
- 3) Remove the fly wheel according to 7-3-1. 1. Removal. (See Fig. 7-6.)
- 4) Remove No. 3 guide nut **(2)**, and remove guide flange **(3)**, guide **(4)** and compression spring **(5)**.
- 5) Remove the two screws 6.
- 6) Remove the entrance guide assembly 1.

- 2. Mounting (See Fig. 7-30.)
- 1) Engage the lower side of the entrance guide assembly and L slider assembly with their flat portions (a) and (b) as shown.
- 2) Tighten the two screws 6.
- 3) Mount the compression spring 5, guide 4 and guide flange 3 in that order and then temporarily tighten the guide nu 2.
- 4) Mount the fly wheel according to 7-3-1. 2. Mounting. (See Fig. 7-6.)
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.

Note: Be sure to perform 7-4. TAPE PATH ADJUSTMENT after mounting.

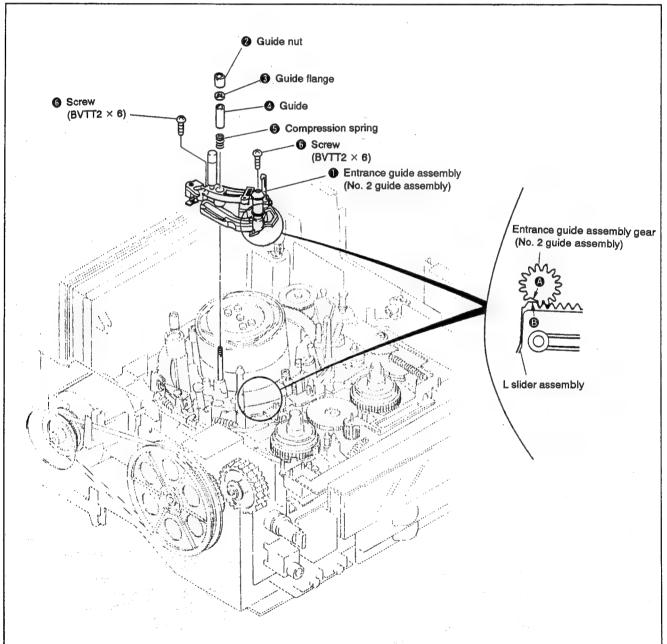


Fig. 7-30.

7-3-12. L Slider Assembly

- 1. Removal (See Fig. 7-31.)
- Remove the slant guide chassis assembly according to 7-3-10. 1. Removal.
- Remove the entrance guide assembly according to 7-3-11.
 Removal.
- 3) Set to DRUM START mode.
- 4) Remove the slant guide driving gear 1.
- Remove the tension regulator load arm assembly pin from the cam groove of the tension regulator arm assembly. (See 7-3-5. Tension regulator arm assembly.)
- 6) Remove the two stopper washers 3.
- 7) Remove the L slider assembly 6 while pushing the RL arm assembly knob 4 in the direction of arrow.
- Remove the stopper washer 6 and remove the tension regulator load arm assembly 2.

- 2. Mounting (See Figs. 7-31, through 7-33.)
- 1) Grease. (See Fig. 7-32.)
- 2) Mount the tension regulator load arm assembly 2 and fix the stopper washer 6.
- Mount the L slider assembly 6 while pushing the RL arm assembly knob 6 in the direction of arrow.
- 4) Insert the pin of the tension regulator load arm assembly 2 into the groove of the M slider. (See 7-3-16, M Slider)
- 5) Mount the two stop washers 3
- 6) Refer to 2) of 7-3-5. 2. Mounting and insert the pin of the tension regulator load arm assembly ② into the cam groove of the tension regulator arm assembly. (See Fig. 7-10.)
- Operate the mode selector and line up the right sides of the L slider assembly and lock slider assembly. (See 1) of 7-3-10. 2. Mounting.)
- Shift the notch section of the slant guide driving gear one tooth from the leftmost tooth of the L slider assembly, and engage. (See Fig. 7-33.)
- Mount the entrance guide assembly according to 7-3-11.
 Mounting.
- 10) Mount the slant guide assembly according to 7-3-10.2. Mounting.

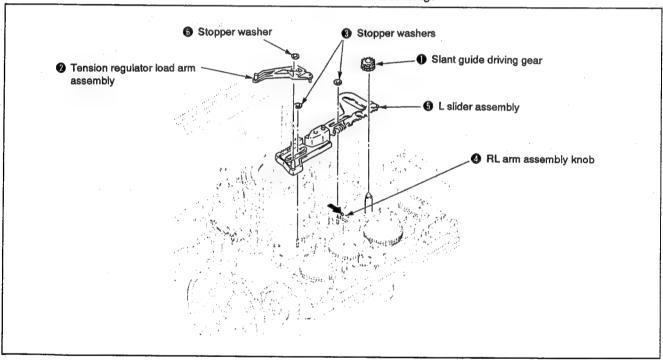


Fig. 7-31.

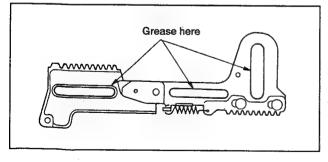


Fig. 7-32.

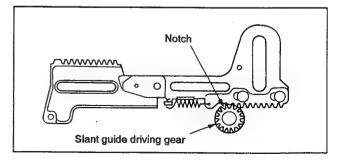


Fig. 7-33.

7-3-13. L-SW Assembly

- 1. Removal (See Fig. 7-34.)
- Remove the L slider assembly according to 7-3-12.
 Removal.
- 2) Remove the lock slider retainer 1.
- 3) Remove the screw 2 and lock slider A 3.
- 4) Remove the stopper washer 4 and remove torsion spring 5.
- 5) Remove the drive change assembly 6.
- 6) Remove the connector **1**.
- 7) Remove the two screws (3) and remove the L-SW assembly (3).

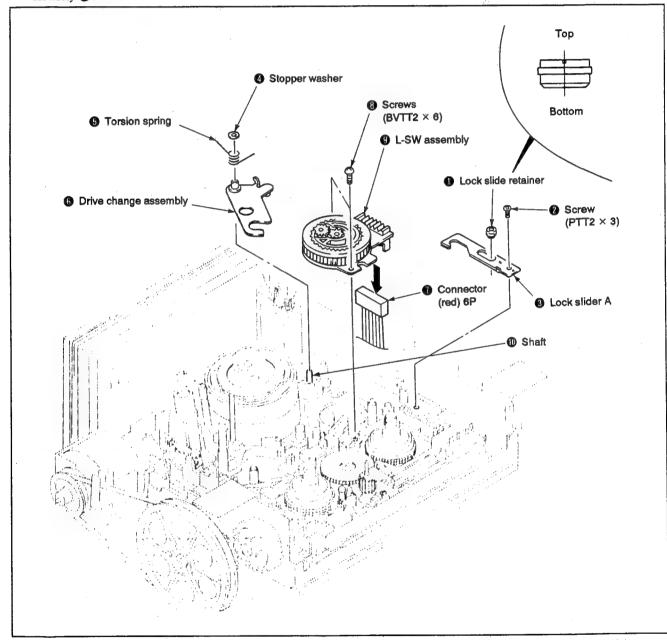


Fig. 7-34.

- 2. Mounting (See Figs. 7-34. through 7-36.)
- 1) Put a half drop of oil on the L-SW assembly (9) shaft (planetary roller shaft).
- 2) Mount the L-SW assembly **9** and tighten with the two screws **3**.
- 3) Connect the connector 1.
- 4) Operate the mode selector and confirm that the L-SW assembly (9) rotates.
- 5) Put a half drop of oil on the shaft 10.
- 6) Grease the drive change assembly 6 . (See Fig. 7-35.)
- 7) Mount the drive change assembly 6.
- 8) Hook the torsion spring 6 and fix the stopper washer 4.
- Operate the mode selector and confirm that the L-SW assembly 9 rotates.
- 10) Mount the lock slider A 3 and tighten with the screw 2.
- 11) Mount the lock slider retainer 1.
- 12) Operate the mode selector and set to the position in Fig. 7-36.
- 13) Mount the L slider assembly according to 7-3-12.2. Mounting.

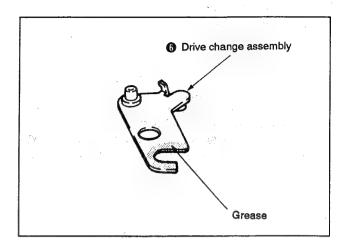


Fig. 7-35.

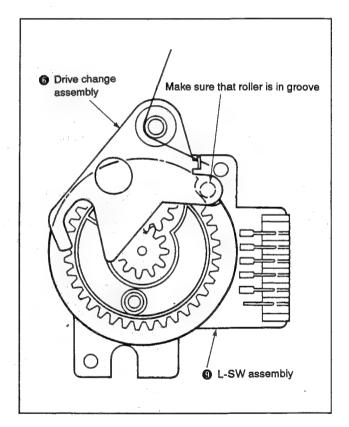


Fig. 7-36.

7-3-14. Brake Plunger

- 1. Removal (See Fig. 7-37.)
- Open the SP-7 board according to Section 2. DISASSEMBLY 2-6, then remove the CN018 connector (white) 3P.
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 3) Remove the tension spring 1.
- 4) Remove the two stopper washers 2.
- 5) Remove the screw 3 and remove lock slider L assembly 4.
- 6) Remove the two screws and remove the brake plunger . (At this time, be sure not to touch or damage the T reel table assembly with a screwdriver.)

- 2. Mounting (See Fig. 7-37.)
- Insert the brake plunger pin into the P arm hole and mount with the two screws.
 (At this time, be sure not to touch or damage the T reel table assembly with a screwdriver.)
- 2) Mount lock slider L assembly 4 and fix with screw 3.
- 3) Fix the two stopper washers 2.
- 4) Hook the tension spring 1.
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.
- 6) Connect the CN018 connector (white) 3P to the SP-7 board.
- Mount the SP-7 board in opposite procedure of Section 2. DISASSEMBLY 2-6.

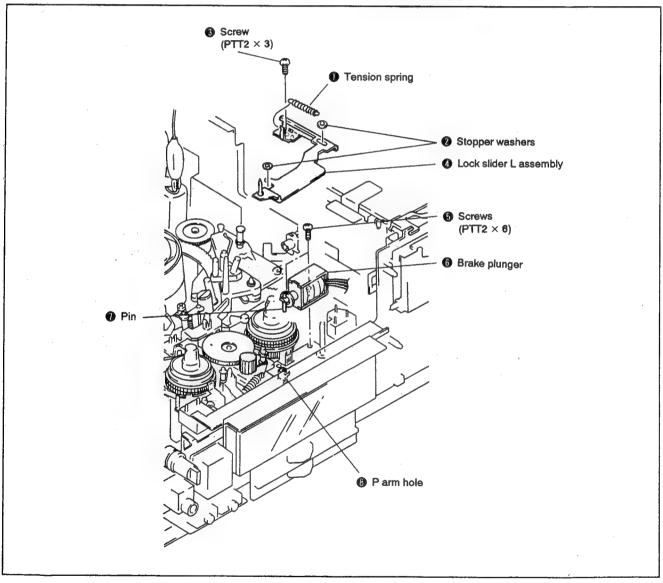


Fig. 7-37.

7-3-15. M-SW Assembly

- 1. Removal (See Figs. 7-38, and 7-39.)
- 1) Remove the T reel table assembly according to 7-3-3. (See Fig. 7-8.)
- Remove stopper washer
 and remove the driving gear B
 assembly
 .
- 3) Remove the LD-1 board 3. (See Fig. 7-38.)
- 4) Remove lock slider L assembly according to 7-3-14. 1. Removal, 3) to 5).
- 5) Remove the tension spring 4 and remove B release arm 5.
- 6) Confirm that EJECT mode is set.
- 7) Remove stopper washer **6** and remove the mode output gear **6**.
- 8) Remove the two claws ① of the control motor cover L ②, and remove the push switch ⑩.
- 9) Disconnect connector 1.
- 10) Remove three screws **10**, and remove the control motor cover L **13** and the M-SW assembly **13**.
- 11) Remove solder (A) and remove the DC motor (B).

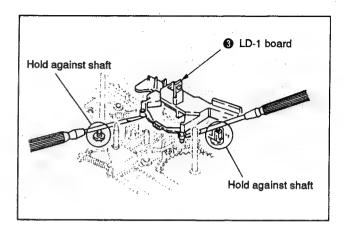


Fig. 7-38.

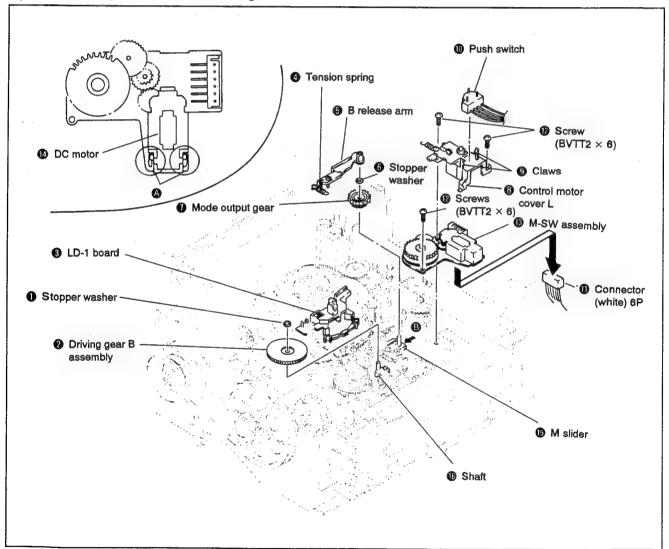


Fig. 7-39.

2. Mounting (See Figs. 7-39. and 7-40.)

- 1) Solder the DC motor 1.
- 2) Mount the M-SW assembly B and the control motor cover L 0, and tighten with the three screws D.
- 3) Connect the connector 1.
- 4) Mount the push switch 10.
- 5) Confirm EJECT mode is set.
- Confirm that M slider is moved fully in the direction of arrow is.
- 7) Put a half drop of oil on the shaft **6**. (See Fig. 7-41.)
- 8) Mount the mode output gear ① so that the positioning holes are lined up. (See Fig. 7-40.)

- 9) Fix stopper washer 6.
- 10) Set to LOADING/UNLOADING mode.
- 11) Mount the B release arm 3 and hook the tension spring 4.
- 12) Mount the lock slider L assembly according to 7-3-14.2. Mounting, 2) to 4).
- 13) Mount the LD-1 board 3.
- 14) Mount the driving gear B assembly ② and fix the stopper washer ①.
- 15) Mount the T reel table assembly according to 7-3-3.2. Mounting.

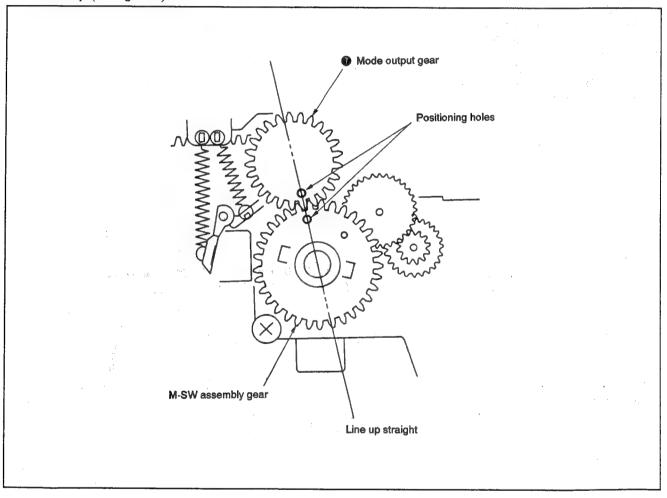


Fig. 7-40.

7-3-16. M Slider

- 1. Removal (See Fig. 7-41.)
- Remove the pinch press arm assembly according to 7-3-4.
 Removal. (See Fig. 7-9.)
- Remove the tension regulator arm assembly according to 7-3-51, Removal. (See Fig. 7-10.)
- 3) Remove the tension regulator band assembly according to 7-3-6.1. Removal. (See Fig. 7-11.)
- Remove the threading ring assembly according to 7-3-8.
 Removal. (See Fig. 7-13.)
- 5) Perform 7-3-15. 1. Removal, 1) to 5). (See Figs. 7-38. and 7-39.)
- Remove the tension regulator load arm assembly according to 7-3-12.
 Removal, 8). (See Fig. 7-31.)
- 7) Remove the tension spring 1.
- 8) Remove the two stopper washers ② and remove the S main brake assembly ③ and the T main brake assembly ④.

- 9) Set to LOADING TOP and LOADING/UNLOADING modes.
- 10) Remove the two screws 3 and the driving complete assembly 6.
- 11) Perform 7-3-15. 1. Removal, 6). and 7). (See Fig. 7-39.)
- 12) Remove the two tension springs 1.
- 13) Remove the REW brake assembly (3).
- 14) Remove the stopper washer and remove the B release slider .
- 15) Remove stopper washer **(1)**, and remove the ring lock spring **(2)** and RL arm **(3)**.
- 16) Move the M slider 10 to the right. (Leave about 5 mm at the left.)
- 17) Remove the E ring 19 and remove the pinch press lever assembly 16.
- 18) Remove the spring **1** and remove the hard brake S **1**.
- 19) Remove the stopper washer ① , push the mode arm ② in the direction of the arrow, and lift up the left side of the M slider ② to remove.

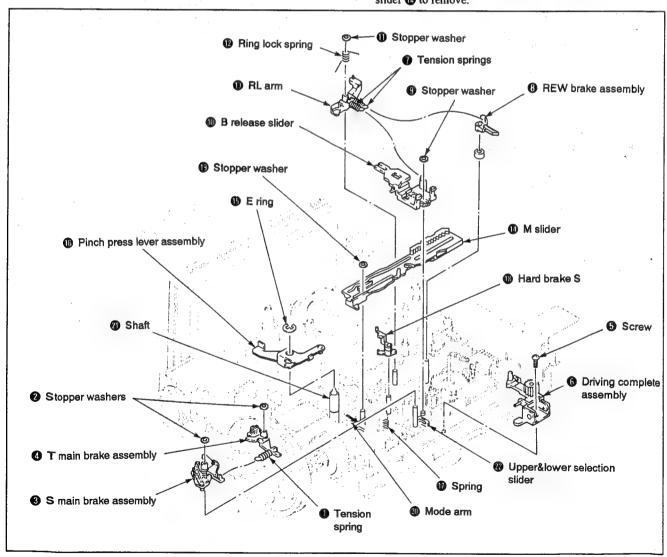


Fig. 7-41.

- 2. Mounting (See Figs. 7-41. through 7-44.)
- 1) Grease. (See Fig. 7-42.)
- 2) Push mode arm **②** in the direction of the arrow, and mount the M slider **③**, noting the positioning of the other parts in Fig. 7-45, and fix the stopper washer **③**.
- 3) Mount the hard brake S (B) and hook the spring (D).
- 4) Grease. (See Fig. 7-44.)
- 5) Put a half drop of oil from the shaft 1 groove to the bottom, mount the pinch press lever assembly 1 and insert the E ring 1.
- 6) Mount the RL arm (3), hook the ring lock spring (2) and fix the stopper washer (1).
- 7) Mount the B release slider **(1)** and fix stopper washer **(9)**.
- 8) Mount the REW brake assembly 3.
- 9) Hook the two tension springs 1.

Note: Hook the two springs as follows, being careful not to mix them up.

- B release slider spring:
 - ····· total diameter 2 mm, wire diameter 0.18 mm
- REW brake assembly spring:
 - ····total diameter 1.6 mm, wire diameter 0.12 mm
- 10) Move the M slider @ fully to the left.
- 11) Perform 7-3-15. 2. Mounting, 7), 8) and 9).
- 12) Set to LOADING/UNLOADING mode.
- 13) Insert the driving complete assembly (6) horizontal shaft into the upper & lower selection slider (7) groove, and mount with the two screws (6).
- 14) Mount the T main brake assembly ② and S main brake assembly ③ . Fix the two stopper washers ② to one assembly each and hook the tension spring ①.
- 15) Mount the tension regulator load arm assembly according to 7-3-12. 2. Mounting, 2).
- 16) Perform 7-3-15. 2. Mounting, 11) to 15).
- 17) Mount the threading ring assembly according to 7-3-8. 2. Mounting.
- 18) Mount the tension regulator band assembly according to 7-3-6. 2. Mounting.
- 19) Mount the tension regulator arm assembly according to 7-3-5. 2. Mounting.
- 20) Mount the pinch press arm assembly according to 7-3-4.2. Mounting.

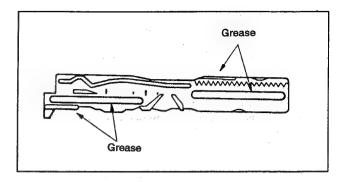


Fig. 7-42.

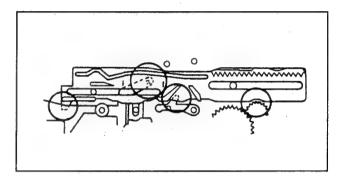


Fig. 7-43.

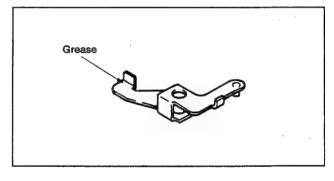


Fig. 7-44.

7-3-17. Capstan Motor

- 1. Removal (See Fig. 7-45.)
- Remove the threading ring assembly according to 7-3-8.
 Removal. (See Fig. 7-13.)
- 2) Open the SP-7 board according to Section 2. DISASSEMBLY 2-6.
- 3) Remove the connector 1 from the SP-7 board.
- 4) Remove the connector 2 from the RS-17 board.
- Remove the two screws 3 and remove the rotor holding plate 4.
- 6) Remove the two screws **6** and remove the capstan motor **6** in the direction of the arrow.

- 2. Mounting (See Fig. 7-45.)
- 1) Mount the capstan motor 6 and tighten with two screws 6.
- 2) Mount the rotor holding plate 4 and fix with two screws 3.
- 3) Connect the connector 1 to the SP-7 board and connector 2 to the RS-17 board.
- 4) Mount the threading ring assembly according to 7-3-8.2. Mounting. (See Figs. 7-13 and 7-14.)
- Mount the SP-7 board in opposite procedure of Section 2. DISASSEMBLY 2-6.

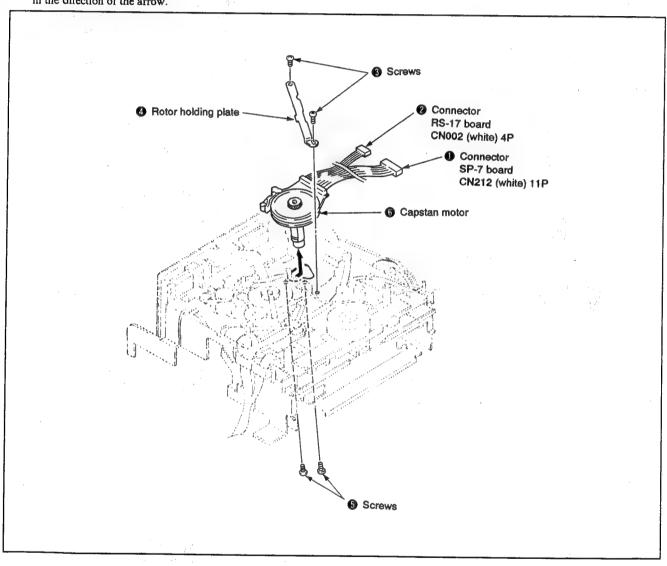


Fig. 7-45.

7-3-18. Replacement of Rotary Upper Drum

1. Removal

- · If recording is possible, remove after recording.
- Remove the fly wheel according to 7-3-1. 1. Removal.
- Remove the two hexagonal bolt screws 1, and remove the dynamic damper 2. (See Fig. 7-46.)
- 3) Remove all ten solders in section (A) and confirm that the board and the pins on the bottom can move freely, using tweezers or the like. (See Fig. 7-46.)
- 4) Remove the two screws (M2 × 5) 3. (See Fig. 7-46.)
- 5) Mount the jig (B) (Ref. No. J-11) by inserting the two supplied screws (4) into the screw holes where the dynamic damper was mounted, tighten the supplied hexagonal socket screw (5) into the jig (B), and remove the rotary upper drum (6). (See Fig. 7-47.)

Repair rotary upper drum assembly DGR-35-R A-7049-188-A

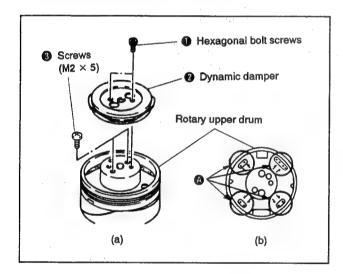


Fig. 7-46.

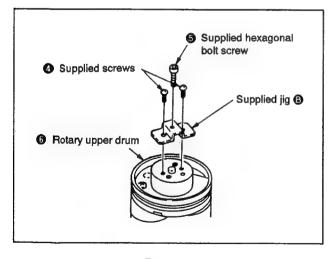


Fig. 7-47.

2. Mounting

- Clean the flange surface and the surface of the rotary upper drum which contacts it, and confirm that there is no dirt or scratches.
- 2) Lightly push in the rotary upper drum while using the jig (Ref. No. J-11) to line up the rotary upper drum (3) and positioning holes (3). Confirm that the pins are above the board hole of the rotary upper drum at this time. Use tweezers, etc. for correction if the pins catch. (See Fig. 7-48.)
- 3) Remove jig **(6)** and push the rotary upper drum in by hand, lightly. (See Fig. 7-49.) When it is not inserted all the way, tighten the two screws (M2 × 5) **(3)** alternately to temporarily fix it.
- 4) Insert jig **(c)** into the positioning hole **(d)** again and confirm that it goes in smoothly. If not, loosen the two screws (M2 × 5) **(d)** and adjust it by inserting a precision screwdriver into the hole.
- 5) Tighten the two screws $(M2 \times 5)$ 3.

Note: Be careful not to tighten too much.

Solder the pins in section (A). (See Fig. 7-46.)

Note: Be careful that the solder does not go under the

 Mount the dynamic damper with two hexagonal bolt screws 1. (See Fig. 7-46.)

Note: Be careful not to tighten too much.

8) Mount the fly wheel according to 7-3-1. 2. Mounting.

Note: After mounting, be sure to perform 7-4. TAPE PATH ADJUSTMENT.

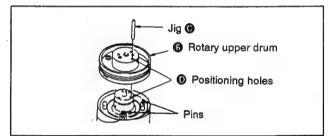


Fig. 7-48.

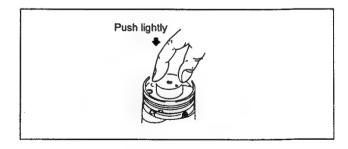


Fig. 7-49.

7-3-19. Drum Assembly Replacement [Precautions for mounting the drum assembly]

- When using a magnetized screwdriver for mounting the drum assembly, attach in the position shown in the diagram below to prevent the magnetized screwdriver from affecting the head tip position.
- After mounting, be sure to perform 7-4. TAPE PATH ADJUSTMENT.

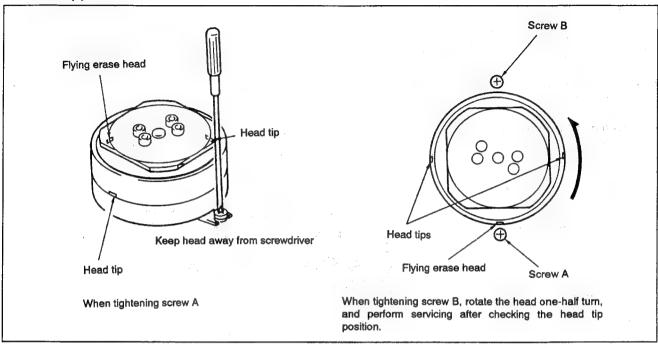


Fig. 7-50.

- 1. Removal (See Fig. 7-51, and 7-52.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY, 2-16.
- Open the SP-7 board according to Section 2. DISASSEMBLY, 2-6.
- 3) Remove the fly wheel according to 7-3-1. 1. Removal
- 4) Remove the screw 1 and remove the shaft ground terminal 2. (See Fig. 7-51.)
- 5) Remove the three connectors 3.
- 6) Remove the two screws 4.
- 7) Remove the drum assembly 6.

Note: Make sure that the drum assembly does not come into contact with the No. 3 guide and IP roller guide, etc., at this time.

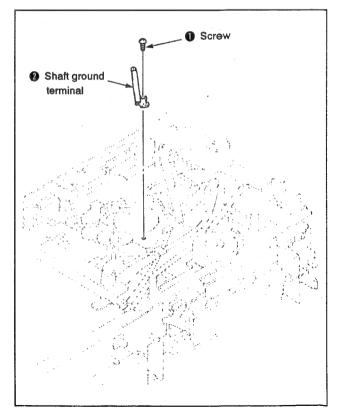


Fig. 7-51.

2. Mounting (See Fig. 7-51. and 7-52.)

- 1) Mount the drum assembly 6 with the two screws 4.
- 2) Connect the three connectors 3.
- 3) Mount the shaft ground terminal ② with the screw ①. (See Fig. 7-51.)
- 4) Mount the fly wheel according to 7-3-1. 2. Mounting.
- 5) Mount the SP-7 board by the opposite procedure of Section 2. DISASSEMBLY, 2-6.
- 6) Mount the LS cassette compartment assembly by the opposite procedure of Section 2. DISASSEMBLY, 2-16.

Note: After mounting, be sure to perform 7-4. TAPE PATH ADJUSTMENT.

Drum Assembly for Repair DGH-35A-R A-7048-201-A

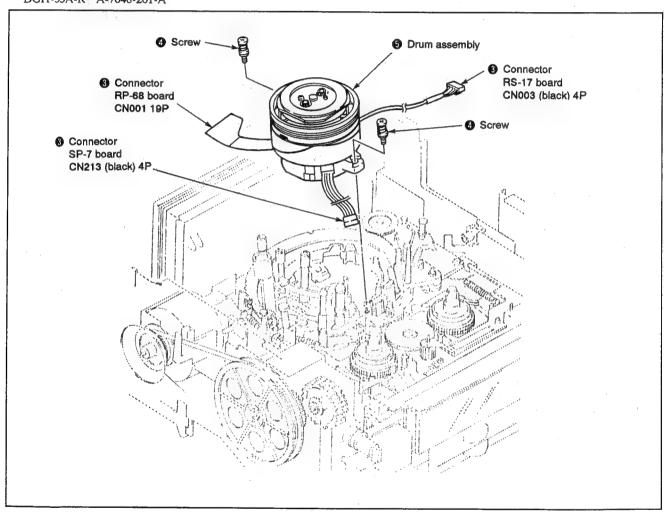


Fig. 7-52.

7-3-20. Adjustment after Replacement of No. 3 Guide and No. 4 Guide

For replacement of both No. 3 and No. 4 guides, line up the tape along the upper flange after replacing.

7-3-21. No. 5 Guide Assembly

- 1. Removal (See Fig. 7-53.)
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- 2) Remove the fly wheel according to 7-3-1. 1. Removal.
- Remove the three screws 1 and remove the No. 5 guide assembly.
- Remove the guide nut 2 and remove No. 5 guide boss 3,
 No. 5 guide flange 3, No. 5 guide 3 and compression spring 3.

2. Mounting (See Fig. 7-53.)

- 1) Mount the compression spring 6, No. 5 guide 6, No. 5 guide flange 4 and No. 5 guide boss 3 to the No. 5 guide shaft 1, and tighten the guide nut 2.
- 2) Mount the No. 5 guide assembly and tighten with the three screws 1.
- 3) Mount the fly wheel according to 7-3-1. 2. Mounting.
- Mount the LS cassette compartment assembly in opposite procedure of Section 2. DISASSEMBLY 2-16.

Note: Be sure to perform 7-4. TAPE PATH ADJUSTMENT after mounting.

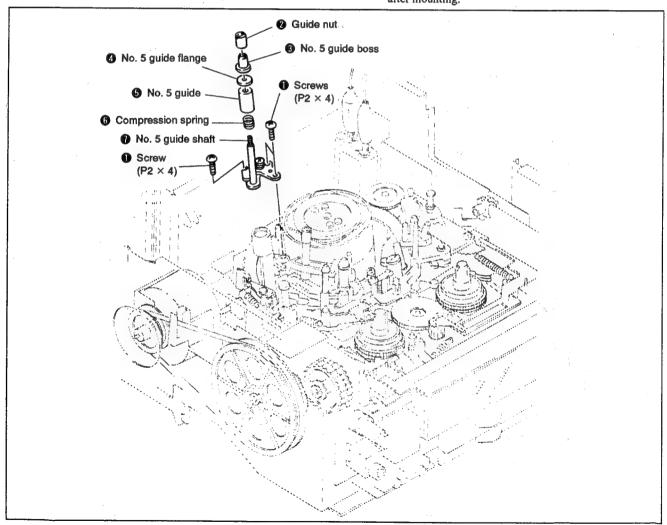


Fig. 7-53.

7-3-22. FWD Back Tension Adjustment (See Fig. 7-54.)

- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.
- Remove the mechanism block according to Section 2. DISASSEMBLY 2-15.
- 3) Set to LOADING END, FWD modes.
- 4) Loosen band adjustment plate \bullet screw 2 and move the band adjustment plate \bullet in the direction of arrow \bullet . And confirm the range of movement θ for No. 1 guide.
- 5) Tighten the screw 2 so that the position of No. 1 guide cap is $1/3 \theta$
- 6) Place the tension measurement reel (Ref. No. J-7) on the S reel table assembly and set the tape along No. 1 guide, No. 2 guide, No. 3 guide, IP roller guide and the drum.
- 7) Pull the dial tension gauge (Ref. No. J-6) (3) in the direction of arrow (3) and hook the spring (7) onto the tension regulator spring hook assembly (6) so that the value becomes 13.0 ± 1g, as shown below.

Value too large: arrow (a) direction Value too small: arrow (b) direction

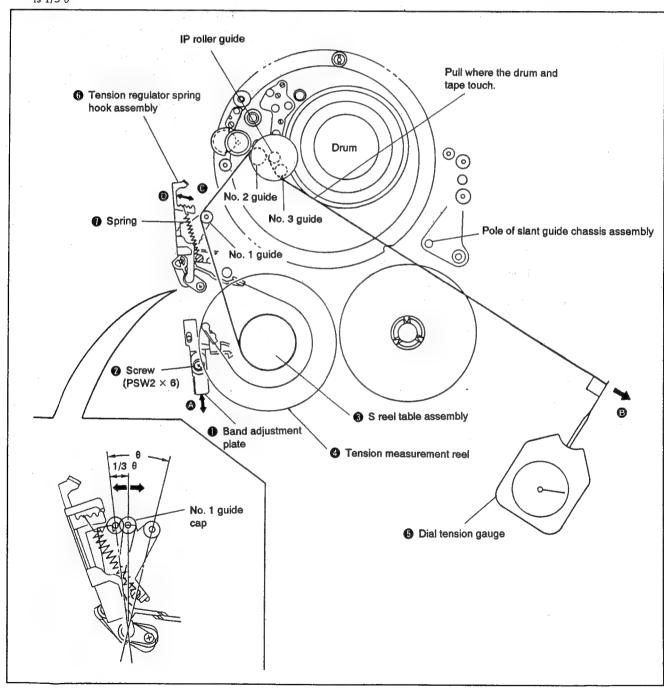


Fig. 7-54.

7-3-23. Reel Motor Replacement

- 1. Removal (See Fig. 7-55.)
- 1) Open the SP-7 board according to Section 2. DISASSEMBLY, 2-6.
- 2) Remove the two screws 1 and remove the reel motor bracket 2.
- 3) Remove the connector 3.
- 4) Remove the three screws 4 and remove the reel motor 5 in the direction of arrow.
- 2. Mounting (See Fig. 7-55.)
- 1) Mount the reel motor **5** to the reel motor bracket **2** with the three screws **4**.
- 2) Mount the connector 3.
- 3) Mount the reel motor assembly with the two screws 1.
- Mount the SP-7 board by the opposite procedure of Section 2. DISASSEMBLY, 2-6.

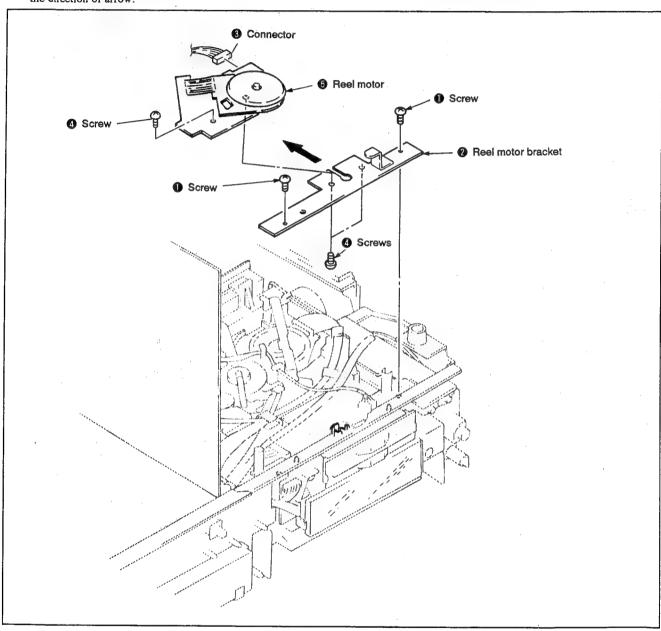


Fig. 7-55.

7-3-24. Check of S and T Main Brake Torques

- Remove the front panel according to Section 2. DISASSEMBLY 2-2.
- 2) Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16,

1. S main brake torque (See Figs. 7-56. and 7-57.)

- 1) Set to FF/REW mode.
- Place the tension measurement reel (Ref. No. J-8) on the S reel table.
- Pull the dial tension gauge (Ref. No. J-6) in the direction of the arrow and confirm that the specifications are satisfied.

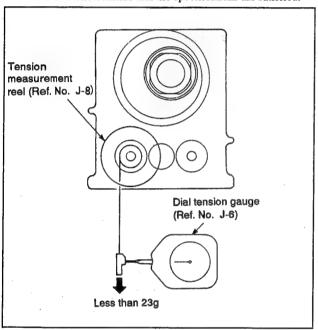


Fig. 7-56.

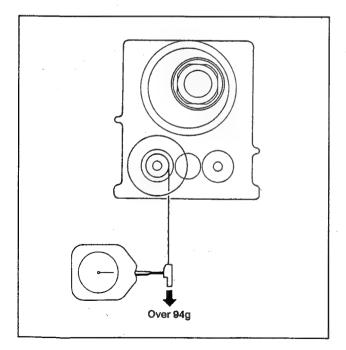


Fig. 7-57.

2. T main brake torque (See Figs. 7-58. and 7-59.)

- 1) Set to FF/REW mode.
- Place the tension measurement reel (Ref. No. J-8) on the T reel table.
- 3) Pull the dial tension gauge (Ref. No. J-6) in the direction of the arrow and confirm that the specifications are satisfied.

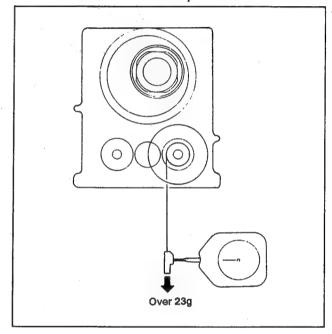


Fig. 7-58.

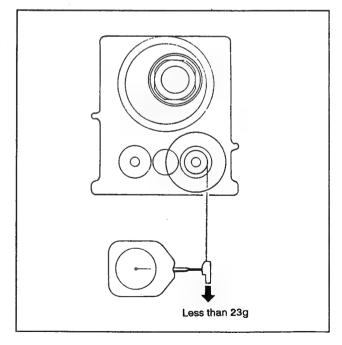


Fig. 7-59.

7-3-25. Check of S and T Soft Brake Torques

- Remove the front panel according to Section 2. DISASSEMBLY 2-2.
- Remove the LS cassette compartment assembly according to Section 2. DISASSEMBLY 2-16.

1. S soft brake torque (See Fig. 7-60.)

- 1) Set to FF/REW mode.
- Place the tension measurement reel (Ref. No. J-8) on the S reel table.
- 3) Release the S main brake with a finger.
- 4) Pull the dial tension gauge (Ref. No. J-6) in the direction of the arrow and confirm that the specifications are satisfied.

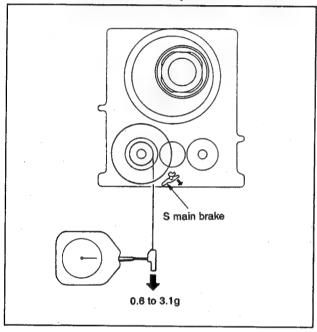


Fig. 7-60.

2. T soft brake torque (See Fig. 7-61.)

- 1) Set to REV mode.
- Place the tension measurement reel (Ref. No. J-8) on the T reel table.
- 3) Release the T main brake with a finger.
- 4) Pull the dial tension gauge (Ref. No. J-6) in the direction of the arrow and confirm that the specifications are satisfied.

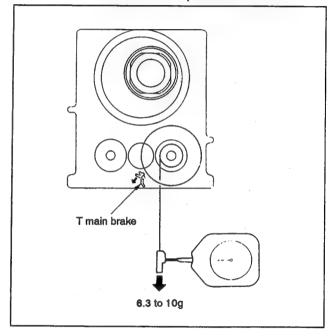


Fig. 7-61.

7-3-26. Check of REW Brake Torque (See Fig. 7-62.)

- 1) Set to FF/REW mode.
- 2) Place the tension measurement reel (Ref. No. J-8) on the T reel table.
- 3) Release the T main brake with a finger.
- 4) Pull the dial tension gauge (Ref. No. J-6) in the direction of the arrow and confirm that the specifications are satisfied.


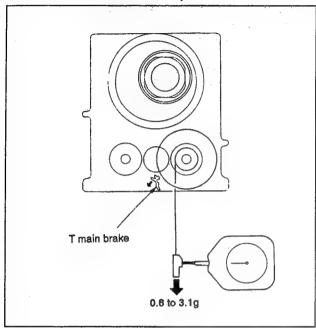


Fig. 7-62.

7-3-27. Check by FWD and RVS Winding Torque Cassette

- Insert the FWD and RVS winding torque cassette (Ref. No. J-12).
- 2) Set to playback mode and confirm that T reel table torque is 7.5 to 14.5 g*cm.
- Replace on appropriate reel table if the above specifications are not satisfied.

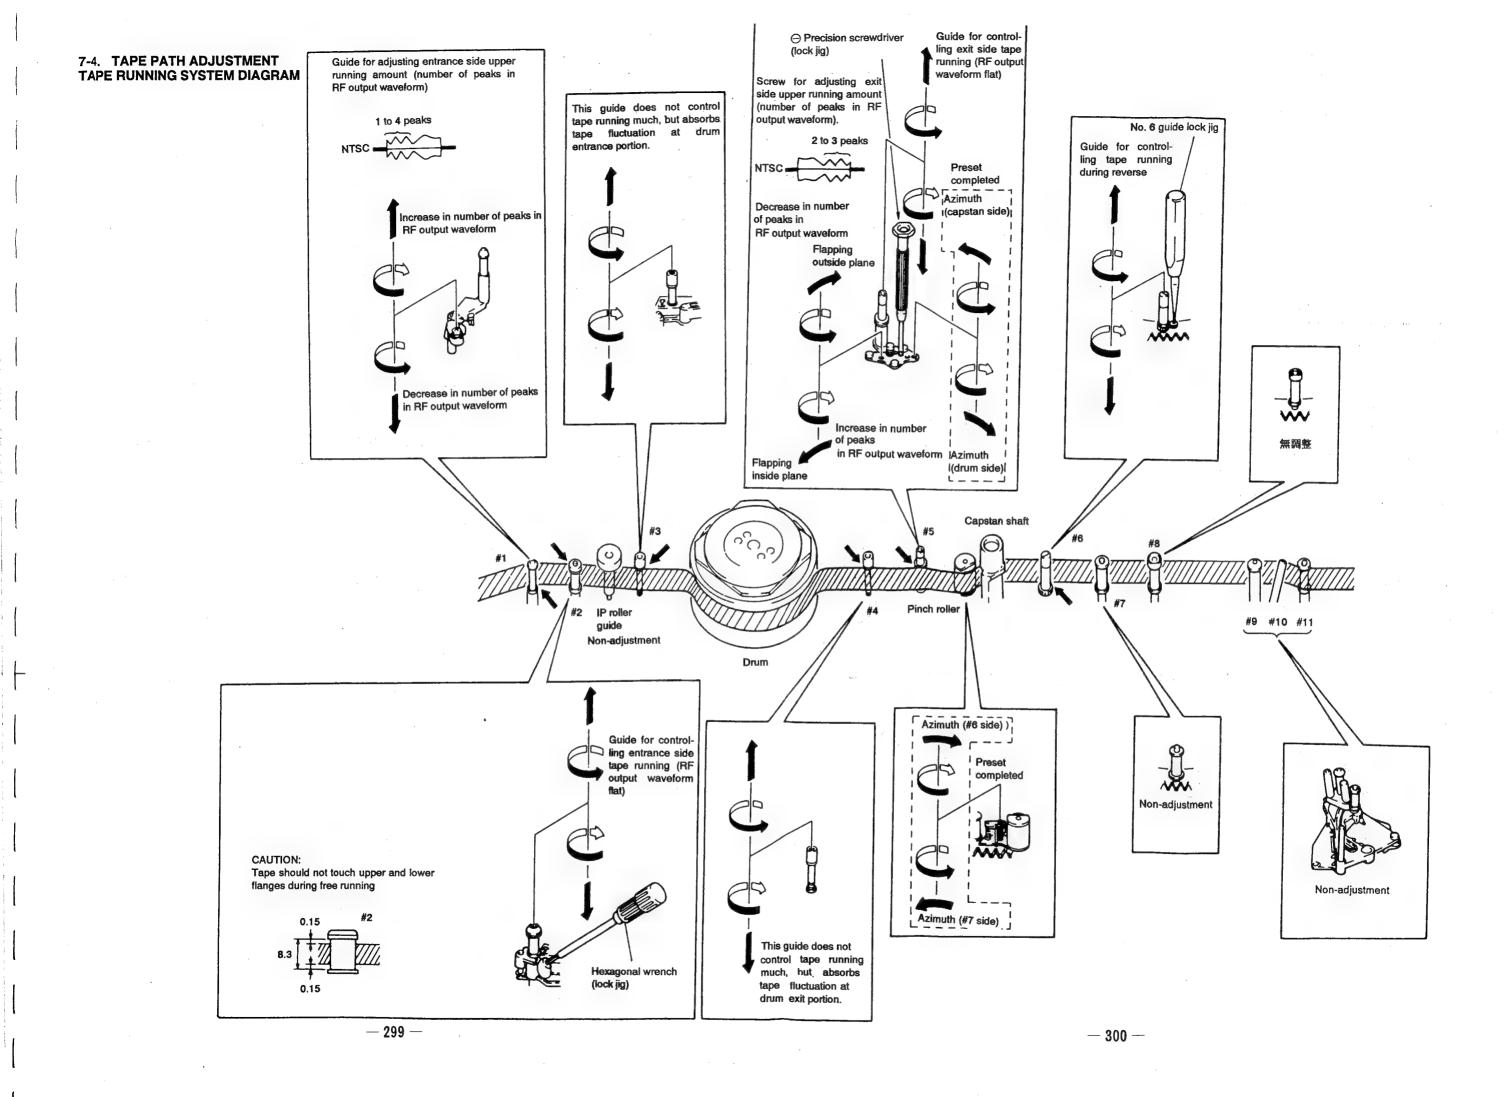

[Regarding track shift & monitor [ig]

The 8 mm video system employs a high precision tracking ATF (auto track finding) which instantaneously controls the tape running speed with the four kinds of pilot signals. In this way, the tracking adjustment knob becomes obsolete, and accurate tracing has become possible.

On the other hand however, there has been difficulty in adjusting the tape path system with the ATF method, that is it was impossible to make a perfect adjustment because the ATF automatically corrected even small head-tracing errors.

Because of this, adjustment is carried out to the tape path system by using the track shift & monitor jig (Ref. No. J-6080-843-A). As the track shift & monitor jig forcibly releases the ATF and sets the tracking amount (track shift) manually, the adjustment of the tape path system can easily be carried out.

• Perform this adjustment after confirming that Section 8. ELECTRICAL ADJUSTMENT is completed.

7-4-1. Connection of Track Shift & Monitor Jig

(For details, see the INSTRUCTION MANUAL OF TRACK SHIFT & MONITOR JIG.)

Use the connection cable specially made for EV-S900

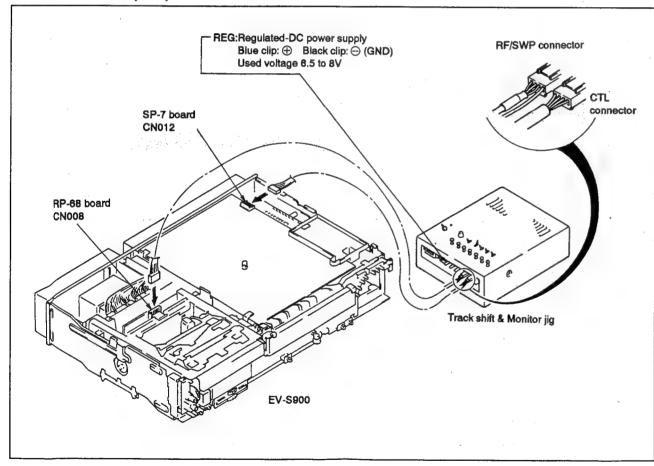


Fig. 7-63.

[Power supply for track shift & monitor jig]

The track shift & monitor jig is equipped with three types of connectors as external power terminals, allowing use from the following three types of power supplies.

Connector Name	Connected Power Supply
SYSTEM CONN	Altered AC adaptor AC-V8 for CCD-V8 is connected. (Refer to the instruction manual of the track shift & monitor jig for the alteration method.)
AC ADP	AC adaptor AC-M100 for Beta Movie is connected.
REG	Commercially available regulated DC power supply (12V, at least 3A) is connected and used at 6.5 to 8V. Make sure \oplus and \ominus are properly connected.

- * Only one power supply can be used at a time.
- * Use the connector supplied with the track shift & monitor jig for connection.
- * Note that use of power supplies or voltages other than above will cause damage to the unit.
- * When using an altered AC-V8, the power to the circuit will be cut off about 10 seconds after the AC-V8 power switch has been turned off.
- * No power is supplied to the main EV-S900 unit. Supply AC power to the main unit at the same time.

[Connector connection]

Connect the track shift & monitor jig and EV-S900 as shown in Fig. 7-63.

Connect RF/SWP connector to CN008 on the RP-68 board, and the CTL connector to CN012 on the SP-7 board.

[Position setting of respective switches]

[Position setting of respective switches]		
SEL switch When performing track shift, set to		
ON. At OFF position it becomes		
control of EV-S900 side.		
PATTERN switch Set to EV side.		
ATF LOCK Set to OFF side.		
Other switches are not used when adjusting EV-S900.		

7-4-2. Preparation for Adjustment

- Perform cleaning of the tape running surface (the individual tape guides, drum, capstan shaft and pinch roller).
- 2) Connection of oscilloscope
 - 1ch: CH2 checking pin of track shift & monitor jig
 External trigger: RF SWP checking pin of track shift
 & monitor jig
- 3) Set the SEL switch of the track shift & monitor jig to OFF, then play back the alignment tape (WR5-7NE) for tracking, and confirm that the RF waveform of both the entrance and exit sides become flat (Fig. 7-64. (a)).

If the RF waveform of both sides is not flat, the adjustment should be carried out as described below.

- In case the RF waveform on the entrance side is not flat (Fig. 7-64. (a))
 - ···· Perform the adjustment according to 7-4-3. Entrance Side Adjustment.
- In case the RF waveform on the exit side is not flat (Fig. 7-64. ©)
 - ···· Perform the adjustment according to 7-4-4. Exit Side Adjustment.

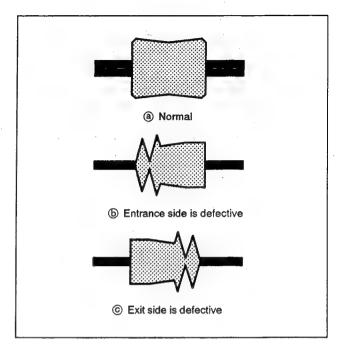


Fig. 7-64.

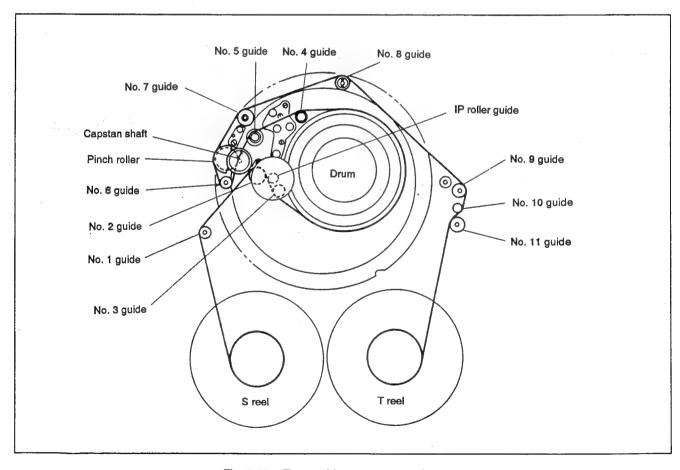


Fig. 7-65. Tape guide arrangement diagram

7-4-3. Entrance Side Adjustment

 Play back the alignment tape (WR5-7NE) for tracking and loosen No. 2 guide lock screw ①, and turn No. 2 and No. 3 guides counterclockwise to free tape running on the entrance side (See Fig. 7-66.)

Note: Since the space between the top and bottom flanges of No. 2 guide is narrow, confirm that the tape is touching neither top nor bottom flanges at this point. Note that if No. 2 guide is loosened too much, the tape touches the bottom flange and the RF waveform on the entrance side exceeds the original free waveform.

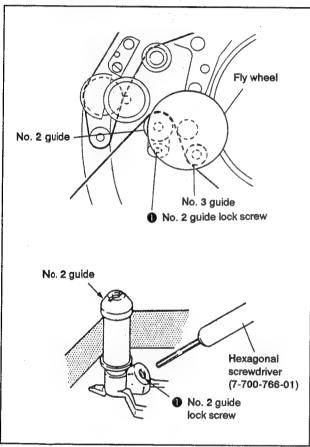


Fig. 7-66.

 Confirm that the RF waveform on the entrance side has 1 to 4 peaks in this condition. If not, adjust as follows. (See Fig. 7-67.)

<less than 1 peak>

Adjust the No. 1 guide (tension regulator arm assembly) height adjustment screw by turning it clockwise 90 ° at a time. (See Fig. 7-68.)

<more than 4 peaks>

Adjust the height adjustment screw of No. 1 guide (tension regulator arm assembly) by turning it counterclockwise 90° at a time. (See Fig. 7-68.)

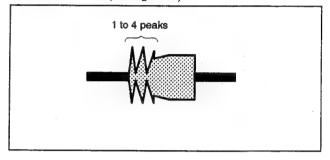


Fig. 7-67.

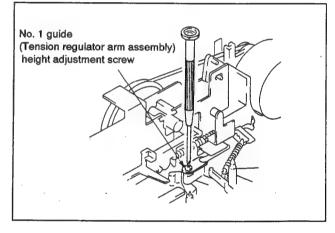


Fig. 7-68.

- 3) Remove the fly wheel according to 7-3-1. 1. Removal.
- Slowly turn the No. 2 guide clockwise to make the entrance side waveform approximately flat. (Fig. 7-69.)
 Note: Do not turn No. 2 guide excessively.
- 5) Set the SEL switch of the track shift & monitor jig to ON, then turn the track shift knob until the RF waveform amplitude becomes 2/3. (See Fig. 7-70.)
- 6) Raise the entrance side waveform slightly by turning No. 2 guide. (See Fig. 7-71.)
- 7) Flatten the waveform with No. 3 guide. (See Fig. 7-72.)
- 8) Tighten No. 2 guide lock screw 1. (See Fig. 7-66.)
- 9) Mount the fly wheel according to 7-3-1. 2. Mounting. (See Fig. 7-6.)

Note: After adjustment is completed, be sure to perform checking in accordance with 7-4-5. Checking After Adjustment.

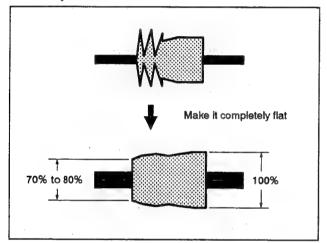


Fig. 7-69.

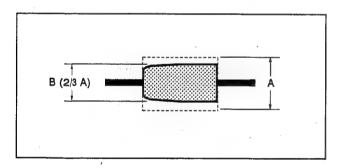


Fig. 7-70.

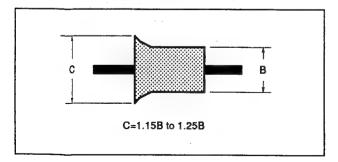


Fig. 7-71.

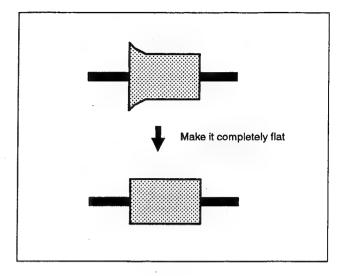


Fig. 7-72.

7-4-4. Exit Side Adjustment

- 1) Play back the alignment tape (WR5-7NE) for tracking and turn No. 4 guide and No. 5 guide counterclockwise to make the tape running on the exit side free. (See Fig. 7-73.)
 - Note: If the No. 5 guide nut does not loosen (it is locked with screw-paint), dissolve the paint with alcohol.
 - Confirm that the tape is not touching the bottom of flange of No. 5 guide during free tape running.
- Confirm that the RF waveform on the exit side has 2 to 3 peaks in this condition. If not, adjust as follows.
 (See Fig. 7-74.)

<lf off standard>

- i) Turn the lock screw 1 counterclockwise to loosen.
- ii) Slowly turn the zenith screw 2 clockwise 45° at a time and wait until the RF waveform varies.
- iii) Rotate the lock screw ① clockwise to tighten. (See Fig. 7-73.)
 - Note: The waveform varies if the lock screw is tightened too strongly. Tighten moderately.
 - Never turn the azimuth screw of No. 5 guide.
- Turn the No. 5 guide clockwise to make the RF waveform on the exit side approximately flat. (Fig. 7-75.)
 - Note: The waveform reaction is slow against nut rotation.

 Turn the nut after the waveform variations are stabilized.
- 4) Set the SEL switch of the track shift & monitor jig to ON, then turn the track shift knob until the RF waveform amplitude becomes 2/3. (See Fig. 7-76.)
- Raise the exit side waveform slightly by turning No. 5 guide. (See Fig. 7-77.)
- 6) Turn No. 4 guide so that waveform is flat. (See Fig. 7-78.)

Note: After adjustment is completed, be sure to perform checking in accordance with 7-4-5. Checking After Adjustment.

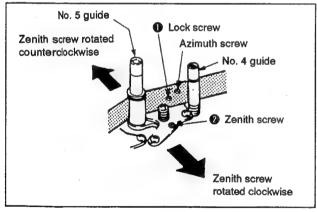


Fig. 7-73.

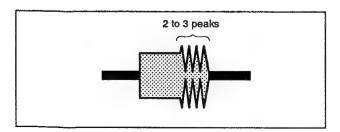


Fig. 7-74.

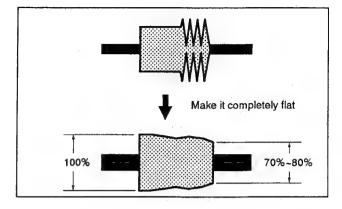


Fig. 7-75.

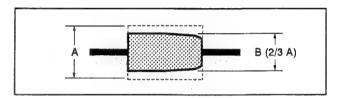


Fig. 7-76.

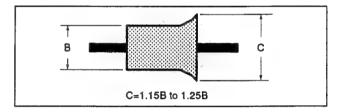


Fig. 7-77.

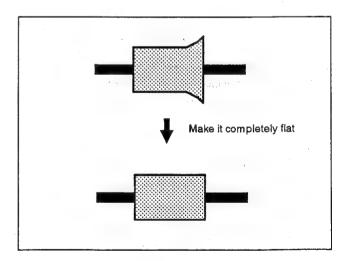


Fig. 7-78.

7-4-5. Checking After Adjustment

- 1. Tracking check
- 1) Play back the alignment tape (WR5-7NE) for tracking.
- 2) Set the SEL switch of the track shift & monitor jig to ON, and turn the track shift knob until the RF waveform amplitude becomes 2/3. (See Fig. 7-79.)
- 3) Confirm that the RF waveform amplitude minimum value (EMIN) at this time is more than 75% of maximum value (EMAX). (See Fig. 7-80.)
- Confirm that the fluctuation amount of both RF waveform entrance and exit sides are as shown in Fig. 7-81.
- 5) Set the SEL switch of the track shift & monitor jig to OFF.
- 6) Set to the REV mode and confirm that the waveform noise pitches are uniform. (See Fig. 7-82.) If not, adjust as follows.

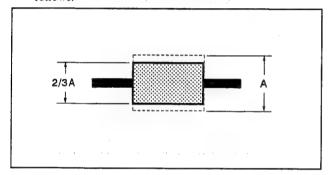


Fig. 7-79.

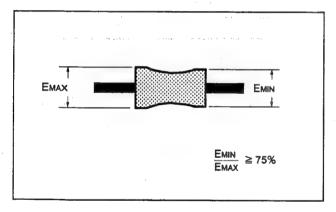


Fig. 7-80.

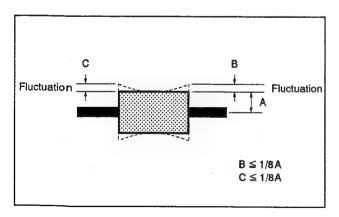


Fig. 7-81.

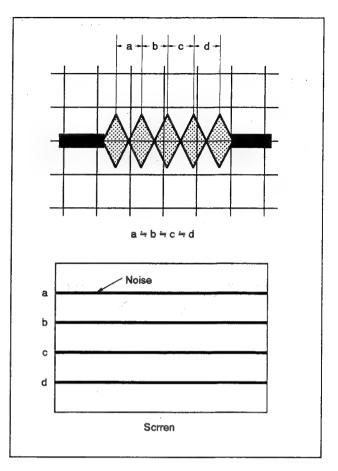


Fig. 7-82.

<Narrow noise pitch on entrance side (upper screen)> (See Fig. 7-83.)

Confirm that the RF waveforms are flat in the PLAYBACK mode.

Waveform is not flat:

Perform height adjustment of No. 2 guide and No. 3 guide according to 7-4-3. Entrance Side Adjustment.

Waveform is flat:

Perform height adjustment of No. 1 guide according to 7-4-3. Entrance Side Adjustment, and check again.

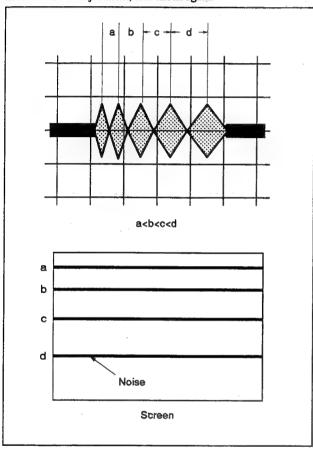


Fig. 7-83.

<Narrow noise pitch on exit side (lower screen)> (See Fig. 7-84.)

Set to the PLAYBACK mode and perform height adjustment of No. 4 guide and No. 5 guide according to 7-4-4. Exit Side Adjustment.

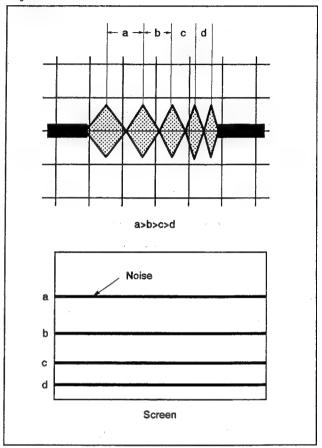


Fig. 7-84.

<Wide noise pitch on exit side (lower screen)> (See Fig. 7-85.)

Set to the PLAYBACK mode and confirm that the RF waveform is flat.

Waveform is not flat:

Perform height adjustment of No. 4 guide and No. 5 guide according to 7-4-4. Exit Side Adjustment.

Waveform is flat:

Turn the guide lower gear counterclockwise with No. 6 guide lock jig (Ref. No. J-10) to loosen, and turn No. 6 guide counterclockwise 45° to tighten the lower gear. Check the RF waveform of the REV mode. (See Fig. 7-86.)

Note: If No. 6 guide is raised too much at this time, wrinkles may occur in section between the capstan shaft and No. 5 guide. Confirm that no wrinkles are occurring. (See Fig. 7-87.)

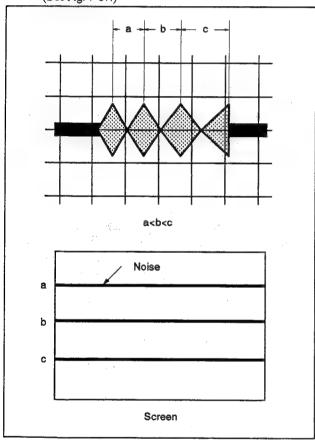


Fig. 7-85.

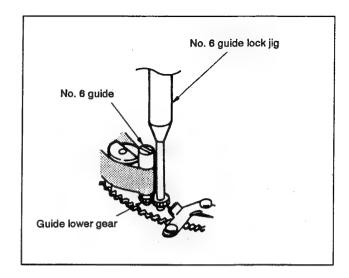


Fig. 7-86.

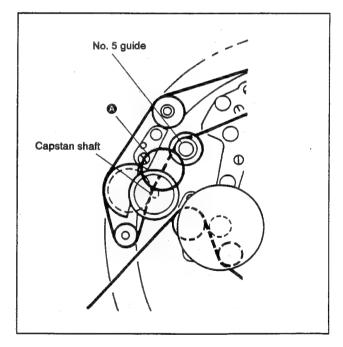


Fig. 7-87.

2. Checking of rising edge

 Confirm that the RF waveform rises horizontally during playback after completing threading, after CUE/REV, and during playing back after FF. If not, adjust as follows.

<In case noise occurs on the exit side (lower screen) at rising of playback after completing threading> (See Fig. 7-88.)

Confirm that the FWD back tension is not too low.

If too low:

Readjust according to 7-3-22. FWD Back Tension Adjustment. If normal:

Turn the azimuth screw of the pinch roller clockwise 5° at a time and adjust while rechecking the rising edge. (See Fig. 7-89.)

<In case noise occurs on the exit side (lower screen) at rising of playback after REV> (See Fig. 7-88.)

Loosen the lower gear of No. 6 guide using No. 6 guide lock jig, turn No. 6 guide 90° counterclockwise to tighten the guide lower gear, then recheck the rising edge.

Note: If No. 6 guide is raised too much, wrinkles may occur between the capstan shaft and No. 5 guide (in section 6 of Fig. 7-87.). Confirm that no wrinkles are occurring.

<in case noise occurs on the exit side (lower screen) at rising of playback after FF> (See Fig. 7-88.)

Confirm that the FWD back tension is not too low.

If too low:

Readjust according to 7-3-22. FWD Back Tension Adjustment. If normal:

Turn the azimuth screw of the pinch roller clockwise approx. 5° at a time and adjust while rechecking the rising edge. (See Fig. 7-89.)

Note: After finishing adjustment, be sure to check rising of playback after threading.

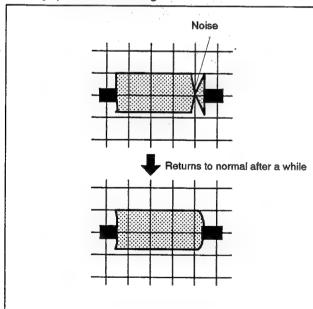


Fig. 7-88.

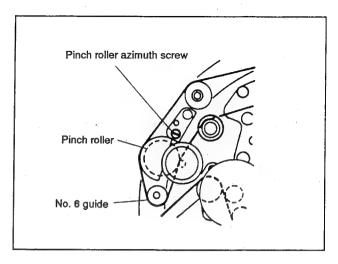


Fig. 7-89.

3. Tape running check

In PLAYBACK and REV modes, confirm the following for the flange sections (arrows in Fig. 7-90.) of guides No. 1 to No. 6: there should be no gaps and the tape should not be curled more than 0.3 mm at tape guides No. 1, No. 2 and No. 5, and there should be neither gaps nor curls at guides No. 3, No. 4 and No. 6.

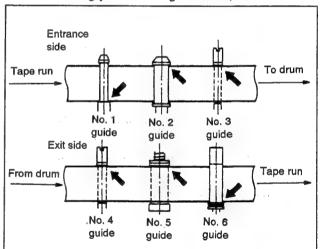


Fig. 7-90.

SECTION 8 ELECTRICAL ADJUSTMENTS

During adjustment, refer to the relevant parts arrangement diagrams beginning on page 338.

The following measuring equipment is used for electrical adjustments.

[Equipment to be used]

- 1) Monitor TV
- Dual trace oscilloscope having band of over 10 MHz, incorporating delay mode. (Use 10:1 probe unless otherwise specified)
- 3) Frequency counter
- Pattern generator (Equipped with video output terminal: refer to 8-1-1. Connection of Equipment)
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Audio multiplex signal generator
- 11) Alignment tapes

Tracking adjustment (WR5-1NP)

Parts Code: 8-967-995-02

Video frequency response adjustment (WR5-7NE)

Parts Code: 8-967-995-13

Normal mode operation checking

For SP (WR5-5NSP)

Parts Code: 8-967-995-42

or (WR5-4NSP)

Parts Code: 8-967-995-41

For LP (WR5-4NL) Parts Code: 8-967-995-51 Hi8 mode operation checking (ME Tape)

For SP (WR5-8NSE) Parts Code: 8-967-995-43
For LP (WR5-8NLE) Parts Code: 8-967-995-52

8-1. PREPARATIONS

8-1-1. Connection of Equipment

Adjustment is performed by connection of the measuring equipment shown in Fig. 8-1., according to the input terminal indications (S VIDEO or VIDEO). The input terminal is indicated by () in the signal column. Either input terminal can be used when there is no indication. The S VIDEO IN terminal has priority. When adjusting using the VIDEO IN terminal input, remove the connector from the S VIDEO IN terminal.

Notes: 1) If adjustment is performed by VIDEO input when S VIDEO input is indicated, the product specifications for this unit may not be satisfied. Be sure to follow the indications.

2) When performing adjustment using a VCR equipped with an S video output terminal as the signal source, the performance of this unit may be affected by that VCR. Try to use a pattern generator with a Y/C separation output terminal if possible.

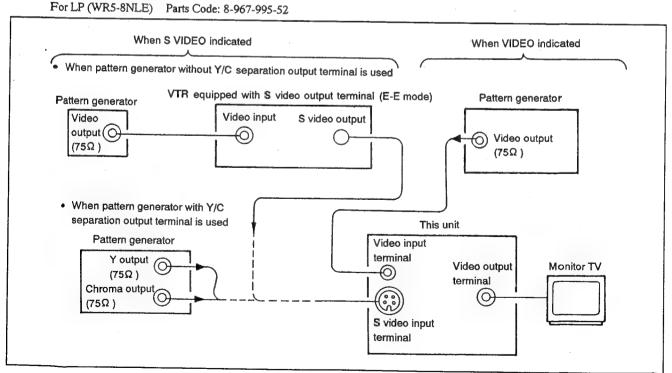


Fig. 8-1.

8-1-2. Confirmation of Input Signal

As adjustment is made using a video signal obtained from a pattern generator as the adjustment signal, it is necessary to confirm that the video output signal is within the required specifications.

1. S VIDEO input

Connect an oscilloscope to the Y signal terminal of the S video input terminal (CNJ701 on IO-17 board) and confirm that the sync signal of the Y signal is approximately 0.3 Vp-p and the amplitude of the video section is approximately 0.7 Vp-p. (When using a VCR equipped with an S video output terminal, confirm that there is no residual chroma signal or burst signal.) Next, connect the oscilloscope to the chroma signal terminal of the S video input terminals and confirm that the burst signal amplitude of the chroma signal is approximately 0.3 Vp-p and flat, and that the amplitude ratio of the burst signal to the chroma signal is 0.30:0.66. The Y and chroma signals used for adjustment are shown in Fig. 8-2.

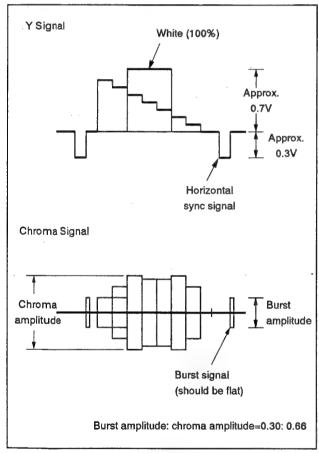


Fig. 8-2. Pattern generator color bar signal

2. VIDEO input

Connect an oscilloscope to the video input terminal (CNJ701 on IO-17 board) and confirm that the amplitude of the sync signal of the video signal is approximately 0.3V and the amplitude of the video section is approximately 0.7V. Confirm that the burst signal amplitude is approximately 0.3V and flat, and that the level ratio of the burst signal and red signal is 0.30:0.66.

The video signal (color bars) used for adjustment are shown in Fig. 8-3.

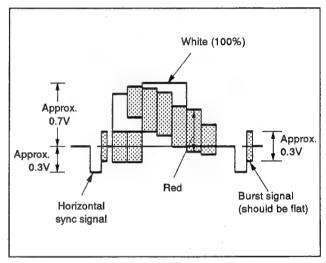


Fig. 8-3. Pattern generator color bar signal

[Alignment tapes]

The alignment tapes shown in the table below are available. Use the tape indicated in the signal column of each adjustment section.

When a specific name is not given for use of an operation checking tape, any of the operation checking tapes can be used.

Name	lame Recording Tap	Таре	Таре Таре	Contents		Use
	Type Sp	Speed	Video Area	PCM Area		
Tracking WR5-1NP	STD	MP	SP	CH2: Signal for 1 MHz tape path Marker (CH1: 9 MHz) for	adjustment switching position adjustment	Tape path adjustment Switching position adjustment
Video frequency response WR5-7NE	Hi8	ME	SP	RF sweep 0 to 15 MHz Markers 2, 4.5, 7, 8.5, 10 MHz		Frequency response adjustment
Operation checking WR5-4NSP or WR5-5NSP	STD	MP ·	SP	SP Ovideo signals Color bars 4 minutes Monoscope 4 minutes Audio signals (PCM) Monoscope section 20 Hz 20 seconds 400 Hz 20 seconds 14 kHz 20 seconds Color bar section 1 kHz 4 minutes	Monoscope section 20 Hz 20 seconds 400 Hz 20 seconds Repeated	
WR5-8NSE	Hi8	ME	SP		Operation checking	
WR5-4NL	STD	MP	LP	Video signals Color bars 4 minutes Monoscope 4 minutes Audio signal (AFM) 400 Hz, 60% modulation		
WR5-8NLE	Hi8	ME	LP			

Note: Recording modes

STD Conventional mode Hi8 High band mode

The 75% color bar signal recorded on the alignment tape is shown in Fig. 8-4.

Note: Measured at VIDEO OUT terminal (terminated at 75Ω)

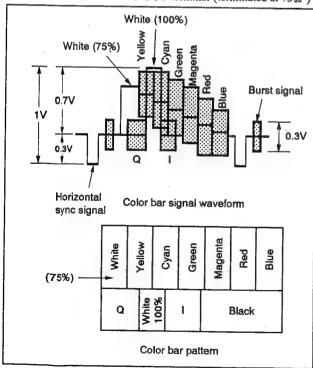


Fig. 8-4. Color bar signal on alignment tape

Tape Types

MP ····· Metal particle tape
ME ···· Metal evaporated tape

[I/O level and impedance]

Video input Pin jack

Input signal: 1 Vp-p, 75Ω unbalanced,

negative SYNC

Video output Pin jack

Output signal: 1 Vp-p, 75Ω unbalanced,

negative SYNC

S video input (4-pin mini DIN)

Luminance signal: 1 Vp-p, 75Ω unbalanced,

negative SYNC

Color signal: 0.286 Vp-p, 7.5Ω, unbalanced

S video output (4-pin mini DIN)

Luminance signal: 1 Vp-p, 75Ω unbalanced,

negative SYNC

Color signal: 0.286 Vp-p, 75Ω , unbalanced

Audio input Pin jack


Input level: -7.5 dBs (0 dBs=0.775 Vrms)

Audio output Pin jack

Rated output: -7.5 dBs (with 47 k Ω load) Output impedance: Less than 2.2 k Ω

[Adjustment order]

Perform adjustment in the following order.

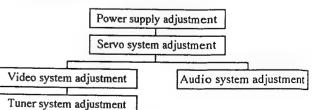

8-1-3. Recording Mode Selection (Hi8 mode/Normal mode)

The recording mode (Hi8 mode/Normal mode) of this unit is selected as shown in the table below. The playback mode (Hi8 mode/Normal mode) is automatically selected according to the mode in which the tape was recorded.

High Band (STD mode/Hi8 mode select switch) (SW062 on FT-37 board)	S Video Input Terminal (CNJ701 on IO-17 board)	Tape Used	Recording Mode
		Hi8 ME	П:0
	Not relevant	Hi8 MP	Hi8
		MP	STD
		Hi8 ME	Hi8
Auto (Hi8 mode)	Connector inserted Nothing inserted	Hi8 MP	
		MP	STD
•		Hi8 ME	STD
		Hi8 MP	
		MP	
		Hi8 ME	
Off (STD mode)	Not relevant	Hi8 MP	STD
		MP	

8-2. POWER SUPPLY BLOCK ADJUSTMENT

8-2-1. Oscillation Frequency Adjustment (DR-35 Board)

Mode	E-E
Measurement Point	Collector of Q201
Measuring Instrument	Frequency counter
Adjustment Element	RV201
Specified Value	91 ± 2 kHz

Adjustment method:

1) Adjust with RV201 to 91 \pm 2 kHz.



Fig. 8-5.

8-2-2. REG 5V Adjustment (DR-35 Board)

Mode	E-E
Measurement Point	Pin ③ of CN201
Measuring Instrument	Digital multimeter
Adjustment Element	RV202
Specified Value	5.3 ± 0.1 Vdc

Adjustment method:

1) Adjust with RV202 to 5.3 ± 0.1 Vdc.

8-2-3. REG 9V Adjustment (DR-35 Board)

Mode	E-E
Measurement Point	Pin ① of CN203
Measuring Instrument	Digital multimeter
Adjustment Element	RV203
Specified Value	9.1 ± 0.2 Vdc

Adjustment method:

1) Adjust with RV203 to 9.1 ± 0.2 Vdc.

8-2-4. Voltage Check (DR-35 and DT-63 Boards)

Mode	E-E	
Measuring Instrument	Digital multimeter	
UNSW 5V Check		
Measurement Point	Pin ② of CN203 on DR-35 board	
Specified Value	5.4 ± 0.1 Vdc	
DRIVE 9V Check	_	
Measurement Point	Pin 4 of CN202 on DR-35 board	
Specified Value	9.1 ± 0.2 Vdc	
UNSW 38V Check		
Measurement Point	Pin ② of CN104 on DT-63 board	
Specified Value	36.5 ± 0.8 Vdc	
UNSW -30V Check		
Measurement Point	Pin 4 of CN104 on DT-63 board	
Specified Value	-29 ± 0.8 Vdc	
UNSW 9V Check		
Measurement Point	Pin ① of CN105 on DT-63 board	
Specified Value	$8.8 \pm 0.2 \mathrm{Vdc}$	
UNSW -9V Check		
Measurement Point	Pin ③ of CN305 on DT-63 board	
Specified Value	-8.8 ± 0.2 Vdc	
BACK UP 5V Chec	ck	
Measurement Point	Pin ⑦ of CN106 on DT-63 board	
Specified Value	5.7 ± 0.8 Vdc	

Checking method:

1) Confirm that each voltage is at the specified level.

8-3. SYSTEM CONTROL SYSTEM ADJUSTMENT

8-3-1. Timer Clock Adjustment (FT-37 Board)

Mode	E-E
Signal	Arbitrary Arbitrary
Measurement Point	Pin @ of IC002
Measuring Instrument	Frequency counter
Adjustment Element	CV001
Specified Value	1048.58 ± 0.01 kHz

Note: Perform adjustment after connecting Pin ֍ and Pin ֍ of IC002 to GND.



1048.58 \pm 0.01 kHz

Fig. 8-6.

8-4. SERVO SYSTEM ADJUSTMENT

8-4-1. Reel Blas Adjustment (SP-7 Board)

Mode	Playback (LP mode)
Signal	Any tape
Measurement Point	TP210
Measuring Instrument	Frequency counter
Adjustment Element	RV209
Specified Value	21 ± 1 Hz

8-4-2. REC ATF Level Check (SP-7 Board)

Mode	E-E
Measurement Point	Arbitrary
Measuring Instrument	TP235 (Pin ⑤ of CN214: REC ATF)
Adjustment Element	Oscilloscope
Specified Value	500 ± 50 mVp-p

Checking method:

1) Confirm that the REC ATF level is $500 \pm 50 \text{ mVp-p}$.

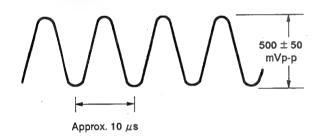


Fig. 8-7.

8-4-3. Drum Free Speed Adjustment (SP-7 Board)

Mode	Playback (SP mode)
Signal	Any tape
Measurement Point	TP213 (Pin (4) of IC212: ADE)
Measuring Instrument	Oscilloscope (DC range)
Adjustment Element	RV202
Specified Value	1.9 ± 0.1 Vdc

Adjustment method:

1) Adjust RV202 so that the center value of the DC voltage is 1.9 ± 0.1 Vdc.


8-4-4. Capstan Free Speed Adjustment (SP-7 Board)

The adjusting element for the LP mode is shown within [].

Mode	Playback
Signal	Any tape
Measurement Point	TP202 (Pin (3) of IC204: C FG)
Measuring Instrument	Frequency counter
Adjustment Element	RV206 [RV208]
Specified Value	960 ± 1 Hz [480 ± 1 Hz]

Connections:

 Connect a capacitor (220 μF/10V) between TP203 (Emitter of O704: PB ATF) and REG GND.

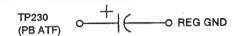

Adjustment method:

-) Use the SP/LP button to set to the SP [LP] mode.
- 2) Set to the play back mode.
- 3) Adjust with RV206 [RV208] to 960 \pm 1 Hz [480 \pm 1 Hz].

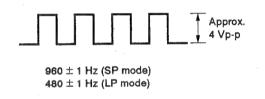


Fig. 8-8.

8-4-5. Switching Position Adjustment (SP-7 Board)

Mode	Playback
Signal	Alignment tape: tracking adjustment (WR5-1NP)
Measurement Point	CH1: Pin 4 (RF CH 2) of CN008 on PR-68 board CH2: TP207 (Pin 2) of IC204: SV RF)
Measuring Instrument	Oscilloscope
Adjustment Element	RV201
Specified Value	$0 \pm 10 \mu s$

Adjustment method:

 Adjust with RV201 so that the marker of the RF CH 2 waveform is lined up with the falling edge of the RF SWP waveform.

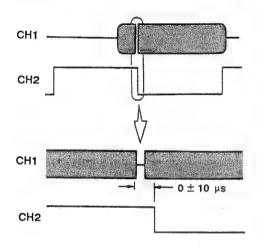


Fig. 8-9. Switching position adjustment

8-4-6. ATF BPF Balance Adjustment (SP-7 Board)

Mode	Playback
Signal	Refer to Fig. 8-10.
Measurement Point	TP236 (Pin (9) of IC703: ATF ER)
Measuring Instrument	Oscilloscope
Adjustment Element	RV701
Specified Value	Minimum level step in ATF error signal

Connection 1:

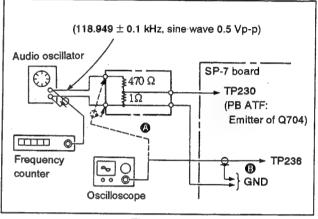


Fig. 8-10.

Connection 2:

 Connect Pin (D) (P SEL1) of CN012 and Pin (D) (REG 5V) of CN005 using a jumper wire.

Adjustment method:

- 1) Use an oscilloscope to confirm that the sine wave level output from t > audio oscillator is 0.5 Vp-p. (Fig. 8-10. (A))
- Adjust the oscillation frequency of the audio oscillator until the frequency counter indicates 118.949 ± 0.1 kHz.
- 3) Play any tape.
- 4) Connect the oscilloscope to TP236. (Fig. 8-10. 1)
- 5) Adjust RV701 for the minimum level step in the ATF error signal.

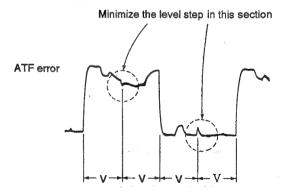


Fig. 8-11.

8-4-7. SLOW Tracking Adjustment (SP-7 Board)

The adjusting element for the LP mode is shown within [].

Mode	SLOW 1/5
Signal	SP [LP] operation checking tape
Measurement Point	TP232 (Pin 23 of IC208: C. ON)
Measuring Instrument	Oscilloscope • Trigger mode: NORMAL • Trigger slope: +
Adjustment Element	Slow/still adjustment buttons (S004 and S005 on PR-12 board) of tuner preset section
Specified Value	38 ± 0.5 ms

Connections:

1) Select the test mode by connecting TP001 (Pin ③) of IC001: EMERG OFF) and GND using a jumper wire.

Adjustment method:

- 1) Play the SP [LP] operation checking tape at 1/5 slow speed.
- 2) Adjust to 38 ± 0.5 ms using the slow/still adjustment button. (Perform adjustment in both the SP and LP modes.)

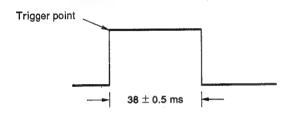


Fig. 8-12.

8-4-8. Tracking Adjustment (SP-7 Board)

Mode	Playback
Signal	Tape with no signal self-recorded in SP mode
Measurement Point	Pin ⑦ of CN008 on RP-68 board
Measuring Instrument	Oscilloscope
Adjustment Element	RV210
Specified Value	Maximum RF output

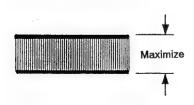



Fig. 8-13.

8-4-9. STILL Adjustment (SP-7 Board)

Mode	STILL (LP)
Signal	Tape self-recorded in LP mode
Measurement Point	CH1: TP207 (Pin ② of IC204: SV RF) CH2: TP228 (Pin ⑧ of IC703: ST ID)
Measuring Instrument	Oscilloscope
Adjustment Element	RV203, RV204
Specified Value	1. 4.0 ± 0.1 ms (RV203) 2. 11.5 ± 0.1 ms (RV204)

Adjustment method:

- Manually rotate the rotor of the capstan motor, and stop at the position where the noise on the monitor screen is hidden at the top or bottom of the screen.
- 2) Adjust by RV203 to 4.0 ± 0.1 ms. (Refer to Fig. 8-14.)
- 3) Adjust by RV204 to 11.5 \pm 0.1ms (Refer to Fig. 8-14.)

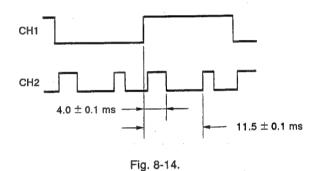

8-4-10. FORWARD SLOW Adjustment (SP-7 Board)

The adjusting element for the LP mode is shown within [].

Mode	FORWARD SLOW
Signal	Tape self-recorded in SP [LP] mode
Measurement Point	Confirm on monitor TV screen
Measuring Instrument	
Adjustment Element	RV205 [RV207]
Specified Value	No noise or skew on monitor TV screen

Adjustment method:

 Adjust with RV205 [RV207] so that the noise on the monitor screen is hidden on the top or bottom of the screen.

8-4-11. SLOW fH Adjustment (SP-7 Board)

1. fH Blas Adjustment

The adjusting element for the LP mode is shown within [].

Mode	E-E
Signal	No signal
Measurement Point	Pin ⑦ of IC219: FH BIAS
Measuring Instrument	Digital multimeter
Adjustment Element	RV216 [RV215]
Specified Value	2.0 ± 0.1 Vdc

Adjustment method:

- 1) Set to the SP [LP] mode using the SP/LP button.
- 2) Adjust to 2.0 \pm 0.1 Vdc using RV216 [RV215].

2. SLOW fH Adjustment

The adjusting element for the LP mode is shown within [].

Mode	FORWARD SLOW
Signal	Tape self-recorded in SP [LP] mode
Measurement Point	Pin ⑤ of CN216: FH
Measuring Instrument	Oscilloscope
Adjustment Element	RV218, RV212 [RV217]
Specified Value	Minimum shift width of fH pulse

Connection:

 Select the test mode by connecting TP101 (EMERG OFF) and GND using a jumper wire.

Adjustment method:

 Alternately adjust RV218 and RV212 so that the shift width of the fH pulse is as small as possible.
 [Adjust for minimum shift width of the fH pulse using RV217.]

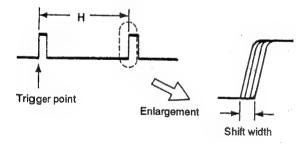


Fig. 8-15.

8-5. VIDEO ADJUSTMENT

As a rule, adjustment of the video system is made in the following order.

The color video signal supplied from the pattern generator is used as the video input signal for adjustment of the video system in the recording mode. Confirm that the sync signal and color burst signal satisfy the specifications designated in the adjustment setup shown in Fig. 8-3.

[Adjustment Method]

- 1) Playback Frequency Characteristics Adjustment
- 2) Flying Erase Check
- 3) X'tal Oscillator fo Adjustment
- 4) Y/C Separation Comb-type Filter Adjustment
- 5) Y Comb-type Filter Adjustment
- 6) SYNC AGC Adjustment
- 7) 31 AMP Gain Adjustment
- 8) VIDEO OUT Level Adjustment
- 9) PB Emphasis Adjustment
- 10) STD Mode PB Y Level Adjustment
- 11) Hi8 Mode PB Y Level Adjustment
- STD Mode Y FM Carrier Frequency, Y FM Deviation Adjustment
- Hi8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment
- 14) 378 fH VCO Adjustment
- 15) Chroma Emphasis fo Adjustment
- 16) Carrier Balance Adjustment
- 17) 1H Comb-type Filter Adjustment
- 18) 2H Comb-type Filter Adjustment
- 19) DC Offset Adjustment
- 20) C Comb-type Filter Cancel Adjustment
- 21) Ys Level Adjustment
- 22) REC Y Level Adjustment
- 23) REC C Level Adjustment
- 24) REC RF Level Adjustment
- 25) D.O.C. Level Adjustment
- 26) Direct Y Signal Level Adjustment
- 27) Direct C Signal Level Adjustment

8-5-1. Playback Frequency Characteristics Adjustment (RP-68 Board)

1. SP playback frequency characteristics adjustment

The adjusting element for CH2 mode is shown within [].

Mode	Playback
Signal	Alignment tape: Frequency characteristics adjustment (WR5-7NE)
Measurement Point	Pin ③ of CN008 [Pin ④ of CN008] External trigger: Pin ② (RF SWP) of CN008 Trigger slope: + [-]
Measuring Instrument	Oscilloscope
Adjustment Element	RV201 [RV202]
Specified Value	8.5 MHz level is 66% of 2 MHz level

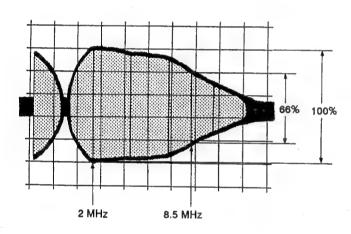


Fig. 5-16.

2. LP playback frequency characteristics adjustment The adjusting element for CH2 mode is shown within [].

Mode	Playback
Signal	Alignment tape: Frequency characteristics adjustment (WR5-7NE)
Measurement Point	Pin ⑤ of CN008 [Pin ⑥ of CN008] External trigger: Pin ② (RF SWP) of CN008 Trigger slope: + [-]
Measuring Instrument	Oscilloscope
Adjustment Element	RV101 [RV102]
Specified Value	8.5 MHz level is 66% of 2 MHz level

8-5-2. Flying Erase Check (RP-68 Board)


Mode	REC
Signal	Arbitrary
Measurement Point	Pin ® of CN001
Frequency Check	
Measuring Instrument	Frequency counter
SMeasuring	7.9 ± 0.5 MHz
Output Level Check	
Instrument	Oscilloscope
Specified Value	Approx. 8 Vp-p

Notes: 1) Use MP-type tape.

2) Connect the frequency counter through a buffer amplifier (oscilloscope, etc.) having high input impedance (at least 1 $M\Omega$) and low capacitance (less than 10 pF).

Adjustment method:

1) Confirm the frequency and output level are 7.9 \pm 0.5 MHz and approximately 8.0 Vp-p respectively.

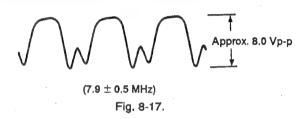

8-5-3. X'tal Osciliator fo Adjustment (CH-44/VI-57 Board)

Mode	Playback	
Signal	Alignment tape: operation checking (WR5-4NSP or WR5-5NSP)	
Measurement Point	Pin ② on CH-44 board	
Measuring Instrument	Frequency counter	
Adjustment Element	CV001 on CH-44 board	
Specified Value	3579545 ± 50 Hz	

Note: Connect the frequency counter through a buffer amplifier (oscilloscope, etc.) having high input impedance (at least $1\ M\Omega$) and low capacitance (less than 10 pF).

Adjustment method:


1) Adjust to 3579545 ± 50 Hz using CV001.



(3579545 ± 50 Hz) Fig. 8-18.

8-5-4. Y/C Separation Comb-type Filter Adjustment (VI-57 Board)


Mode	E-E	
Signal	Color bars	
Measurement Point	Pin @ of IC201	
Measuring Instrument	Oscilloscope	
Adjustment Element	LV201 and RV201	
Specified Value	Minimum chroma component (less than 50 mVp-p)	

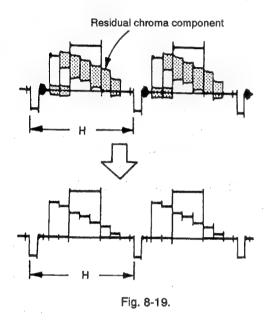

8-5-5. Y Comb-type Filter Adjustment (VI-57 Board)

Mode	E-E (LP mode)	
Signal	Color bars	
Measurement Point	Pin ② of IC201	
Measuring Instrument	Oscilloscope (1: 1 probe used)	
Adjustment Element	RV202	
Specified Value	Set amplitude to minimum	

Note: Be sure to perform adjustment in LP mode.

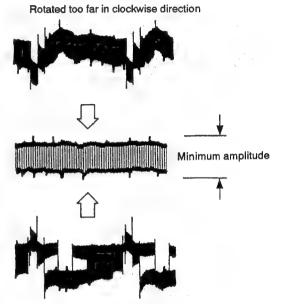

Rotated too far in counterclockwise direction

Fig. 8-20.

8-5-6. SYNC AGC Adjustment (VI-57 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Pin @ of IC101
Measuring Instrument	Oscilloscope
Adjustment Element	RV102
Specified Value	0.50 ± 0.025 Vp-p

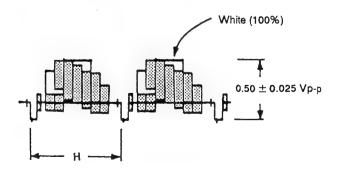


Fig. 8-21.

8-5-7. 31 AMP Gain Adjustment (VI-57 Board)

Mode	E-E	
Signal	Color bars	
Measurement Point	Pin (9) of IC101	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV108	
Specified Value	$0.50 \pm 0.025 \text{Vp-p}$	

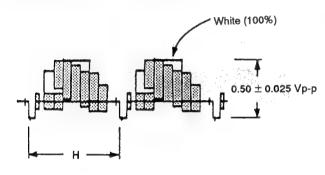


Fig. 8-22.

8-5-8. VIDEO OUT Level Adjustment (VI-57 Board)

Mode	E-E	
Signal	Color bars	
Measurement Point	Pin ⑦ of CN701	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV101	
Specified Value	1.01 ± 0.03 Vp-p	

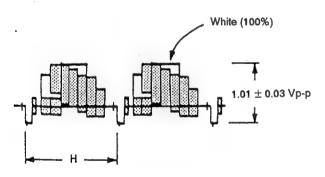


Fig. 8-23.

8-5-9. PB Emphasis Adjustment (VI-57 Board)

Mode	Playback	
Signal	Alignment tape: Operation checking (WR5-5NSP or WR5-4NSP) Color bar section	
Measurement Point	Pin ⑤ or Pin ⑦ of CN701	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV107	
Specified Value	100% white level is flat	

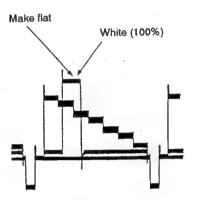


Fig. 8-24.

8-5-10. STD Mode PB Y Level Adjustment (VI-57 Board)

Mode	Playback	
Signal	Alignment tape: Operation checking (WR5-5NSP or WR5-4NSP) Color bar section	
Measurement Point	Pin ⑤ or Pin ⑦ of CN701	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV109	
Specified Value	0.99 ± 0.03 Vp-p	

Note: 1) Set the picture quality adjustment knob to the center click position.

2) After adjustment, be sure to perform "8-5-11. Hi8 Mode PB Y Level Adjustment".

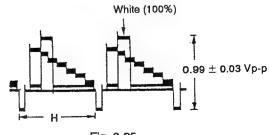


Fig. 8-25.

8-5-11. Hi8 Mode PB Y Level Adjustment (VI-57 Board)

Mode	Playback	
Signal	Alignment tape: Operation checking (WR5-8NSE) Color bar section	
Measurement Point	Pin ⑤ or Pin ⑦ of CN701	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV110	
Specified Value	0.99 ± 0.03 Vp-p	

Note: 1) Set the picture quality adjustment knob to the center click position.

Be sure to perform "8-5-10. STD Mode PB Y Level Adjustment" before this adjustment.

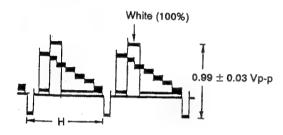


Fig. 8-26.

8-5-12. STD Mode Y FM Carrier Frequency, Y FM Deviation Adjustment

Note: After adjustment, perform "8-5-13. Hi8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment".

STD mode Y FM carrier frequency adjustment (VI-57 board)

Mode	E-E
Signal	No signal
Measurement Point	Pin (5) (REC RF) of CN003
Measuring Instrument	Frequency counter
Adjustment Element	RV605
Specified Value	4.40 ± 0.03 MHz

Adjustment method:

- 1) Insert an MP-type cassette tape.
- 2) Adjust to 4.40 \pm 0.03 MHz using RV605.
- 3) Perform "2. STD Mode Y FM Deviation Adjustment".



4.40 ± 0.03 MHz

Fig. 8-27.

2. STD mode Y FM deviation adjustment (VI-57 board)

Mode	REC and playback	
Signal	Color bars	
Measurement Point	Pin ⑤ or Pin ⑦ of CN701	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV602	
Specified Value	Playback level is 1.00 ± 0.05 Vp-p	

Note: Perform this adjustment after confirming that "8-5-8. VIDEO OUT Level Adjustment", "8-5-10. STD Mode PB Y Level Adjustment", and "8-5-12. 1. STD Mode Y FM Carrier Frequency Adjustment" have been completed.

Adjustment method:

- 1) Insert an MP type cassette tape.
- 2) Record the color bar signal.
- 3) Playback the recorded signal.
- Check the playback output level. Specified value: 1.00 ± 0.05 Vp-p
- 5) If the specified value is not satisfied, rotate RV602 as described below and repeat steps 1) through 3).

	Rotational direction for RV602
Larger than specified value	Counterclockwise direction (()
Smaller than specified value	Clockwise direction (())

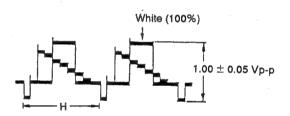


Fig. 8-28.

8-5-13. Hi8 Mode Y FM Carrier Frequency, Y FM Deviation Adjustment

- Notes: 1) Perform this adjustment after "8-5-11. STD Mode Y FM Carrier Frequency, Y FM Deviation Adjustment".
 - 2) Before adjustment, confirm that the Hi8 switch (SW026 on FT-37 board) is set to the AUTO position, and that the connector is attached to the S video terminal (CNJ701 on IO-17 board) of the line input (even when there is no signal).

1. Hi8 mode Y FM carrier frequency adjustment (VI-57 board)

Mode	E-E	
Signal	No signal	
Measurement Point	Pin ⑤ of CN003	
Measuring Instrument	Frequency counter	
Adjustment Element	RV604	
Specified Value	6.00 ± 0.03 MHz	

Adjustment method:

- 1) Insert an ME-type cassette tape.
- Adjust to 6.00 ± 0.03 MHz using RV604.
- Perform "2. Hi8 Mode Y FM Deviation Adjustment".



Fig. 8-29.

2. Hi8 mode Y FM deviation adjustment (VI-57 board)

Mode	REC and playback
Signal	Color bars
Measurement Point	Pin ⑤ or Pin ⑦ of CN701
Measuring Instrument	Oscilloscope
Adjustment Element	RV601
Specified Value	Playback level is 1.00 ± 0.05 Vp-p

Note: Perform this adjustment after confirming that "8-5-8. VIDEO OUT Level Adjustment", "8-5-11. PB Y Level Adjustment", and "8-5-13. 1. Hi8 Mode Y FM Carrier Frequency Adjustment" have been completed.

Adjustment method:

- 1) Insert an ME-type cassette tape.
- Record the color bar signal.
- Playback the recorded signal.
- Check the playback output level. Specified value: 1.00 ± 0.05 Vp-p
- If the specified value is not satisfied, rotate RV601 as described below and repeat steps 1) through 3).

	Rotational direction for RV601
Larger than specified value	Counterclockwise direction ()
Smaller than specified value	Clockwise direction (())



Fig. 8-30.

8-5-14. 378fH VCO Adjustment (CH-44/VI-57 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Pin 26 of IC001 on CH-44 board
Measuring Instrument	Digital voltmeter
Adjustment Element	RV001 on CH-44 board
Specified Value	3.00 ± 0.05 Vdc

Adjustment method:

1) Adjust to 3.00 \pm 0.05 Vdc using RV001.

8-5-15. Chroma Emphasis fo Adjustment (CH-44/VI-57 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Pin ® of IC002 on CH-44 board
Measuring Instrument	Oscilloscope
Adjustment Element	T001 on CH-44 board
Specified Value	Minimum chroma component

Preparations:

- 1) Connect the following two locations using 10 k Ω resistors.
 - CH-44 board: Pin @ (ACC) Pin ① (GND)
 - CH-44 board: Pin @ (ACC) Pin @ (REG 5V)

Adjustment method:

- 1) Adjust T001 for minimum chroma component.
- 2) Remove the $10 \text{ k}\Omega$ resistors after adjustment.

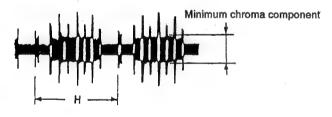


Fig. 8-31.

8-5-16. Carrier Balance Adjustment (CH-44/VI-57 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Pin 28 of IC001 on CH-44 board
Measuring Instrument	Oscilloscope
Adjustment Element	RV002 on CH-44 board
Specified Value	Minimum 4.32 MHz component

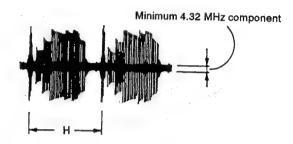



Fig. 8-32.

8-5-17. 1H Comb-type Filter Adjustment (YC-56 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Emitter of Q004
Measuring Instrument	Oscilloscope
Adjustment Element	LV001, RV001
Specified Value	Minimum (less than 20 mVp-p) residual chroma component

Adjustment method:

Alternately adjust LV001 and RV001 so that there is minimum (less than 20 mVp-p) residual chroma component.

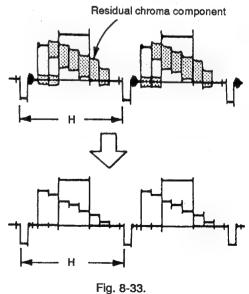

8-5-18. 2H Comb-type Filter Adjustment (YC-56 Board)

Mode	E-E
Signal	Color bars
Measurement Point	Emitter of Q014
Measuring Instrument	Oscilloscope
Adjustment Element	LV002, RV004
Specified Value	Less than 20 mVp-p

Adjustment method:

1) Alternately adjust LV002 and RV004 to make less than 20 mVp-p.



Fig. 8-34.

8-5-19. DC Offset Adjustment (YC-56 Board)

Mode	E-E
Signal	No signal
Measurement Point	+: Emitter of Q025 -: Emitter of Q026
Measuring Instrument	Digital voltmeter
Adjustment Element	RV005
Specified Value	100 ± 20 mVdc

8-5-20. C Comb-type Filter Cancel Adjustment (YC-56 Board)

Mode	E-E
Signal	All green screen
Measurement Point	Emitter of Q302
Measuring Instrument	Oscilloscope
Adjustment Element	RV003
Specified Value	Minimize the section shown in Fig. 8-35.

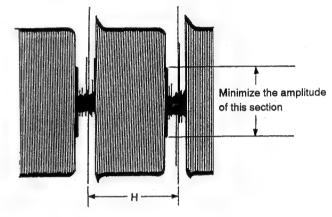


Fig. 8-35.

8-5-21. Ys Level Adjustment (YC-56 Board)

Mode	E-E	
Signal	Color bars	
Measurement Point	Pin (5) of W001	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV002	V Comment
Specified Value	0.5 ± 0.02 Vp-p	

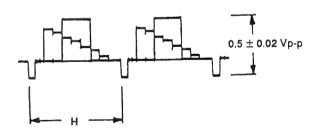


Fig. 8-36.

8-5-22. REC Y Level Adjustment (VI-57 Board)

Mode	E-E (SP)
Signal	No signal
Measurement Point	Pin ⑤ of CN003
Measuring Instrument	Oscilloscope
Adjustment Element	RV501
Specified Value	0.65 ± 0.02 Vp-p

- Notes: 1) Before adjustment, be sure to rotate RV502 to set the output to maximum.
 - 2) Be sure to perform "8-5-23. REC C Level Adjustment" and "8-5-24. REC RF Level Adjustment" after this adjustment.
 - 3) Use MP-type tape.

Adjustment method:

- 1) Set to the SP mode using the SP/LP button.
- 2) Adjust to 0.65 ± 0.02 Vp-p using RV501.

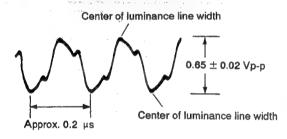


Fig. 8-37.

8-5-23. REC C Level Adjustment (VI-57 Board)

Mode	E-E (SP)
Signal	Color bars
Measurement Point	Collector of Q502
Measuring Instrument	Oscilloscope
Adjustment Element	RV503
Specified Value	0.13 ± 0.01 Vp-p

Note: Use MP-type tape.

Preparations:

- Use jumper wires to make the following three connections.
 - Emitter of Q540 (REC Y)
 - REG 5V (Pin 30 on CH-44 board)
 - Pin ① of W002 (REG AFM) GND
 - Pin (5) of W005 (REG ATF) GND

Adjustment method:

- Set to the SP mode using the SP/LP button. 1)
- Adjust to 0.13 \pm 0.01 Vp-p using RV503.

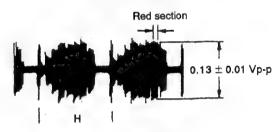


Fig. 8-38.

8-5-24. REC RF Level Adjustment (VI-57 Board)

Mode	E-E
Signal	No signal
Measurement Point	TP007
Measuring Instrument	Oscilloscope
Adjustment Element	RV502
Specified Value	520 ± 5 m∨p-p

Note: Use MP-type tape.

Adjustment method:

- Set the HI BAND switch (SW026 on FT-37 board) to the OFF position.
- Adjust to 520 \pm 5 mVp-p using RV502.



Fig. 8-39.

8-5-25. D.O.C. Level Adjustment (VI-57 Board)

Mode	Playback
Signal	Self-recording and playback of Hi8 in MPHG tape, and color bars in LP mode.
Measurement Point	Pin ③ of Q951
Measuring Instrument	Digital voltmeter
Adjustment Element	RV950
Specified Value	1.70 ± 0.01 V

8-5-26. Direct Y Signal Level Adjustment (JG-11 Board)

Mode	Playback pause	
Signal	Alignment tape: Operation checking (WR5-5NSP or WR5-4NSP) Color bar section	
Measurement Point	Pin ② and Pin ⑥ of W204	
Measuring Instrument	Oscilloscope	
Adjustment Element	RV201	
Specified Value	Y level difference from playback is 0 ± 0.1 Vp-p at respective measurement points	




Level difference between playback and pause is less than 0 \pm 0.1 Vp-p



Fig. 8-40.

8-5-27. Direct C Signal Level Adjustment (JG-11 Board)

Mode	Playback pause
Signal	Alignment tape Operation checking (WR5-5NSP or WR5-4NSP) Color bar section
Measurement Point	Pin 4 of W204
Measuring Instrument	Oscilloscope
Adjustment Element	RV202
Specified Value	C level difference from playback is $0 \pm 0.1 \text{ Vp-p}$

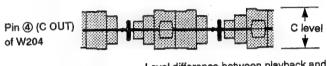

Level difference between playback and pause is less than 0 \pm 0.1 Vp-p

Fig. 8-41.

8-6. AUDIO SYSTEM ADJUSTMENTS

 Perform adjustment using the color bar signal as the video signal input.

[Connection of measuring instruments for audio]

In addition to the measuring instruments for the video system, the measuring instruments shown in the figure below are used for the audio system.

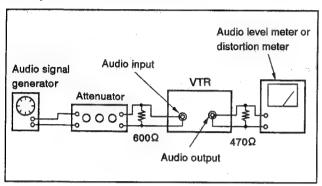


Fig. 8-42.

[Adjustment procedure]

- 1) PCM Master Clock Oscillation Frequency Adjustment
- 2) REC PCM Level Check
- 3) MULTI PILOT Frequency Check
- 4) PCM Playback VCO Free Oscillation Frequency Adjustment
- 5) MULTI PILOT Detector Adjustment
- 6) PCM Playback Level Adjustment
- 7) E-E Output Level Check
- 8) PCM Offset Adjustment
- 9) PCM Recording Level Adjustment
- 10) Overall Frequency Characteristics Check
- 11) Overall Distortion Check
- 12) Overall Noise Level Check

8-6-1. PCM Audio System Adjustment

Unless indicated otherwise, set the VTR switches and controls to the following positions for adjustment.

Input select switch ·····	LINE
Audio monitor switch (PCM/mix/normal) ······	
REC LEVEL control	5
PCM mode switch ······ N	Iormal

Note: The adjusting element for the R channel is indicated in [].

1. PCM master clock oscillation frequency adjustment (SP-7 board)

Mode	REC
Signal	No signal
Measurement Point	Pin ③ of CN601
Measuring Instrument	Frequency counter
Adjustment Element	RV602
Specified Value	11.45 ± 0.01 MHz

Adjustment method:

- Connect TP604 (Pin @ of IC605) and Pin ① (REG 5V) of CN601 using a jumper wire.
- 2) Adjust to 11.45 \pm 0.01 MHz using RV602.
- 3) Remove the jumper wire.
- 4) Connect TP604 to GND
- 5) Confirm that the frequency is at least 11.63 MHz.



Fig. 8-43.

2. REC PCM level check (SP-7 board)

Mode	REC
Signal	No signal
Measurement Point	Pin ① of CN607
Measuring Instrument	Oscilloscope
Specified Value	Approx. 0.4 Vp-p

Checking method:

1) Confirm that the REC PCM level is approximately 0.4 Vp-p.

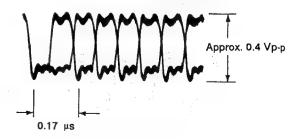


Fig. 8-44.

3. MULTI PILOT frequency check (SP-7 board)

Mode	E-E
Signal	Arbitrary
Measurement Point	Pin ® of IC204
Measuring Instrument	Frequency counter
Specified Value	228.748 ± 0.200 kHz

Checking method:

1) Confirm that the frequency is 228.748 \pm 0.200 kHz.

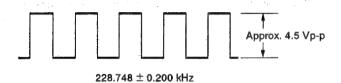


Fig. 8-45.

4. PCM playback VCO free oscillation frequency adjustment (SP-7 board)

Mode	Playback, FF index search, and REW index search
Signal	Any tape
Measurement Point	TP603
Measuring Instrument	Frequency counter
Adjustment Element	RV601 (playback) RV604 (FF index search) RV603 (REW index search)
Specified Value	11.58 ± 0.05 MHz (playback) 10.56 ± 0.05 MHz (FF index search) 12.60 ± 0.05 MHz (REW index search)

Connections:

- Connect TP600 (Pin ① of IC600) and Pin ① (REG 5V) of CN005 using a jumper wire.
- 2) Remove CN607 on the SP-7 board.

Adjustment method:

- 1) Set to the playback mode.
- 2) Adjust to 11.58 ± 0.05 MHz using RV601.
- 3) Set to the FF index search mode.
- 4) Adjust to 10.56 ± 0.05 MHz using RV604.
- 5) Set to the REW index search mode.
- 6) Adjust to 12.60 \pm 0.05 MHz using RV603.



Fig. 8-46.

5. MULTI PILOT detector adjustment (MK-2/AU-54 board)

Mode	E-E
Signal	No signal
Measurement Point	1. Pin ⑤ of IC801 on MK-2 board 2. Pin ⑥ of IC821 on MK-2 board
Measuring Instrument	Frequency counter
Adjustment Element	1. RV801 (SP 1CH) on MK-2 board 2. RV821 (LP 2CH) on MK-2 board
Specified Value	228.748 ± 1 kHz

Notes: 1) Connect the frequency counter through a buffer amplifier (oscilloscope, etc.) having high input impedance (approx. $10 \text{ M}\Omega$) and low capacitance (approx. 10 pF).

2) The adjusting element for LP 2CH is shown in [].

Adjustment method:

- 1) Connect the frequency counter to Pin ⑤ of IC801 [IC821].
- 2) Adjust to 228.748 \pm 1 kHz using RV801 [RV821].

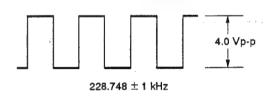


Fig. 8-47.

6. PCM playback level adjustment (AD-12/AU-54 board)

Mode	Playback
Signal	Alignment tape: Operation checking (WR5-5NSP or WR5-4NSP) 400 Hz section
Measurement Point	Audio output L and R
Measuring Instrument	Audio level meter
Adjustment Element	RV705 on AD-12 board
Specified Value	$-7.5 \pm 0.1 \text{ dBs}$

Adjustment method:

1) Adjust to -7.5 ± 0.1 dBs using RV705.

Note: If there is a difference in the levels of the left and right channels, adjust to the center value.

7. E-E output level check

Mode	E-E
Signal	400 Hz, -7.5 dBs: audio input L [R]
Measurement Point	Audio output L [R]
Measuring Instrument	Audio level meter
Specified Value	-7.5 ± 2 dBs

Checking method:

- 1) Set the REC LEVEL control to the 5 position.
- Confirm that -7.5 dB is indicated on the REC LEVEL meter.
- 3) Confirm that the audio output L [R] level is -7.5 ± 2 dB.

8. PCM offset adjustment (AD-12/AU-54 board)

Mode	Self-recording and playback (SP mode)
Signal	400 Hz + 3 dBs
Measurement Point	Pin ([Pin ()] on AD-12 board
Measuring Instrument	Oscilloscope
Adjustment Element	RV701 [RV751] on AD-12 board
Specified Value	Even clipping above and below waveform

Adjustment method:

- Perform self-recording and playback, then confirm that there
 is even clipping above and below the waveform.
- If the amount of clipping is not even, rotate RV701 [RV751] as shown below, and confirm 1) again.

	Rotational direction of RV701 [RV751] as seen from parts side
When amount of upper clipping is smaller	Clockwise direction (())
When amount of upper clipping is greater	Counterclockwise direction ()

Note: Adjust RCH and LCH alternately as they will affect each other.

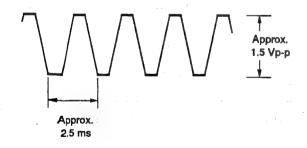


Fig. 8-48.

PCM recording level adjustment (AD-12/AU-54 board)

Mode	Self-recording and playback
Signal	400 Hz, -7.5 dBs: audio input (L and R)
Measurement Point	Audio output L [R]
Measuring Instrument	Audio level meter
Adjustment Element	RV703 [RV753] on AD-12 board
Specified Value	-7.5 ± 0.5 dBs

Note: Confirm that "PCM Playback Level Adjustment" has been completed.

Adjustment method:

- 1) Set to the E-E mode.
- Adjust the REC LEVEL control so that the audio output level is -7.5 dBs. (Both left and right channels)
- 3) Record the signal.
- 4) Playback the recorded section.
- 5) Confirm that the audio output L [R] level is -7.5 ± 0.5 dBs.
- 6) If the specified value is not satisfied, adjust with RV703 [RV753] and repeat steps 1) through 5).

10. Overall frequency characteristics check

Mode	Self-recording and playback
Measurement Point	 ♠ 400 Hz, -7.5 dBs ⊕ 20 Hz, -7.5 dBs © 14 kHz, -7.5 dBs :Audio input L [R]
Measuring Instrument	Audio output L [R]
Adjustment Element	Audio level meter
Specified Value	Confirm that when the 400 Hz playback output level is 0 dB, the 20 Hz playback output level is 0 ± 2 dB and the 14 kHz playback output level is 0 ± 2 dB.

Checking method:

- Adjust the REC LEVEL control so that the audio output L [R] level is -7.5 dBs.
- 2) Record signals (A) through (C) in order.
- 3) Playback the recorded section.
- 4) Confirm that when the 400 Hz playback output level is 0 dB, the 20 Hz playback output level is 0 ± 2 dB and the 14 kHz playback output level is 0 ⁺²₋₃ dB.

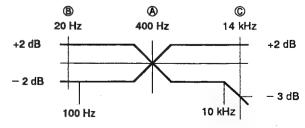


Fig. 8-49.

11. Overall distortion check

Mode	Self-recording and playback
Signal	400 Hz, -7.5 dBs: Audio input L [R]
Measurement Point	Audio output L [R]
Measuring Instrument	Distortion meter
Specified Value	Less than 0.35%

Checking method:

- 1) Record the signal.
- 2) Playback the recorded section.
- 3) Confirm that the distortion is less than 0.35%.

12. Overali noise level check

Mode	Self-recording and playback
Signal	No signal (Shorting plug inserted into both audio input L and R terminals)
Measurement Point	Audio output L [R]
Measuring Instrument	Audio level meter
Specified Value	Less than -87.5 dBs *2

Checking method:

- 1) Record the signal.
- 2) Playback the recorded section.
- Confirm that the noise level is less than -87.5 dBs.*2
 *2: Value when IHF-A hearing compensation filter is used.

8-6-2. AFM Audio System Adjustment

Unless indicated otherwise, set the VCR switches and controls to the following positions for adjustment.

[Adjustment Procedure]

- 1) AFM carrier frequency adjustment
- 2) AFM deviation adjustment
- 3) E-E output level check
- 4) Overall level characteristics check
- 5) Overall frequency characteristics check
- 6) Overall distortion check
- 7) Overall noise level check

1. AFM carrier frequency adjustment (AF-20/AU-54 board)

Mode	REC (SP mode)
Signal	No signal
Measurement Point	Pin (3) on AF-20 board (REC AFM)
Measuring Instrument	Frequency counter and oscilloscope
Adjustment Element	RV503 on AF-20 board
Specified Value	1500 ± 3 kHz

Adjustment method:

1) Adjust to 1500 \pm 3 kHz using RV503.

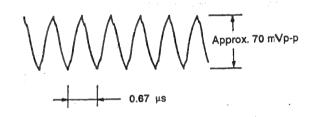


Fig. 8-50.

2. AFM deviation adjustment (AF-20/AU-54 board)

Mode	Playback
Signal	Alignment tape: Operation checking (WR5-4NSP or WR5-5NSP)
Measurement Point	Audio output L or R
Measuring Instrument	Audio level meter
Adjustment Element	RV501 on AF-20 board
Specified Value	-7.5 ± 0.2 dBs

Adjustment method:

1) Adjust to -7.5 ± 0.2 dBs using RV501.

3. E-E output level check

Mode	E-E
Signal	400 Hz, -7.5 dBs: Audio input (Both L and R channels)
Measurement Point	Audio output L [R]
Measuring Instrument	Audio level meter
Specified Value	$-7.5 \pm 2 \text{ dBs}$

Checking method:

1) Confirm that the audio output L [R] level is -7.5 ± 2 dBs.

4. Overall level characteristics check

Mode	Recording (SP mode)
Signal	400 Hz, -7.5 dBs: Audio input (Both L and R channels)
Measurement Point	Audio output L or R
Measuring Instrument	Audio level meter
Specified Value	7.5 ± 3 dBs

Checking method:

- 1) Record the signal.
- 2) Playback the recorded section.
- 3) Confirm that the audio output level is -7.5 ± 3 dBs.

5. Overall frequency characteristics check

Mode	Self-recording and playback
Signal	 ♠ 400 Hz, -20 dBs ♠ 30 Hz, -20 dBs ♠ 14 kHz, -20 dBs : Audio input (Both L and R channels)
Measurement Point	Audio output L or R
Measuring Instrument	Audio level meter
Specified Value	Confirm that when the 400 Hz playback output level is 0 dB, the 30 Hz and the 14 kHz playback output level is 0 ± 3 dB.

Checking method:

- 1) Record signals (A) through (C) in order.
- 2) Playback the recorded section.
- 3) Confirm that when the 400 Hz playback output level is 0 dB, the 30 Hz and the 14 kHz playback output level is 0 ± 3 dB.

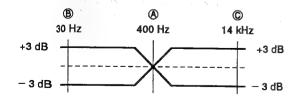


Fig. 8-51. AFM overall frequency response

6. Overall distortion check

The specified value for LP mode is shown in [].

Mode	Self-recording and playback
Signal	400 Hz, -7.5 dBs: Audio input (Both L and R channels)
Measurement Point	Audio output L or R
Measuring Instrument	Distortion meter
Specified Value	Less than 0.5% [1.0%] *1

Checking method:

- 1) Record the signal.
- 2) Playback the recorded section.
- 3) Confirm that the distortion is less than 0.5% [1.0%].*1
 - *1: Value when the filter for distortion measurement is used (Fig. 8-52.). Distortion should be less than 1.0% [2.0%] when the filter is not used.

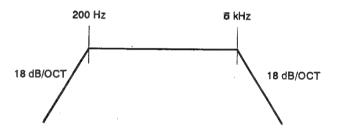


Fig. 8-52. Filter for distortion measuremen

7. Overall noise level check

Mode	Self-recording and playback
Signal	No signal (Shorting plug inserted into both audio input L and R terminals)
Measurement Point	Audio output L or R
Measuring Instrument	Audio level meter
Specified Value	Less than -62 dBs *2

Checking method:

- 1) Record the signal.
- 2) Playback the recorded section.
- 3) Confirm that the noise level is less than -62 dBs.*2
 - *2: Value when IHF-A hearing compensation filter is used.

8-7. TURNER SYSTEM ADJUSTMENT

8-7-1. RF AGC Adjustment (TU-82 Board)

Mode	E-E
Signal	Broadcasting TV signal
Adjustment Element	VR upper inside of VIF001

Checking method:

- 1) Adjust monitor TV to its maximum contrast and receive broadcasting TV signal.
- 2) Turn the VR so that snow noise becomes appear.
- Turn the VR counterclockwise and set it at a position where snow noise disappears.
- Receive each channel and confirm that there are no beat, picture distortion and snow noise due to inter modulation.

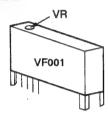


Fig. 8-53.

Connection:

 For adjustment following "1. SAP BPF adjust" and "2. SAP VCO adjustment", first remove the soldering of cut-land and then connect test equipment on as shown below before making the adjustment.

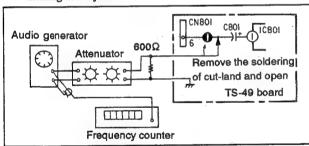


Fig. 8-54.

2) For adjustment following "5. Pilot cancel adjustment" and "6. L-R gain adjustment", first remove the soldering of cut-land then connect test equipment on as shown below before making the adjustment.

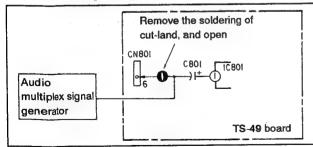


Fig. 8-55.

3) Solder the cut-land after each adjustment in 1) and 2) is completed.

1. SAP BPF adjustment (TS-49 board)

Mode	E-E		
Signal	 Frequency 62.94 ± 0.1 kHz (sine wave) Level at Pin ① of IC801 0.42 Vp-p (148.5 mVrms) Connection See Fig. 8-54. 		
Measurement Point	Pin ⑥ of IC801		
Measuring Instrument	Oscilloscope		
Adjustment Element	RV802		
Specified Value	Minimum 62.94 kHz signal level		

Adjustment method:

- 1) By turning RV802, minimize the 62.94 kHz signal level.
- 2) Reconnect the oscilloscope to Pin 30 of IC801.
- 3) After just the input signal frequency to 78.67 ± 0.1 kHz.
- 4) Check to assure the 78.67 kHz signal level at 30 mVp-p or lower.



Fig. 8-56.

2. SAP VCO adjustment (TS-49 board)

Mode	E-E
Signal	 Frequency 78.67 ± 0.1 kHz Level at Pin ① of IC801 0.42 Vp-p (148.5 mVrms) Connection See Fig. 8-54.
Measurement Point	Pin 🚳 of IC801
Measuring Instrument	Digital voltmeter
Adjustment Element	RV803
Specified Value	Va=3.4 ± 0.4 Vdc Vb=Va ± 0.1 Vdc

Adjustment method:

- 1) Connect the negative side of C801 to GND with a jumper wire.
- 2) Check that the voltage (Va) is 3.4 ± 0.4 Vdc.
- 3) Remove the jumper wire, and input the signal.
- 4) Adjust RV803 so that the voltage (Vb) is Va \pm 0.1 Vdc.

3. SAP Variable de-emphasis adjustment (TS-49 board)

Mode	E-E
Signal	 Frequency 1. 300 Hz (sine wave) 2. 8 kHz (sine wave) Level at C751 negative side 123.3 dBs (53 mVrms) 216.2 dBs (120 mVrms) Connection See Fig. 8-57.
Measurement Point	Pin ⑤ of IC850
Measuring Instrument	Audio level meter
Adjustment Element	RV752
Specified Value	1. Va=-23 ± 6dBs 2. Vb=Va-11.3 ± 0.3 dBs

Connection:

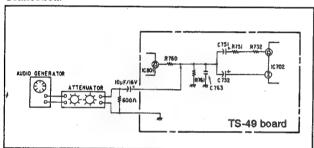


Fig. 8-57.

Adjustment method:

- 1) Supply the 300 Hz, -23.3 dBs signal to C751 negative side.
- 2) Set RV752 mechanical center.
- 3) Check that the 300 Hz level (Va) of Pin (5) of IC850 is -23 ± 6 dBs.
- Supply so that the 8 kHz, -16.2 dBs signal to C751 negative side.
- 5) Adjust RV752 so that the 8 kHz level (V6) of Pin 5 of IC850 is Va-11.3 \pm 0.3 dBs.
- 6) Remove the jumper wire.

4. STEREO VCO adjustment (TS-49 board)

Mode	E-E
Signal	None (Connect the negative side C801 to GND with a jumper wire.)
Measurement Point	Junction of RV805 and R814
Measuring Instrument	Frequency counter
Adjustment Element	RV805
Specified Value	62.94 ± 0.1 kHz

Note: Connect the frequency counter with a probe having high input impedance and low capacity.

Adjustment method:

1) By turning RV805, attain a 62.94 \pm 0.1 kHz counter output.

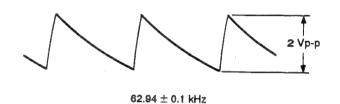


Fig. 8-58.

5. Pilot cancel adjustment (TS-49 board)

Mode	E-E
Signal	Stereo pilot signal (15.734 kHz) only. Connection See Fig. 8-55. Level at Pin ① of IC801 0.14 Vp-p (49.5 mVrms)
Measurement Point	Pin @ of IC801
Measuring Instrument	Oscilloscope
Adjustment Element	RV804
Specified Value	Minimum residual pilot signal

Adjustment method:

1) By turning RV804 minimize the residual Pilot signal evel.

Note: The "STEREO" indicator on the front panel should have been turned on.

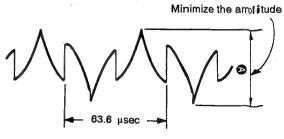


Fig. 8-59.

6. L-R gain adjustment (TS-49 board)

Mode	E-E
Signal	MPX signal: See Table Connection: See Fig. 8-55.
Measurement Point	Pin ② of IC801
Measuring Instrument	Audio level meter
Adjustment Element	RV806
Specified Value	375 ± 10 mVrms

Signal	Modulation	Signal Level at Pin ① of IC801
Stereo Pilot Signal (15.734 kHz)	ON	1.4 Vp-p (495 mVms)
Sub-Channel Signal	300 Hz 100%	1.4 Vp-p

Adjustment method:

1) By turning RV806, adjust the 300 Hz signal level to 375 \pm 10 mVrms.

7. MPX input level adjustment (TU-82 board)

Mode	E-E
Signal	1 kHz, 100% MOD (± 25 kHz dev) See Fig. 8-60.
Measurement Point	Pin ① of IC801.
Measuring Instrument	Oscilloscope
Adjustment Element	RV002
Specified Value	0.70 ± 0.03 Vp-p

Connection:

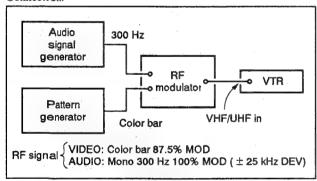


Fig. 8-60.

Adjustment method:

1) Adjust RV002 so that the 300 Hz signal level is 0.70 ± 0.03 Vp-p.

8. Separation adjustment (TS-49 board)

Mode	E-E
Signal	MPX signal: See Table Connection: See Fig. 8-61.
Measurement Point	Pin ② of IC801 (Rch OUT) Pin ③ of IC801 (Lch OUT)
Measuring Instrument	Headphones or Oscilloscope
Adjustment Element	RV702, RV806
Specified Value	Minimum crosstalk

Signal	Modulation
Stereo Pilot Signal	ON
Main Channel Signal	Lch: 400 Hz, 30% Rch: 2 kHz, 30%
Sub-channel Signal	NOISE REDUCTION: ON PREEMPHASIS: ON

Connection:

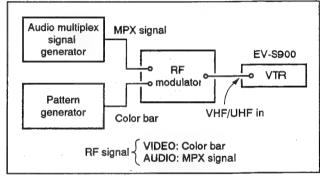


Fig. 8-61.

Adjustment method:

- Adjust with RV806 so that 2 kHz component of Pin@823@ of IC801 becomes minimum.
- Adjust with RV702 so that 400 Hz component of Pin 20 of IC801 becomes minimum.
- 3) Repeat step 1) once again.


Note: Be sure to perform adjustment 1) again finally.

8-8. ADJUSTMENT RELATED PARTS ARRANGEMENT DIAGRAMS Note: Parts enclosed in dotted lines are parts on the opposite side of the board. SP-7 BOARD (COMPONENT SIDE) DR-35 BOARD (CONDUCTOR SIDE) CN5 PCM master clock CN607 RV604 →⊕ RV602 🕀 RV 203 RE CIV 7 IC605 5 10219 O TP603 PCM playback VCO free oscillation frequency Reel bias DT-63 BOARD (CONDUCTOR SIDE) 00000000 000 CN 105 Switching position fH bias SP mode CN216 RV215 TH bias TP235 O FT-37 BOARD (COMPONENT SIDE) 0704 CN12 Timer clock VI-57 BOARD (COMPONENT SIDE) RP-68 BOARD (COMPONENT SIDE) SP playback frequency response REC C level 0302 RV502⊕ RV501 REC RF level REC Y level CH-44 BOARD (COMPONENT SIDE) 0000000000000000000 RV002 Y/C separation comb-type filter RY001 3781H VC0 ic 002 CVOOL ⊕RV202 Crystal oscillation to Y comb-type filter 337 -338 -


8-8. ADJUSTMENT RELATED PARTS ARRANGEMENT DIAGRAMS

Note: Parts enclosed in dotted lines are parts on the opposite side of the board.


DR-35 BOARD (CONDUCTOR SIDE)

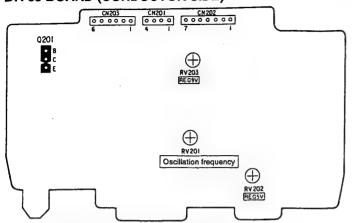


DT-63 BOARD (CONDUCTOR SIDE)

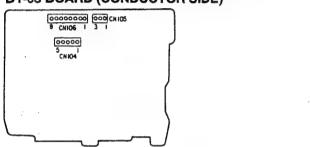


FT-37 BOARD (COMPONENT SIDE)

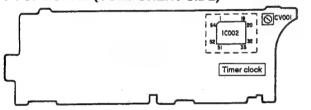


RP-68 BOARD (COMPONENT SIDE)

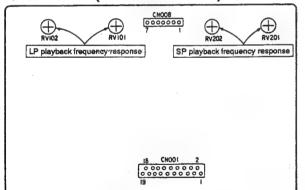


CH-44 BOARD (COMPONENT SIDE)

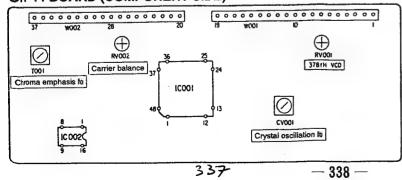


SP-7 BOARD (COMPONENT SIDE)

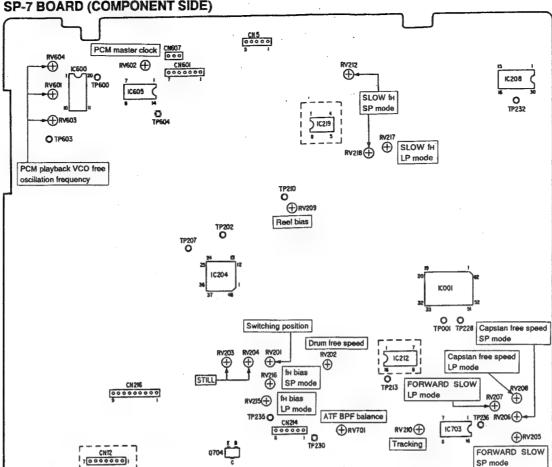


YC-56 BOARD (COMPONENT SIDE)

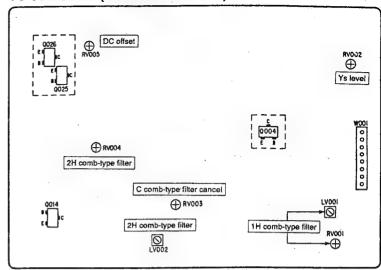


VI-57 BOARD (COMPONENT SIDE)

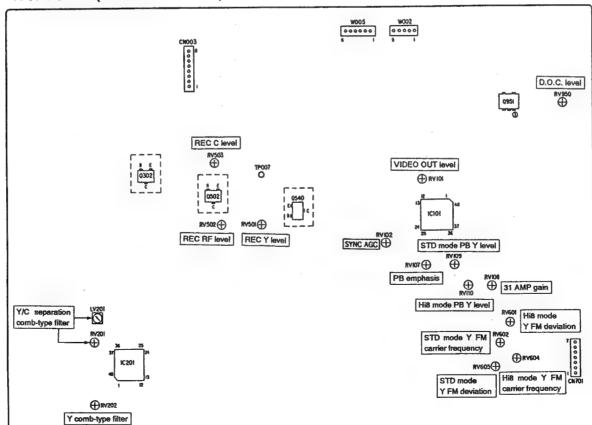


JG-11 BOARD (COMPONENT SIDE)

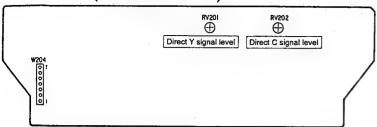


MK-2 BOARD (CONDUCTOR SIDE)

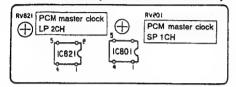


AD-12 BOARD (COMPONENT SIDE)

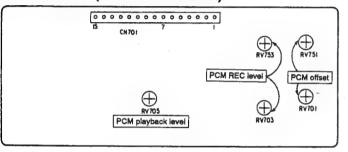


AF-20 BOARD (CONDUCTOR SIDE)

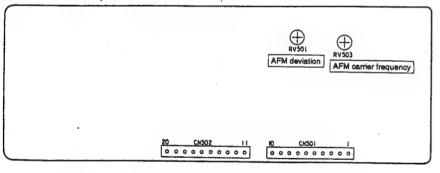

TS-49 BOARD (CONDUCTOR SIDE)

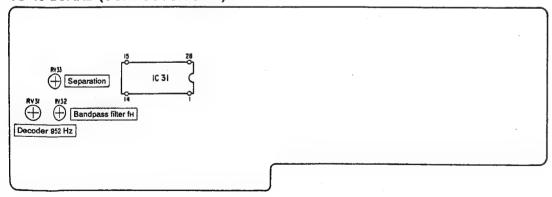

1. FUNCTION OF CONTROLS

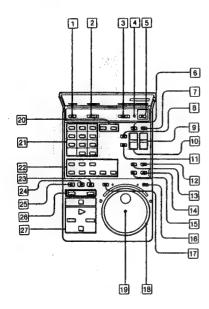

Remote Commander RMT-424 A-6

The buttons without the * mark have the same function as the buttons on the VCR with the similar name or mark.

The buttons with an orange dot can be used to operate Sony TVs having a mark.

- 1 OPEN/CLOSE button
- 2 Command mode selector*
- 3 Remote control TV/VTR selector*
- 4 Transmitting indicator*

Lights when any button on the Commander is pressed.

- 5 POWER switch
- 6 MUTING button*

Press to mute the sound. Press again to restore it.

- 7 TV/VTR button
- 8 DISPLAY button*

Press to retain the on-screen display. Press again to extinguish it.

- 9 TRACK/CH (channel) +/- button
- 10 VOL (volume) +/- buttons*
- 11 SLEEP button
- 12 COUNTER RESET button
- 13 COUNTER/REMAIN button
- 14 SYNCHRO EDIT button
- 15 AUDIO DUB button
- [16] TRACK/CH/INDEX button and indicator*

 Press when using the JOG dial for digital multi audio track, channel or index number selection.
- [7] JOGSHUTTLE mode button and lamp *
 Press when using the JOG dial and SHUTTLE ring for various speed playback.
- 18 SHUTTLE ring
- 19 JOG dial
- 20 INDEX MARK/ERASE button
- 21 Number buttons*
- 22 Various speed playback buttons*

►I (still picture), <11/11> FRAME (frame-by-frame picture), x1/10/x1/5 (slow motion picture), x1 (normal speed picture), x2 (double speed picture), SCAN (for picture search)

23 AUTO PB (automatic playback), button

Press to play back a tape automatically from the beginning of the tape after rewinding.

- 24 TAPE RETURN button
- 25 INDEX button
- 26 REC (recording) buttons

To start recording, press these buttons simultaneously.

27 Tape transport buttons

2. REMOTE COMMANDER SET-UP

B-1





Inserting batterles Ball

- 1 Open the lid.
- 2 Insert two size AA (R6) batteries with correct polarity and close the lid.

Battery life


In normal operation, batteries will last for about three months. When the batteries are exhausted, the JOG dial and SHUTTLE ring on the Commander will not function, and then the indicator will not light when any button on the Commander is pressed.

If the Commander is not to be used for a long period of time.

Remove the batteries to avoid possible damage from

3. TO CONTROL THIS VTR

B-2

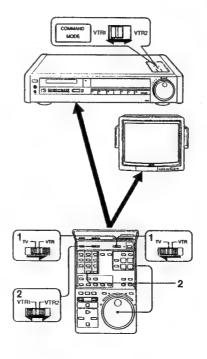

Operation FBA

battery leakage.

To operate a VCR

- 1 Set TV/VTR to VTR.
- 2 Set the command mode selector to the same position as that of the command mode selector of the VCR.
- 3 Press the required buttons or turn the JOG dial or SHUTTLE ring.


To operate a Sony remote control TV

The Sony TVs with a mark can be operated with this Commander.

- 1 Set TV/VTR to TV
- 2 Press the required buttons or turn the JOG dial or SHUTTLE ring. The buttons marked with an orange dot can be used.
- To use the JOG dial and SHUTTLE ring on the Commander • When using JOG for track number, channel or index number selection, press TRACK/CH/INDEX so that the associated indicator tights.
- When using JOG or SHUTTLE for various speed playback, press JOGSHUTTLE so that the associated indicator lights.
- After using JOG and SHUTTLE, press the same button again to turn off the indicator. The indicator will go out automatically in about 1 minute without pressing the button.

— 343 -

4. TO CONTROL OTHER SONY VIDEO EQUIPMENT OR TV

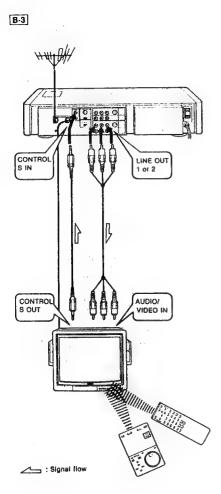

To remotely control two VCRs (this unit and another VCR)

If another VCR is equipped with a command mode selector

To avoid having this VCR and the other equipment functioning simultaneously, set COMMAND MODE on this VCR to the different command mode position from the command mode on the other VCR. Simply by switching the command mode selector on the Commander, you can control two VCRs separately.

If another VCR is not equipped with a command mode selector

Set the command mode selector on the Remote Commander as follows:


VTR1: for Sony Beta format VCRs VTR2: for Sony 8 mm format VCRs


If enother VCR is equipped with a CONTROL L jack With control L connection you can remotely control the other VCR by pointing the Commander to this VCR.

To remotely control this unit through the other equipment B3


If your TV or TV tuner is equipped with a CONTROL S output, you can operate this unit by pointing the Commander equipped with this unit or the TV toward the TV or TV tuner. This is convenient when the two units are located apart from each other.

5. PRINTED WIRING BOARDS

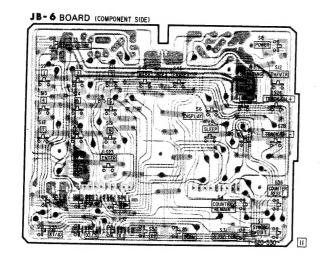

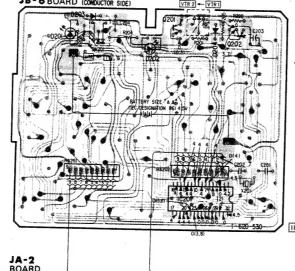

JA-2 BOARD (COMPONENT SIDE)

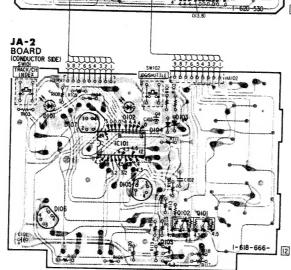


- $\bullet \ \bigcirc \ :$ indicates a lead wire mounted on the component side.
- • : indicates a lead wire mounted on the conductor side.
- : Through hole.
- : Pattern from the side which enables seeing.
- Pattern of the rear side,
- Carbon pattern.

Caution:

Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.

Parts face side: Parts on the parts face side seen from (Component Side) the parts face are indicated.

• SEMICONDUCTORS

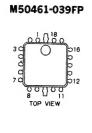

2SA1048-GR 2SA1115 DTA144ES



2SC2673



SLR932A



SLP144B

GP2509

μPD7556G-506





2SA1175

1SS119 1SS133 1SS148

-345 -

6. SCHEMATIC DIAGRAM

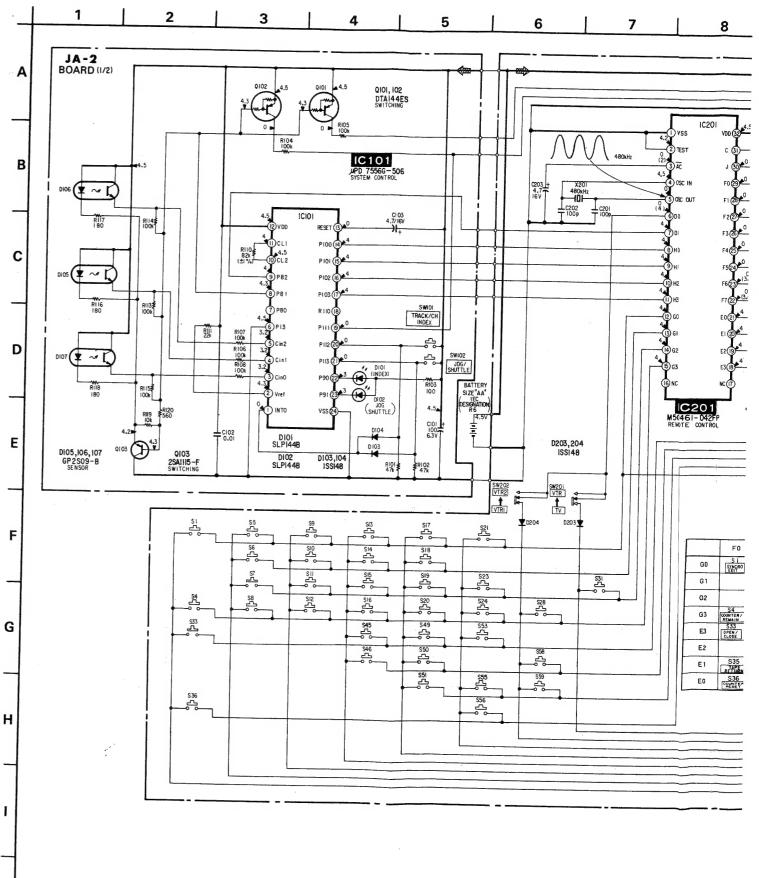


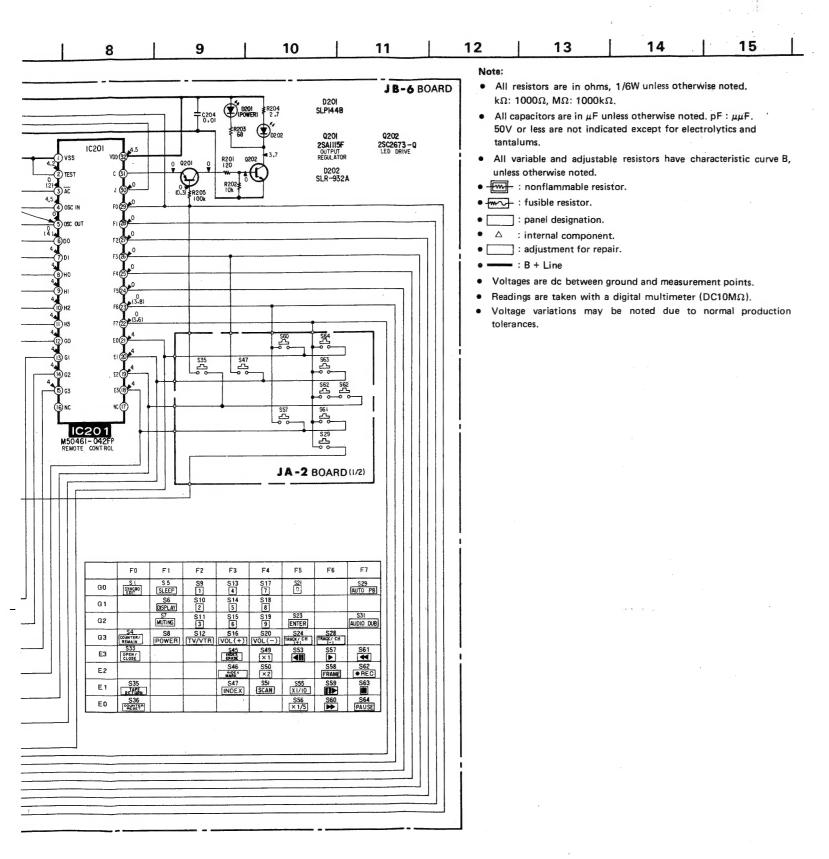

7. EXPLODED VIEW

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.

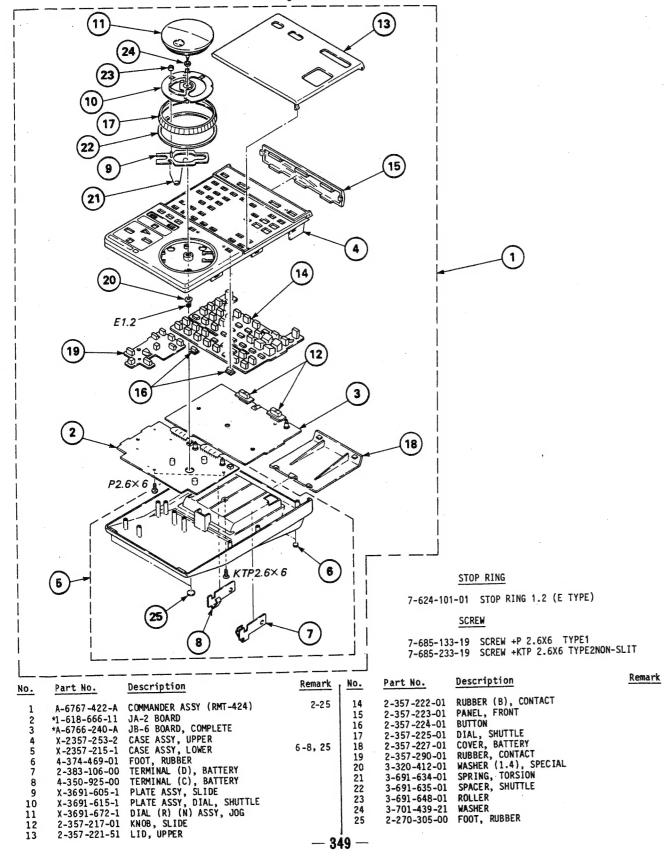

JA-2 JB-6

8. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- RESISTORS
 All resistors are in ohms.
 METAL: Metal-film resistor
 METAL OXIDE: Metal Oxide-film
 resistor

F: nonflammable

 Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items. -XX, -X, mean standardized parts, so they may have some difference from the original one.

• SEMIDONDUCTORS

In each case, U: μ, for example:
UA. . .: μΑ. . ., UPA. . .: μPA. . .,
UPB. . .: μPB. . ., UPC. . .: μPC. . .,
UPD. . .: μPD. . .

CAPACITORS

MF: μF, PF: μμF

• COILS

MMH: mH, UH: μH

ef.No	Part No.	Description				Remark	Ref.No	Part No.	Descriptio	<u>n</u>			Rema
	*1-618-666-11	JA-2 BOARD						*A-6766-240-A	JB-6 BOAR				
	CAP	ACITOR						2-357-218-01 2-357-219-01					
C101	1-124-225-00		100MF		20%	6.37				,, o			
C102 C103	1-161-051-00		0.01MF 4.7MF		10% 20%	25V 16V		CAP	ACITOR				
0200	DIO						C201 C202	1-102-973-00 1-102-973-00		100PF 100PF		10% 10%	50V 50V
							C203	1-124-245-00		4.7MF 0.01MF		20% 10%	16V 25V
D101 D102	8-719-901-44 8-719-901-44						C204			0.076		102	231
D103	8-719-911-19	DIODE 188119						DIO	IDE.				
D104 D105 D106	8-719-911-19 8-719-939-11 8-719-939-11 8-719-939-11	DIODE 1SS119 GP2S09-B GP2S09-B		`			D201 D202 D203 D204	8-719-901-44 8-719-912-39 8-719-911-19 8-719-911-19	DIODE SLR- DIODE 1SS1	932A 19			
	IC							<u>1C</u>					
IC101	8-759-111-60	IC UPD7556G-	506				IC201	8-759-603-88	IC M50461-	042FP			
	TRA	NSISTOR						TRA	NSISTOR				
Q101 Q102	8-729-900-65 8-729-900-65	TRANSISTOR D	TA144ES	,			0201 0202	8-729-204-83 8-729-967-32			GR		
Q103	8-729-611-53	IKANSISIUK Z	5A1115-	r				RES	ISTOR				
	RES	ISTOR					R201	1-249-406-11	CARBON	120	5%	1/4W	
R101 R102 R103 R104	1-249-437-11 1-249-437-11 1-249-405-11 1-249-441-11	CARBON CARBON CARBON		5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W		R202 R203 R204 R205	1-249-429-11 1-249-403-11 1-249-452-11 1-249-441-11	CARBON CARBON	10K 68 2.7 100K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W	
R105	1-249-441-11	CARBON	100K	5%	1/4W			SWI	TCH				
R106	1-249-441-11		100K		1/4W		CU201	1-553-977-00		IDE			
R107 R108	1-249-441-11 1-249-441-11		100K 100K		1/4W 1/4W		SW202	1-553-977-00	SWITCH, SL	I DE			
R110 R111	1-215-467-00 1-249-433-11		82K 22K	1% 5%	1/6W 1/4W			CRY	STAL				
							V203			CEDAMIC	1 / 00	OVU~)	
R113 R114	1-249-441-11 1-249-441-11		100K 100K		1/4W 1/4W		X201	1-527-476-00					
R115	1-249-441-11		-	5%	1/4W		*****	******	******	*****	****	******	*****
R116 R117	1-249-408-11		180 180	5% 5%	1/4W 1/4W								
R118	1-249-408-11	CARBON	180	5%	1/4W								
R119	1-249-429-11		10K	5%	1/4W								
R120	1-249-414-11		560	5%	1/4W								
	SWI	ТСН									-		
	1-553-856-00 1-553-856-00												
CLITAG													



SONY. SERVICE MANUAL

US Model Canadian Model

CORRECTION-1

Please correct your service manual.

The head cleaning tape (V8-6CHSP) shown below is not provided.

Page 262

ACCESSORIES AND PACKING MATERIALS

Part No.	Description	Remark
1-551-086-31	COMMANDER ASSY (RMT-424) MATCHING TRANSFORMER, ANTENNA CONVERTER (EAC-25) (CND) CORD, CONNECTION CORD, CONNECTION	(US)
1-559-457-11 *3-677-503-00 *3-713-408-01	CORD, CONNECTION CORD, CONNECTION SHEET, PROTECTION CASE, ACCESSORY LID, ACCESSORY CASE	
*3-722-143-01		
-8-883-112-29	V8-6CLHSP	